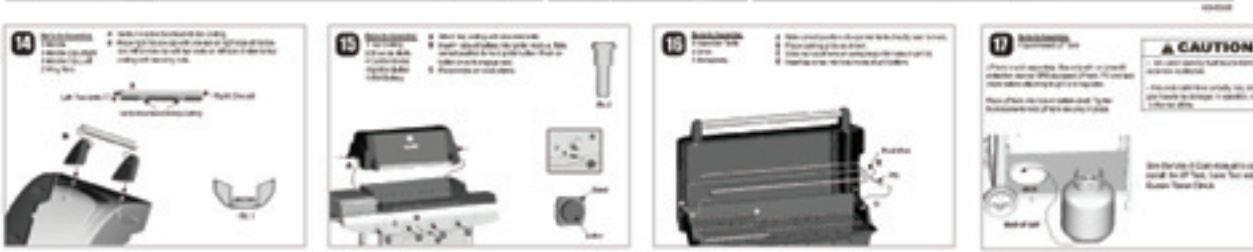

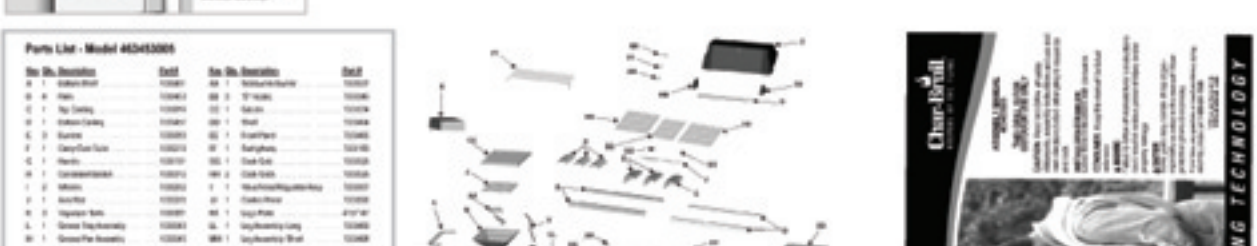

Parts List - Model 463453005
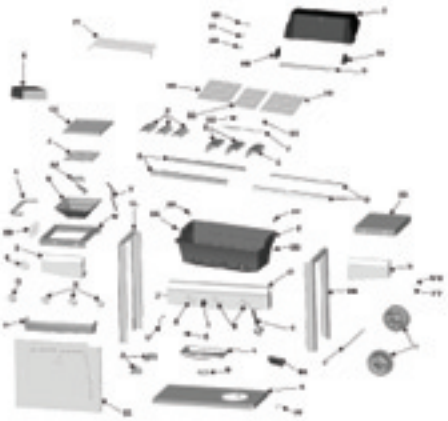
No.	Qty.	Description	Part #
A	1	Kettle Bowl	103061
B	4	Wels	103063
C	1	Top Cooking	103070
D	1	Kettle Cooking	103061
E	3	Stainless	103065
F	1	Classic Cook Cover	103073
G	1	Handle	103131
H	1	Cook-Grate Assembly	103071
I	2	Wheels	103052
J	1	Axle Rod	103051
K	3	Hopper Side	103081
L	1	Grease Tray Assembly	103083
M	1	Grease Pan Assembly	103084
N	1	Handle, Right	103091
O	1	Handle, Left	103092
P	2	Leg Bracket	103022
Q	4	Cooker Bracket	103077
R	4	Wheels	103053
S	1	Bracket	103031
T	1	Ignition Module w/Battery	103152
U	1	17" Ignition Wire	103063
V	1	Thermometer Ignition Wire	103064
W	1	Thermometer Screw	103062
X	1	Thermometer Cook Assy	103061
Y	1	Thermometer Handle	103053
Z	1	Thermometer Base	103054
AA	1	Thermometer Bracket	103057
BB	3	17" Hubbs	103086
CC	1	Cook Grill	103074
DD	1	Wood	103064
EE	1	Hood Plate	103065
FF	1	Flame Spreader	103066
GG	1	Cook Grill	103075
HH	1	Cook Grate	103076
II	1	Wheel Assembly w/Axle Assy	103057
JJ	1	Cooker Wood	103058
KK	1	Legs Plate	4"x1"x6"
LL	1	Leg Assembly Long	103085
MM	1	Leg Assembly Short	103086
NN	1	Hose Hood Shroud	103088
OO	2	Kit Nuts	103116
PP	3	12" Nuts	103116
QQ	2	Cooker Brackets	103116
RR	1	Weber Cog, Right	103116
SS	1	Weber Cog, Left	103116
TT	1	Temperature Gauge shaded grid	4"x1"x1"
UU	1	Temperature Gauge Short	4"x1"x6"
VV	1	BBQ Holder w/Shelf	103058
WW	1	Push Pin	4257112
----	1	Warranty Reg	103051