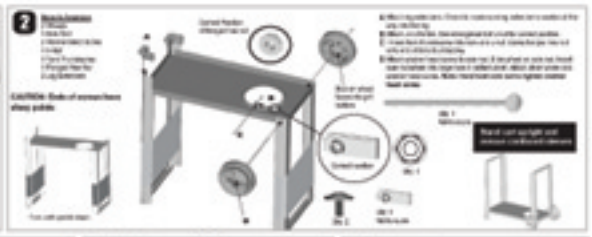

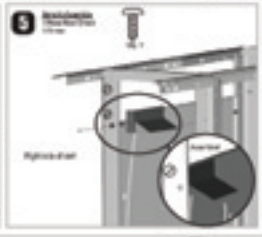

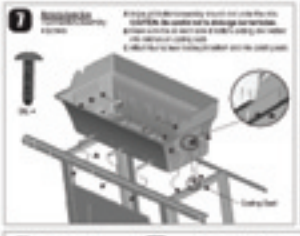

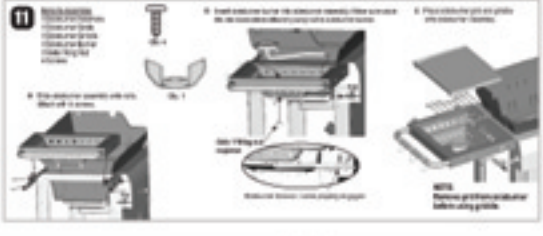

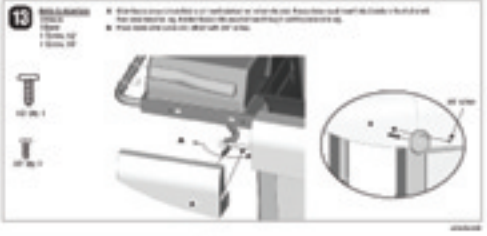

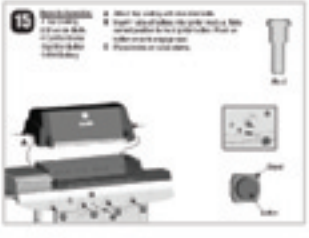

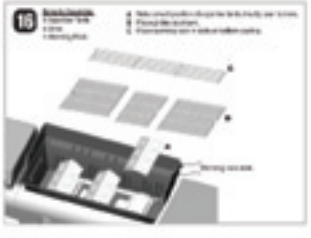

Parts List - Model 463454005
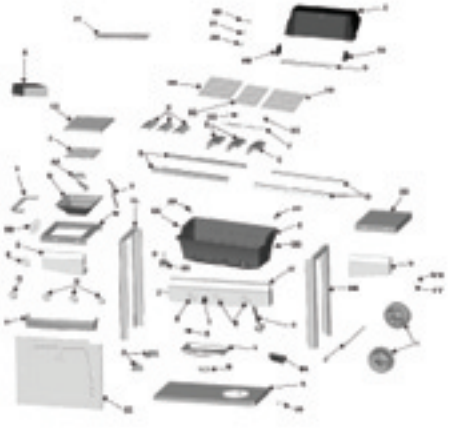
No.	Qty.	Description	Part #
A	1	Bottom Shelf	103803
B	4	Nuts	103809
C	1	Top Cooking	103101
D	1	Bottom Cooking	103802
E	2	Supports	103804
F	1	Cooking Grate Frame	103805
G	1	Handle	103810
H	1	Lid Assembly Complete	103811
I	2	Wheels	103806
J	1	Axle Rod	103807
K	2	Hinge/Lock Bolts	103897
L	1	Grease Tray Assembly	103883
M	1	Grease Pan Assembly	103881
N	1	Handle, Right	103813
O	1	Handle, Left	103814
P	2	Leg Extensions	103823
Q	4	Control Knobs	103831
R	4	Mounts	103833
S	1	Crossbrace	103836
T	1	Ignition Module w/Battery	103752
U	1	17" Ignition Wire	103853
V	1	Manufacturer Ignition Wire	103854
W	1	Manufacturer Assy	103819
X	1	Manufacturer Lid Assy	103891
Y	1	Manufacturer Module	103855
Z	1	Manufacturer Side	103834
AA	1	Manufacturer Bottom Shelf	103837
BB	2	15" Handle	103838
CC	1	Side Arm	103839
DD	1	Shelf	103841
EE	1	Small Parts	103845
FF	1	Mounting Shelf	103846
GG	1	Cook Grate, 17-1/2	103826
HH	2	Cook Grate, 12-1/2"	103828
II	1	Manufacturer Mtng Lid/Hinge	103897
JJ	1	Cooking Rack	103827
KK	1	Logo Plate	103847
LL	1	Leg Assembly Long	103822
MM	1	Leg Assembly Short	103823
NN	1	Hose Hook Brace	103899
OO	2	Kit Nuts	103816
PP	2	10" Nuts	103818
QQ	1	Cooking Surface	103799
RR	1	Mounts Clip, Right	103816
SS	1	Mounts Clip, Left	103835
TT	1	Temperature Gauge w/out grid	419111
UU	1	Temperature Gauge Head	419199
VV	1	Match Holder w/Chain	103898
WW	1	Kit w/ Pin	420512
XX	1	Ignition Wire w	103745
---	1	Hardware Bag	103801