

Expandapac™ Replacement Media For F66 Media Air Filter PART NO. 197983E

INSTALLATION INSTRUCTIONS

This media fits into a Honeywell Filter Frame. A kit including the filter frame and one media are available as part no. 197983C.

INSTRUCTIONS

Replacement Installations Only

1. Remove the access door.

Firmly grip the top edge of the door and pull it straight out. Lift the door up out of the slots and set aside.




2. Remove the filter frame.

Insert a finger in the hole in the filter frame and pull out of the air duct. Protect floor or table with newspaper. Place filter frame so the side with pleated dividers is facing up.




3. Remove the pleated dividers.

Loosen the ends of the dividers. To loosen, push upward on the divider next to the edge of the filter frame until the divider snaps free. Carefully lift the dividers out of the filter frame and save for reuse.

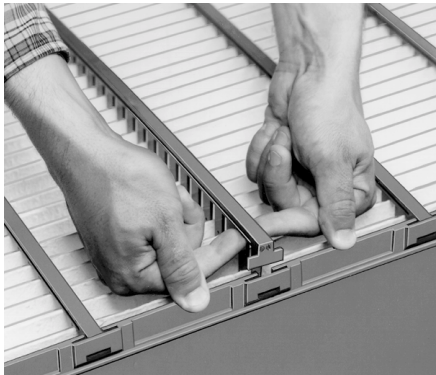

5. Remove and discard the old media.

Slowly compress together folds of old media and lift out of the filter frame. Discard old media using the plastic bag from the new Expandapac™ media.

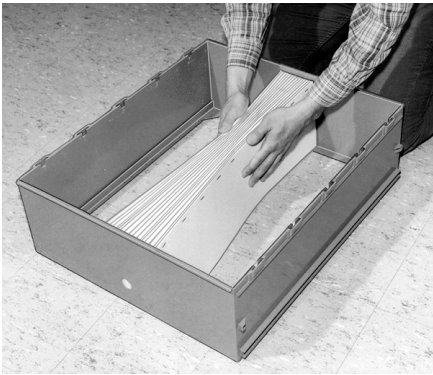


4. Release both ends of the old media.

Raise cardboard ends of old media until they clear the slots along the lower inside edge of the filter frame.




6. Insert the new expandapac media.

If the filter frame is new, remove and discard the cardboard spacers from the slots. Set the Expandapac media into the center of the filter frame with the open edge of the cardboard end-piece down. Insert the lower edges of the end panel in the slots along the lower inside edges of filter frame.

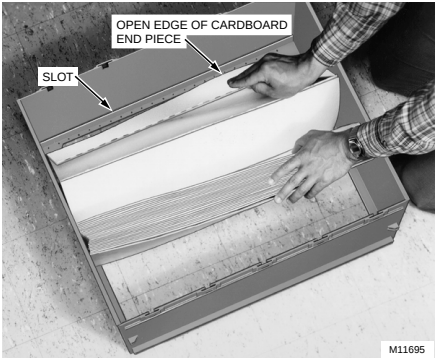

7. Insert the pleated dividers.

Insert the middle divider. Make sure each divider slot contains only one media pleat. Snap both divider ends in place in the filter frame. Insert each remaining divider next to one that is already installed, sliding it to the correct location, and snapping it in place. Repeat until all the dividers are installed.

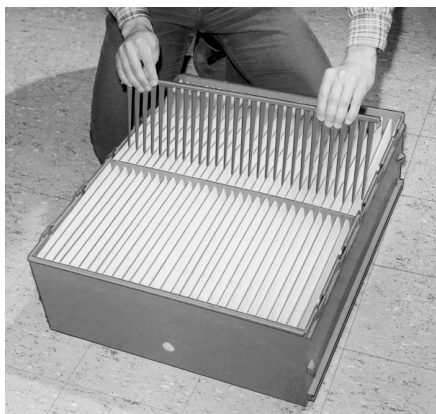

9. Replace access door.

Insert the tab on the bottom of the door into the slot on the cabinet, then swing the door closed and press it into place.



8. Insert filter frame into duct.

With the arrow on the side of the filter frame pointing in the direction of airflow, slide the filter frame into the air duct. Air must enter the filter frame from the side opposite the pleated dividers.



Honeywell

Home and Building Control
Honeywell Inc.
Honeywell Plaza
P.O. Box 524
Minneapolis, MN 55408-0524

Home and Building Control
Honeywell Limited-Honeywell Limitée
155 Gordon Baker Road
North York, Ontario
M2H 3N7

Helping You Control Your World®

