

Drill 1/8" (0.125") hole / Percer trous de 1/8 po (0,125 po)



Humidifier Cut Out



Humidifier cabinet Installation


The humidifier can be mounted on the return duct (cold air) or supply duct (warm air), the unit is easily converted from right hand ducting to left hand ducting. Selection of a location to mount the humidifier will depend on available space and furnace type.

When selecting a location keep in mind that the bypass ducting should be parallel with the humidifier cabinet.

Use the template on this sheet to cut out the duct & drill holes to mount the humidifier to the duct. Once the duct is cut and holes drilled use 4 of the screws to mount the humidifier cabinet to the duct. Install the water pan and the evaporator pad drum assembly.

Converting right hand ducting to left hand ducting

Remove the float assembly & bearing bracket from the cabinet and then flip the cabinet upside down. Relocate the float assembly to the lower double "D" hole at the side of the cabinet and reinstall the bearing bracket.

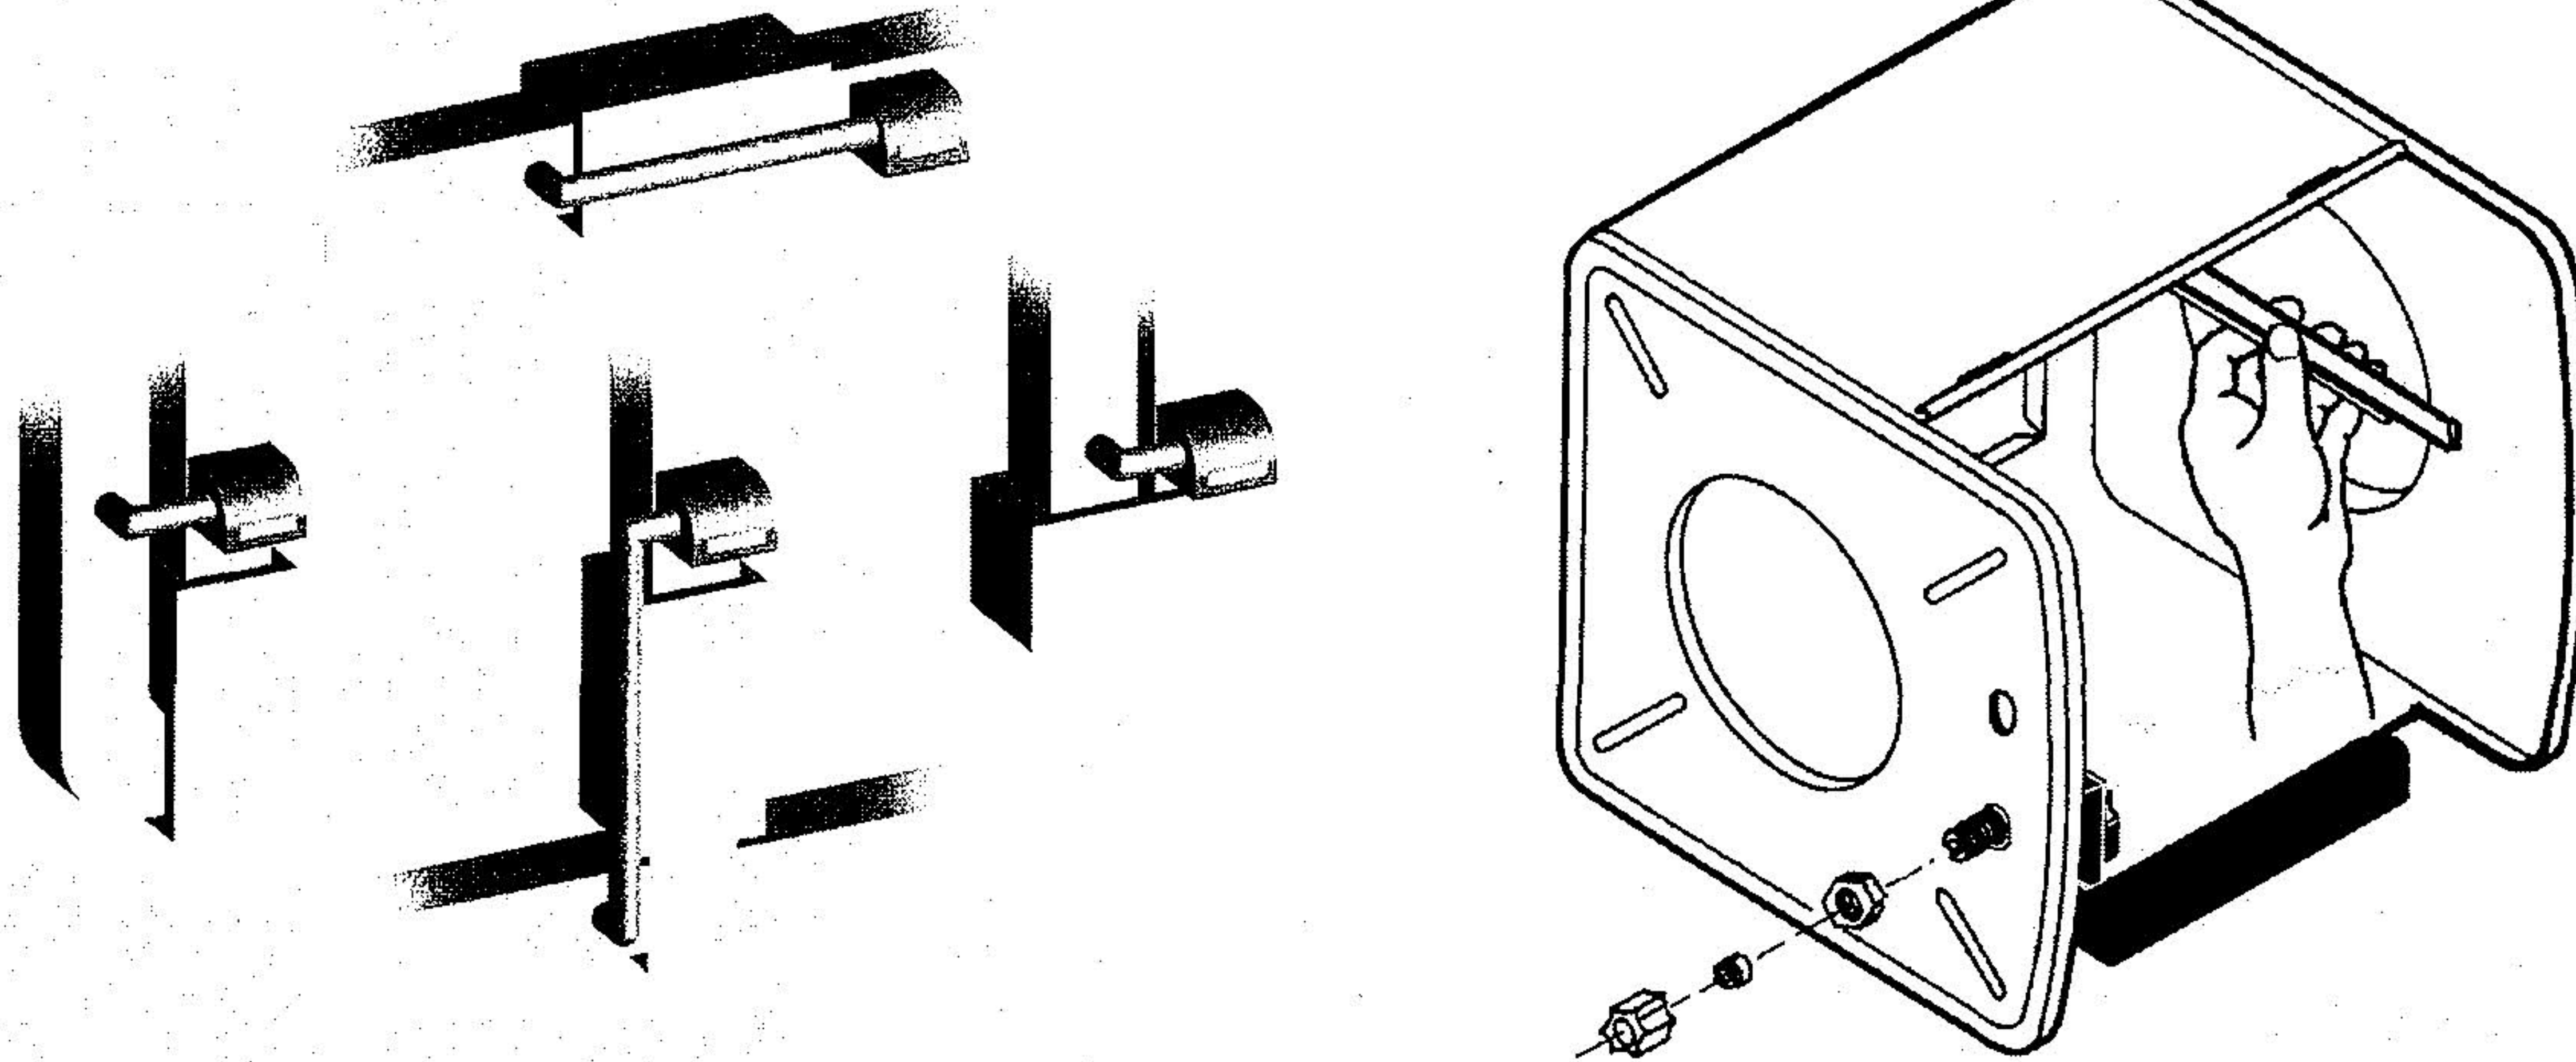

Installation Du Coffret De L'humidificateur

L'humidificateur peut être monté sur la canalisation de retour (air froid) ou la canalisation d'approvisionnement (air chaud). Le système peut se convertir facilement de la canalisation à droite à la canalisation à gauche. Le choix de l'emplacement pour monter l'humidificateur dépendra de l'espace disponible et du type de fournaise.

Lors du choix de l'emplacement, ne pas oublier que la canalisation de dérivation devrait être parallèle au coffret de l'humidificateur.

Se servir du gabarit de cette feuille pour découper la canalisation et pour percer les trous, afin de monter l'humidificateur à la canalisation. Une fois la canalisation découpée et les trous percés, se servir de 4 des vis pour monter le coffret de l'humidificateur sur la canalisation. Installer la cuvette d'eau et l'ensemble de tambour et tampon de l'évaporateur.

Pour convertir un système de canalisation à droite en un système à canalisation à gauche

Retirer l'ensemble de flotteur et le support de soutien du coffret. Faire ensuite basculer le coffret sens dessus dessous. Remettre en place l'ensemble de flotteur dans le trou inférieur double en "D" sur le côté du coffret et réinstaller le support de soutien.



Humidifier Cut Out



Drill 1/8" (0.125") hole / Percer trous de 1/8 po (0,125 po)

Découpe de l'humidificateur

Découpe de l'humidificateur