

Outdoor Dry Contact (PRDSBM) Installation Manual

1. Check the contents of Outdoor Dry Contact(PRDSBM).




<Outdoor Dry Contact Main Body>




<Front Case>

2. Connect Outdoor Main PCB and Outdoor Dry Contact

- Connect terminals(①, ②, GND) on the back side of the outdoor dry contact to terminals (①, ②, GND) of outdoor as show below.

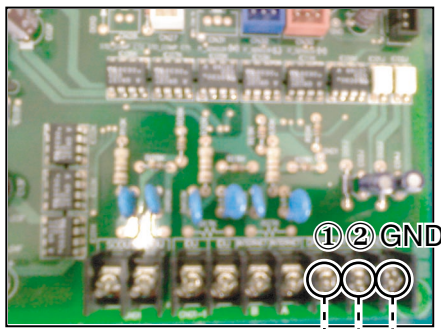

< Outdoor Main PCB >

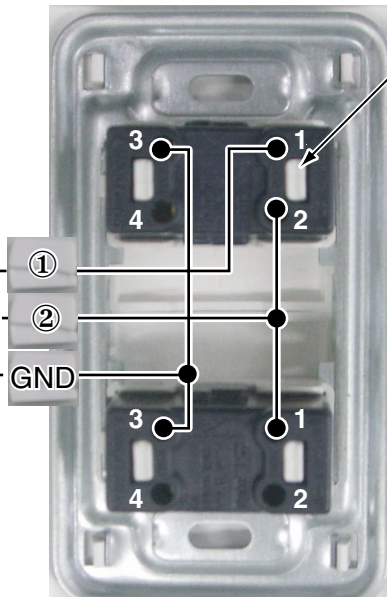

<Outdoor Dry Contact Back Side >

Push Button

- Insert wire method -



Push arrow direction.



Insert wire to connector.


..... shows field wiring

—— connected wiring

* Communication line length can be maximum 300m, use communication line as thick as 1.25mm².

CAUTION Pay attention to the wiring when the Push Button on the back side of Outdoor Dry Contact is pressed and the wires are pulled out.

3. Outdoor dry contact combines with switch box as shown below

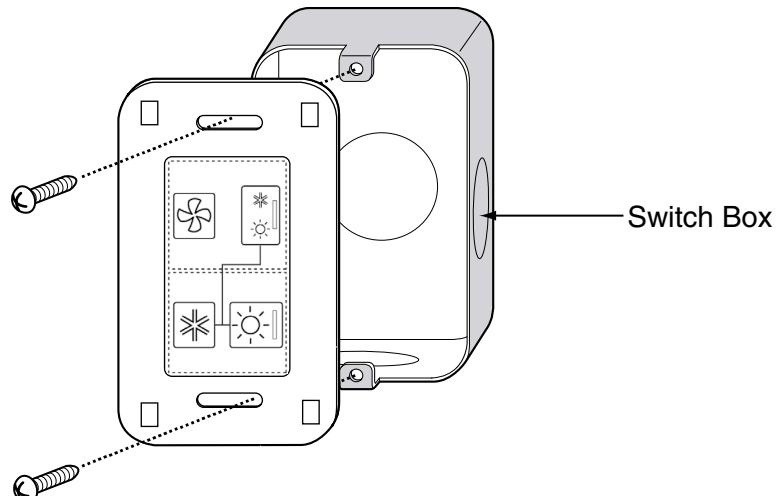

4. Attach the front case