


This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# PANASONIC 5110 Owner's Manual

[Shop genuine replacement parts for PANASONIC 5110](#)

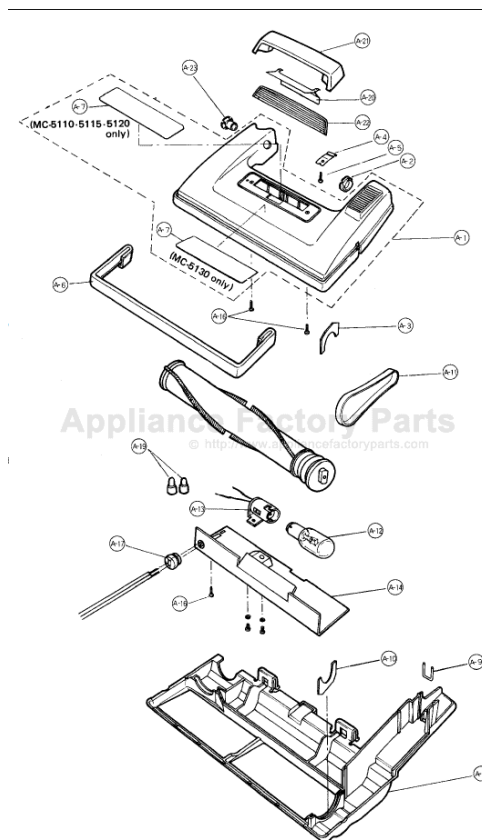

[Find Your PANASONIC Vacuum Cleaner Parts - Select From 605 Models](#)


----- Manual continues below -----

# PANASONIC


Models: MC-5110, MC-5111, MC-5115, MC-5116, MC-5120, MC-5121, MC-5122, MC-5123, MC-5124, MC-5130, MC-5131

## Nozzle Housing

A1	P-0101	Nozzle Housing, 5110
A1	P-0190	Nozzle Housing, 5115
A1	P-0111	Nozzle Housing, 5120
A1	P-0120	Nozzle Housing, 5130
A1	P-0121	Nozzle Housing, 5111
A1	P-0122	Nozzle Housing, 5116
A1	P-0123	Nozzle Housing, 5121
A1	P-0124	Nozzle Housing, 5131
A2	P-78	Plastic Holder
A3	P-81	Tight Packing
A4	P-58	Pedal Spring
A5	P-416	Screw, 10 pk
A6	P-1012	Furniture Guard, 5110,5120,5130
A6	N/A	Furniture Guard, 5115
A6	P-1005	Furniture Guard, 5111
A6	P-1006	Furniture Guard, 5116
A6	P-1007	Furniture Guard, 5121,5131
A7	P-0200	Top Mark, 5110
A7	P-0291	Top Mark, 5115
A7	P-0211	Top Mark, 5120
A7	N/A	Top Mark, 5130
A7	P-0221	Top Mark, 5111
A7	P-0222	Top Mark, 5116
A7	N/A	Top Mark, 5121
A7	P-0224	Top Mark, 5131
A8	P-9101	Bottom Plate Assy, new style
A9	P-4303	Belt Cover
A10	P-7500	Body Packing
A11	P-2287	Belt, 2 pack
A11	P-200	Belt, sold each (R)
A12	MP-25K	Bulb, 25 watt (R)
A13	N/A	Lamp Holder
A14	P-8520	Bulb Supporter
A16	P-416	Screw, 10 pk
A17	SS-34	Wire Bushing, sold each (R)
A19	SS-71B	Wire Nut, 100 pack (R)
A20	P-842	Reflection Plate
A21	P-8620	Supporter, reflection plate
A21	P-8621	Supporter, reflection plate, 5131
A22	P-2120	Window
A23	P-2500	Shaft, plastic

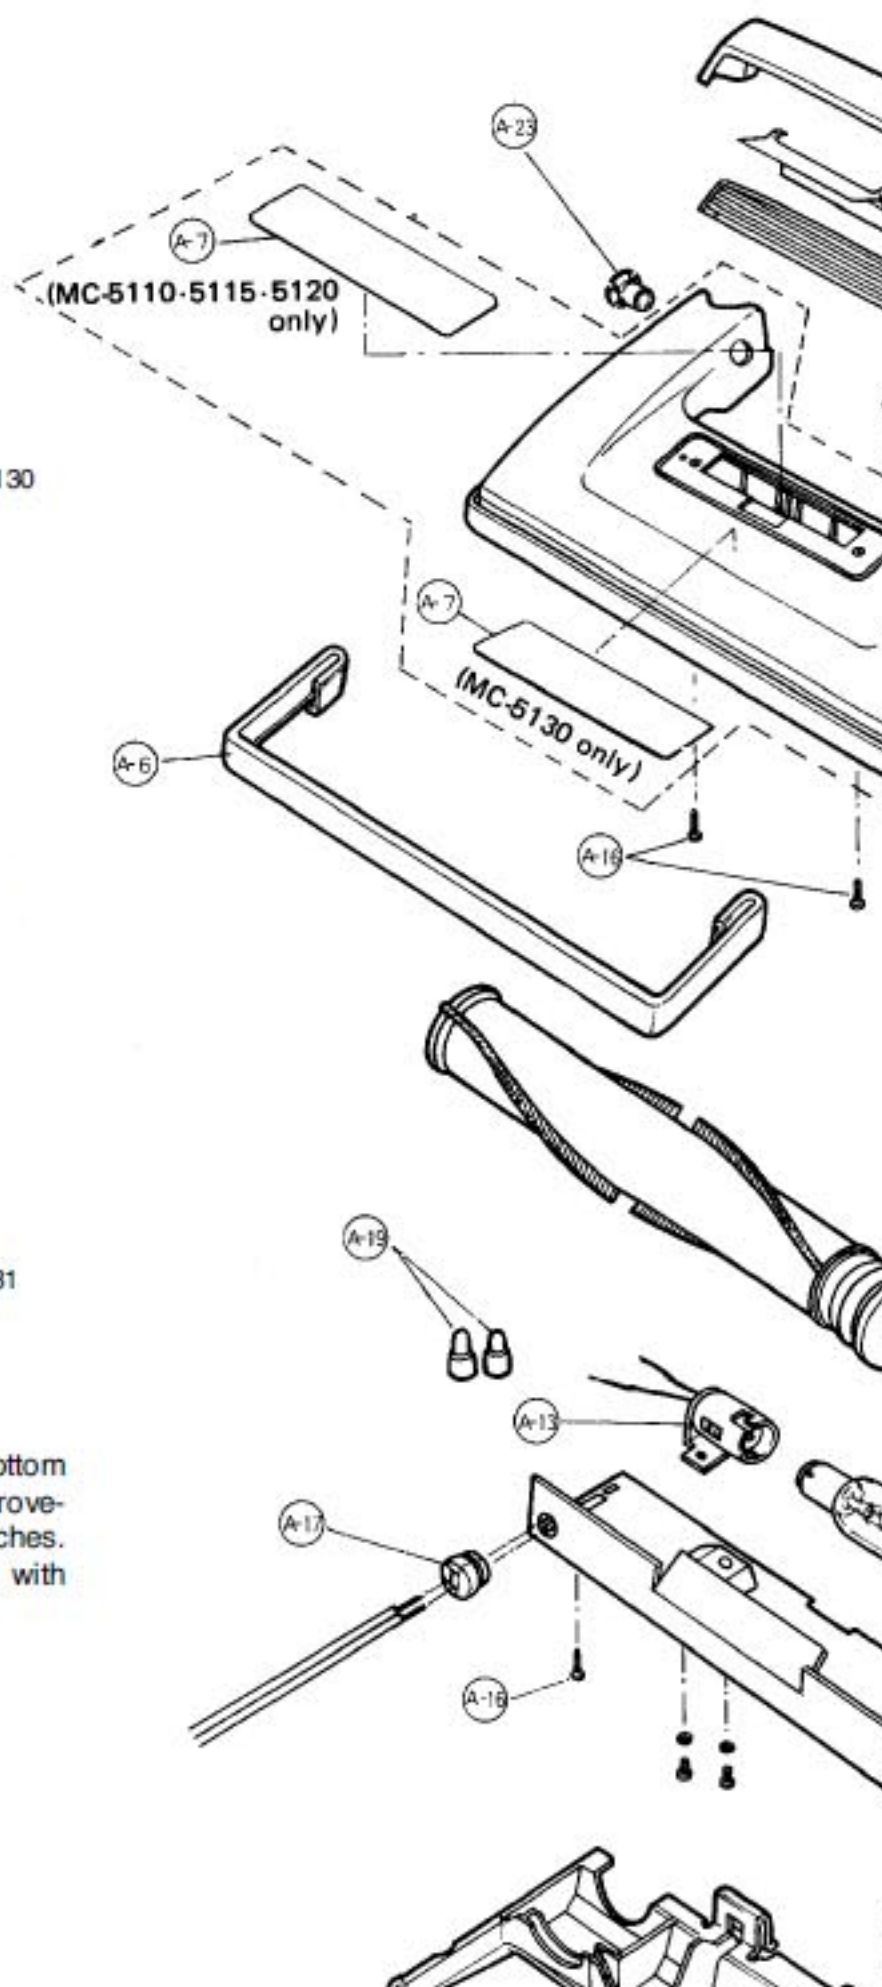

Early production 5100 series used a one piece bottom plate with molded latches. There has been an improvement on current production featuring replaceable latches. Early bottom plates that break, must be replaced with bottom plate # P-2702.

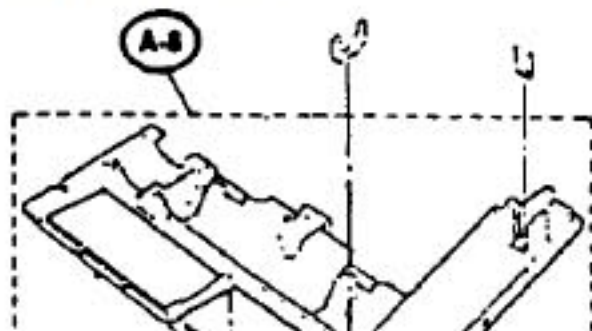


# PANASONIC

Models: MC-5110, MC-5111, MC-5115, MC-5116, MC-5120, MC-5121, MC-5130, MC-5131

## Agitator Assembly

MC-5110  
MC-5111


MC-5115 - 5120 - 5130  
MC-5116 - 5121 - 5131

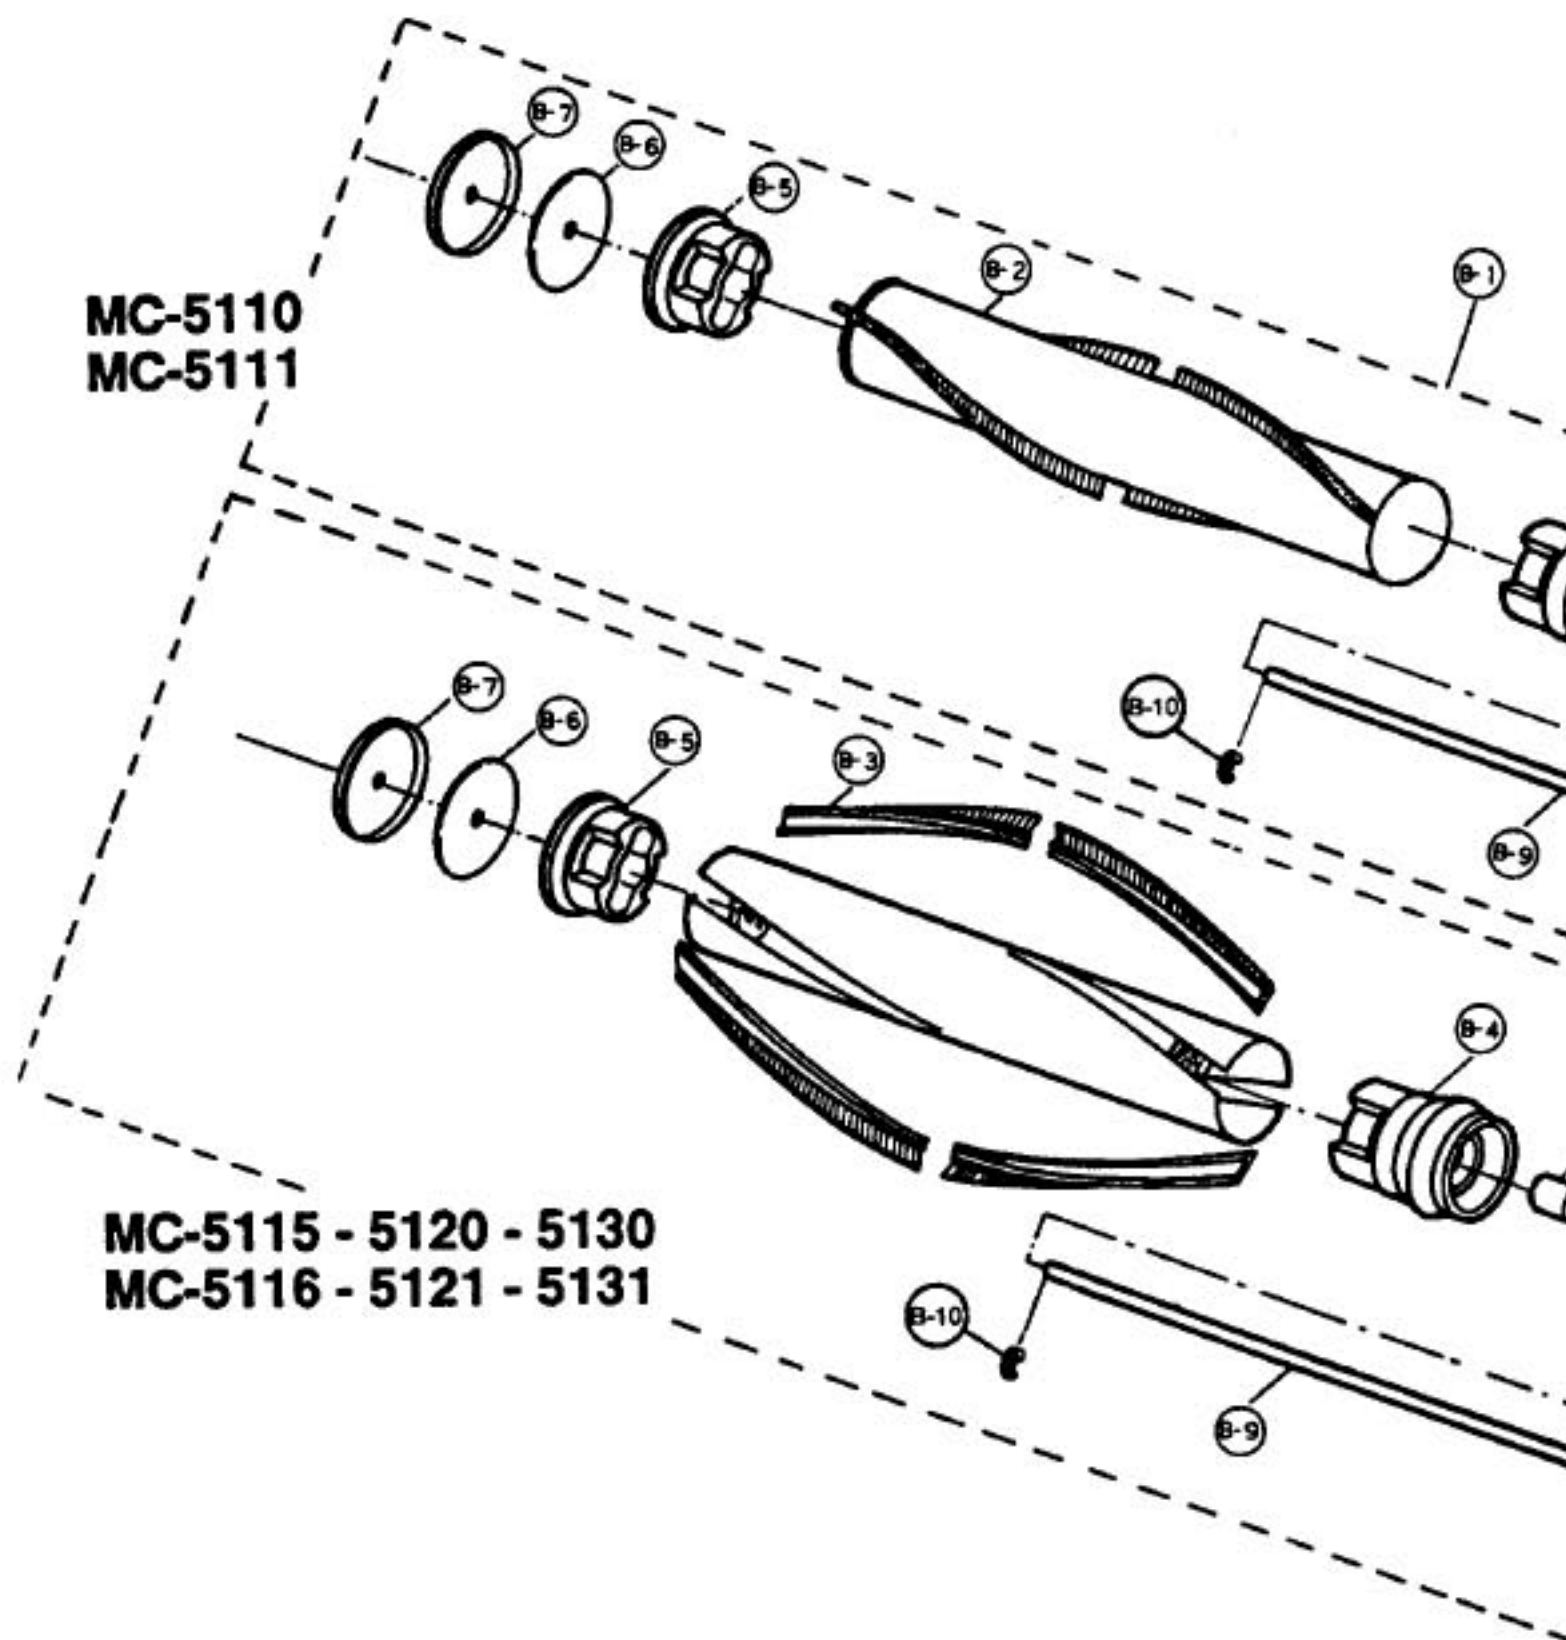

# PANASONIC

Models: MC-5110, MC-5111, MC-5115, MC-5116, MC-5120, MC-5121, MC-5122

## Motor Housing, Dust Compartment, Handle

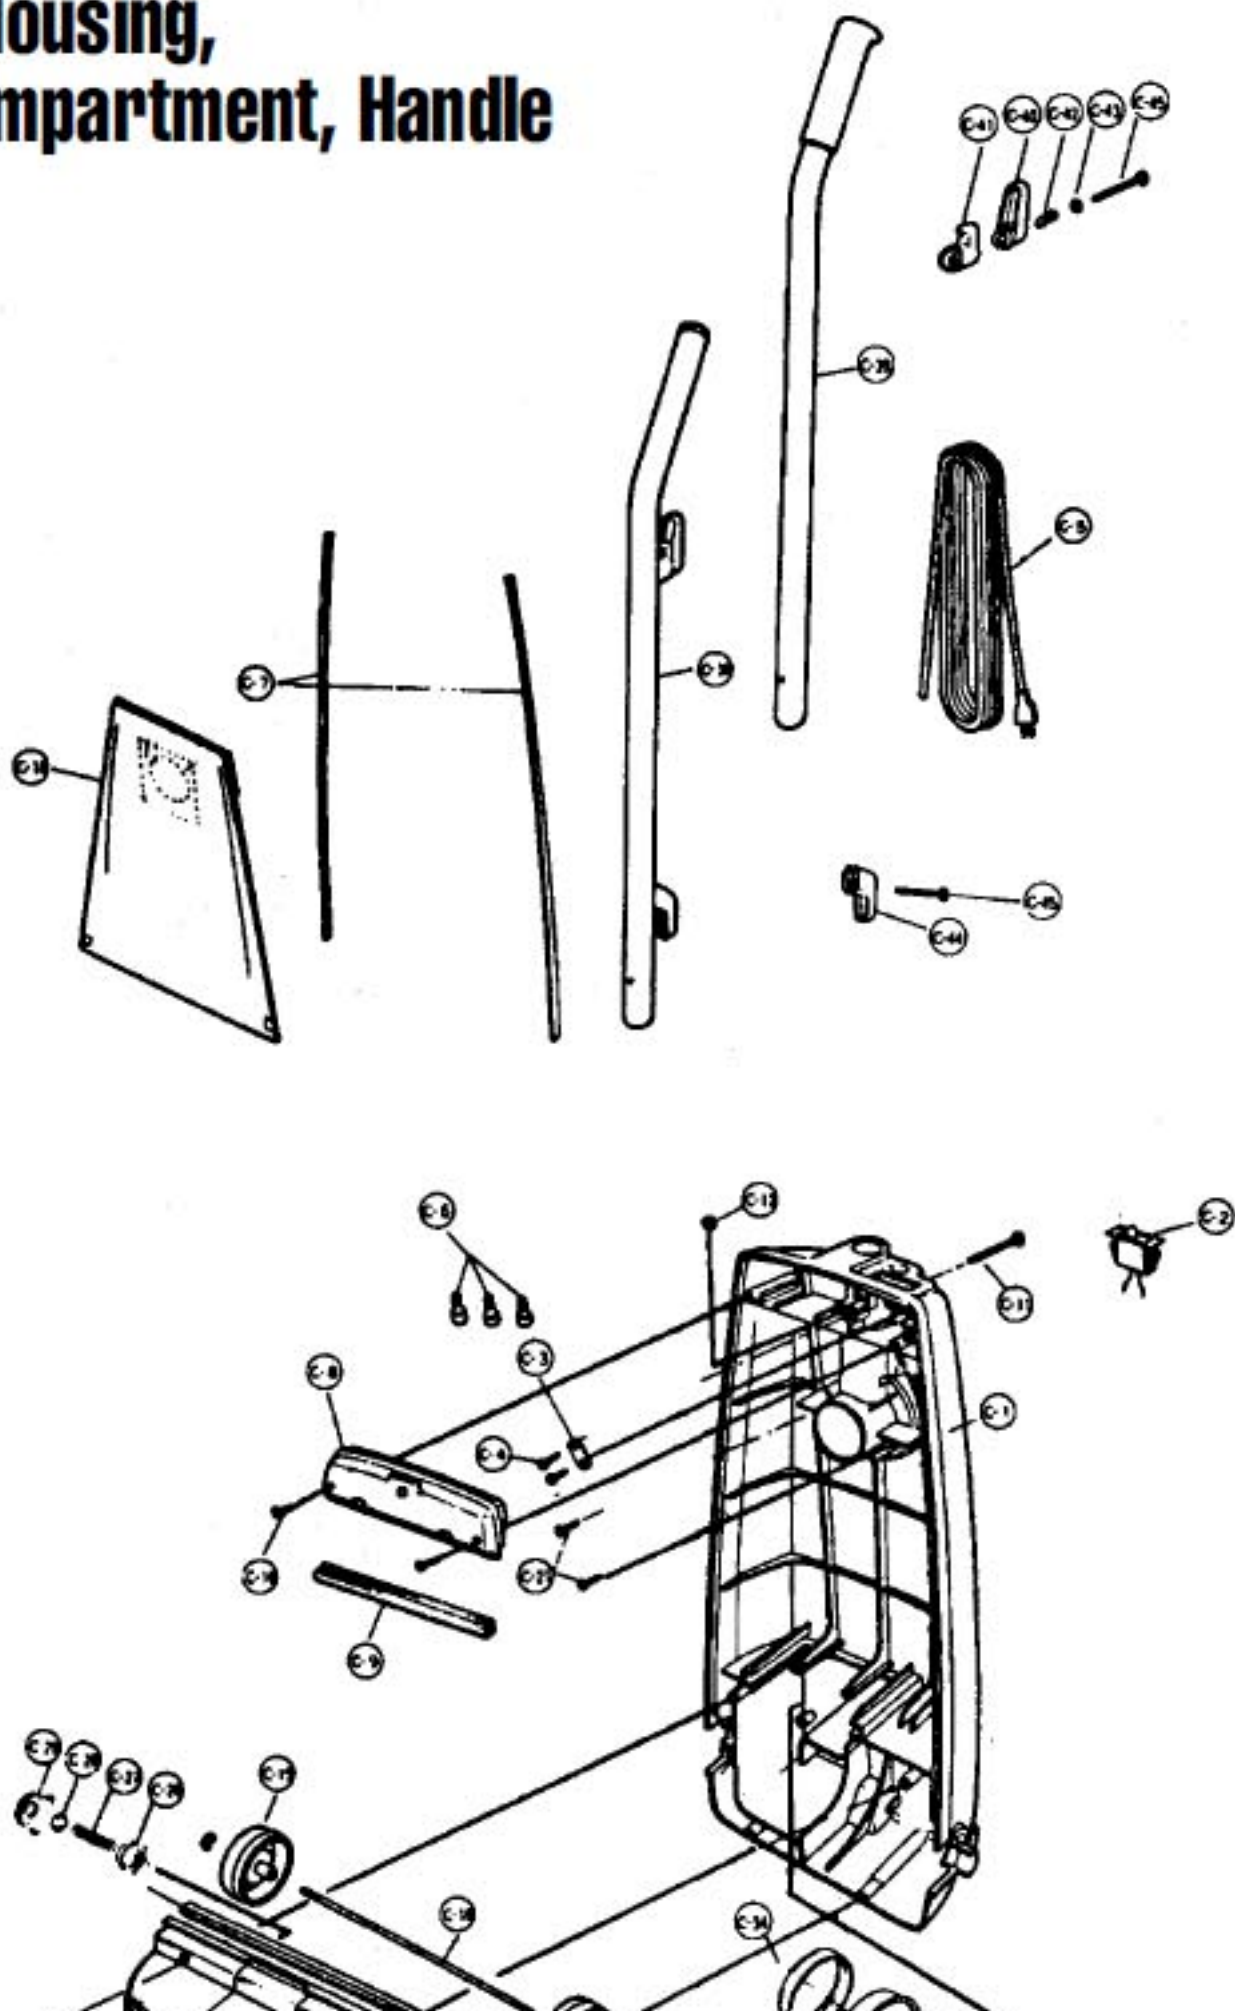

# PANASONIC

Models: MC-5110, MC-5111, MC-5115, MC-5116, MC-5120, MC-5121, MC-51

## Motor Housing, Dust Compartment, Handle

C1	P-400	Dust Compartment	C38	P-333	Protector Fl
C1	P-4002	Dust Compartment, 5111,5116,5121, 5131	C39	P-6400	Handle, 51
C2	H-339	Switch, on/off (R)	C39	P-6410	Handle, 51
C3	P-622	Cord Stopper	C39	P-6411	Handle, 51
C4	P-416	Screw, 10 pk	C39	P-6412	Handle, 51
C5	MP-225	Cord, 20 ft, white (R)	C39	P-6401	Handle, 51
C5	MP-230	Cord, 30 ft, white (R)	C39	P-6415	Handle, 51
C6	SS-71B	Wire Nut, 100 pack (R)	C39	P-6416	Handle, 51
C7	P-66	Gasket, rubber	C39	P-6420	Handle, 51
C8	P-031	Switch Cover	C40	P-5337	Cord Hook,
C8	P-0304	Switch Cover, 5111,5116,5121,5131	C40	P-5301	Cord Hook,
C9	P-73	Gasket, rubber	C40	P-5302	Cord Hook,
C10	P-416	Screw, 10 pk	C40	P-5303	Cord Hook,
C11	P-7301	Screw, handle	C41	P-5501	Cord Hook
C12	P-2117	Nut	C41	P-5503	Cord Hook,
C13	P-3200	Filter Supporter	C41	P-5500	Cord Hook,
C14	P-375	Secondary Filter	C41	P-5502	Cord Hook,
C15	P-0102	Roller	C42	P-7670	Spring, cor
C15	P-0107	Roller, 5111,5116,5121,5131	C43	P-587	Washer
C16	P-161	Shaft, roller	C44	P-5407	Cord Hook,
C17	P-05	E-Clip, 30 pk	C44	P-541	Cord Hook,
C18	P-115P	Paper Bag, type "U", 3 pack	C44	P-543	Cord Hook,
C18	P-115PT	Paper Bag, type "U", 12 pack	C45	P-430	Screw
C18	253	Paper Bag, type "U", 3 pack (R)	C46	P-606	Dust Cover
C18	253-12	Paper Bag, type "U", 12 pack (R)	C46	P-602	Dust Cover
C18	MF11	Paper Bag, microfiltration, 3 pack (R)	C46	P-6020	Dust Cover
	P-9923	Cloth Bag, w/ slide, blue	C46	P-6024	Dust Cover
	P-55	Cloth Bag, w/ zipper (R)	C46	P-6025	Dust Cover
C19	P-607	Suction Inlet	C47	P-1122	Indicator Pl
C19	P-6075	Suction Inlet, 5111,5116,5121,5131		P-2121	Omamenta
C20	P-0271	Cover		P-2122	Omamenta
C20	P-02712	Cover, 5111,5116,5121,5131		P-1121	Vac Gauge
C21	P-416	Screw, 10 pk		P-1123	Vac Gauge
C22	P-091	Motor Case	C48	P-9300	Packing, in
C22	P-0901	Motor Case, 5111,5116,5121,5131	C49	P-1720	Indicator Ca
C23	P-201	Packing, rear cover	C50	P-4212	Spring, indi
C24	P-195	Packing, motor case	C51	P-0368	Indicator Le
C25	P-416	Screw, 10 pk	C52	P-1520	Indicator Pi
C26	P-6921	Protector	C53	P-4100	Screw
C27	P-7000	Spring, protector	C54	P-3403	Nozzle Hos
C28	P-6820	Protector Case	C54	P-3404	Nozzle Hos
C29	P-182	Supporter, protector			
C30	P-441	Lead Wire			
C31	P-926	Motor			
C32	P-272	Carbon Brush, 5111,5116,5121,5131			