

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



KITCHENAID K45WSSWH-0 Owner's Manual

[Shop genuine replacement parts for KITCHENAID
K45WSSWH-0](#)

KitchenAid®

[Find Your KITCHENAID Mixer Parts - Select From 532 Models](#)

----- Manual continues below -----

PARTS LIST

for

KitchenAid®

4 1/2 QT. STAND MIXER

CLASSIC – TILT

MODELS:

K45SSWH-0 (White)
K45WSSWH-0 (White)
K45SSAC-0 (Almond Creme)
K45SSAL-0 (Almond)
K45SSDAC-0 (Almond Creme)
K45SSDAL-0 (Almond)




FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS



COLOR VARIATION PARTS

For Variations of Model: K45SS__0

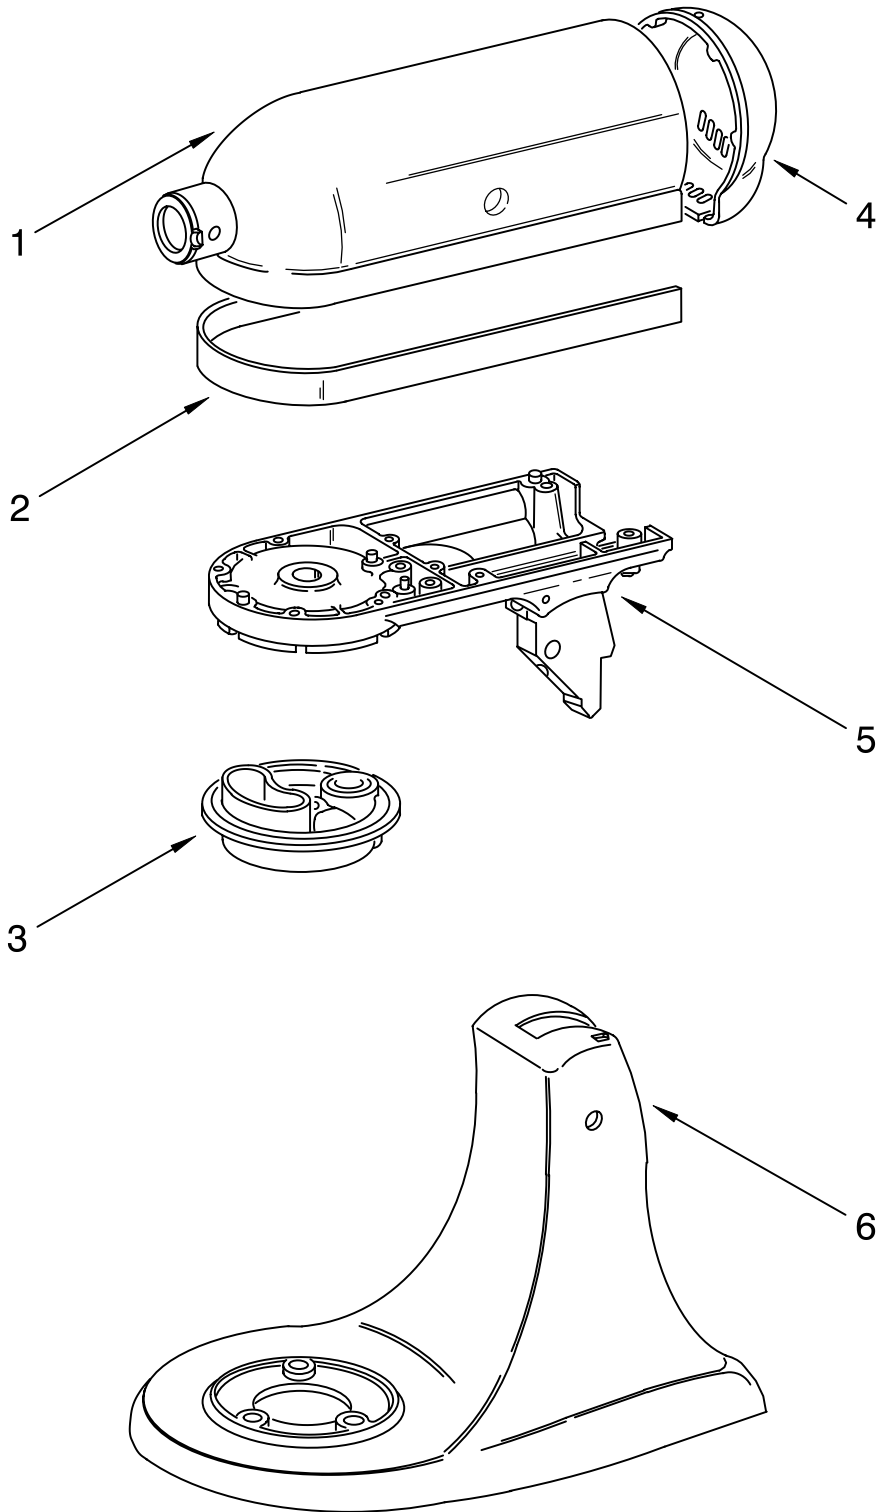


Illus. No.	Part No.	DESCRIPTION
1	240291-1	Motor Housing White
	240291-16	Motor Housing Almond Creme
2	9702629	Trim Band White
		Trim Band Almond Creme
3	240286-1	Planetary Gearcase White
	240286-18	Planetary Gearcase Almond Creme
4	240253-1	End Cover White
	240253-16	End Cover Almond Creme
5	240350-4	Lower Gearcase White
	240350-62	Lower Gearcase Almond Creme
6	240151-1	Pedestal White
	240151-15	Pedestal Almond Creme

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BASE AND PEDESTAL UNIT

For Variations of Model: K45SS__0

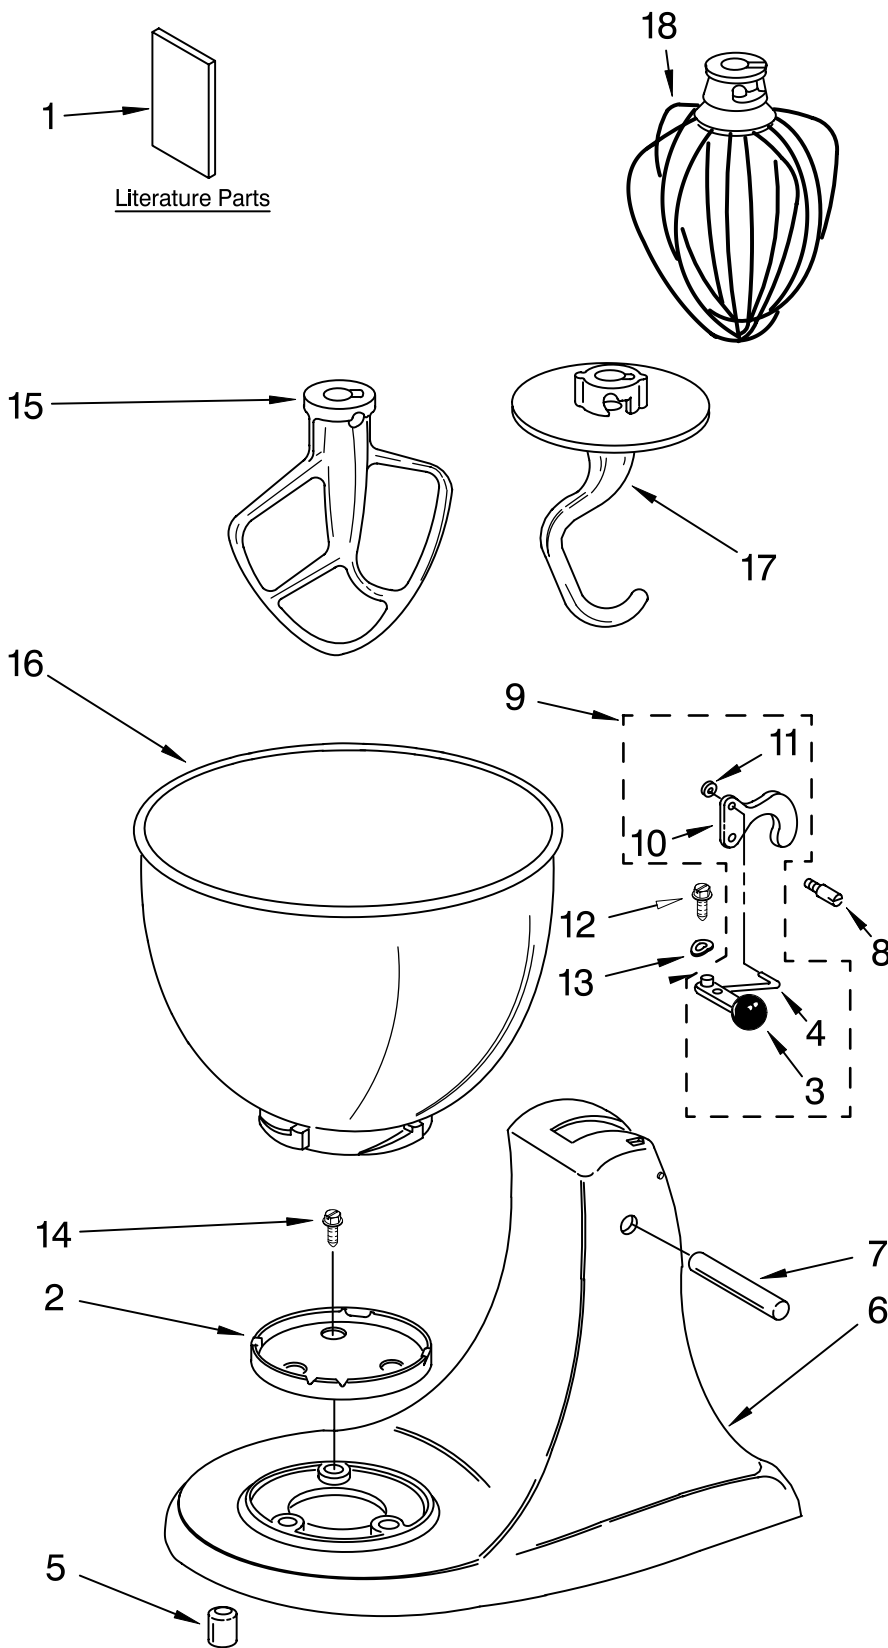


Illus. No.	Part No.	DESCRIPTION
1	9709648	Literature Use & Care Guide (Trilingual)
	8212369	Repair Parts List
2	4162529	Screw Cap Kit
3	9709280	Lever, Latch
4	24450	Link, Latch
5	4161530	Foot
6	**	Pedestal
7	16910	Pin, Hinge
8	103993	Screw, Latch Bearing
9	24452	Latch, Link & Lever
10	9709055	Latch
11	8533912	Washer
12	110679	Screw
13	116241	Washer, Spring
14	3400020	Screw
15	9708470	Beater, Flat
16	4169926	Bowl And Base (4 1/2 Qt.)
17	9708471	Dough Hook
18	9706446	Wire Whip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CASE, GEARING AND PLANETARY UNIT

For Variations of Model: K45SS__0

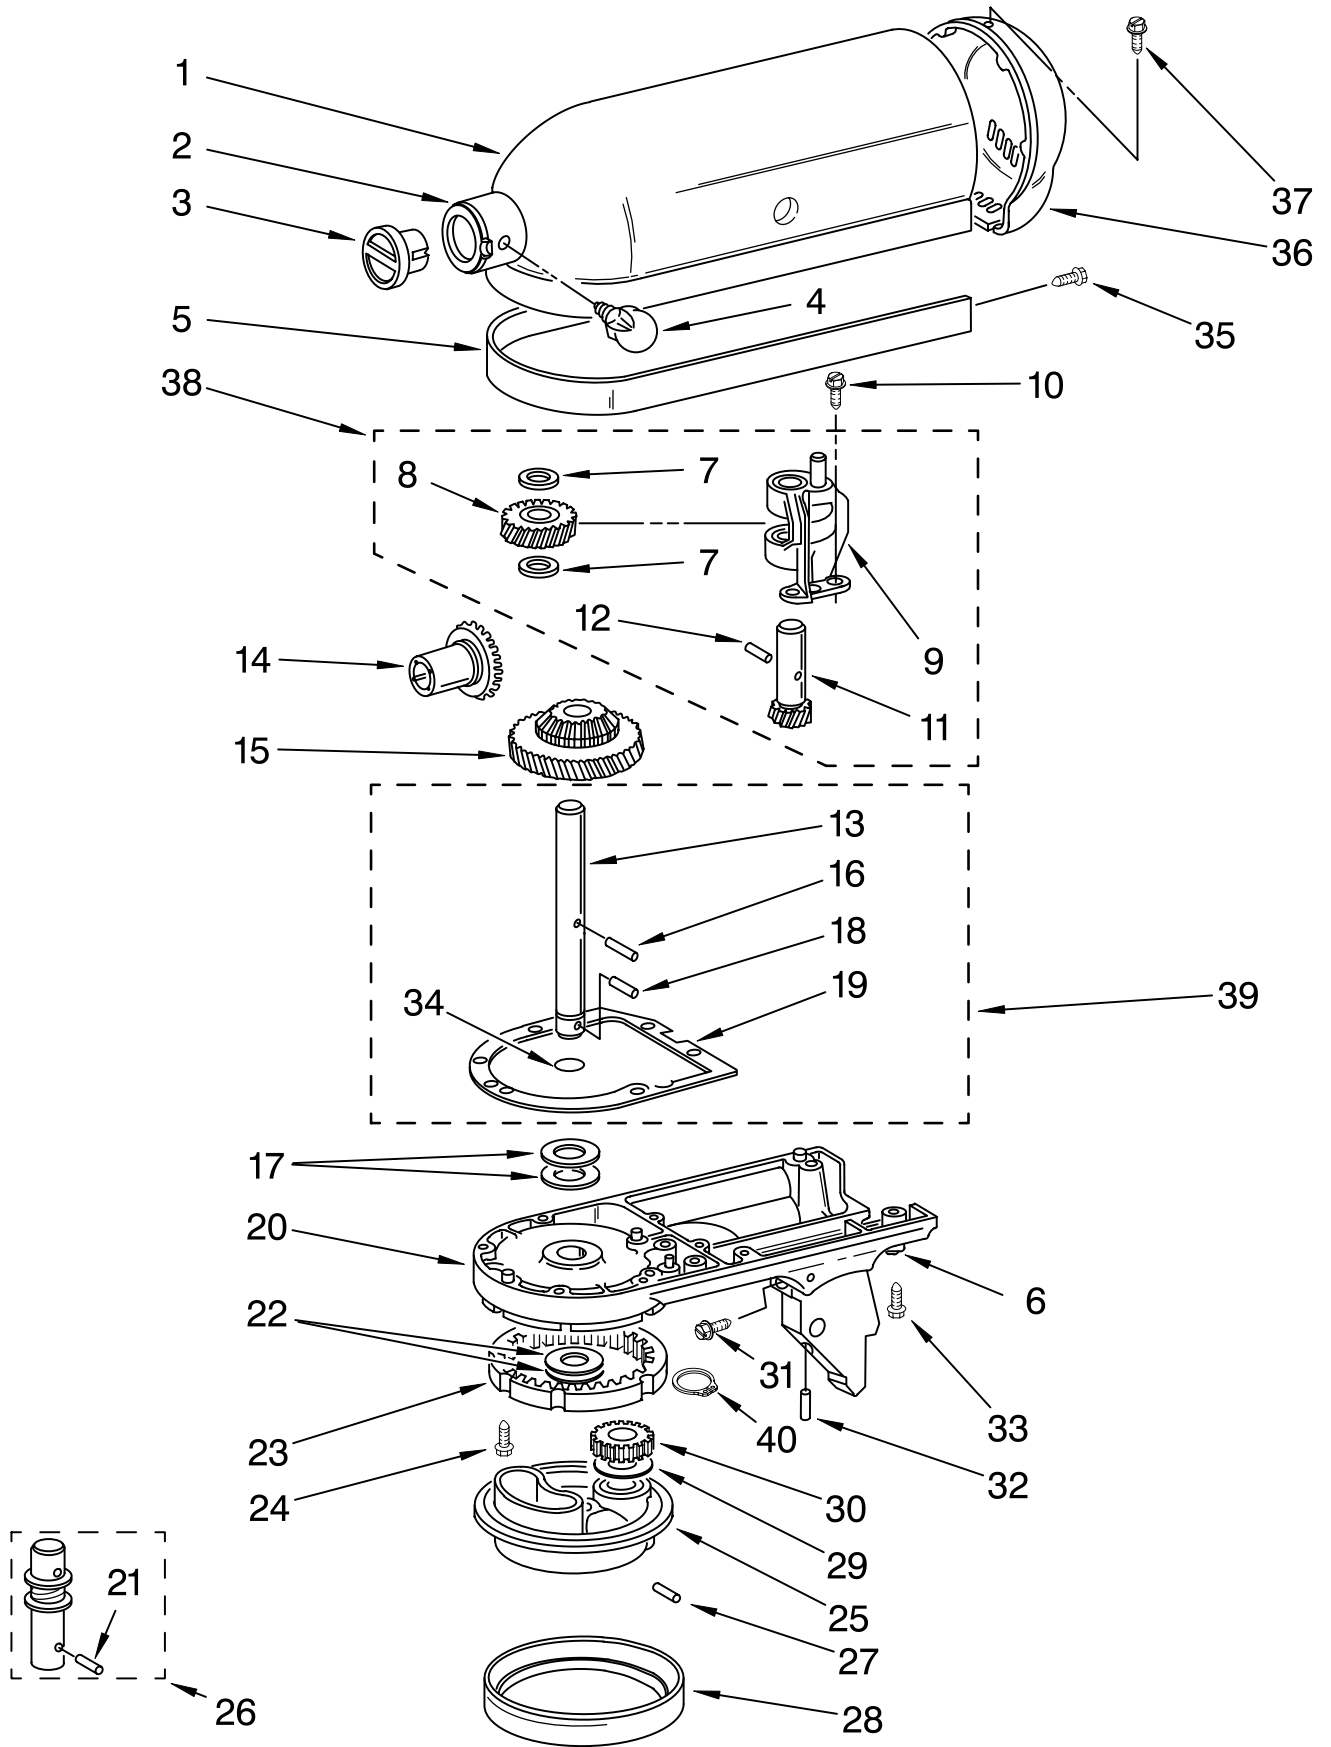

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CASE, GEARING AND PLANETARY UNIT


For Variations of Model: K45SS__0

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	**	Gearcase Motor Housing	15	9709627	Bevel Pinion & Center Gear	28	240285	Ring, Planetary Drip
2	16897	Ring, Attachment Hub	16	240018-1	Pin (Vertical Center Shaft)	29	9706090	Washer, Shim
3	242765-2	Cap, Attachemnt Hub	17	3180163	Washer, Fiber	30	9703903	Pinion, Gear
4	9709194	Thumb Screw	18	9705443	Pin, Groove	31	89411	Screw
5	**	Band, Trim	19	4162324	Gasket, Transmission Case	32	3400203	Screw, Set
6	8533914	Lock Washer	20	**	Lower Gear Case	33	3400025	Screw
7	3180161	Washer, Fiber	21	9704677	Pin, Groove	34	67500-55	"O" Ring
8	4162897	Worm Gear	22	3180163	Washer, Fiber	35	311932	Screw, Self Tapping
9	240308	Worm Gear Bracket And Bearing	23	9703904	Gear, Internal	36	**	Cover, End
10	3400022	Screw	24	103994	Screw, Special Planetary	37	4162914	Screw
11	240210-2	Shaft & Pinion	25	**	Agitator Shaft Assembly	38	240309-2	Worm Gear Bracket and Gear
12	9705444	Pin	26	4176067	Pin (Agitator Shaft)	39	4160474	Center Shaft & "O" Ring
13	240026	Shaft, Vertical Center	27	240018-1	Pin (Agitator Shaft)	40	9703438	Ring
14	9705130	Gear, Attachment Hub Bevel						**Refer to Page 2 Color Variation Parts

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MOTOR AND CONTROL PARTS

For Variations of Model: K45SS__0

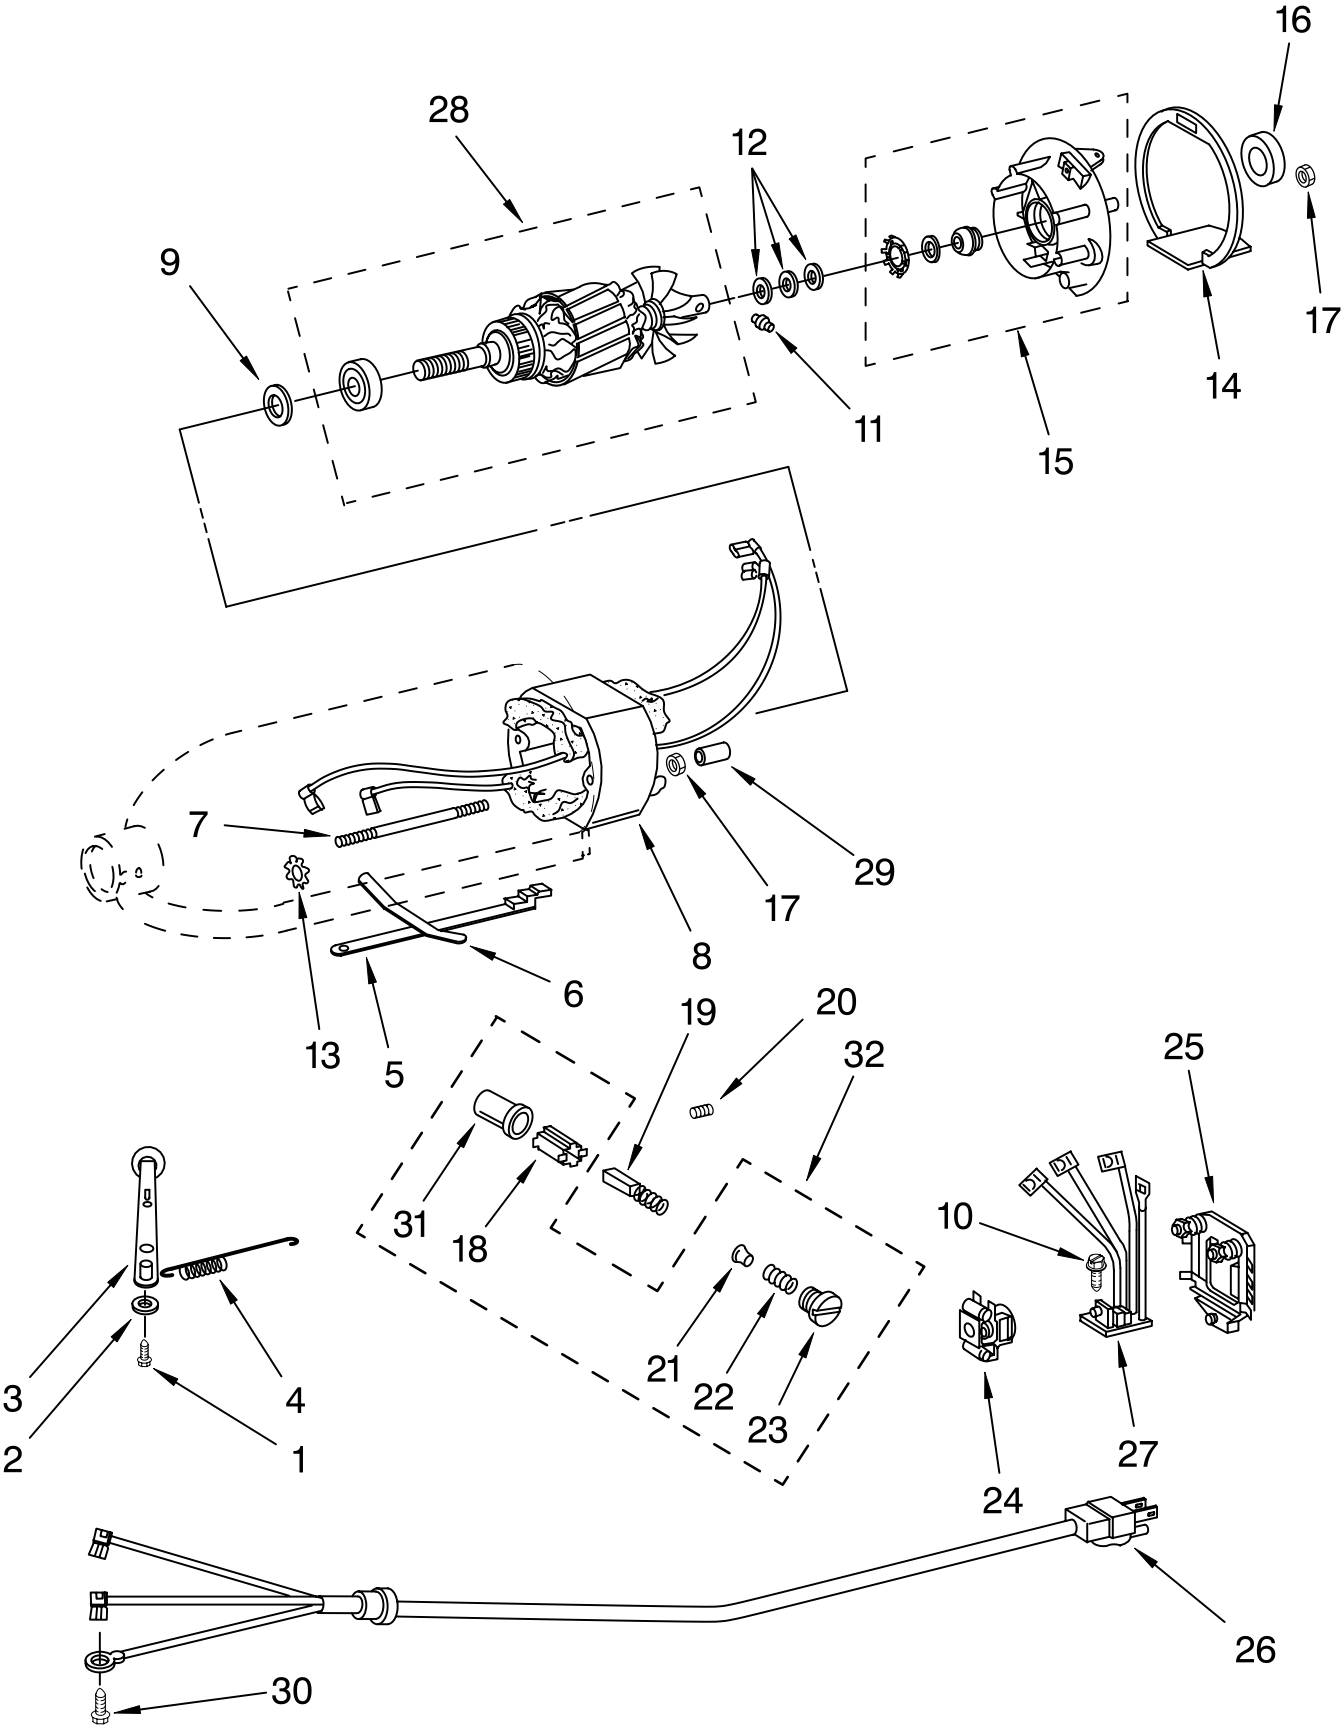

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MOTOR AND CONTROL PARTS

For Variations of Model: K45SS__0

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	110679	Screw, Pivot	14	240775-1	Seal, End	25	240904-2	Control Plate
2	116241	Washer, Spring	15	3180526	Bracket, Bearing			Assembly
3	9709276	Switch Lever			Asm.	26		Cord, Power
		And Stud	16	3180238	Washer		9701025	White
4	3183680	Spring, Control	17	8533905	Nut, Machine	27	9706595	Board, Phase
		Plate	18	240680	Insert, Brush			Control
5	3184176	Speed Link & Cam			Holder	28	9708315	Armature &
6	240205	Spring, Flat	19	9706416	Brush, Carbon			Bearing Assy
7	240769	Screw, Stator	20	9707926	Screw, Set	29	4162634	Sleeve, Motor
8	9702695	Field Assembly	21	116286	Cap, Spring			Stud
9	9704324	Washer, Ball			Seat	30	3184609	Screw
		Bearing (Front)	22	116287	Spring, Cap	31	3179908	Housing, Brush
10	W10068260	Screw	23		Cap, Brush Holder			Holder
11	16998	Stud, Governor		3184212	Black	32	4162546	Brush Holder
		Drive		3184211	White			Assembly
12	3180162	Washer, Spacing		3184213	Almond Creme			
13	W10068270	Washer	24	17830	Governor Assembly			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

ACCESSORY PARTS

For Variations of Model: K45SS__0

Illus. No.	Part No.	DESCRIPTION
	4164778	Mixer Attachment Pak (Includes Food Grinder (FGA), Food Strainer (FVSP), And Vegetable Slicer, (RVSA) (FPPA)
	4164749	Food Grinder (FGA)
	8211924	Grain Mill (KGMA)
	4164768	Pasta Maker And Food Grinder (Includes SNP Pasta Maker Plates) (SN/FGA)
	4164775	Fruit/Vegetable Strainer Parts (Use With FGA Model Only) (FVSP)
	4164750	Rotor Slicer/Shredder (With 4 Standard Cones) Fine Shredder, Coarse Shredder, Thick Slicer, And Thin Slicer (RVSA)
	3177975	Pouring Shield (KPS2CL)
	4164824	Pasta Maker Plates (SNPA)
	4164774	Fruit/Vegetable Strainer And Food Grinder (FVS/FGA)
	3180617	Cover, Decorative (Cotton Polyester)
	4162838	Food Tray (FT)
	4164748	Juicer (JE)
	4164747	Can Opener (CO)
	4164803	Sausage Stuffer Kit (SSA)
	3177924	Bowl Cover, Plastic Non-Sealing
	4163337	Bowl, Stainless With Handle
	3180262	Bowl, 3 Qt.
	4162160	Bowl, Satin Stainless
	9707963	Ice Cream Maker (KICA)
	4176452	Pouring Shield (International)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST