


Original & Replacement

EUREKA
BRAVO Hard Body
Model 9730A/AT Shown

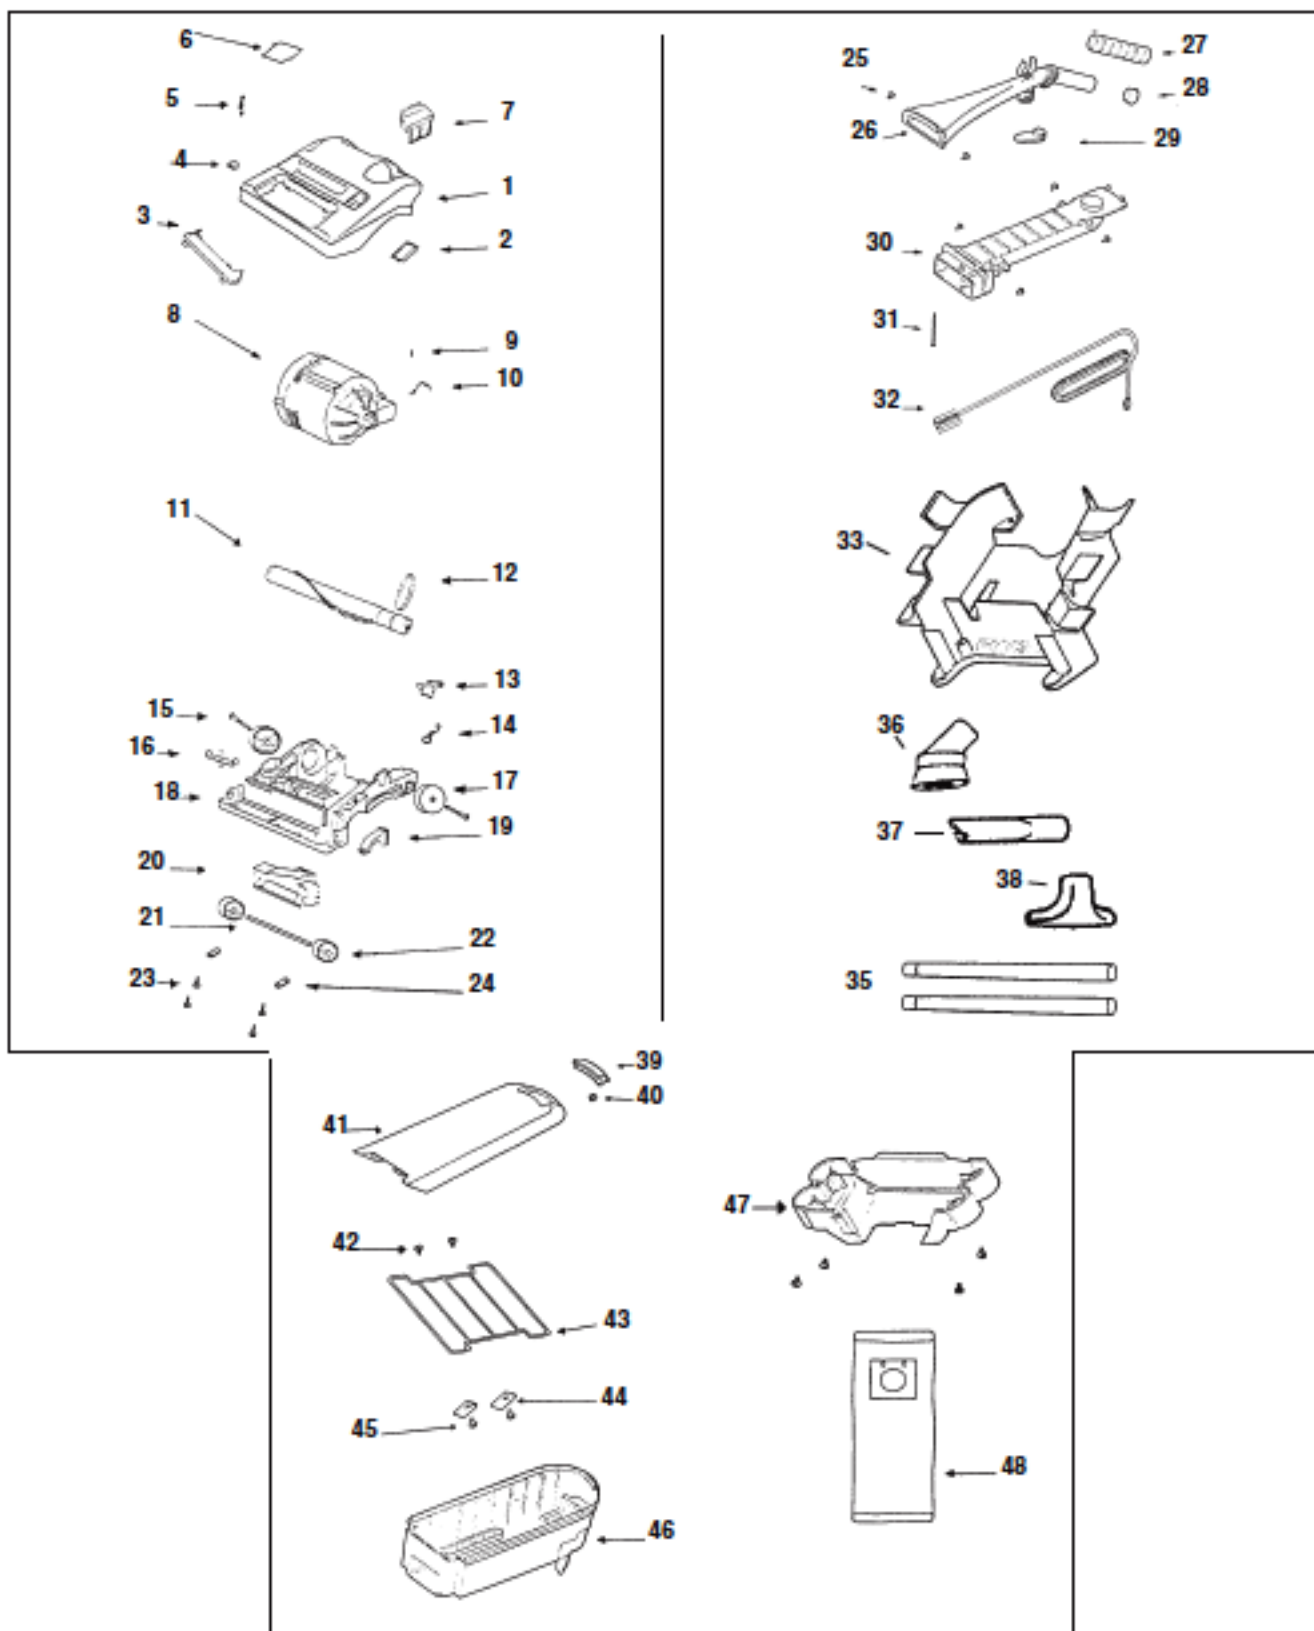


EUREKA

Original & Replacement


**BRAVO Hard Body
Model 9730A/AT Shown**

KEY	PART NO.	DESCRIPTION	KEY	PART NO.	DESCRIPTION	KEY	PART NO.	DESCRIPTION
1	E-54393-2	Hood & Graphics*	19	E-54376-1	Belt Cap Ass'y	38	E-53454-6	Upholstery Nozzle
	E-27339-1	*Nameplate	20	E-57762-1	Carriage Ass'y*	38	FA-5200-3	Upholstery Tool Black
2	E-27249-1	*Belt Window	21	E-57567-1	*Axle	39	E-57926-1	Latch & Graphics Ass'y
3	E-14731-1	*Lens	22	E-38236-1	*Front Wheel	40	E-57877	Latch Spring
4	E-38241-1	Knob	23	E-53238-10	Hood Screw	41	E-01973-1	Cover & Graphics
5	E-54377	Spring	24	E-54417-1	Carriage Clip	42	E-55927	Screw
6	E-54392-4	Attachment Cover**	25	E-53238-22	Screw	43	E-14902	Bag Support
	E-57627	**Gasket	26	E-01974-1	Upper Handle Ass'y**	44	E-54417-1	Carriage Clip
7	E-27251-2	Switch Pedal	27	E-27308-1	**Handle Grip	45	E-53238-22	Screw
8	NLA	Motor 9.0 Amp Ass'y	28	E-36873-6	**Handle Cap	46	E-01969-1	Rear Housing
9	E-53238-13	Screw	29	E-37115-4	Cord Release Hook	47	E-57918-1	Bottom Housing & Graphics
10	E-38243-1	Motor Clamp	30	E-01964-1	Dirt Tube	48	E-54310	Disp. Bag Style U 3 Pk
11	E-54325-1	Disturbulator Ass'y	31	E-53238-26	Screw	48	ER-1421	Disp. Bag Style U 3 Pk
	E-54359	Felt Washer	32	E-27172-5	Cord Ass'y	48	E-57802	Disp. Bag Style U Filteraire 3 Pk
	E-54360	End Cap	33	E-01967-1	Tool Pak			
12	E-38441	Belt	34	E-54323-1	Hose Ass'y (not illustrated)			
12	E-54312	Belt 2 Pk	35	E-14070-2	Straight Wand			
12	ER-1035	Belt	35	FA-5005-3	Wand Plastic Black			
13	E-27202-1	Handle Release	36	E-53455-4	Dusting Brush			
14	E-53076-2	Spring	36	FA-5300-3	Dust Brush Black			
15	E-38242	Rear Axle	37	E-54308-1	Crevice Tool			
16	E-38240-1	Slide	37	FA-5400-3	Crevice Tool Black			
17	E-27201-2	Rear Wheel						
18	E-54372-4	Base Ass'y*						
	E-57692-1	Gasket*						


BRAVO MOTOR CHART	
MODEL #	AMPS MOTOR ASS'Y *ARMATURE **FIELD
9001A, 9002A, 9205A/AT	6.5 NLA NLA NLA
9002AM	NLA NLA NLA
9201A/AT, 9202A/AT	6.0 NLA NLA NLA
9201B/BT, 9201D/DT 9202B/BT, 9202D/DT 9301A/AT, 9302A/AT	6.0 NLA NLA NLA
9205B/BT	6.5 NLA NLA NLA
9301B/BT, 9302B/BT	8.0 NLA NLA NLA
9334A/AT	6.5 NLA NLA NLA
9334B/BT, 9734A/AT	8.0 NLA NLA NLA
9410A/AT, 9410A/ATX 9615A/AT, 9615A/ATX 9620A/AT, 9620A/ATX	8.0 NLA NLA NLA
9410B/BT, 9615B/BT 9615B/BTX, 9620B/BT 9730A/AT, 9740A/AT 9750A/ATV	9.0 NLA NLA NLA
9730B/BT, 9740B/BT 9750B/BT, 9750B/BTV 9824A/AT, 9845A/AT 9855A/AT, 9875A/AT	9.5 NLA NLA NLA
9731A/AT, 9741A/AT 9751A/AT, 9875B/BT	12.0 NLA NLA NLA
9834A/AT	9.5 NLA NLA NLA
9834B	12.0 E-54379-41 NLA NLA

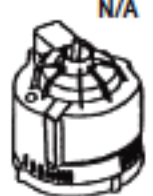


N/A




ER-6220




* ER-2810
E-27531
(12 AMP)




E-54811
Fan Washer




E-54413
Fan Nut



** E-38215-2



ER-7515



E-54152-3
E-54716
(12 AMP)

E-27171 Fan Chamber Gasket