

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Wolf R48-SERIES Owner's Manual

[Shop genuine replacement parts for Wolf R48-SERIES](#)



[Find Your Wolf Electric Range Parts - Select From 82 Models](#)

----- Manual continues below -----

48" Range Door and Riser Parts List


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>	<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787626	Strip, Filler (Island Trim)	20	719628	Bracket, Belly Bar RH
2	722791	Handle, 18" Oven Door	21	719627	Bracket, Belly Bar LH
3	722862	Trim, J Oven Door, Small	22	720770	Handle, Oven Door, 30" Range
4	803864	Spacer, Door 18" Range	23	800925	Logo, Wolf New
5	*Special Order	Order, Call Factory Parts Department, Door, Oven, Assy. 18	24	730509	Clip, Tinnerman
6	786755	Panel, Back 48" Range	25	730335	Washer, Lock #10
7	730228	Screw, #10-24 x 1/2"	26	730028	Screw, #10-24 x 1"
8	769576	Liner, Door Assy 30"	27	722424	Trim, J Oven Window Lg.
	802809	Liner, Door Assy 30" (See SN Breaks)	28	803863	Spacer, Door, 30" Range
9	720814	Window, Oven Door Lg.	29	714589	Ring, Retaining
10	723296	Clip, Oven Glass Retainer	30	719287	Pin, Door Hinge
11	722328	Glass, Oven Door	31	802808	Hinge, Door Stiffener Support Assy, Lh
12	800635	30" Door Insulation	32	*Special Order	Order, Call Factory Parts Department Door, Oven, Assy. 30"
13	766374	Hinge, Door Stiffener Support Assy, Rh	33	786644	Liner, Door Assy, 18" Range (See SN Breaks)
	802807	Hinge, Door Stiffener Support Assy, Rh		802810	Liner, Door Assy, 18" Range (See SN Breaks)
14	800636	36" Door Insulation	34	722774	Window, Oven Door, Small
15	730141	Screw, 1/4-20" x 1/2"	35	722859	Glass Oven Door, Small
16	730308	Washer, Lock 1/4"	36	800634	18" Door Insulation
17	787592	Channel Door Spacer	37	800634	18" Door Insulation
18	730239	Screw, #8 x 3/8"	38	786643	Skin, Door S/S, 18" Range
19	769565	Skin, Door SS, 30" Range (See SN Breaks)		786642	Skin, Black Door, 18" Range
	800983	Skin, Door SS, 30" Range (See SN Breaks)	39	722791	Handle, 18" Oven Door
	769564	Skin, Door Black, 30" Range	40	722862	Trim, J Oven Door, Small
			41	803864	Spacer, Door 18" Range
			42	*Special Order	Order, Call Factory Parts Department, Door, Oven, Assy. 18

NOTE: Door and door components prior to serial number 17000000. See page 36 & 37 for door and door components starting with serial number 17000000.

Not Shown

- 806663 Riser 5-R48
- 800017 Riser 10-R48
- 800021 Riser 20-R48

48" Range Door and Riser View

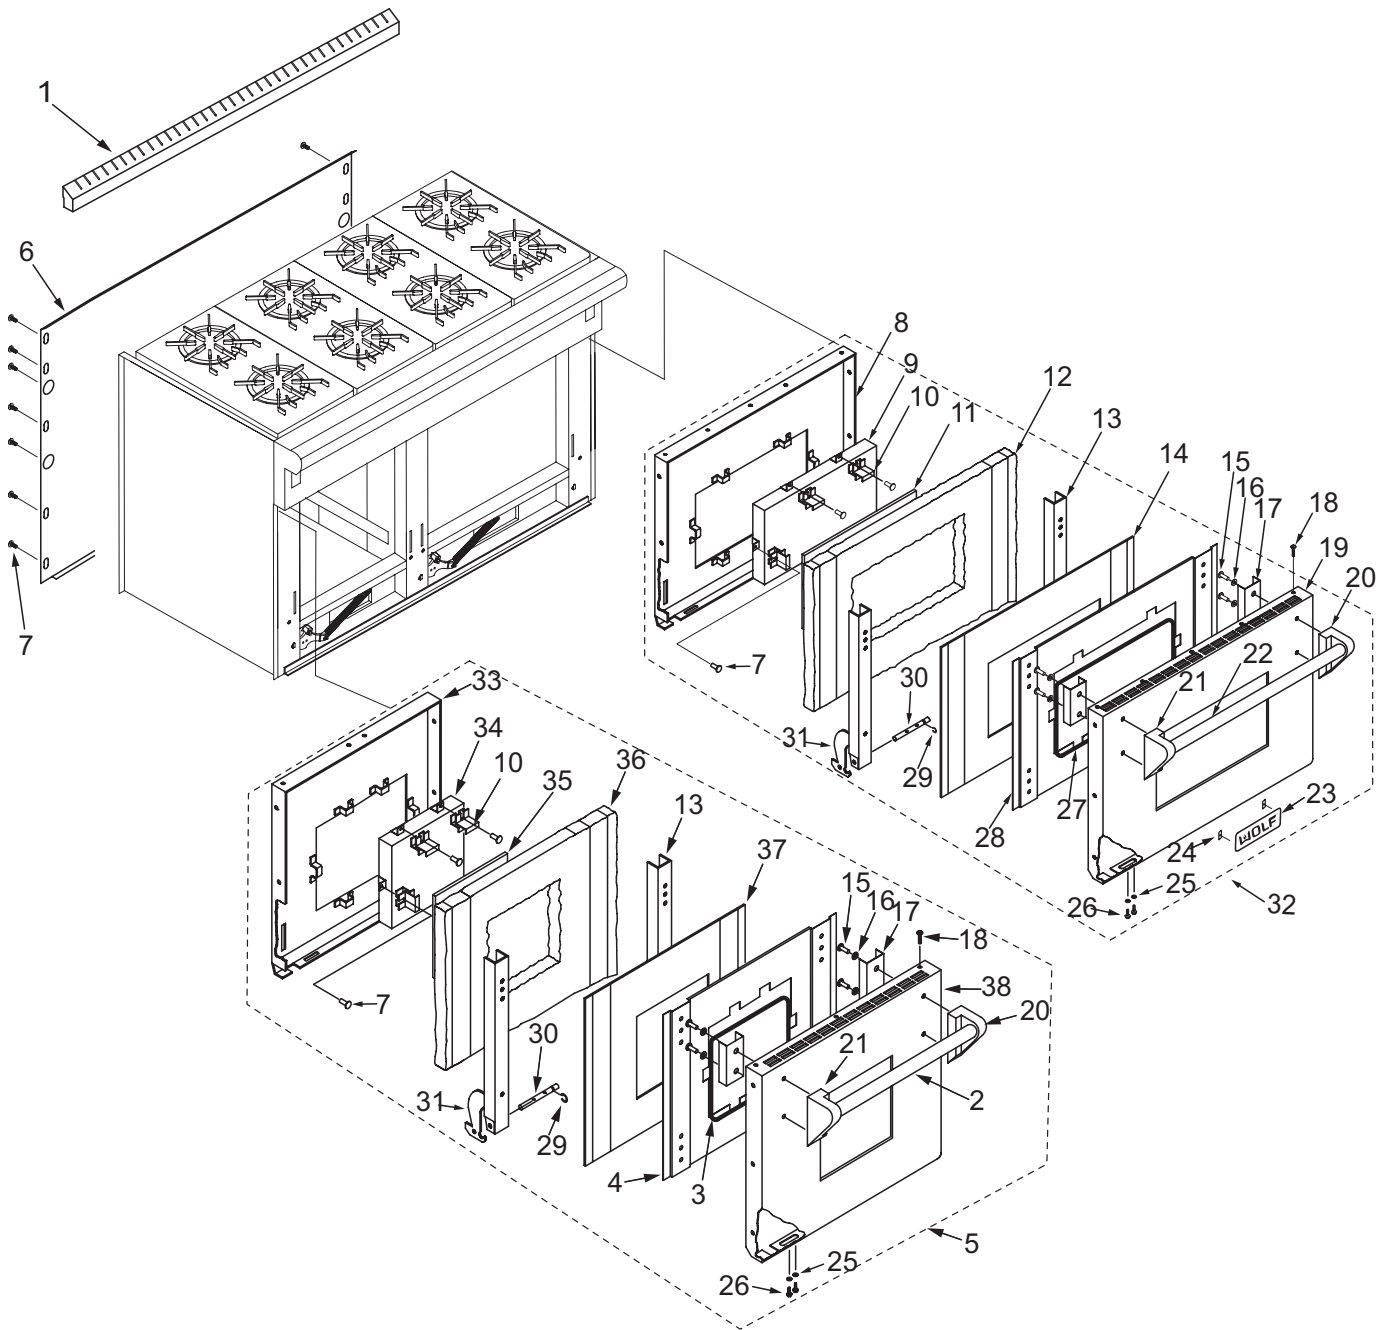

48" Range Door Parts List (Starting with Serial Number 17000000)

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1		*Special Order, Call Factory Parts Department Door, Oven Assy, 30" Door Assy. SS
2	809654	Liner, 30" Door-Range, SVCE
3	809637	Hinge Hydraulic, SVCE
4	809638	Hinge, Spring, 18", SVCE
5	809667	Clip, Oven Glass Retainer, SVCE
6	730228	Screw, #10-24 x 1/2"
7	809651	Window, Oven Door Large, SVCE
8	809664	Glass, Oven Door, Large, SVCE
9	809653	Insulation, Blkt, 30", SVCE
10	809639	Bracket Assy, End Cap, Range, SVCE
11	730141	Screw, 1/4-20" x 1/2"
12	809640	Handle End Cap, Right, SVCE
13	809641	Handle End Cap, Left, SVCE
14	804396	8-32x .375 Set Screw
15	809650	Handle Bar, 30", SVCE
16	800925	Logo, Wolf, Large
17	809647	Door, Skin - 30" Logo Assy, SVCE
18	809663	J-Trim, Oven Window Lg, SVCE
19	809652	Baffle, 30" Door - Range SVCE
20	803273	Pin, Pilot
21	809373	Retainer, Hinge, SVCE
22	730239	Screw, #8x3/8"
23	803372	#10-16 X 1/2" Screw CR Truss HD
	804789	Washer, Fiber
24	801541	8-18 X 1/2" Screw TYPE B H/W/HD
25	809646	Liner, 18" Door-Range, SVCE
26	809643	Window, Oven Door, Small
27	809666	Glass Oven Door, Small
28	809645	Insulation, Blkt, 18", SVCE
29	809644	Baffle, 18" Door - Range SVCE
30	809636	Liner, 18" Door-Range, SVCE
31	809642	Handle Bar, 18"
32		*Special Order, Call Factory Parts Department 18" Door Assy. SS


NOTE: Door and door components starting with serial number 17000000. See page 34 & 35 for door and door components prior to serial number 17000000.

48" Range Dress Panels Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	786493	Channel, Rear, 48" Range
2	786492	Channel, Front, 48" Range
3	714369	Bushing, Snap 1/2"
4	722270	Rivet, Pop 3/16"
5	787310	Panel, Outer RH, SS 48" Range (See SN Breaks)
	801569	Panel, Outer RH, SS 48" Range (See SN Breaks)
6	786714	Pan, Grease SS (12-3/8" X 7") (See SN Breaks)
	801687	Tray, Grease Range (With dimples, 11-1/2" X 9-1/2") (See SN Breaks)
7	787578	Pan, Drip Assembly (See SN Breaks)
	801362	Drip Tray Assembly (See SN Breaks)
8	786654	Baffle, Roll Front 48" Range
9	730228	Screw #10-24 x 1/2" Phillips
10	807588	Skirt, Front SS, 48" Range
11	809368	Panel, Lower Front, SS 48" Range
12	801923	Roll Front
13	730228	Screw 10-24 X 1/2" Phillips Head
14	809365	Switch, Door Interlock
15	766547*	Bracket, Door Switch
	809377**	Bracket, Door Switch
16	730535*	Nut, 6-32 Lock
17	719331*	Bolt, Eye 1/4-20 x 3"
18	730506*	Nut, Oversize
19	718361*	Spring, Door
20	768260*	Angle, Switch
21	719710*	Arm, Rocker, LH
22	719344*	Hook, "S", Oven Door
23	719350*	Pin, Clevis, 3/8 x 2"
24	730410*	Pin, Cotter, 3/32 x 1-1/4"
25	730310*	Washer
26	787311	Panel, Outer LH, SS 48" Range (See SN Breaks)
	801570	Panel, Outer LH, SS 48" Range (See SN Breaks)
27	769579	Shield, Inner T-stat, 36" Range
28	801680	Support, Channel Front
		<u>Not Shown</u>
	801256	Slide, Drip Tray, Lh
	801257	Slide, Drip Tray, Rh

<p>* - Prior to Serial Number (PTS) 17000000 ** - Starting with Serial Number (SWS) 17000000</p>

48" Range Dress Panels View

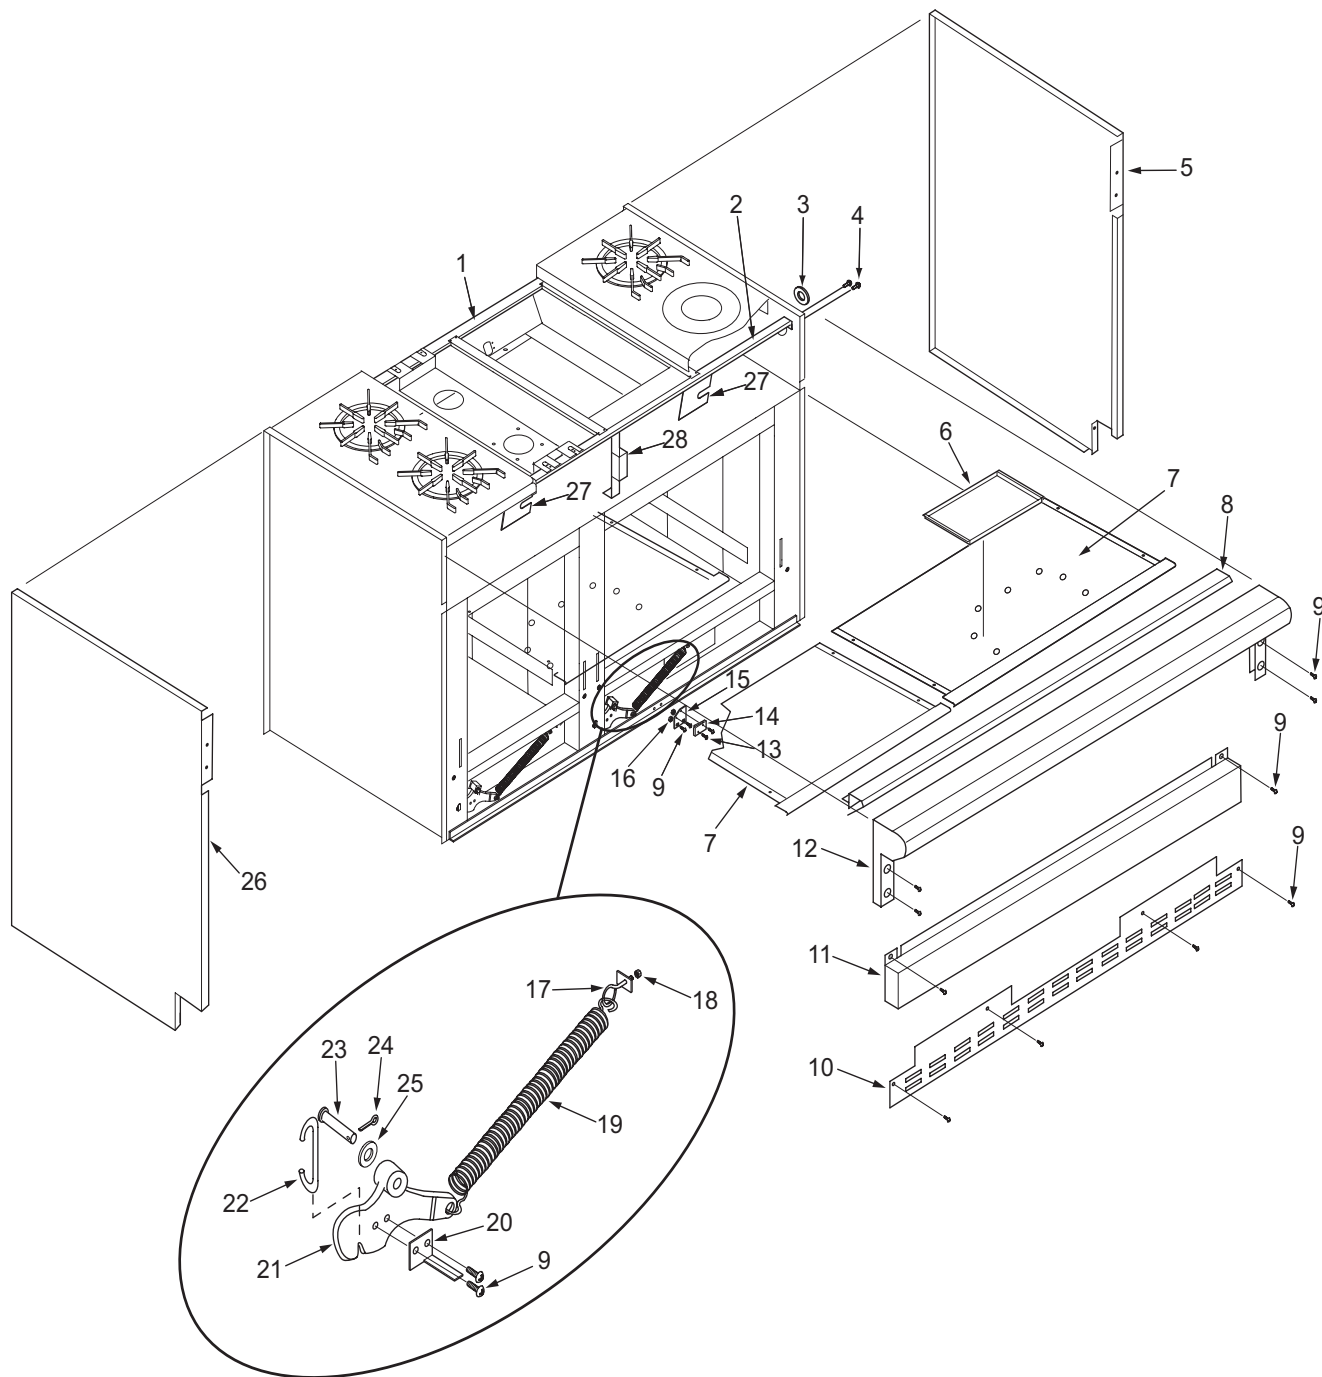

48" Range Top Parts List


Ref #	Part #	Description	Ref #	Part #	Description
1	801669	Grate, Wok (See SN Breaks)	36	786978	Baffle, Charbroiler
	804230	Grate, Wok (See SN Breaks)	37	786129	Spacer, IR Burner
2	800146	S Grate, Rear (See SN Breaks)	38	786029	Bracket, Sparker
	804229	S Grate, Rear (See SN Breaks)	39	714415	Sparker
3	800137	S Grate, Front (See SN Breaks)	40	804711	Shield, Charbroiler Electrode
	804228	S Grate, Front (See SN Breaks)	41	801265	Single Griddle Cover Kit - 11" Griddle (See SN Breaks)
4	720829	Grate, Spider (See SN Breaks)		809311	Griddle Cover - 11" New Style Griddle (See SN Breaks)
	809099	Grate, Spider (See SN Breaks)		801266	Double Griddle Cover Kit - 22" Griddle Old Style Griddle Cover & Backsplash (See SN Breaks)
5	722421	Grate Foot Pad (See SN Breaks)			Griddle Cover - 22" New Style (See SN Breaks)
6	722422	Washer, Silicone, Spider Grate (See SN Breaks)			
7	720801	Burner, Inner Head, Plated			
	800041	Burner, Inner Head, Black Enamel	809312		
8	720887	Base, Inner Burner			
	800044	Burner, Inner Base, Black Enamel	42	802508	Griddle Assembly, 11"
9	720803	Burner, Outer (See SN Breaks)		802509	Griddle Assembly, 22"
	801150	Cap, burner, Outer Head, Black Enamel	43	800067	Seal, Griddle, 20"
			44	800066	Seal, Griddle, 9"
10	720802	Ring, Cross (See SN Breaks)	45	800048	Orifice, IR Charbroiler, Natural Gas
	801151	Ring, Burner, Inner Base, Black Enamel		800050	Orifice, IR Charbroiler, LP Gas
			46	786127	Baffle, Griddle
11	803965	Burner Ring/Cap, Service Package	47	803168	Flex Tubing Service Package 3/8" x 18"
12	766446	Top, Pressed Steel, Porcelain (See SN Breaks)	48	770093	Solenoid, (Coil Only)
	805519	Top, Pressed Steel, (See SN Breaks)	49	730229	Screw #10-24 x 1-1/2"
			50	719376	Elbow, Brass 3/8"
13	722162	Screw, Phillips Head		719377	Fitting, Straight 3/8"
14	807864	Holder, Jet Assembly	51	804404	Holder, Single Solenoid
15	720886	Venturi		756302	Holder, Double Solenoid
16	730228	Screw #10-24 x 1/2"	52	803167	Flex Tubing Service Package 3/8" x 12"
17	800882	Orifice, Inner Burner, Natural Gas			
	800052	Orifice, Inner Burner, LP Gas	53	807622	Valve, Single Solenoid, w/fittings
18	720900	Fitting, Inner Orifice		807623	Valve, Double Solenoid, w/fittings
19	719566	Sleeve, 1/4" Fiberglass	54	803374	Vent, Frenchtop
20	720822	Ring	55	786718	Spacer, Rear
21	807598	Spring	56	NLA	Ring, Center French Top
22	801149	Base, Burner	57	NLA	Ring, Inner French Top
23	806483	Service Components, Electrode	58	NLA	Ring, Outer French Top
24	800872	Orifice, Outer Burner, Natural Gas	59	NLA	Plate, French Top
	800051	Orifice, Outer Burner, LP Gas	60	806466	Components, Frenchtop
25	767615	Panel, Burner Support	61	805658	Spacer, Front - FT Cover
26	809019	Burner Assembly - Also need to order 806483	62	786727	Ring, Flame
			63	723063	Burner Head
27	762215	Backsplash, Decorative	64	722521	Venturi, Gas Hotplate
28	759715	Cover, Charbroiler 11"	65	722536	Burner Base
	(Order 2 for Double Charbroiler 22")		66	723011	Electrode, French Top
29	786081	Rack, Charbroiler	67	786716	Pan, Burner
30	769593	Frame, Charbroiler	68	786719	Baffle, Pan French Top
31	722631	Screen, Reverberator	69	723010	Clip, Retaining
32	762444	Plate, Blank Off	70	722522	Nut, Hotplate
33	809183	Burner, Infrared Assy, Griddle/Charb	71	800062	Electrode Wire
			72	800060	Orifice, French Top Natural Gas
34	800048	Orifice, IR Charbroiler, Natural Gas		800061	Orifice, French Top LP Gas
	800050	orifice, IR Carbroiler, LP Gas	73	722530	Holder, Jet Gas
35	800258	Elbow	74	803170	Flex Tubing Service Package 1/4" x 12"
36	786978	Baffle, Charbroiler			

Not Shown


805637	Cover, Frenchtop Assy-Pro Series
787520	Hook, Center Plate French Top
722218	Hook, Porcelain Top Remover
767627	Spacer, Burner Support
722537	Seal, O-Ring Gas Hotplate (FT)
807066	Shield, Rubber - Electrode

48" Range Top View


Surface Burner

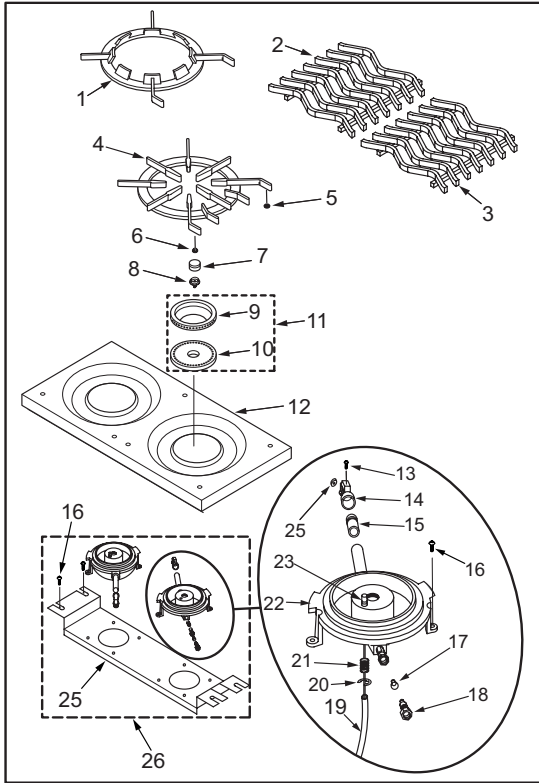



IR Charbroiler

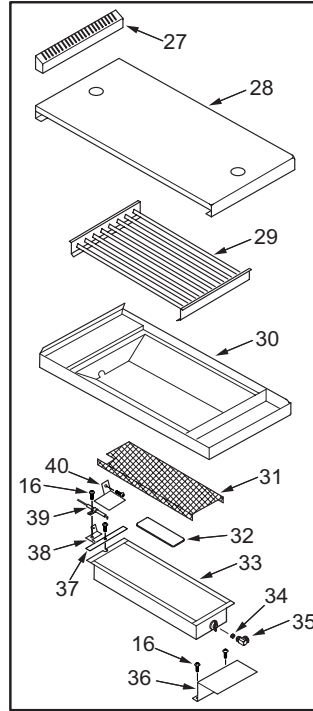

IR Griddle

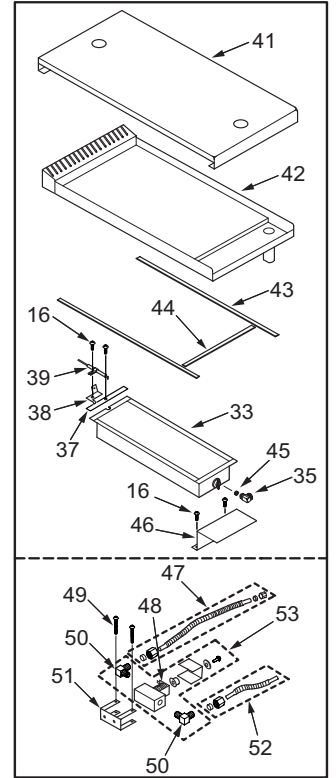

French Top

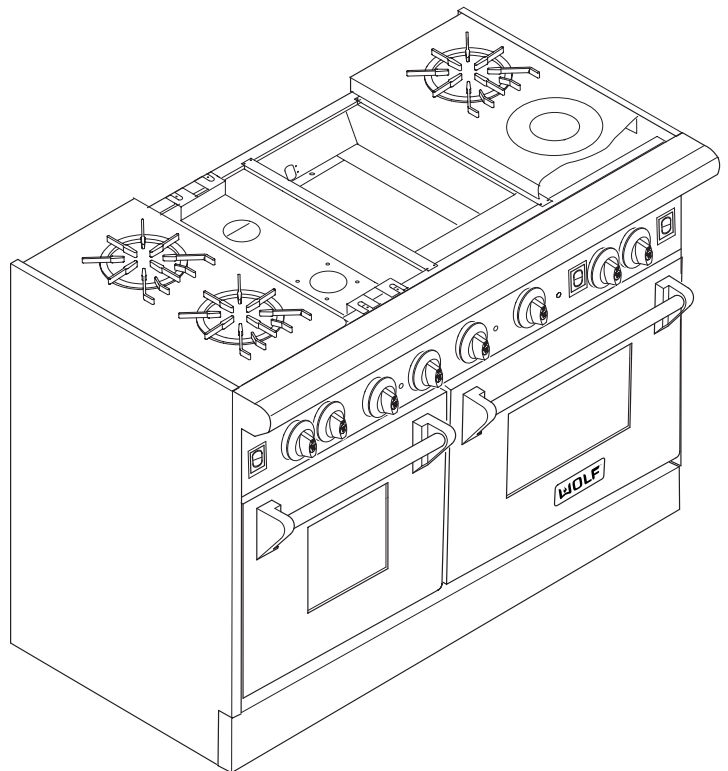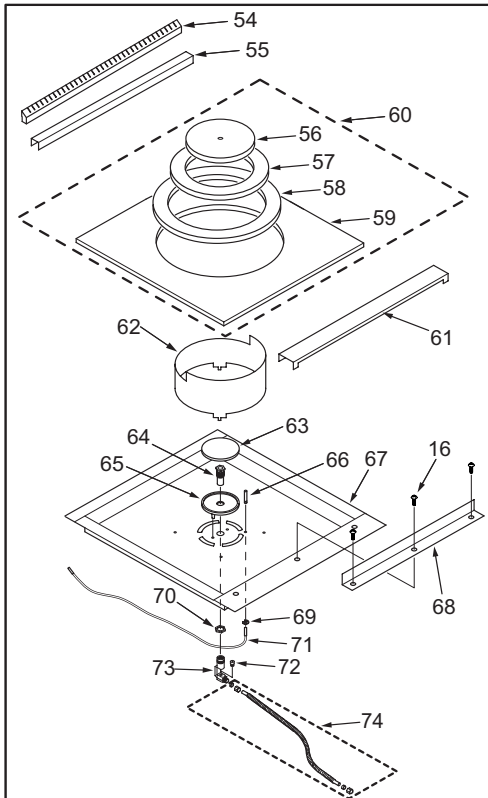

48" Range Front Panel Parts List (1 of 2)

Ref #	Part #	Description	Ref #	Part #	Description
1	766543	Baffle, Broiler	26	720017	Light, Indicator, Red, Oven
2	720690	Seal, Door Top (See SN Break)	27	720951	Knob, Small Oven Thermostat Red (See SN Break)
	803809	Gasket, Door 30" (See SN Break)		801304	Knob, Oven, no/Broil, Red (See SN Break)
3	720692	Seal, Door Side (See SN Break)		720952	Knob, Sm. Oven Thermostat Black (See SN Break)
	803809	Gasket, Door 30" (See SN Break)		801305	Knob, Oven, no/Broil, Black (See SN Break)
4	730228	Screw #10-24 x 1/2"	28	730076	Screw #6-32 x 1/4
5	718195*	Bolt, Trunion	29	801347	Bezel, Rear (See SN Break)
	803579*	Bolt, Trunion, Offset	30	801346	Bezel, Front (See SN Break)
	730310*	Washer, Trunion Shim	31	722564	Terminal, Command Dummy
6	730311	Washer, Lock	32	786733	Panel, Front - Also need to order #722713 and 722712 (See SN Break)
7	730513	Nut, Hex Head		801083	Panel, Front, R486C - Also need to order #722713 and 722712 (See SN Break)
8	720691	Seal, Door Btm (See SN Break)	33	721017	Knob, Charbroiler Red (See SN Break)
	803809	Gasket, Door 30" (See SN Break)		801306	Knob, Char/French Top, Red (See SN Break)
9	722861	Seal, Door Bottom, 18" (See SN Break)		721018	Knob, Charboiler, Black (See SN Break)
	803811	Gasket, Door 18" (See SN Break)		801307	Knob, Char/French Top Valve, Black (See SN Break)
10	722860	Seal, Door Top 18" (See SN Break)	34	805787	Thermostat, Griddle
	803811	Gasket, Door 18" (See SN Break)	35	801084	Panel, Front, R486G - Also need to order #722713 and 722712 (See SN Break)
11	767670	Baffle, Broiler 18"	36	721014	Knob, Thermostat W/Griddle Red (See SN Break)
12	803436	Caster, Dual Wheel, 2"		801310	Knob, Griddle Thermostat, Red (See SN Break)
13	721013	Leg, Range, 3"		721015	Knob, Thermostat W/Griddle, Black (See SN Break)
14	730239	Screw #8-32 x 3/8"		801311	Knob, Griddle Thermostat, Black (See SN Break)
15	722713	Label, Light Switch	37	786741	Panel, Front - Also need to order #722713 and 722712 (See SN Break)
16	714982	Thermostat, Oven, Small		801087	Panel, Front, R484DG - Also need to order #722713 and 722712 (See SN Break)
17	714902	Thermostat, Oven w/Broil			
18	722712	Label, Fan Switch			
19	786731	Panel, Front, R488 - Also need to order #722713 and 722712 (See SN Break)			
	801082	Panel, Front, R488 - Also need to order #722713 and 722712 (See SN Break)			
20	715142	Shield, Switch Terminal			
21	720816	Switch, Oven Light			
22	720879	Knob, Surface Burner Valve, Red (See SN Break)			
	801312	Knob, Control, Red (See SN Break)			
	720880	Knob, Surface Burner Valve, Black (See SN Break)			
	801313	Knob, Surface Burner Valve, Black (See SN Break)			
23	720815	Switch, Oven, Fan			
24	720818	Knob, Oven Thermostat, Red (See SN Break)			
	801308	Knob, Oven W/Broil, Red (See SN Break)			
	720819	Knob, Oven Thermostat Black (See SN Break)			
	801309	Knob, Oven Therm, w/Broil, Black (See SN Break)			
25	718146	Bezel, Thermostat (See SN Break)			
	801348	Bezel, w/Tick Mark(See SN Break)			



* - Prior to Serial Number (PTS) 17000000
 ** - Starting with Serial Number (SWS) 17000000

Not Shown

803239 Wrench, Caster Adjusting

48" Range Front Panel View (1 of 2)

NOTE: SEE FOLLOWING PAGE FOR ADDITIONAL 48" RANGE FRONT PANEL VIEWS

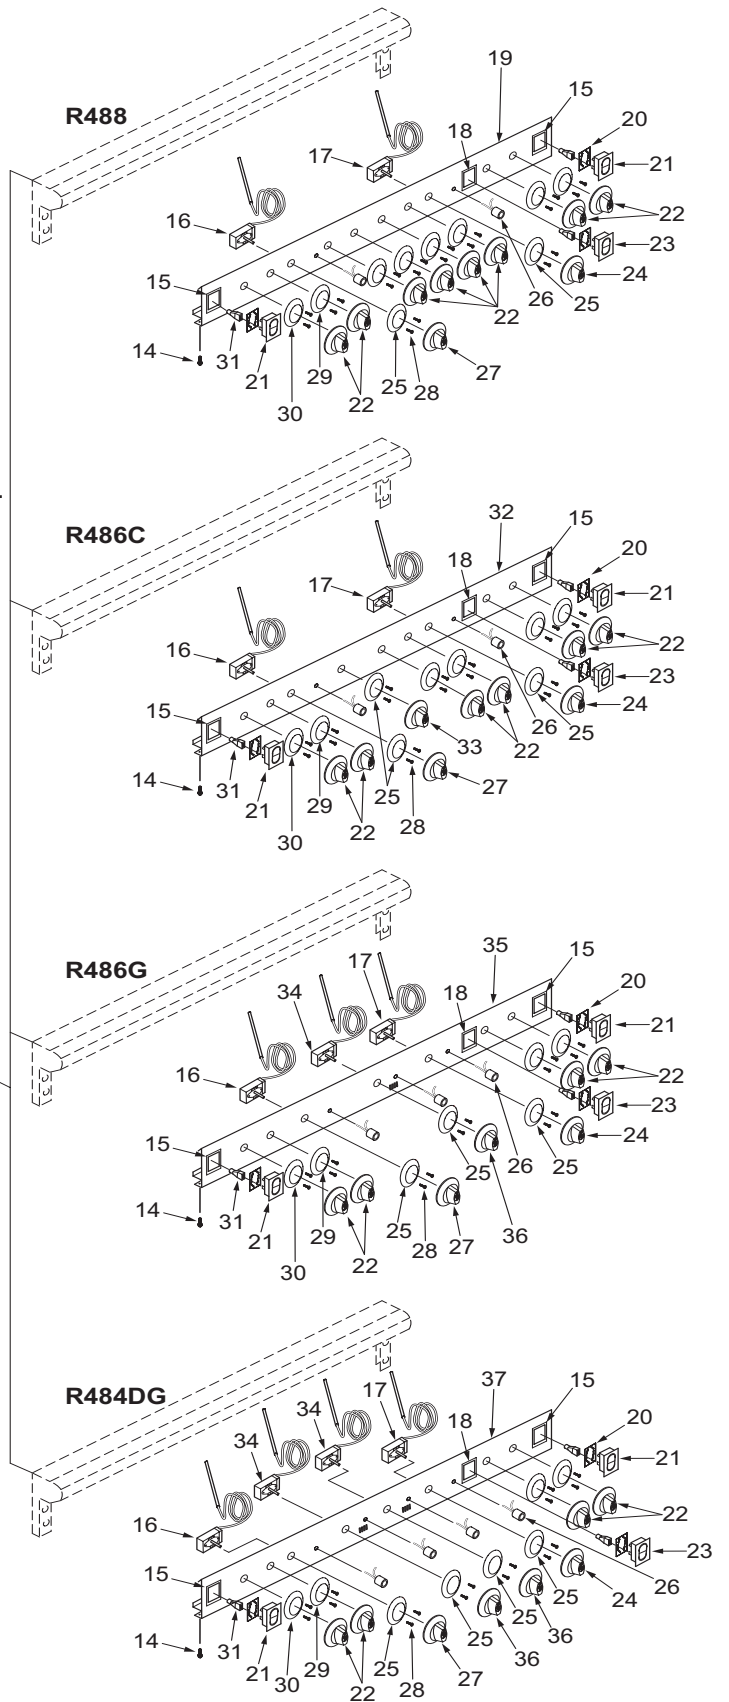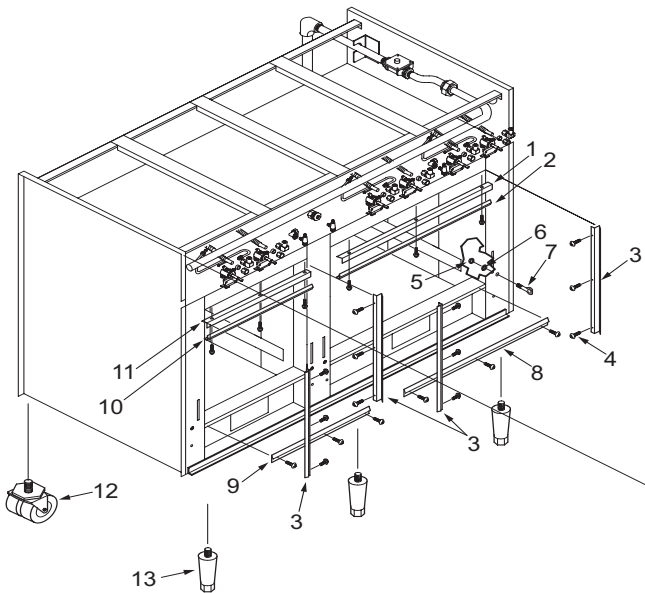

48" Range Control Panel Parts List (2 of 2)

Ref #	Part #	Description	Ref #	Part #	Description
1	766543	Baffle, Broiler	26	720017	Light, Indicator, Red, Oven
2	720690	Seal, Door Top (See SN Break)	27	720951	Knob, Small Oven Thermostat, Red (See SN Breaks)
	803809	Gasket, Door 30" (See SN Break)		801304	Knob, Oven, no/Broil, Red (See SN Breaks)
3	720692	Seal, Door Side (See SN Break)		720952	Knob, Sm. Oven Thermostat, Black (See SN Breaks)
	803809	Gasket, Door 30" (See SN Break)		801305	Knob, Oven, no/Broil, Black (See SN Breaks)
4	730228	Screw #10-24 x 1/2"	28	730076	Screw #6-32 x 1/4"
5	718195*	Bolt, Trunion	29	801347	Bezel, Rear (See SN Breaks)
	803579*	Bolt, Trunion, Offset	30	801346	Bezel, Front (See SN Breaks)
	730310*	Washer, Trunion Shim	31	722564	Terminal, Command Dummy
6	730311	Washer, Lock	32	721017	Knob, Charbroiler Red (See SN Breaks)
7	730513	Nut, Hex Head		801306	Knob, Char/French Top, Red (See SN Breaks)
8	720691	Seal, Door Btm (See SN Break)		721018	Knob, Charboiler, Black (See SN Breaks)
	803809	Gasket, Door 30" (See SN Break)		801307	Knob, Char/French Top, Black (See SN Breaks)
9	722861	Seal, Door Bottom, 18" (See SN Break)	33	805787	Thermostat, Griddle
	803811	Gasket, Door 18" (See SN Break)	34	786737	Panel, Front (See SN Breaks) Also need to order # 722712 and # 722713
10	722860	Seal, Door Top 18" (See SN Break)		801085	Panel, Front, R484CG (See SN Breaks) - Also need to order # 722712 and # 722713
	803811	Gasket, Door 18" (See SN Break)	35	721014	Knob, Thermostat W/Griddle Red (See SN Breaks)
11	767670	Baffle, Broiler 18"		801310	Knob, Griddle Thermostat, Red (See SN Breaks)
12	803436	Caster, Dual Wheel, 2"		721015	Knob, Thermostat W/Griddle, Black (See SN Breaks)
13	721013	Leg, Range, 3"		801311	Knob, Griddle Thermostat, Black (See SN Breaks)
14	730239	Screw #8-32 x 3/8"	36	786743	Panel, Front (See SN Breaks) Also need to order # 722712 and # 722713
15	722713	Label, Light Switch		801088	Panel, Front, R484F (See SN Breaks) - Also need to order # 722712 and # 722713
16	714982	Thermostat, Oven, Small	37	786958	Panel, Front (See SN Breaks) Also need to order # 722712 and # 722713
17	714902	Thermostat, Oven, w/Broil		801089	Panel, Front, R482CF (See SN Breaks) - Also need to order # 722712 and # 722713
18	722712	Label, Fan Switch			
19	786739	Panel, Front (See SN Breaks) Also need to order # 722712 and # 722713			
	801086	Panel, Front, R484DC (See SN Breaks) - Also need to order # 722712 and # 722713			
20	715142	Shield, Switch Terminal			
21	720816	Switch, Oven Light			
22	720879	Knob, Control, Red (See SN Breaks)			
	801312	Knob, Surface Burner Valve, Red (See SN Breaks)			
	720880	Knob, Control, Black (See SN Breaks)			
	801313	Knob, Surface Burner Valve, Black (See SN Breaks)			
23	720815	Switch, Fan			
24	720818	Knob, Oven Thermostat, Red (See SN Breaks)			
	801308	Knob, Oven Therm, w/Broil, Red (See SN Breaks)			
	720819	Knob, Oven Thermostat Black (See SN Breaks)			
	801309	Knob, Oven Therm, w/Broil, Black (See SN Breaks)			
25	718146	Bezel, Thermostat (See SN Breaks)			
	801348	Bezel, w/Tick Mark (See SN Breaks)			


* - Prior to Serial Number (PTS) 17000000
 ** - Starting with Serial Number (SWS) 17000000

Not Shown

803239 Wrench, Caster Adjusting

48" Range Control Panel View (2 of 2)

NOTE: SEE PRECEDING PAGE FOR ADDITIONAL 48" RANGE FRONT PANEL VIEWS

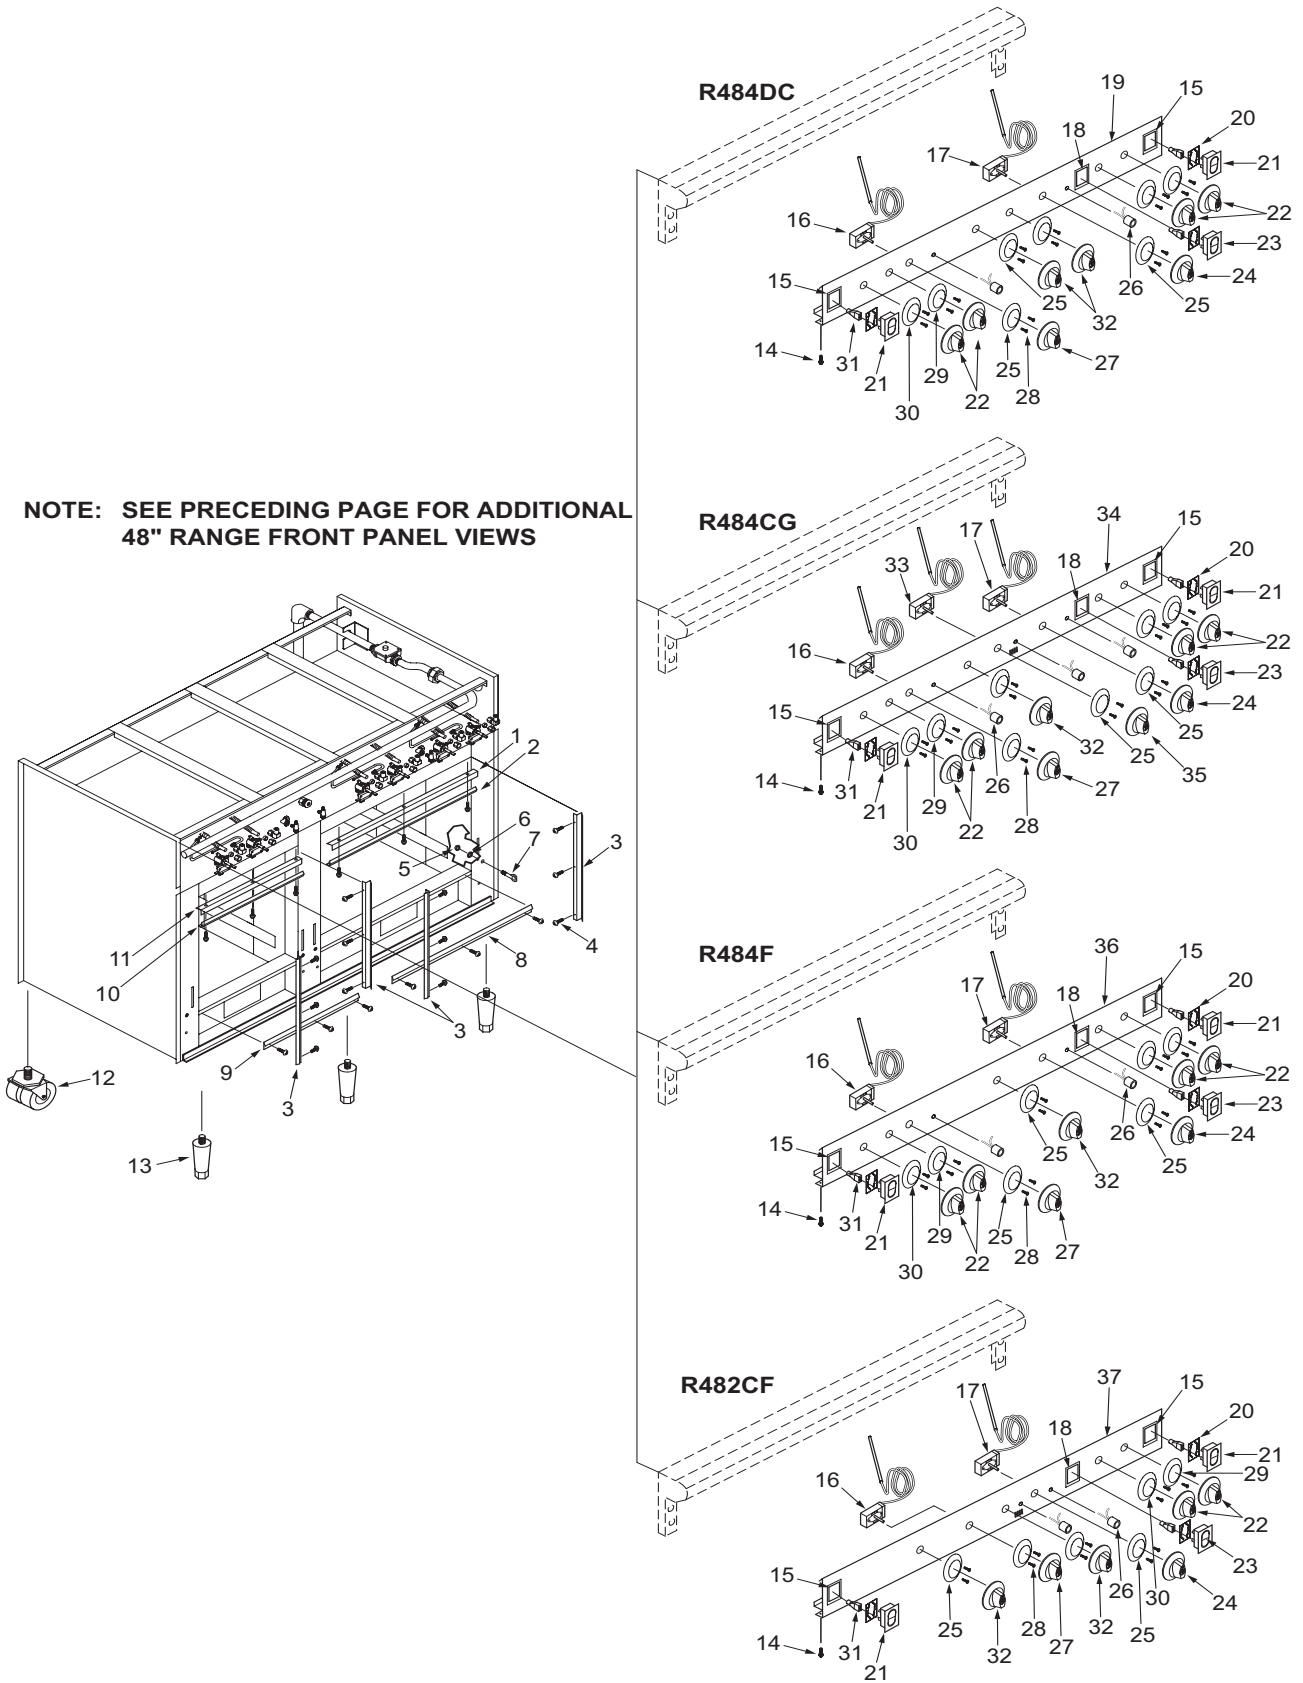

48" Range Manifold Parts List (1 of 2)






<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	803169	Flex Tubing Service Package 3/8" x 48"
2	714369	Bushing, Snap 1/2"
3	786977	Shield, Corner Wire
4	807667	Ferrule, Sleeve Brass
5	807677	Nut, Compress Brass
6	803172	Flex Tubing Service Package 3/8" x 42"
7	803171	Flex Tubing Service Package 5/16" x 14"
8	807677	Nut, Compress Brass
9	807667	Ferrule, Sleeve Brass
10	807665	Ferrule, 3/16"
11	720888	Fitting, 3/16"
12	801937	Flex Tubing Service Package 3/16 x 27"
13	807668	Ferrule, 3/8"
14	807678	Nut, 3/8"
15	714361	Connector, 3/8"
16	720885	Bracket, Valve Mounting
17	722133	Screw, Hex Head
18	723350	Regulator, Pressure Convertible 3/4"
	801358	Regulator, 1/2" Convertible
19	722832	Pipe, Offset
20	719033	Union, 1/2" Black
21	804422	Manifold (R488)
22	801936	Flex Tubing Service Package 16"
23	809153	Burner Valve & Switch Assy, Nat
	809154	Valve, Burner, LP Gas
24	800892	Orifice, Bypass Inner, Natural Gas
	800055	Orifice, Bypass Inner, LP Gas
25	800884	Orifice, Bypass Outer, Natural Gas
	800054	Orifice, Bypass Outer, LP Gas
26	807141	Valve, Switch
27	719393	Elbow, Brass 3/8"
28	719370	Plug, Hex Head, 1/8"
29	722278	Elbow, Adapter, Compression
30	720330	Valve, Shut Off, Oven
31	722413	Valve, Brass
32	713810	Switch, Valve Ignition
33	803167	Flex Tubing Service Package 3/8 x 12"
34	714296	Tee, 3/8"CC X 3/8"CC X 3/8"UNS
35	804421	Manifold (R486C)
36	804422	Manifold, (R486G)
37	805675	Manifold (R484DG)

Not Shown

- 806384 Wiring Harness - Manifold, R488
- 806385 Wiring Harness - Rear, R488
- 806386 Wiring Harness - Manifold, R486C
- 806387 Wiring Harness - Rear, R486C
- 806388 Wiring Harness - Manifold, R486G
- 806389 Wiring Harness - Rear, R486G
- 806394 Wiring Harness - Manifold, R486DG
- 806395 Wiring Harness - Rear, R484DG

48" Range Manifold View (1 of 2)

**NOTE: SEE FOLLOWING PAGE FOR
ADDITIONAL 48" RANGE
MANIFOLD VIEWS**

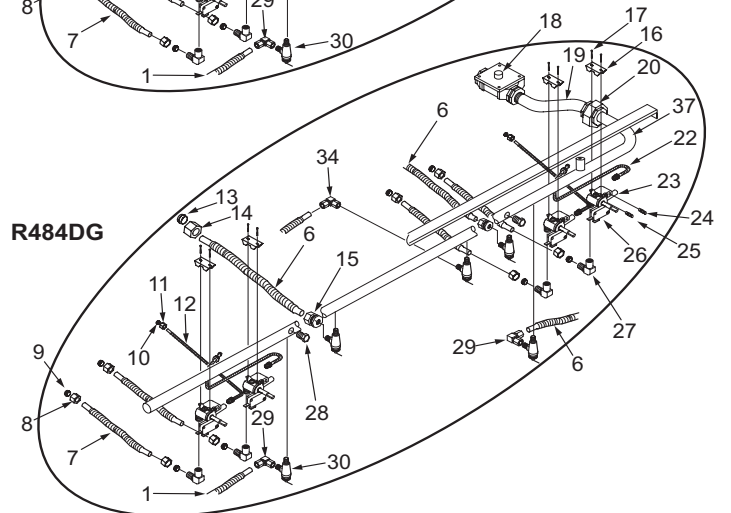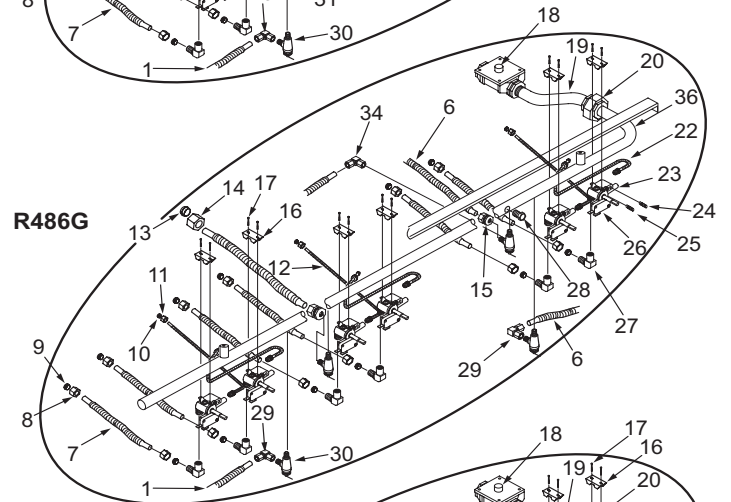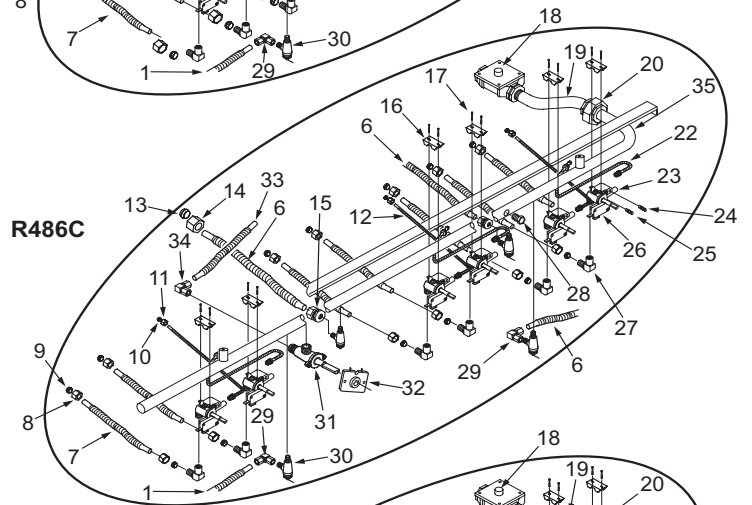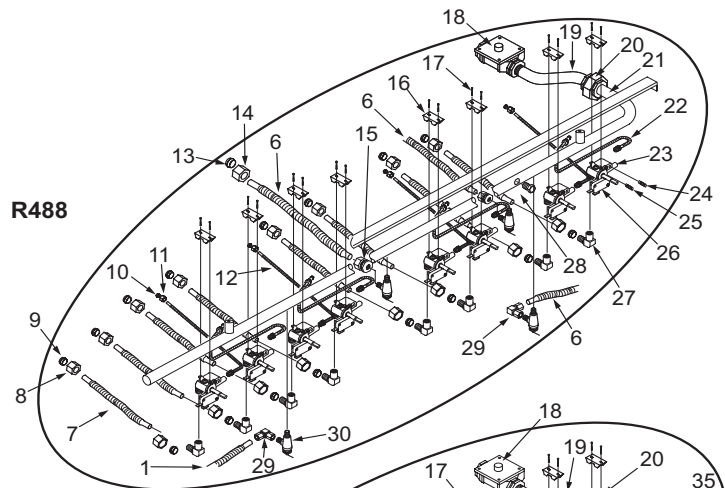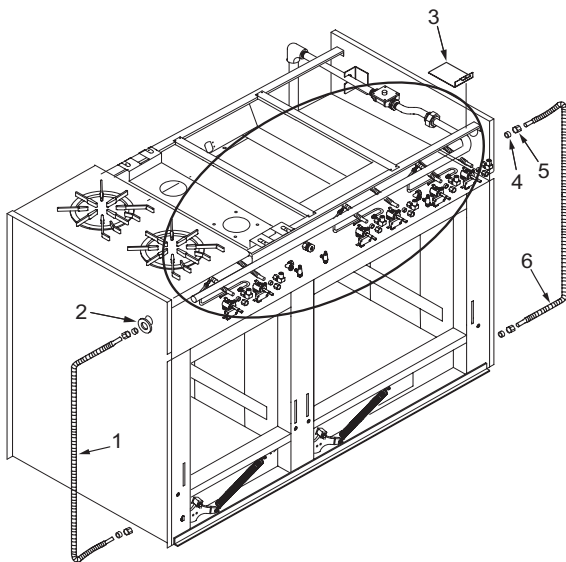

48" Range Manifold Parts List (2 of 2)






Ref #	Part #	Description
1	803169	Flex Tubing Service Package 3/8" x 48"
2	714369	Bushing, Snap 1/2"
3	786977	Shield, Corner Wire
4	807667	Ferrule, Sleeve Brass
5	807677	Nut, Compress Brass
6	803172	Flex Tubing Service Package 3/8" x 42"
7	803171	Flex Tubing Service Package 5/16" x 14"
8	807677	Nut, Compress Brass
9	807667	Ferrule, Sleeve Brass
10	807665	Ferrule, 3/16"
11	720888	Fitting, 3/16"
12	801937	Flex Tubing Service Package 3/16 x 27"
13	807668	Ferrule, 3/8"
14	807678	Nut, 3/8"
15	803172	Flex Tubing Service Package 3/8 x 42"
16	714361	Connector, 3/8"
17	720885	Bracket, Valve Mounting
18	722133	Screw, Hex Head
19	723350	Regulator, Pressure Convertible 3/4"
	801358	Regulator, 1/2" Convertible
20	722832	Pipe, Offset
21	719033	Union, 1/2" Black
22	805673	Manifold (R484CG)
	805674	Manifold (R484DC)
	805675	Manifold (R484DG)
	805676	Manifold (R484F)
23	801936	Flex Tubing Service Package 3/16 x 16"
24	809153	Burner Valve & Switch Assy, Nat
	809154	Valve, Burner, LP Gas
25	800892	Orifice, Bypass Inner, Natural Gas
	800055	Orifice, Bypass Inner, LP Gas
26	800884	Orifice, Bypass Outer, Natural Gas
	800054	Orifice, Bypass Outer, LP Gas
27	807141	Valve, Switch
28	719393	Elbow, Brass 3/8"
29	719370	Plug, Hex Head, 1/8"
30	722278	Elbow, Adapter, Compression
31	720330	Valve, Shut Off, Oven
32	713810	Switch, Valve Ignition
33	722413	Valve, Brass
34	803167	Flex Tubing Service Package 3/8 x 12"
35	801812	Pipe, Manifold 48" Range 2B
		Charboiler/French Top
	804424	Manifold (R482CF)

Not Shown

806392	Wiring Harness - Manifold, R484DC
806393	Wiring Harness - Rear, R484DC
806390	Wiring Harness - Manifold, R484CG
806391	Wiring Harness - Rear, R484CG
806396	Wiring Harness - Manifold, R484F
806397	Wiring Harness - Rear, R484F
806398	Wiring Harness - Manifold, R482CF
806399	Wiring Harness - Rear, R482CF

48" Range Manifold View (2 of 2)


**NOTE: SEE PRECEDING PAGE FOR
ADDITIONAL 48" RANGE
MANIFOLD VIEWS**

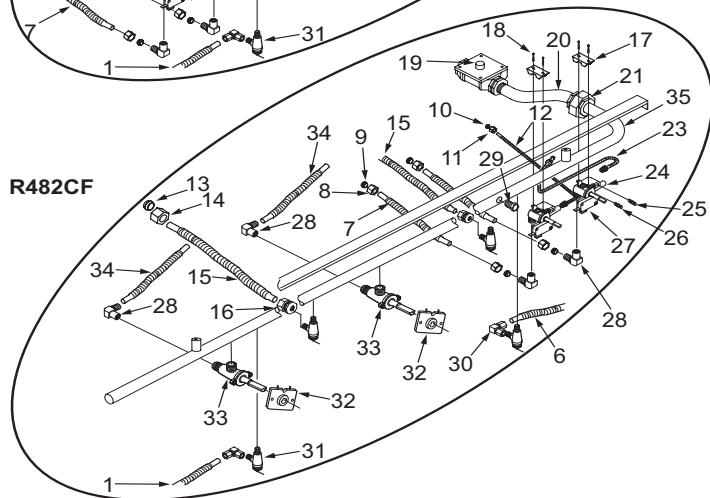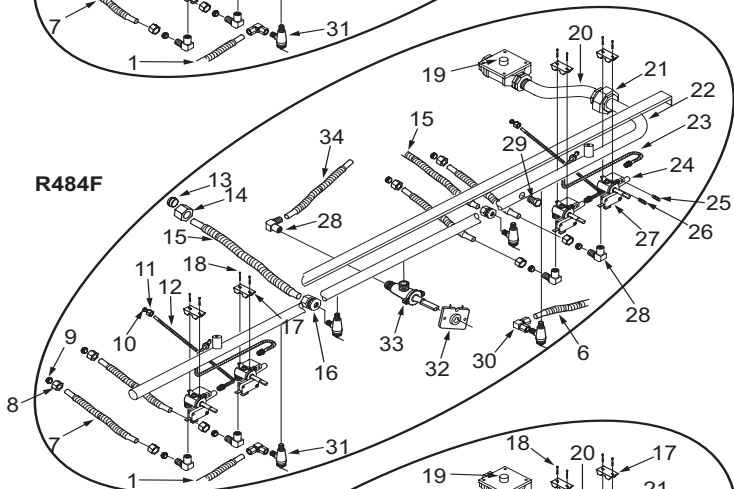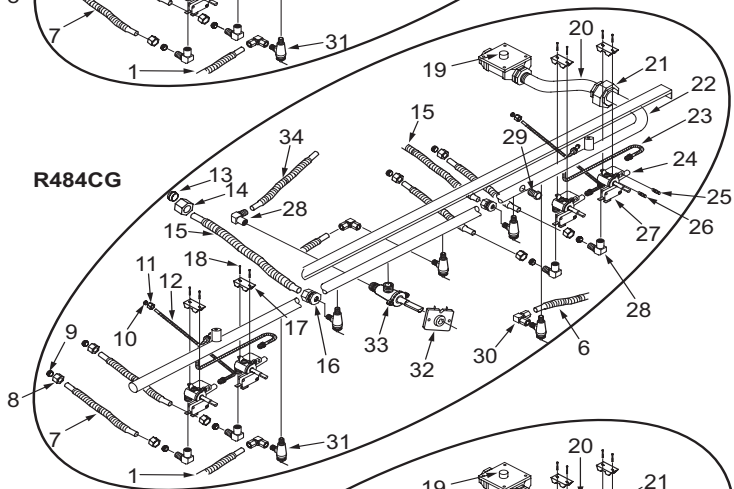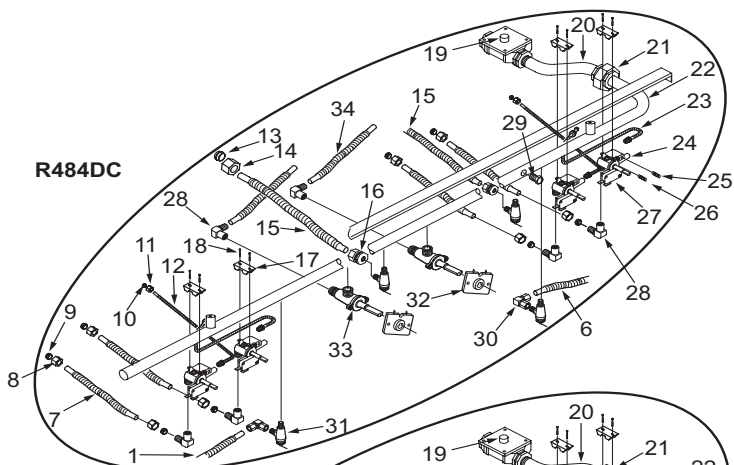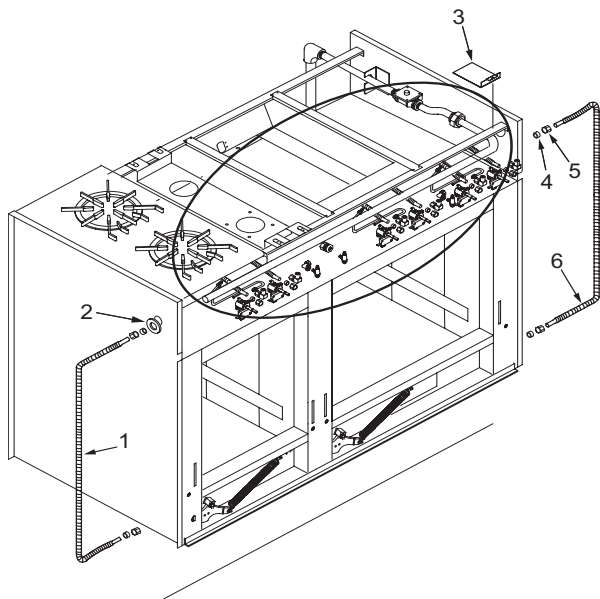

48" Range Oven Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	720761	Burner, Infrared Oven
2	766479	Bracket, Burner Left/Right
3	766592	Bracket, Burner Front/Rear
4	730228	Screw, #10-24 x 1/2"
5	766499	Bracket, Igniter, IR Range
6	723060	Igniter, Hot Surface
7	801690	Cover, Igniter Shield, Range
8	730230	Screw #8-32 x 3/8"
9	806873	Thermo Bulb Housing Assembly
	800123	Thermo Bulb Housing Assembly, 18"
10	800120	Oven Deflector Rest
11	718601	Igniter, Norton
12	720696	Lamp, Oven Assembly
13	342766	Lamp, Oven 40w, 120v
14	720830	Lens
15	766451	Plug, Motor Mount
16	715221	Motor, Oven Fan
17	800628	Blade, Convection Fan
18	730229	Screw, #10-24 x 1-1/2"
19	766456	Cover, Blower Oven
20	720682	Rack, Guide
21	720683	Rack, Oven 30" Range
22	714502	Pan, Broiler
23	722790	Rack, Oven 18" Range
24	766420	Deflector, Oven Bottom Range
25	766418	Panel, Oven Bottom 30" Range (See SN Break)
	803543	Panel, Oven Bottom 30" (See SN Break)
26	786638	Panel, Oven Bottom 18" Range (See SN Break)
	803545	Panel, Oven Bottom 18" (See SN Break)
27	803254	Valve, Oven Safety Single Hole
28	803166	Flex Tubing Service Package 6"
29	719385	Orifice Holder
30	800071	Orifice, Large Oven Natural Gas
	800059	Orifice, Large Oven LP
31	807734	Orifice Bracket, Range
32	766545	Baffle, Lower Front
	807861	Baffle, Lower Front
33	803973	Heatsink
34	803814	Burner Tube, Oven (See SN Break)
	807729	Buner Tube, Bake (See SN Break)
35	766546	Baffle, Flue Range

48" Range Oven View

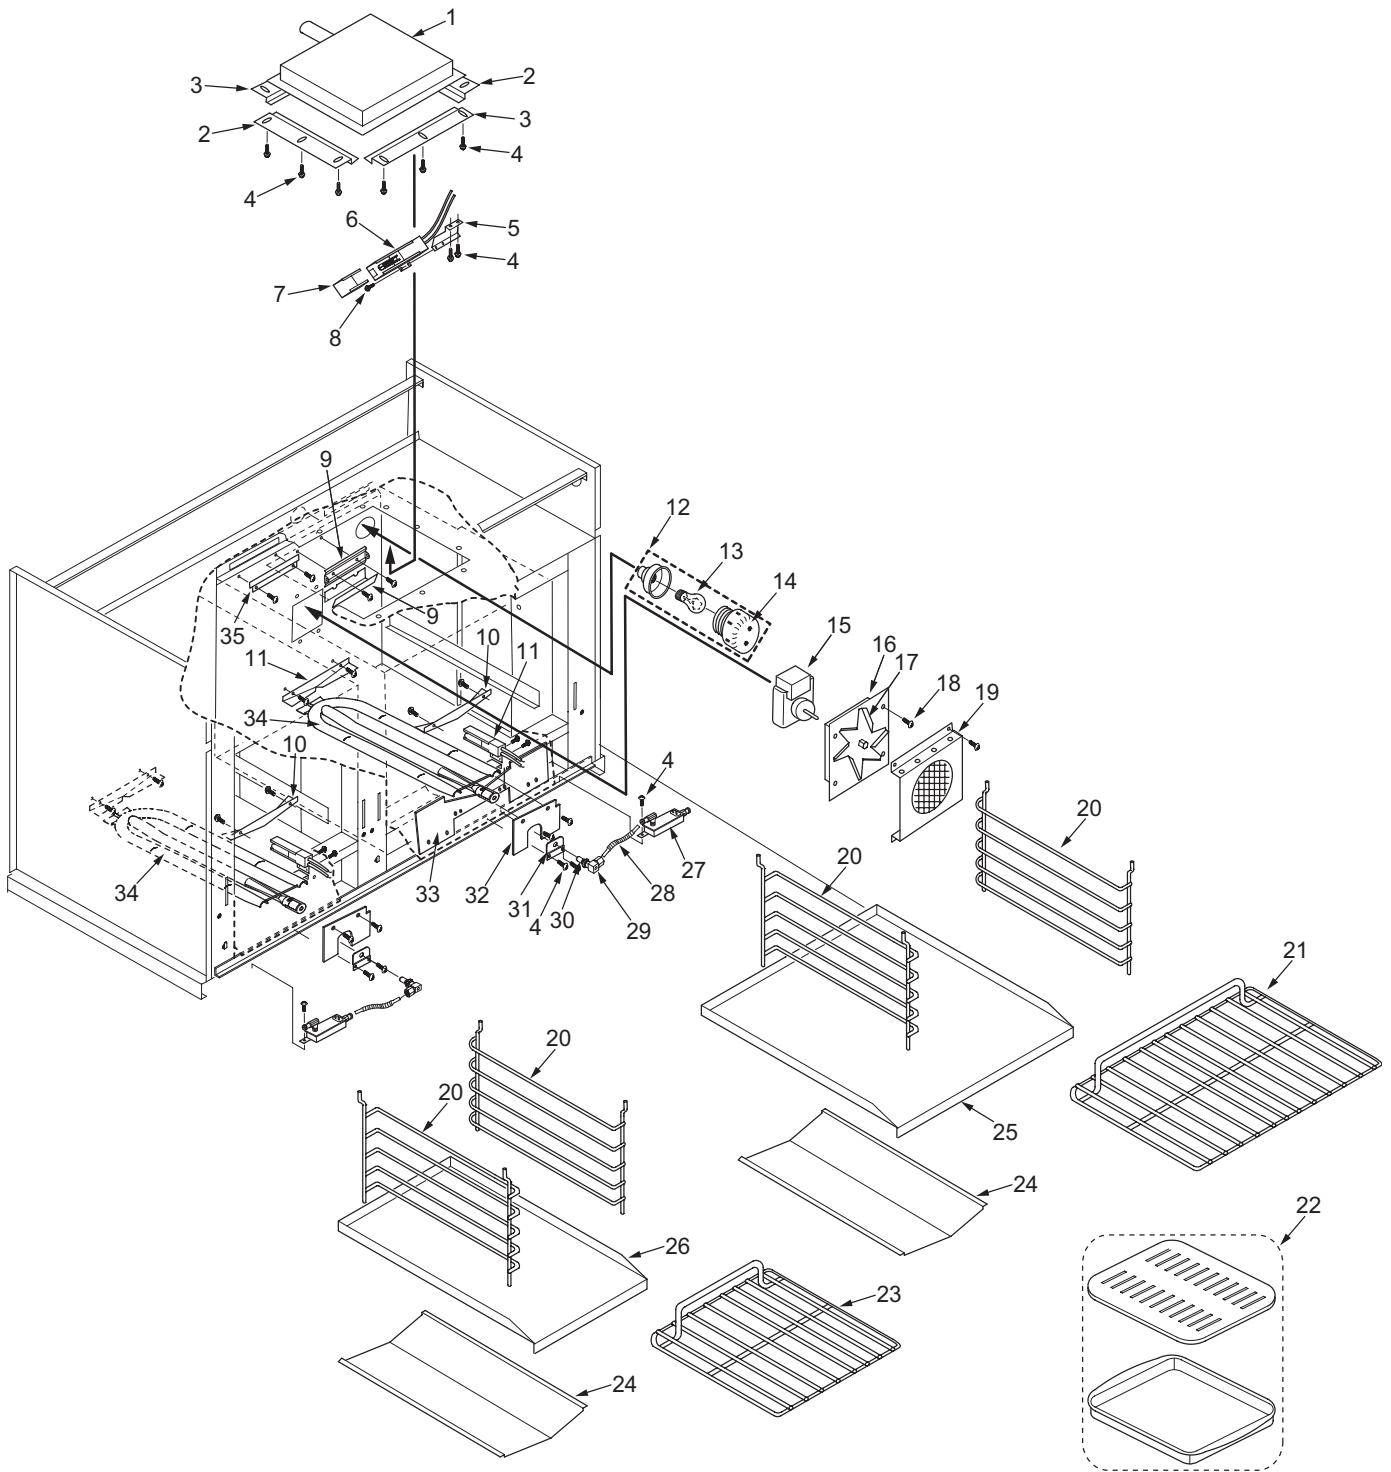

48" Range Rear Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	722632	Cord, Power
2	719393	Elbow, 3/8" x 3/8"
3	730230	Screw #8-32 x 3/8"
4	803166	Flex Tubing Service Package 3/8" x 6"
5	803254	Valve, Broiler Safety
6	766542	Bracket, Safety Valve-Relay
7	787250	Bracket, Spark Module
8	809420	Module, Spark, Single Point
9	730228	Screw #10-24 x 1/2" Phillips
10	786776	Box, Flue Assembly
11	786835	Box, Flue Center Assembly
12	722383	Relay, Fan
13	730239	Screw #8 x 3/8"
14	809416	Module, Spark 6 Point
	809417	Module, Spark 4 Point
15	800246	Washer, Flat, Teflon
16	768258	Panel, Module Range
17	766482	Cover, Blower Motor, Range
18	766593	Angle, Wall Brace
19	786650	Brace, Rear Bottom, 48" Range
21	719503	Plate, Face Electrical Box
22	719068	Bushing, 3/4" NPT X 1/2" NPT
20	719502	Box, Electrical
23	719049	Elbow, 3/4" NPT X 3/4" NPT
	801457	Elbow 1/2" x 1/2"
24	713494	Nipple, 3/4" x 22", Large
	801456	Nipple, 1/2" x 22-3/4"
25	786768	Bracket, Manifold Support
26	801459	Nipple, 1/2" x 3-1/2"
27	721030	Gasket, Red Rubber
28	722278	Elbow, Adapter Compression
29	800259	Orifice, W/ELB Broil Natural (Stamp #48)
	800057	Orifice, IR Broil (LP) 1.181MM (Stamp #56)

Not Shown

800247 Silicone, Red High Temp.

48" Range Rear View

