

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



WHIRLPOOL WDT790SLYM2 Owner's Manual

[Shop genuine replacement parts for WHIRLPOOL
WDT790SLYM2](#)



[Find Your WHIRLPOOL Dishwasher Parts - Select From 1370 Models](#)

----- Manual continues below part list -----

Available Replacement Parts for WHIRLPOOL WDT790SLYM2

WPW10195536	INLET-WATR DW
8194001	Whirlpool Dishwasher Door Balance Kit
72017	TUCHUP AW
350930	SPRAY AW
W10195416V	WHEEL DW AFTERMARKET
W11032770	MOTOR-PUMP DW




UNDERCOUNTER DISHWASHER

MODELS:

WDT790SLYM2 (Stainless)
WDT790SLYW2 (White)


DOOR AND PANEL PARTS

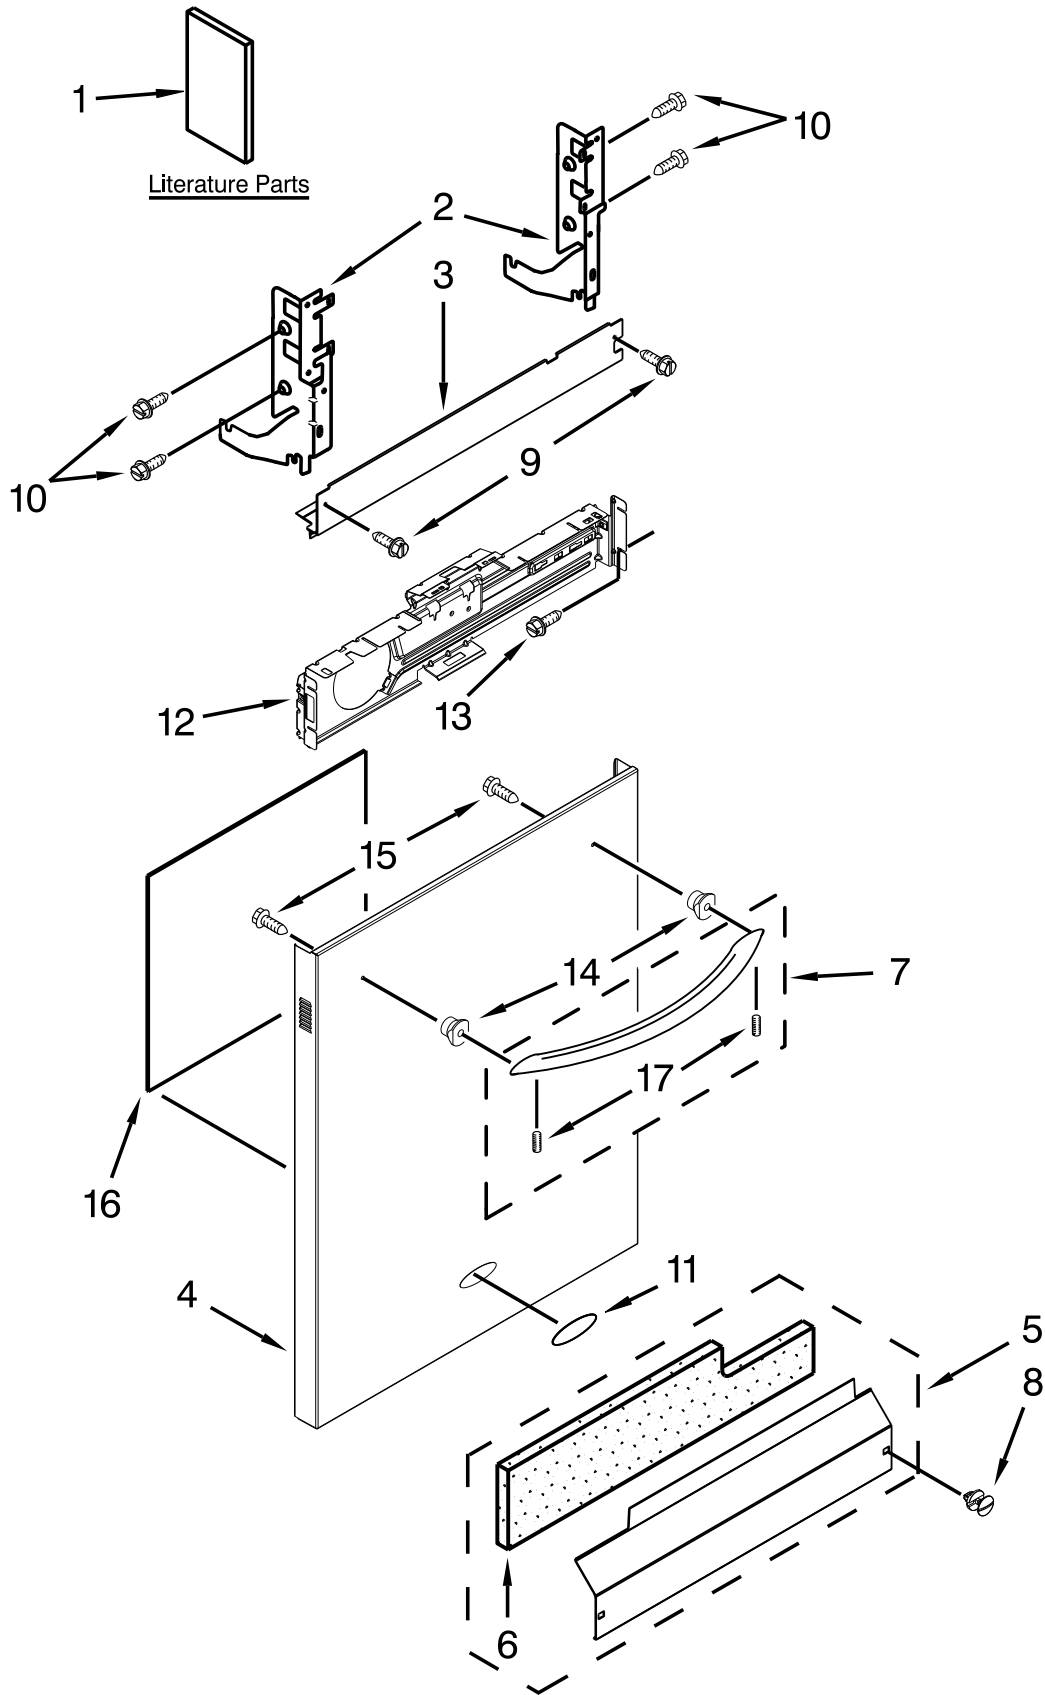

DOOR AND PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5		Access Panel	12	W10350242	Bracket, Control
	W10401504	Instructions, Installation		W10369024	Black	13	3400071	Screw
	W10490744	Energy Guide		W10369026	White	14	W10195726	Stud, Mounting
	W10596231	Use & Care Guide, English/French	6	W10073540	Insulation, Toe Panel	15	W10316572	Screw
	W10580766	Tech Sheet, English	7		Handle Assembly	16	W10073520	Insulation, Door
	W10580767	Tech Sheet, French		W10330970	Stainless	17	8534008	Screw, Set
2		Arm, Hinge	8		Fastener			
	8534854	Left Hand		W10503548	Black			
	8534853	Right Hand		W10503549	White			
3	W10321449	Barrier, Vapor Assembly	9	304392	Screw			
4		Front Panel (Includes Items 11, 14 & 15)	10	3390631	Screw			
	W10323562	Stainless	11		Nameplate			
	W10323568	White		W10393264	Grey			
				W10387117	White			


CONTROL PANEL AND LATCH PARTS

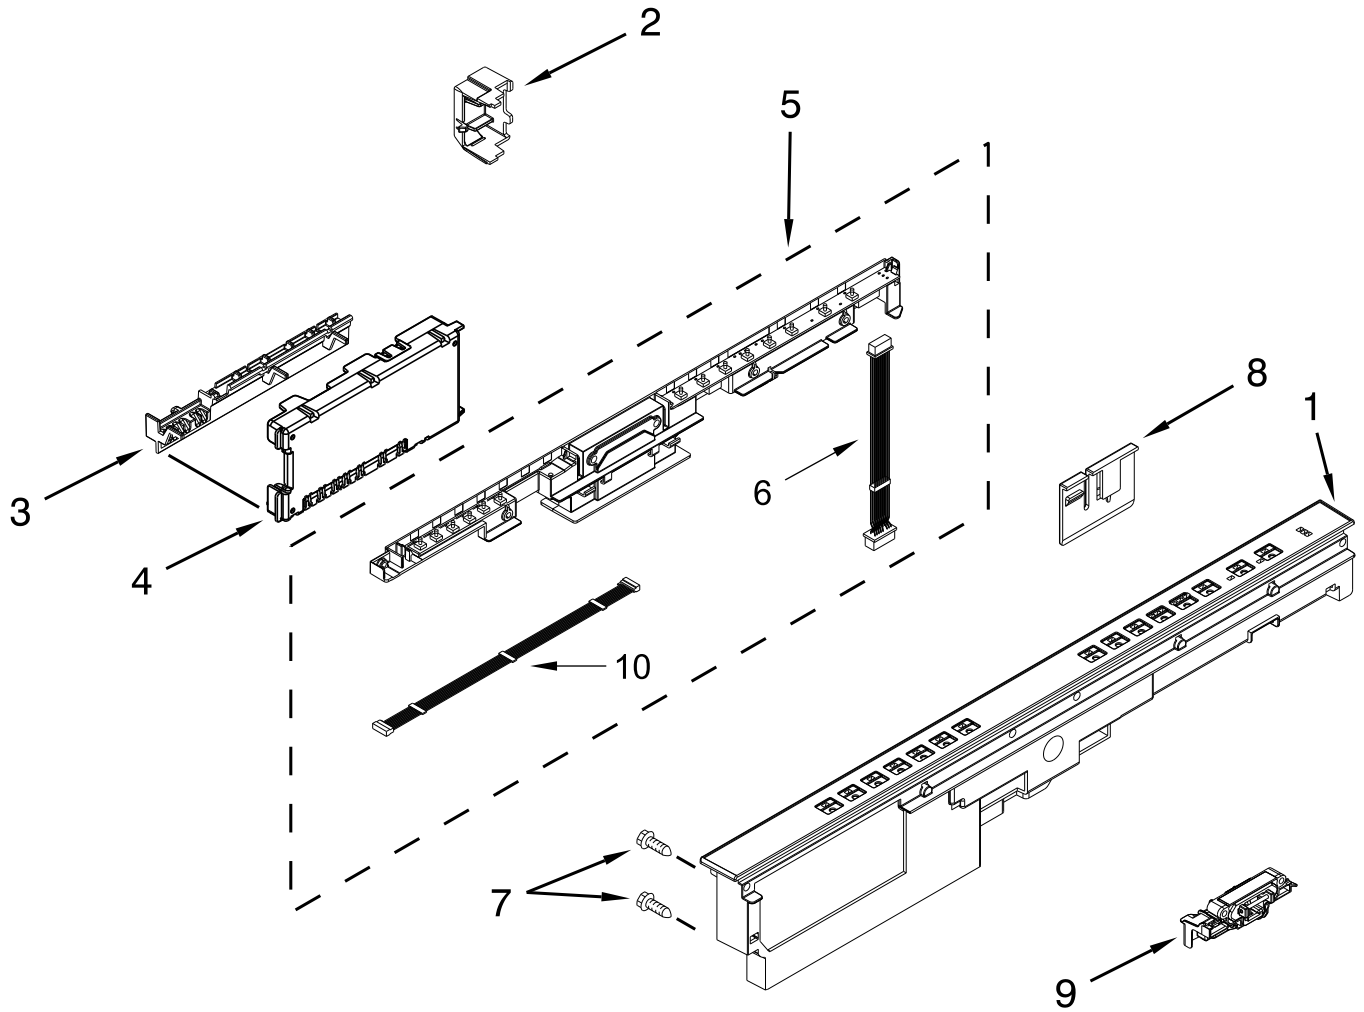

CONTROL PANEL AND LATCH PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console Assembly (Includes Insert)	3	W10194937	Brace, Connector	7	W10348408	Screw
	W10350257	Silver	4	W10539784	Control, Electronic	8	W10195237	Clip, Control
	W10350256	White	5	W10350264	Housing Assembly, User Interface	9	W10550100	Latch Assembly (Includes Switch)
2	W10401190	Box, Connector	6	W10300781	Jumper, 16-Wire	10	W10347251	Jumper, 10-Wire


INNER DOOR PARTS

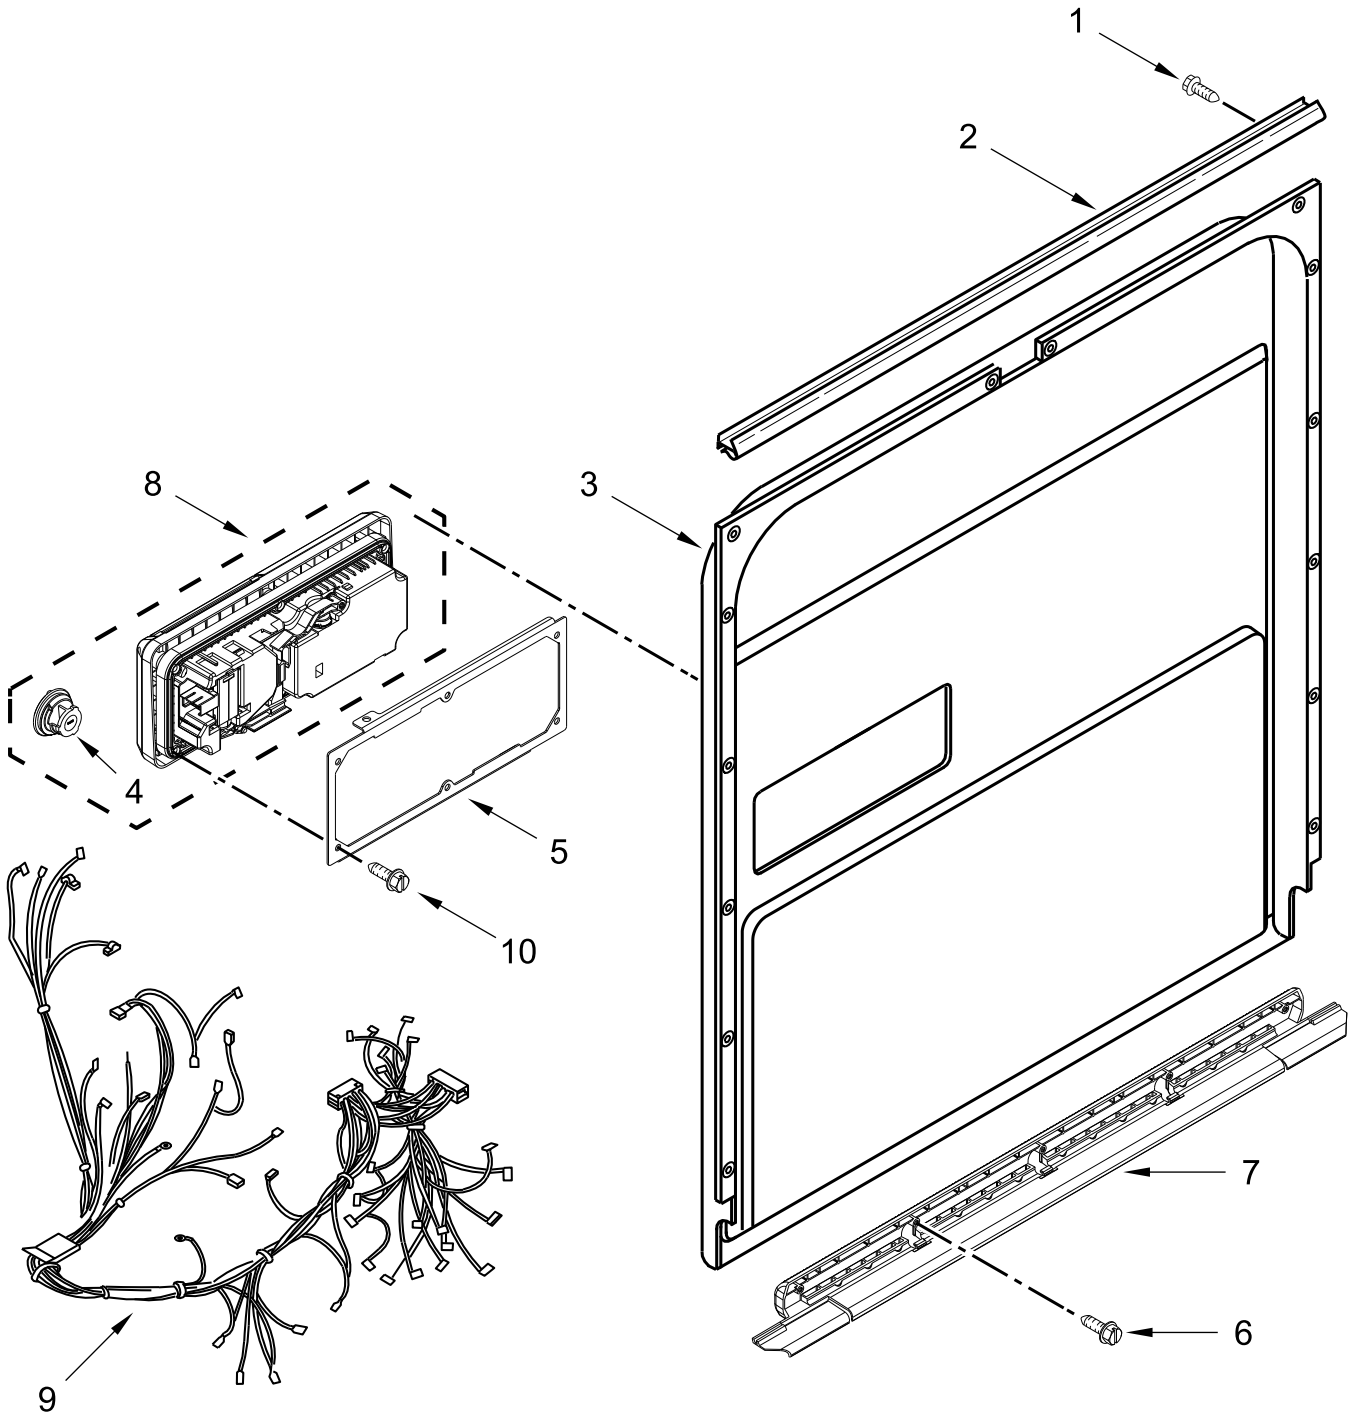

INNER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10348409	Screw	7	W10497235	Seal, Door Bottom	9	W10496093	Wiring Harness
2	W10195007	Seal, Console/Door	8	W10304410	Dispenser, Assembly	10	W10177098	Screw
3	W10380376	Inner Door Assembly						
4	W10524911	Cap, Rinse Aid						
5	W10462232	Bracket, Dispenser						
6	8281217	Screw						


FILL, DRAIN AND OVERFILL PARTS

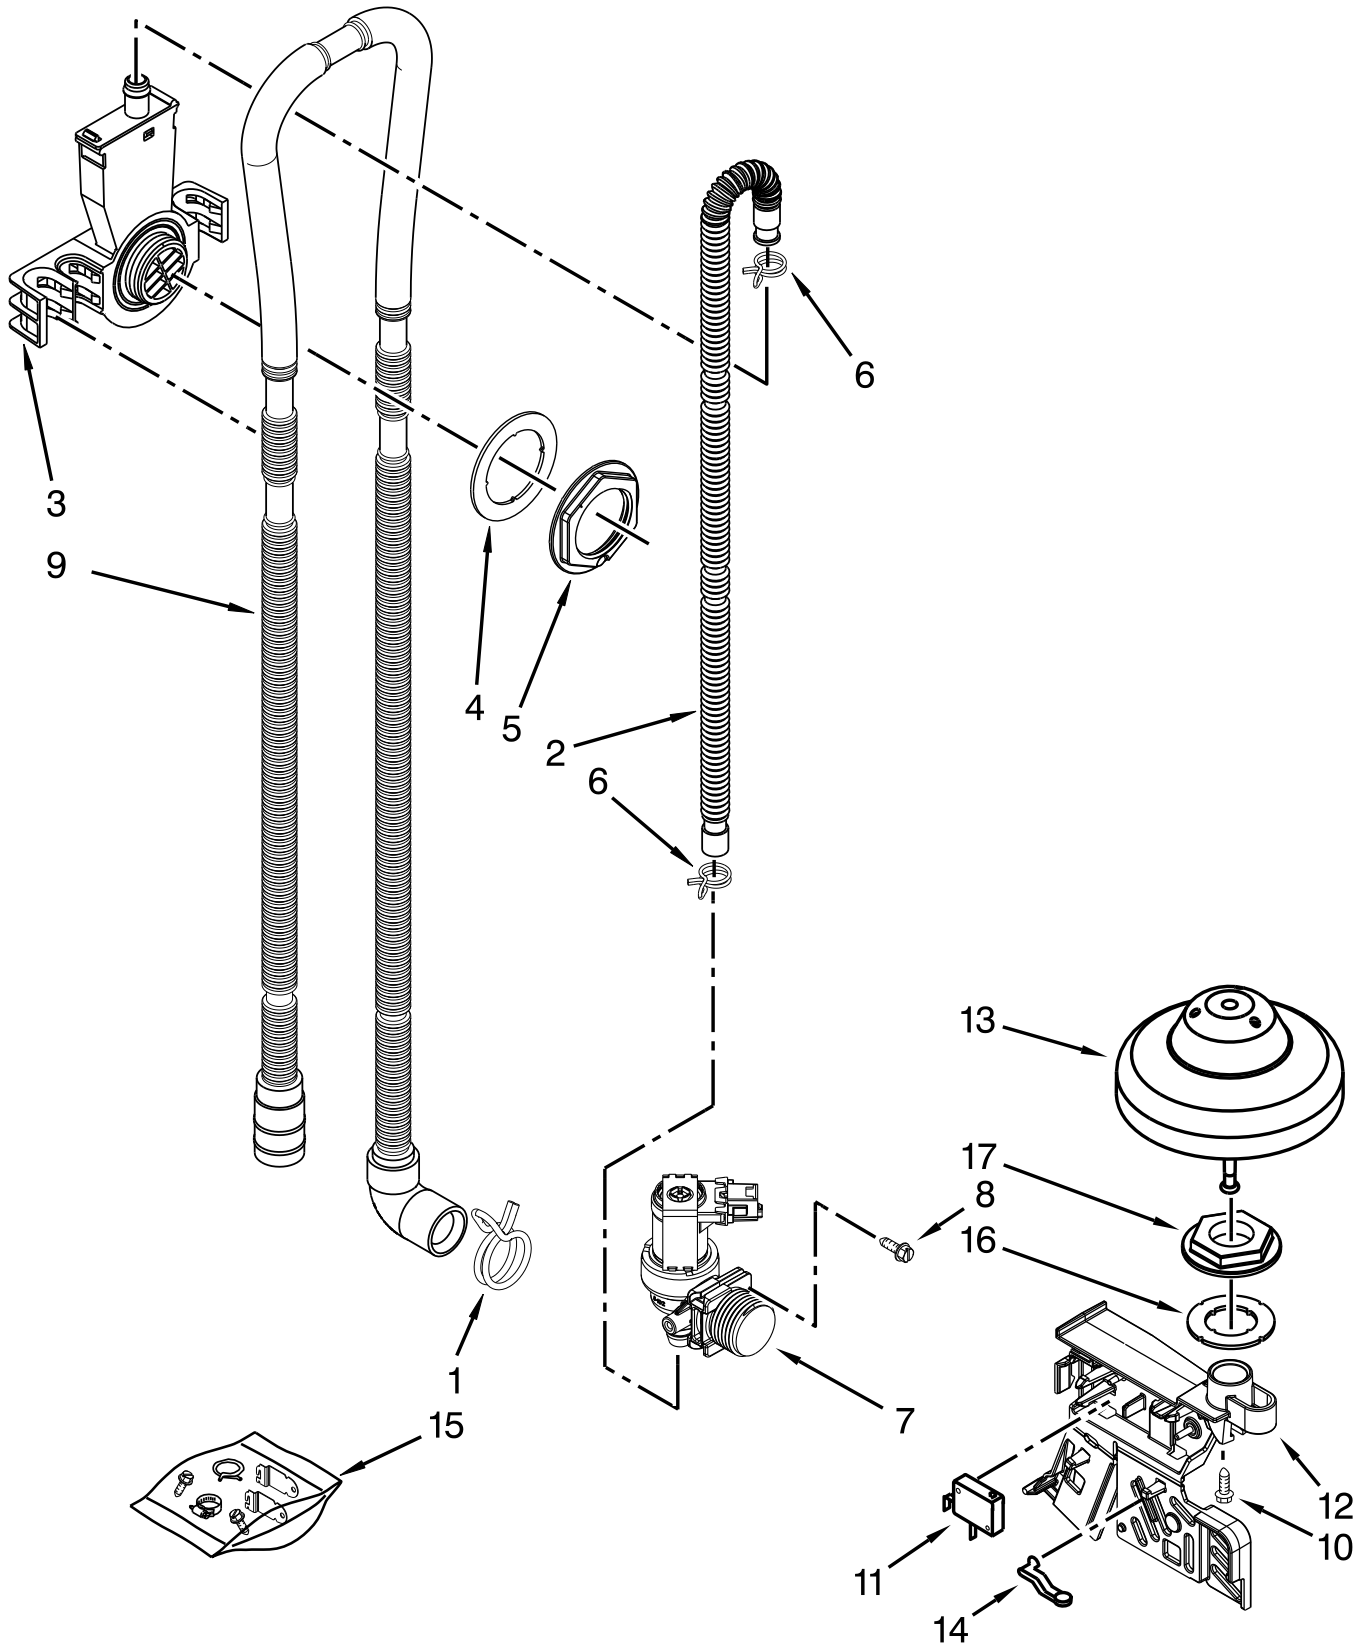

FILL, DRAIN AND OVERFILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	370445	Clamp, Hose	9	W10481093	Drain Loop with Check Valve Assembly	16	8531743	Gasket, Flat
2	8531412	Hose	10	304231	Screw	17	W10195038	Nut, Standpipe
3	W10195536	Inlet, Water (Also Order Item 4)	11	W10195039	Switch, Overfill Control			
4	8531323	Gasket	12	W10195035	Housing, Overfill (Also Order Item 16)			
5	W10213825	Nut, Water Inlet (Also Order Item 4)	13	W10195036	Float & Retainer Assembly			
6	371505	Clamp, Hose	14	W10195037	Lever, Overfill Switch			
7	W10316814	Fill Valve Assembly	15	W10292152	Miscellaneous Parts Bag (Contains 2 Screws, 2 Clamps, & 2 Brackets)			
8	304392	Screw						


TUB AND FRAME PARTS

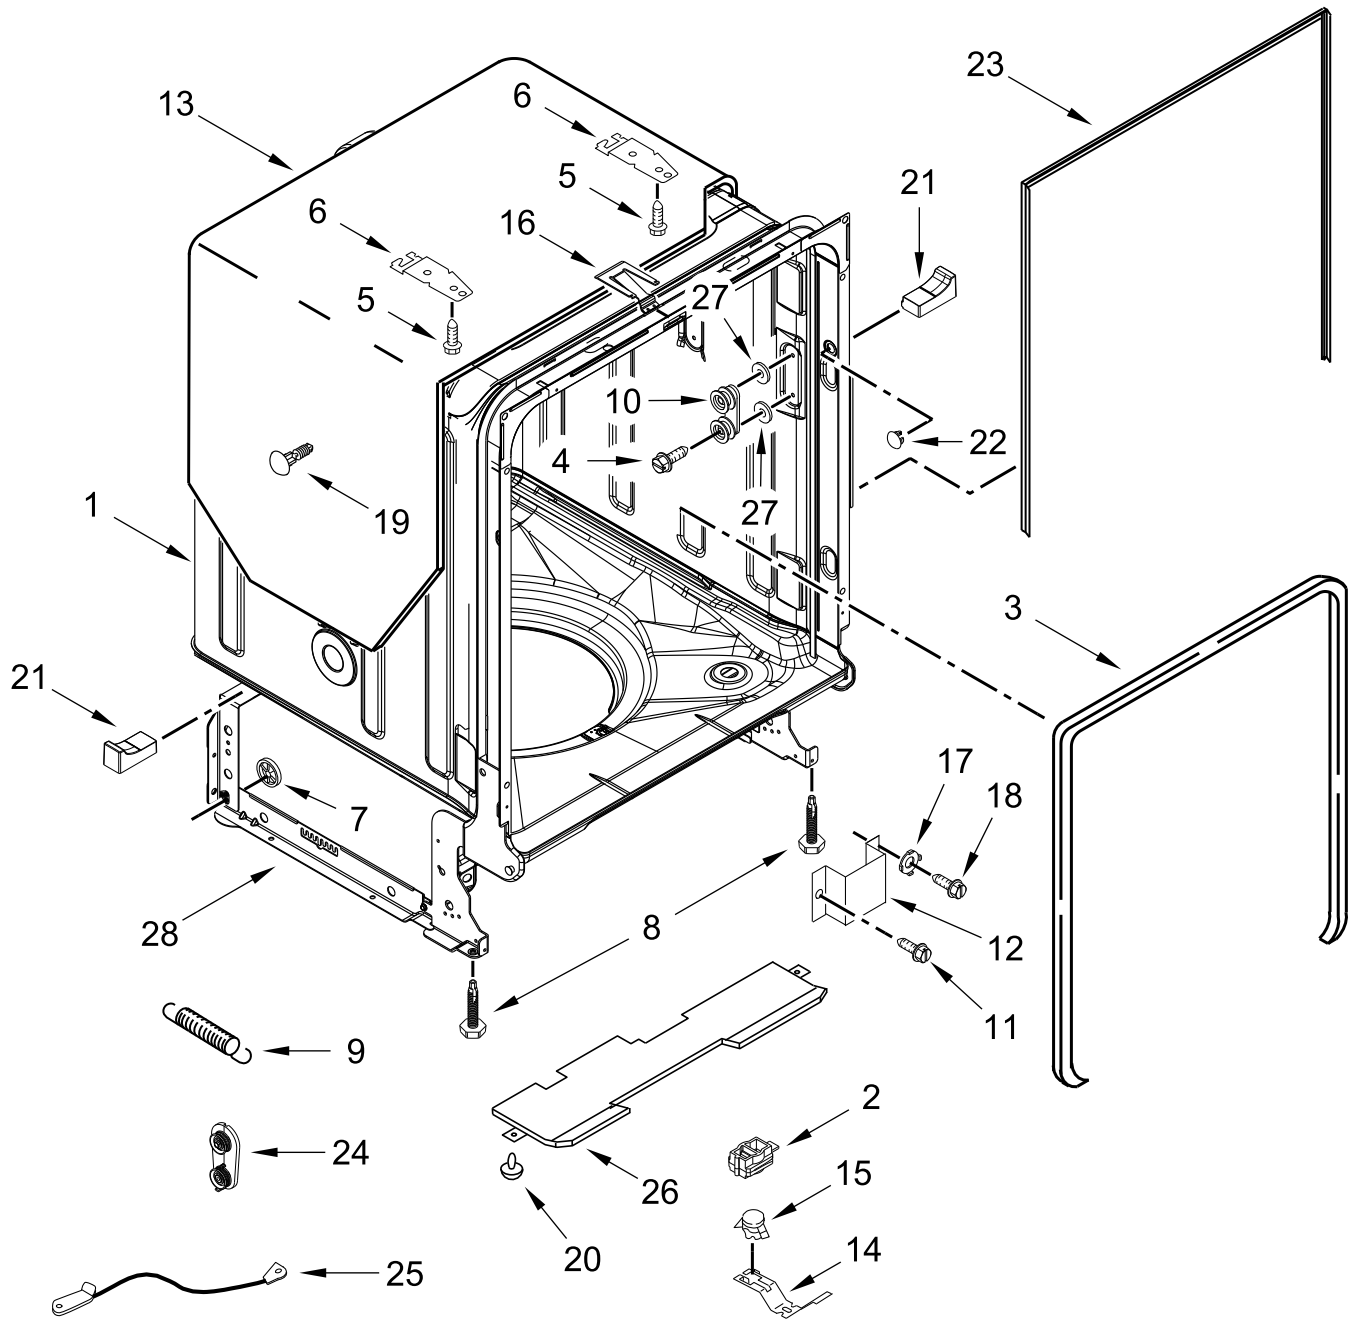

TUB AND FRAME PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10511204	Tub Assembly (Includes Heater Assembly)	11	3400892	Screw	21		Spacer, Tub
2	W10292870	Shield, Thermostat	12	8268991	Cover, Terminal Box		W10195630	Left Hand
3	W10179427	Seal, Cabinet	13	8573240	Shield, Tub Sound		W10195631	Right Hand
4	W10309090	Screw	14	W10300703	Bracket, Thermostat	22	W10082838	Plug, Tub
5	3367670	Screw	15	W10339563	Thermostat	23	W10300924	Gasket, Tub
6	8269145	Bracket, Undercounter	16	W10300779	Strike, Latch	24	W10084086	Door Balance Assembly
7	W10190778	Wheel Leg	17	3378128	Washer, Pronged Cup	25	W10158291	Cable, Door
8	W10304228	Leveler, Leg	18	3400014	Screw, Grounding	26	W10195368	Sound Insulation, Bottom
9	8270020	Spring, Door Balance	19	304666	Retainer	27	9743002	Gasket, Mounting Bracket
10	W10078083	Wheel And Mount Assembly	20	3400924	Retainer, Push In	28	W10190776	Support Assembly, Rear


PUMP AND MOTOR PARTS

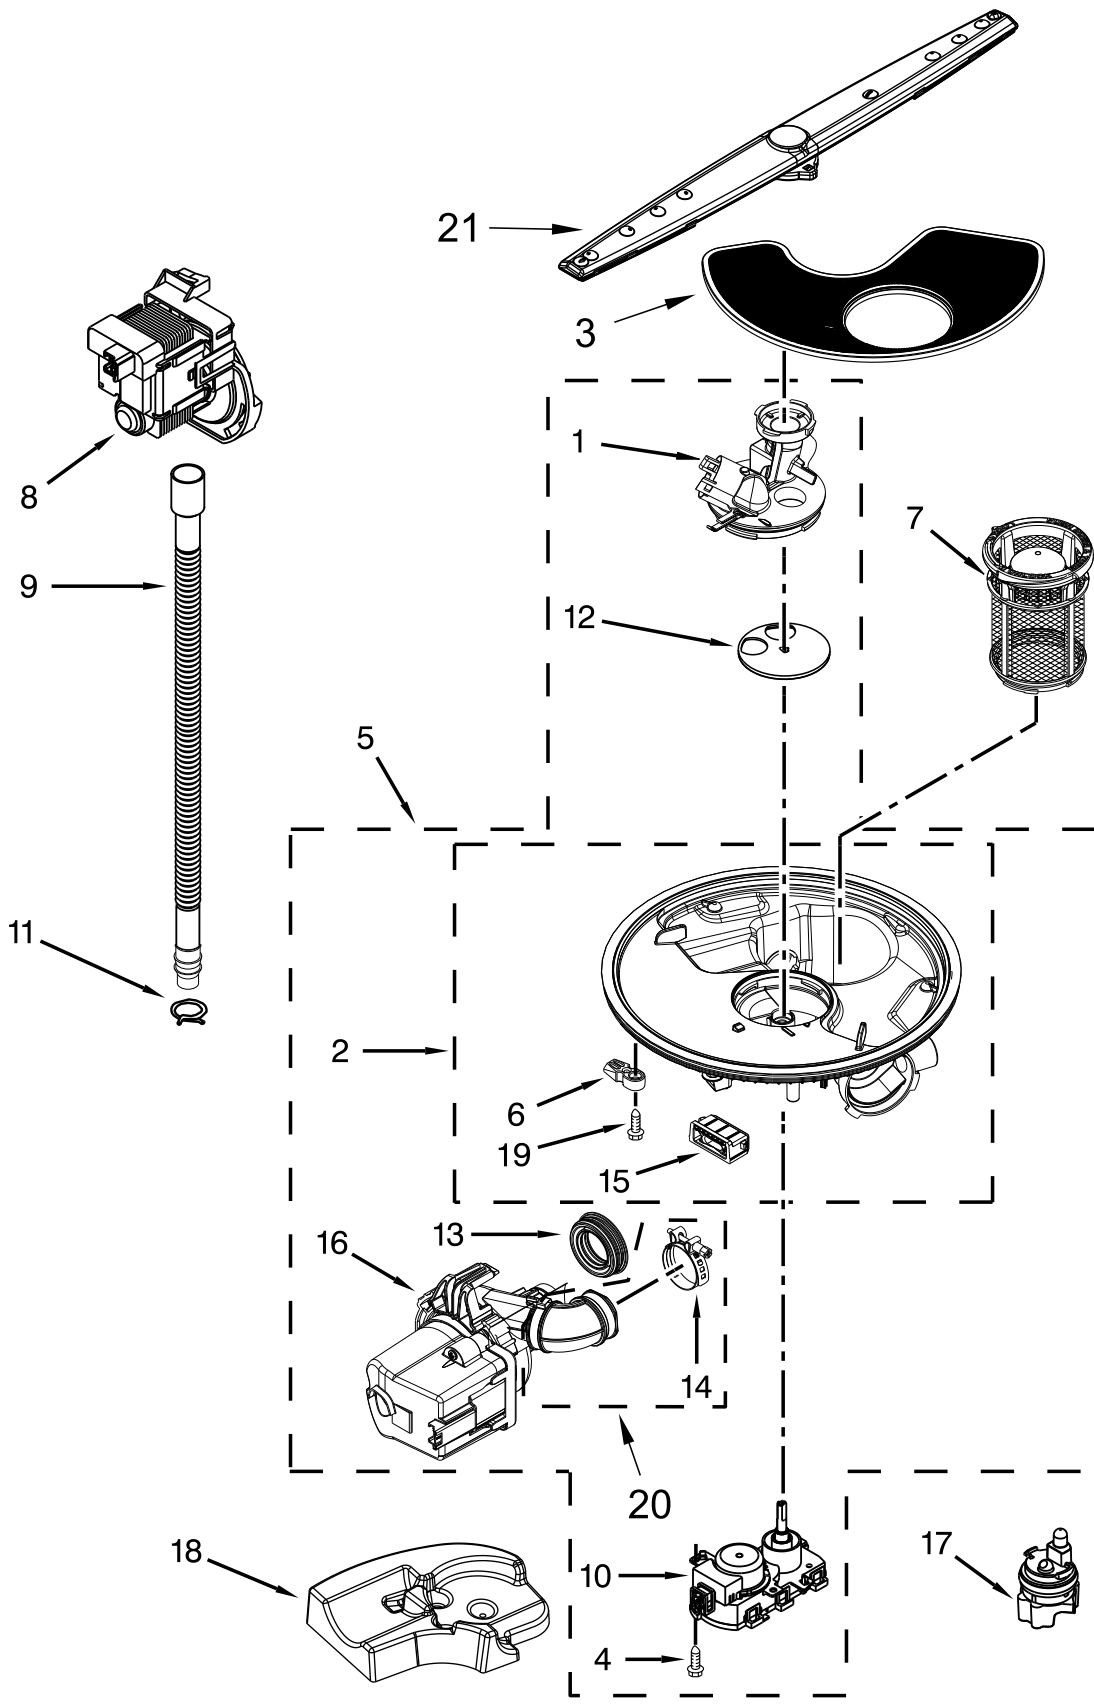

PUMP AND MOTOR PARTS

<u>Illus.</u>			<u>Illus.</u>			<u>Illus.</u>		
<u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10455271	Cover, Outlet	9	8269144	Hose, Drain	18	W10300776	Damper, Sump Assembly
2	W10455268	Sump With Seal (Also Order Items 13 & 20)	10	W10476222	Motor, Diverter	19	W10348407	Screw
3	W10463906	Screen	11	370445	Clamp, Hose	20	W10445975	Hose Assembly (Includes 2 Clamps)
4	9741232	Screw	12	W10476221	Disc, Diverter	21	W10491331	Sprayarm
5	W10605057	Sump & Motor Assembly	13	W10538166	Grommet			
6	W10372113	Tab, Sump	14	W10169167	Clamp, Hose			
7	W10465379	Filter Cup Assembly	15	W10195086	Motor, Isolator			
8	W10084573	Pump, Drain	16	W10529163	Motor (Also Order Items 13 & 20)			
			17	W10134017	Indicator, Optical Wash			


UPPER WASH AND RINSE PARTS

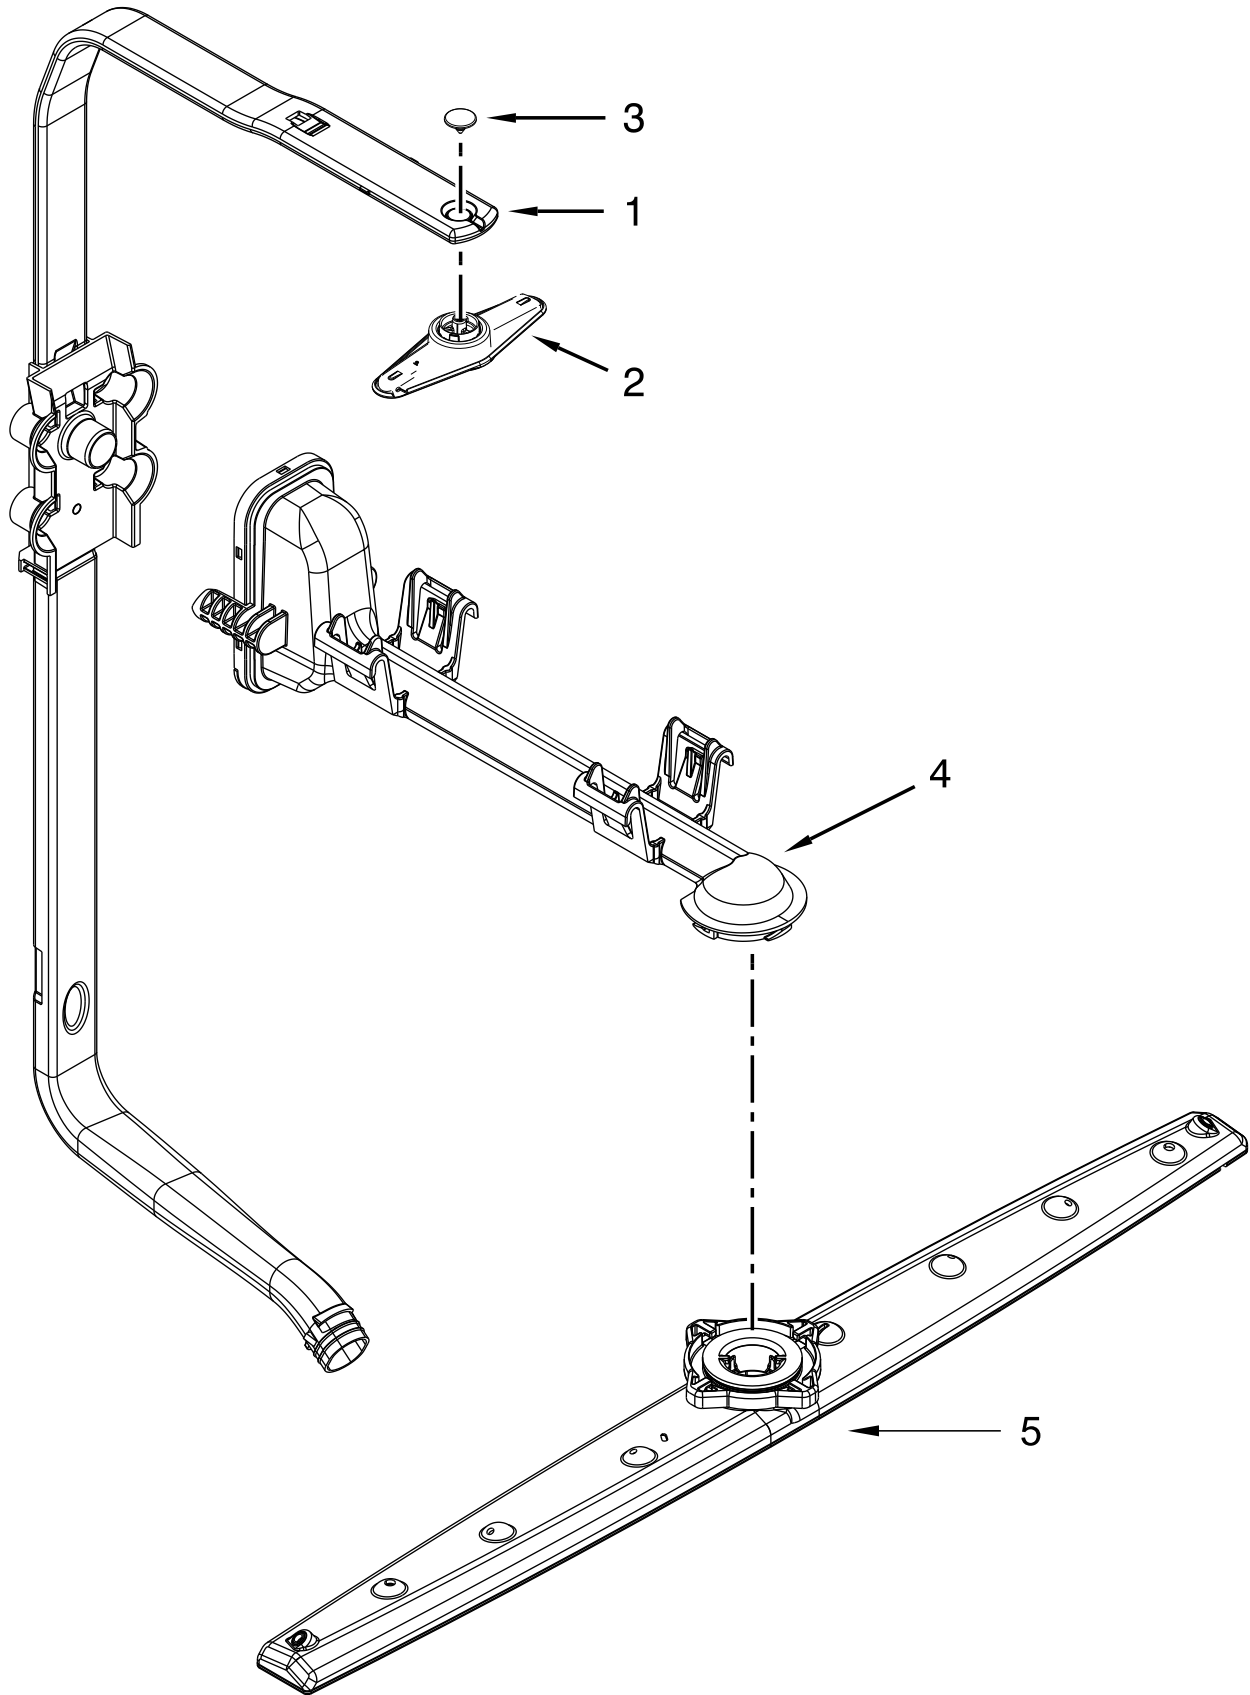

UPPER WASH AND RINSE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340745	Feed Tube Assembly (Includes Items 2 & 3)	2	W10327455	Sprayarm, Third Level	4	W10340542	Manifold
			3	3400918	Retainer	5	W10498900	Sprayarm, Upper

HEATER PARTS

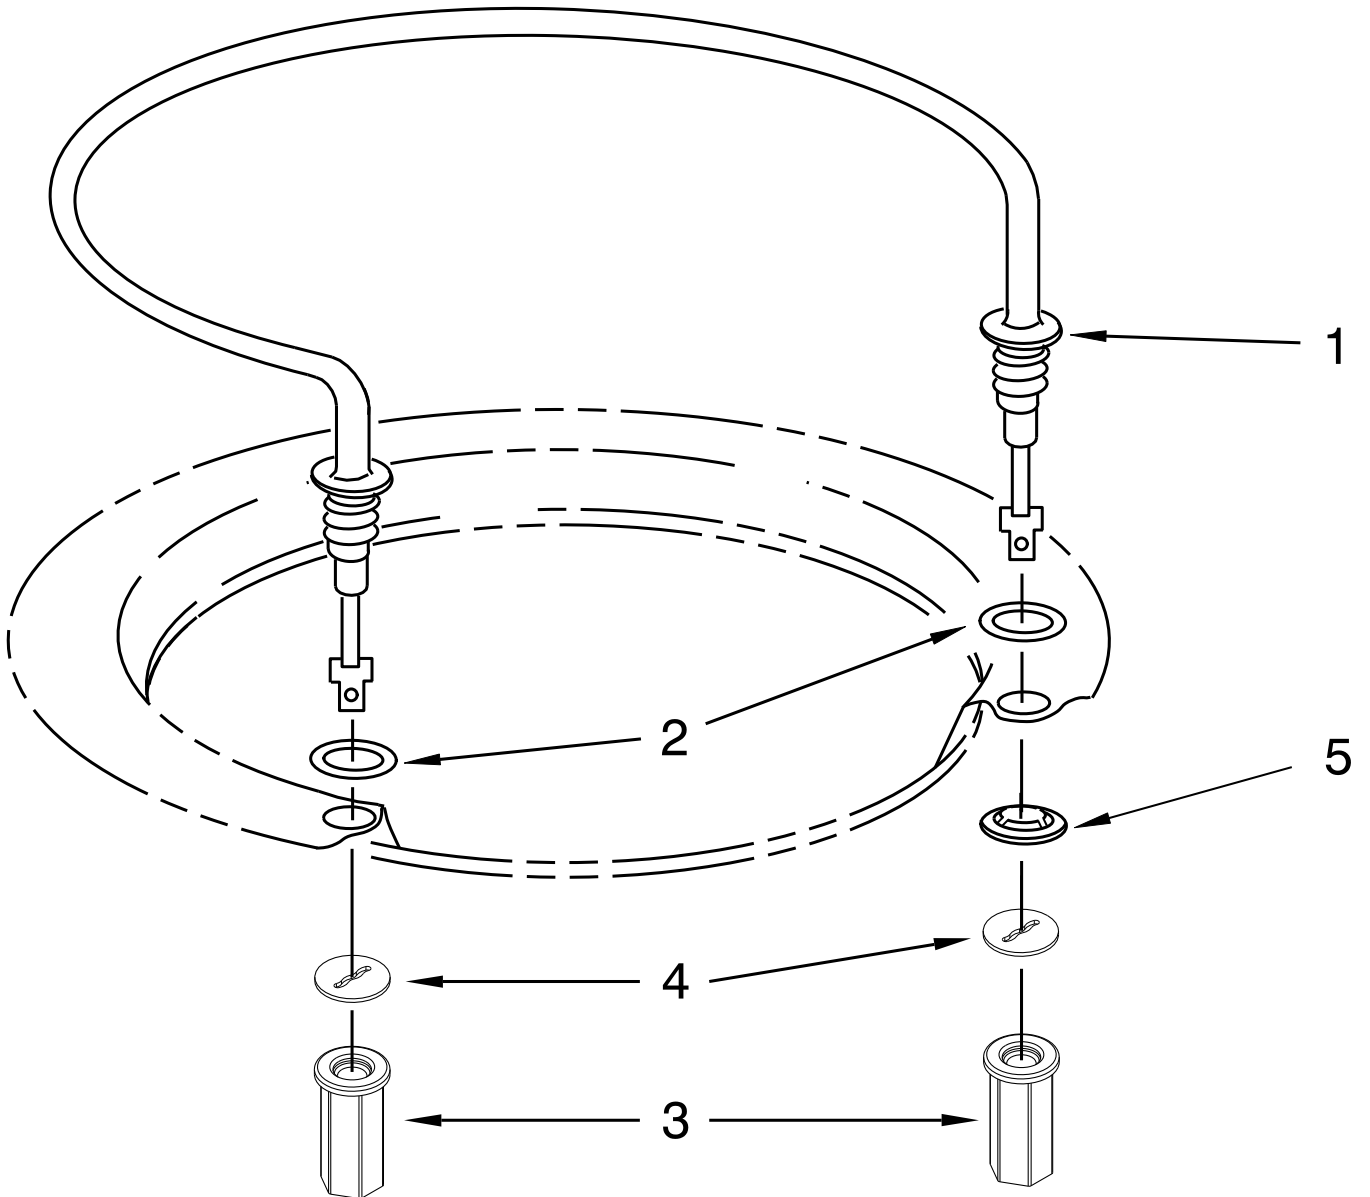


HEATER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10329322	Heater Element Assembly (Includes Item 2)
2	717273	Washer, Rubber

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	8268548	Nut, Heater Element
4	W10343251	Shield, Heater Probe

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5	3400931	Nut, Speed
		NOTE: If heater element is removed, it must be replaced.


UPPER RACK AND TRACK PARTS

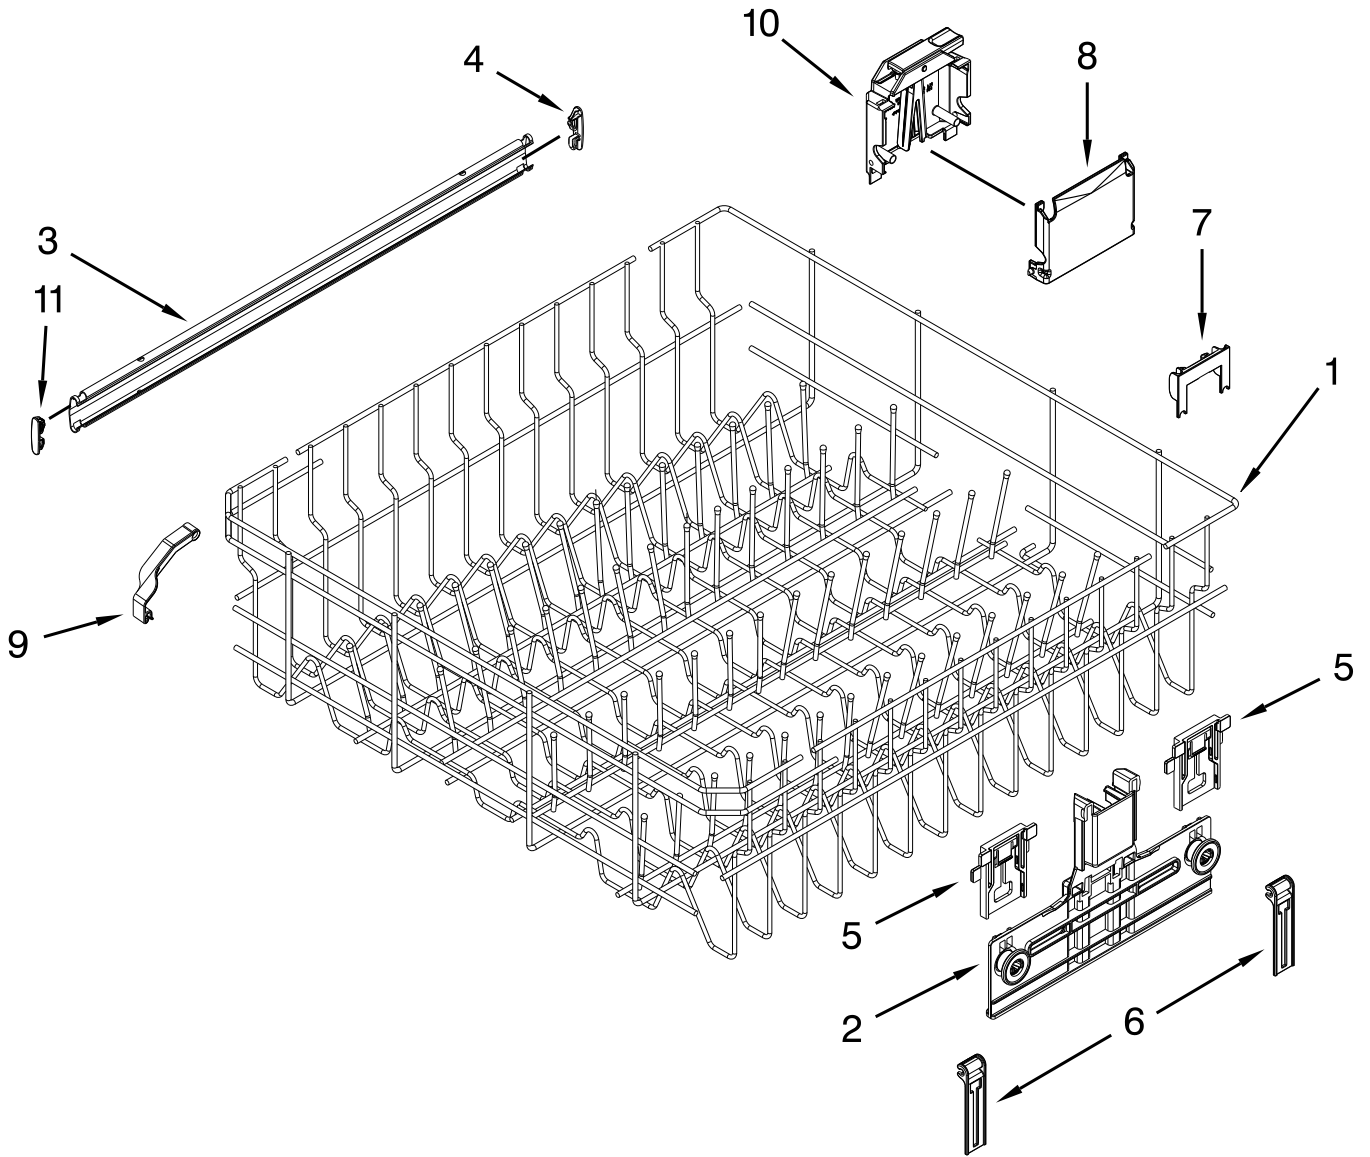

UPPER RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10350382	Dishrack, Upper	6	W10195839	Strap, Tether Adjuster	10		Housing, Adjuster
2	W10350375	Adjuster, Arm Assembly	7	W10250160	Clip, Adjuster		W10195372	Left Hand
3	3385089	Track, Dishrack	8	W10250162	Cover, Adjuster		W10195373	Right Hand
4	8565925	Stop, Track (Non-Removable)	9	W10254690	Clip, Dispenser Guard	11	W10508950	Stop, Track (Removable)
5	W10195840	Positioner, Adjuster						

LOWER RACK PARTS

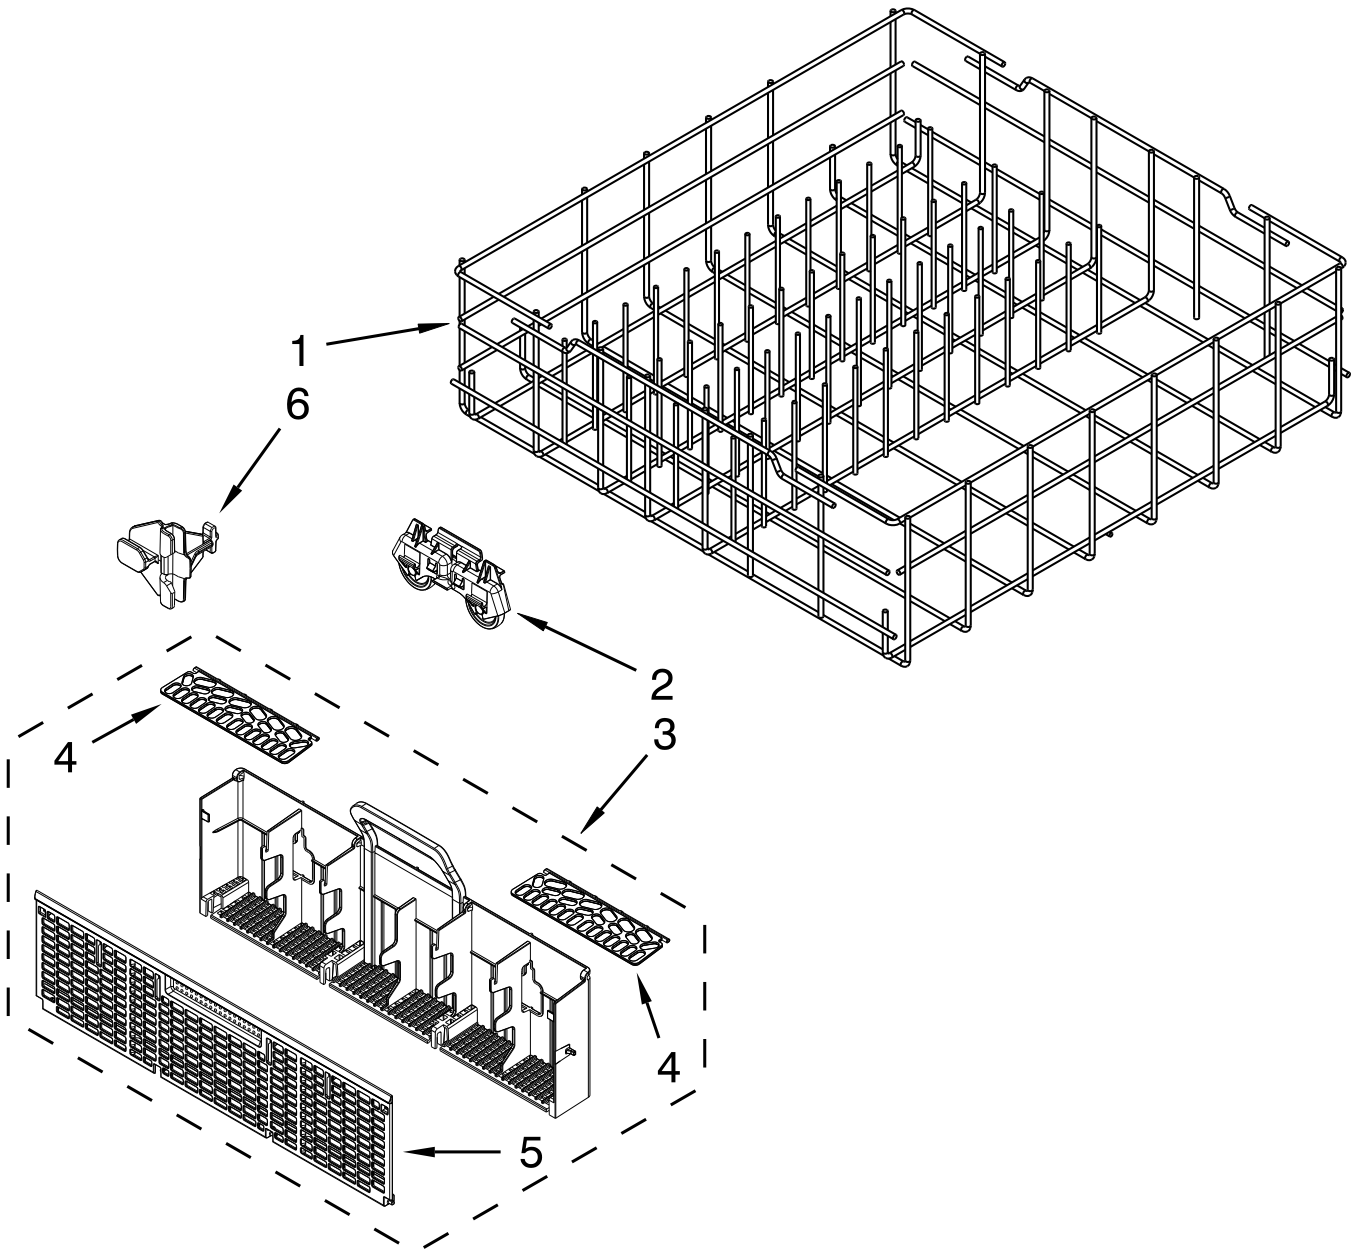

LOWER RACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10380384	Dishrack, Lower	3	W10350340	Silverware Basket Assembly	5	W10350342	Door, Silverware Basket
2	W10195416	Wheel & Transport Assembly	4	W10336557	Lid, Silverware Basket	6	W10350393	Clip, Silverware Basket

OPTIONAL PARTS (NOT INCLUDED)

ACCESSORIES

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
		SIDE PANEL KITS
	8171656	White
	8171657	Black
	8171658	Biscuit/Bisque
	8171659	Stainless Steel
		MOISTURE BARRIER KIT
	4396277	Barrier Kit
		DRAIN HOSE
	3385556	12 Ft.

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White
	4392900	Biscuit/Bisque

POWER CORD KIT

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4317824	Power Cord Kit (Included Cord & Misc. Hardware)

ANTI-TIP KIT

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	8171477	Floor Mount Kit
	8212560	Side Mount Kit

DISHRACK REPAIR

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
		TINE TIP REPAIR KIT (Enough for Two Complete Racks)
	4396838	White
	4396840	Grey
	4396854	Silver Atlantis
		VINYL TOUCH-UP (4oz)
	676453	White
	676455	Grey
	4396853	Silver Atlantis