




Range & Rangetop

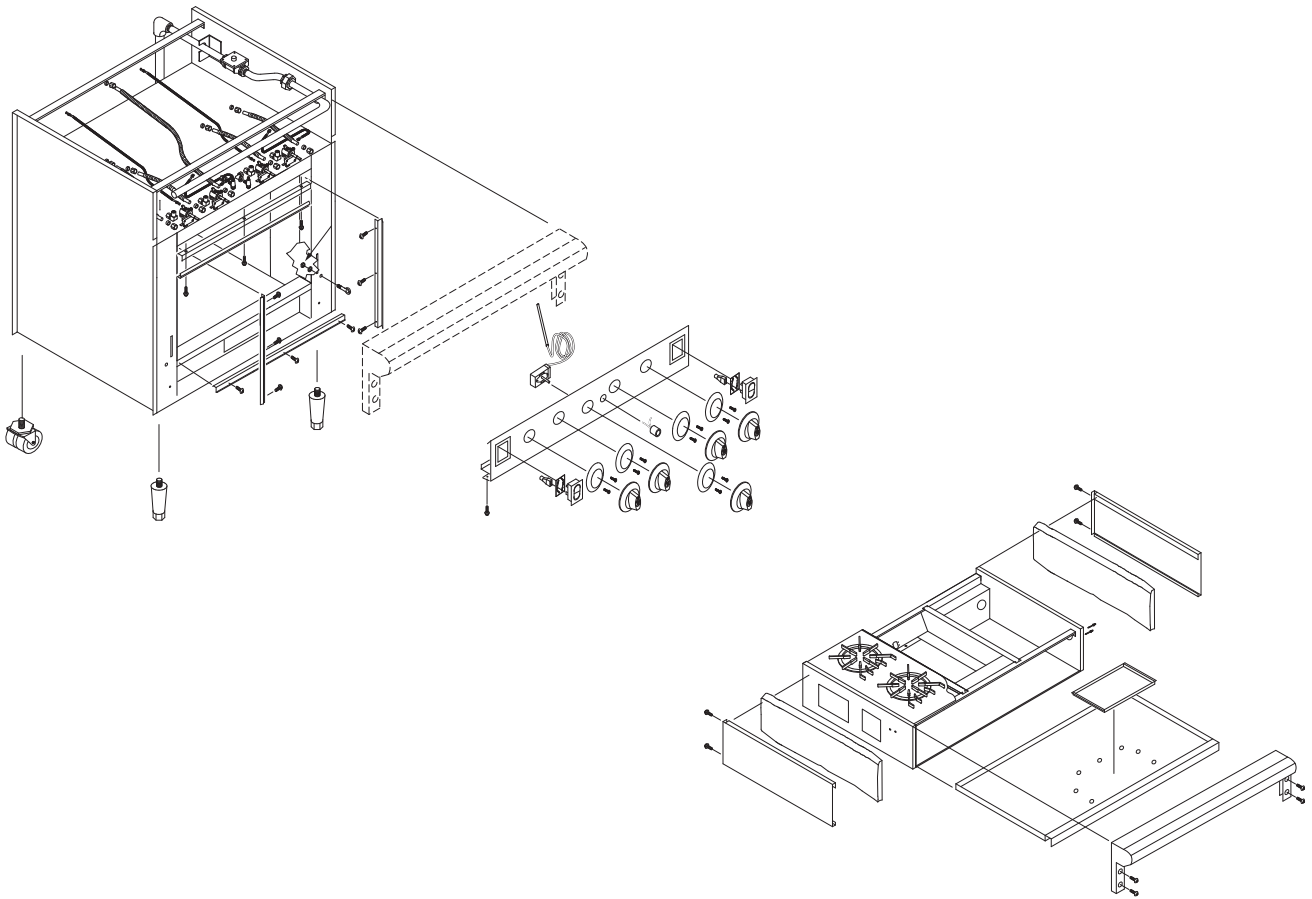

Service Parts Manual

INTRODUCTION

This Wolf Appliance Service Parts Manual, Part #806458, has been compiled with the latest service parts information.

NOTE: This parts manual also includes parts list and exploded views for doors and associated components starting with serial number 17000000.

TECHNICAL ASSISTANCE

If you should have any questions regarding a Wolf appliance and/or this manual, please contact:

*Wolf Appliance, Inc.
ATTN: Service Department
P.O. Box 44988
Madison, WI 53744-4988*

*Customer Service & Parts / Warranty Claims
Phone #: (800) 332 - 9513*

*Technical Assistance
Phone #: (800) 919 - 8324*

*Customer Service & Technical Assistance
Facsimile #: (608) 441 - 5887*

*Parts / Warranty Claims
Facsimile #: (608) 441 - 5886*

*Office Hours:
7:00 AM to 7:00 PM Central Time
Monday through Friday*

This manual is designed to be used by Authorized Service Personnel only. Wolf Appliance, Inc. assumes no responsibility for any repairs made to Wolf appliances by anyone other than Authorized Service Technicians.

TABLE OF CONTENTS

Page #

RANGES

30" Range Door & Riser.....2
 30" Range Door (SWS 17000000).....4
 30" Range Dress Panels.....6
 30" Range Top.....8
 30" Range Front Panels.....10
 30" Range Manifolds.....12
 30" Range Oven.....14
 30" Range Rear.....16

36" Range Door & Riser.....18
 36" Range Door (SWS 17000000).....20
 36" Range Dress Panels.....22
 36" Range Top.....24
 36" Range Front Panels.....26
 36" Range Manifolds.....28
 36" Range Oven.....30
 36" Range Rear.....32

48" Range Door & Riser.....34
 48" Range Door (SWS 17000000).....36
 48" Range Dress Panels.....38
 48" Range Top.....40
 48" Range Front Panels (1 of 2).....42
 48" Range Front Panels (2 of 2).....44
 48" Range Manifolds (1 of 2).....46
 48" Range Manifolds (2 of 2).....48
 48" Range Oven.....50
 48" Range Rear.....52

60" Range Door & Riser.....54
 60" Range Door (SWS 17000000).....56
 60" Range Dress Panels.....58
 60" Range Top.....60
 60" Range Front Panels (1 of 2).....62
 60" Range Front Panels (2 of 2).....64
 60" Range Manifolds (1 of 2).....66
 60" Range Manifolds (2 of 2).....68
 60" Range Oven.....70
 60" Range Rear.....72

RANGETOPS

36" Rangetop Top & Dress Panels.....74
 36" Rangetop Front Panels.....76
 36" Rangetop Manifold.....78

48" Rangetop Top & Dress Panels.....80
 48" Rangetop Front Panels (1 of 2).....82
 48" Rangetop Front Panels (2 of 2).....84
 48" Rangetop Manifold (1 of 2).....86
 48" Rangetop Manifold (2 of 2).....88

Range and Rangetop Spark Module Matrix.....90

The information and images are the copyright property of Wolf Appliance, Inc., an affiliate of Sub-Zero, Inc. Neither this manual nor any information or images contained herein may be copied or used in whole or in part without the express written permission of Wolf Appliance, Inc., an affiliate of Sub-Zero, Inc. © Wolf Appliance, Inc. all rights reserved.

30" Range Door and Riser Parts List


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787622	Strip, Filler (Island Trim)
2	714589	Ring, Retaining
3	719287	Pin, Door Hinge
4	802808	Hinge, Door Stiffener Support Assy Lh
5	*Special Order, Call Factory Parts Department	
		Door, Oven Assy, 30"
6	766488	Panel, Back 30" Range
7	730228	Screw, #10-24 x 1/2"
8	769576	Liner, Door Assy 30"
	802809	Liner, Door Assy 30" (See SN Breaks)
9	720814	Window, Oven Door Lg.
10	723296	Clip, Oven Glass Retainer
11	722328	Glass, Oven Door
12	800635	30" Door Insulation
13	766374	Hinge, Door Stiffener Support Assy Rh
	802807	Hinge, Door Stiffener Support Assy Rh
14	800635	30" Door Insulation
15	730141	Screw, 1/4-20" x 1/2"
16	730308	Washer, Lock 1/4
17	787592	Channel Door Spacer
18	730239	Screw, #8 x 3/8"
19	769565	Skin, Door SS, 30" (See SN Breaks)
	800983	Skin, Door SS, 30" (See SN Breaks)
	769564	Skin, Door Black, 30" Range
20	719628	Bracket, Belly Bar RH
21	719627	Bracket, Belly Bar LH
22	720770	Handle, Oven Door, 30" Range
23	800925	Logo, Wolf, Large
24	730509	Clip, Tinnerman
25	730335	Washer, Lock #10
26	730028	Screw, #10-24 x 1"
27	722424	Trim, J Oven Window Lg.
28	803863	Spacer, Door 30" Range

NOTE: Door and door components prior to serial number 17000000. See page 4 & 5 for door and door components starting with serial number 17000000.

Not Shown

806659 Riser 5-R30
 800015 Riser 10-R30
 800019 Riser 20-R30

30" Range Door and Riser View

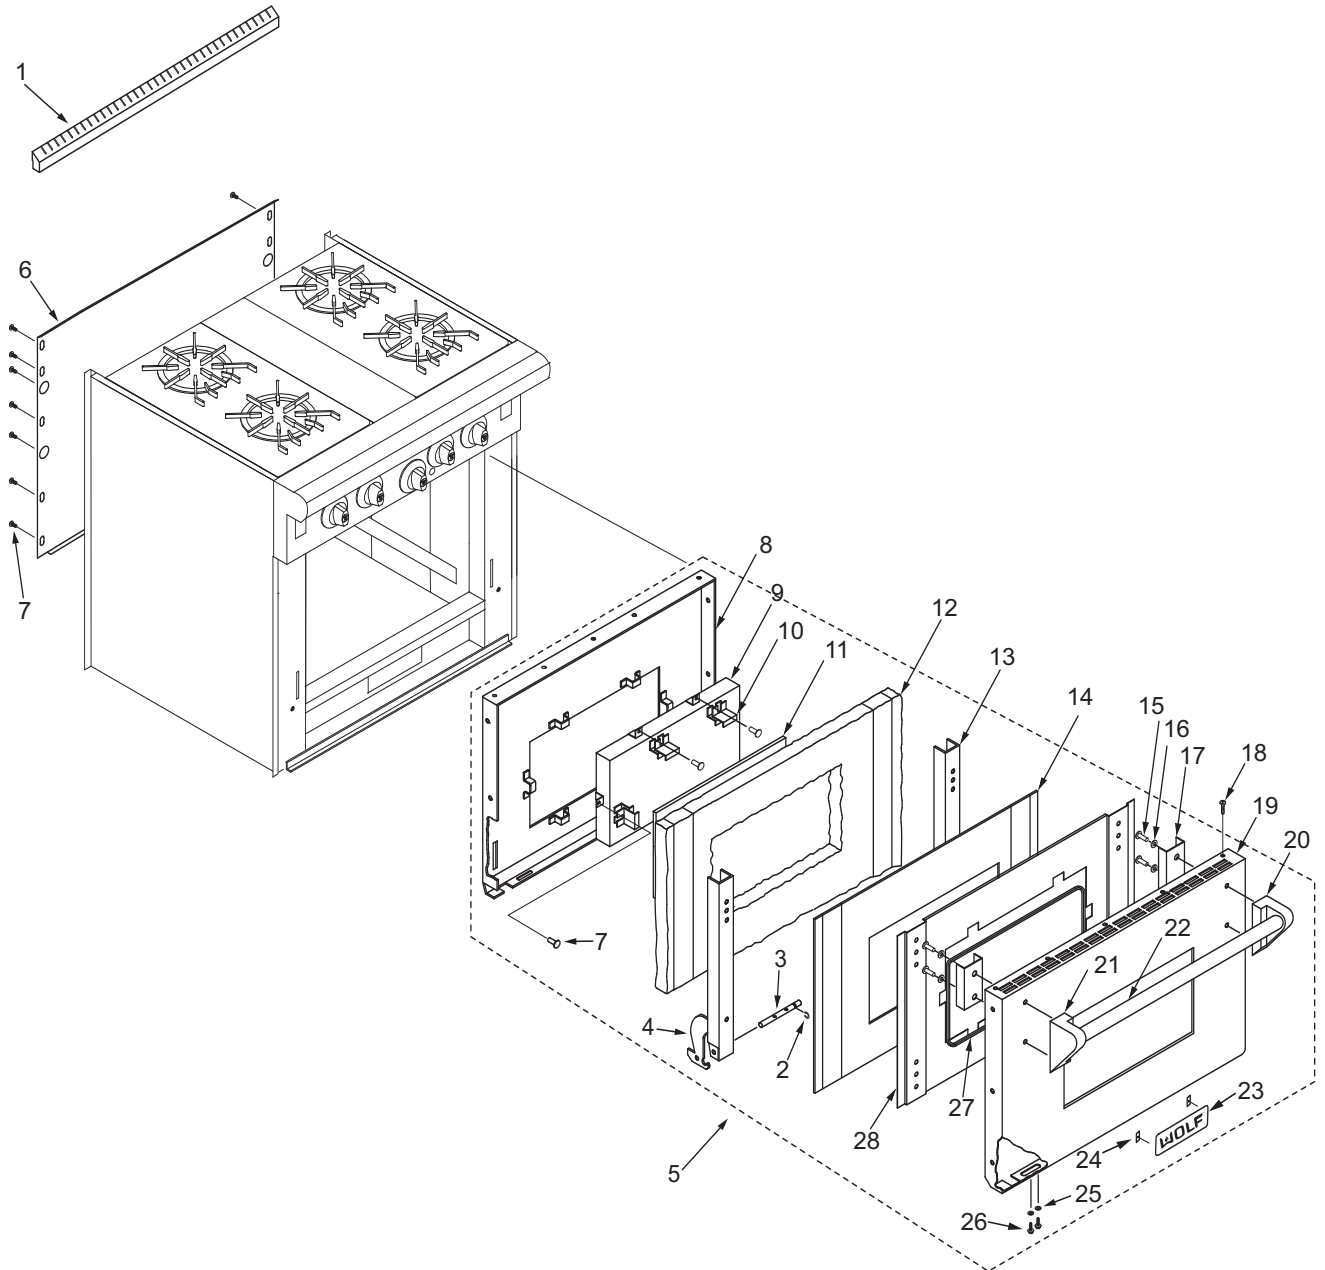


30" Range Door Parts List (Starting with Serial Number 17000000)

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1		*Special Order, Call Factory Parts Department
		Door, Oven Assy, 30" Door Assy. SS
2	809654	Liner, 30" Door-Range, SVCE
3	809637	Hinge Hydraulic, SVCE
4	809649	Hinge, Spring, SVCE
5	809667	Clip, Oven Glass Retainer, SVCE
6	730228	Screw, #10-24 x 1/2"
7	809651	Window, Oven Door Large, SVCE
8	809664	Glass, Oven Door, Large, SVCE
9	809653	Insulation, Blkt, 30", SVCE
10	809639	Bracket Assy, End Cap, Range, SVCE
11	730141	Screw, 1/4-20" x 1/2"
12	809640	Handle End Cap, Right, SVCE
13	809641	Handle End Cap, Left, SVCE
14	804396	8-32x .375 Set Screw
15	809650	Handle Bar, 30", SVCE
16	800925	Logo, Wolf, Large
17	809647	Door, Skin - 30" Logo Assy, SVCE
18	809663	J-Trim, Oven Window Lg, SVCE
19	809652	Baffle, 30" Door - Range SVCE
20	803273	Pin, Pilot
21	809373	Retainer, Hinge, SVCE
22	730239	Screw, #8x3/8"
23	803372	#10-16 X 1/2" Screw CR Truss HD
	804789	Washer, Fiber
24	801541	8-18 X 1/2" Screw TYPE B H/W/HD

NOTE: Door and door components starting with serial number 17000000. See page 2 & 3 for door and door components prior to serial number 17000000.

30" Range Door View (Starting with Serial Number 17000000)

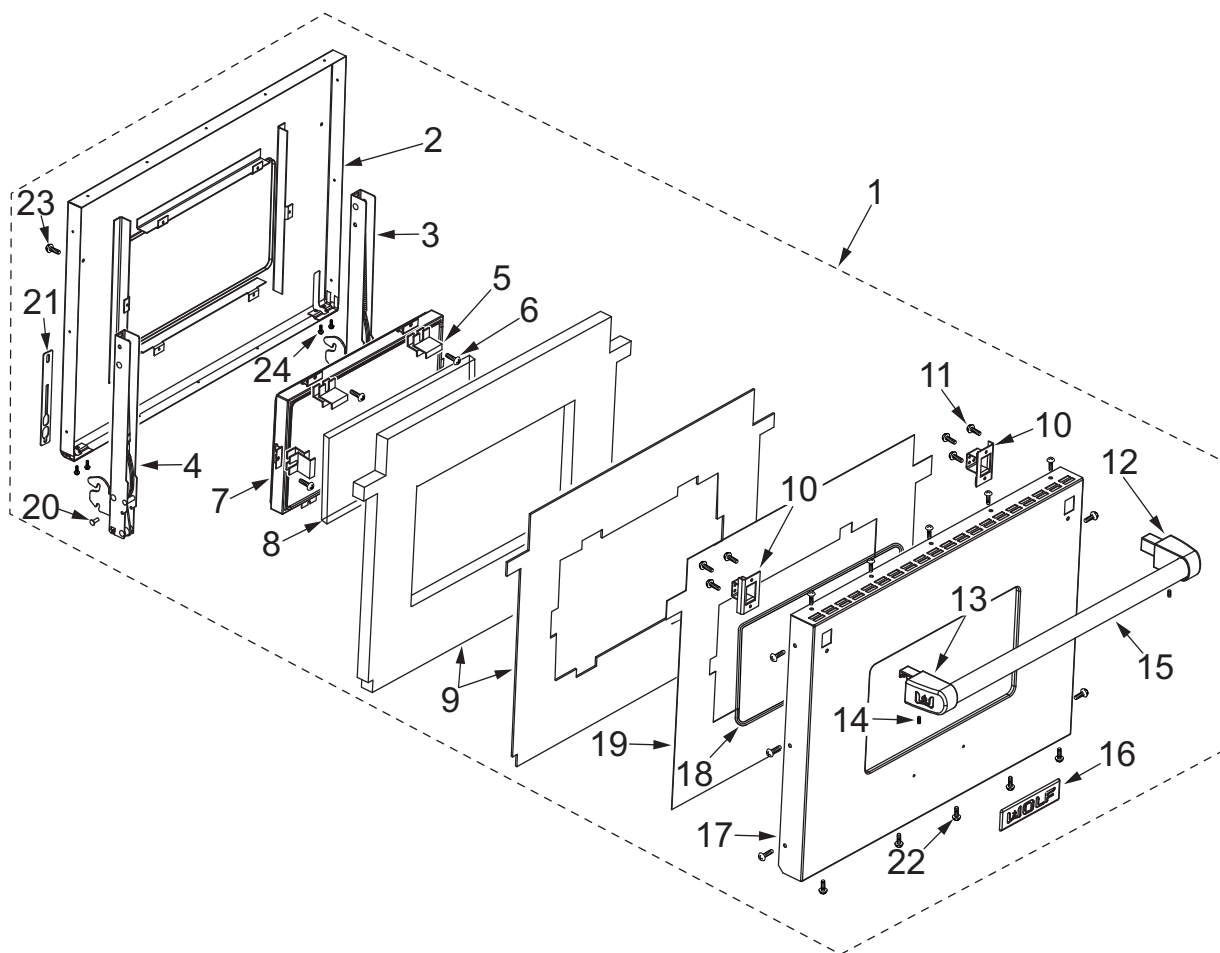

30" Range Dress Panels Parts List


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787306	Panel, Outer RH, SS 30/36" Range
	787308	Panel, Outer RH, Blk 30/36" Range
2	766411	Channel, Front & Rear, 30" Range
3	714369	Bushing, Snap 1/2"
4	722270	Rivet, Pop 3/16"
5	768256	Baffle, Roll Front 30" Range
6	811539	Roll Front
7	730228	Screw #10-24 x 1/2" Phillips
8	787583	Pan, Drip Assy. (See SN Breaks)
	801360	Drip Tray Assy. (See SN Breaks)
9	807586	Skirt, Front SS, 30" Range
	766537	Skirt, Front Black, 30" Range
10	809366	Panel, Lower Front, SS 30" Range
	769580	Panel, Lower Front, Blk 30" Range
11	730228	Screw 10-24 X 1/2" Phillips Head
12	804532*	Switch, Door Interlock
	809365**	Switch, Door Interlock
13	766547*	Bracket, Door Switch, 30" Range
	809377**	Bracket, Door Switch, 30" Range
14	730535*	Nut, 6-32 Lock
15	719331*	Bolt, Eye 1/4-20 x 3"
16	730506*	Nut, Oversize
17	718361*	Spring, Door
18	768260*	Angle, Switch
19	719710*	Arm, Rocker, LH
20	719344*	Hook, "S", Oven Door
21	719350*	Pin, Clevis, 3/8 x 2"
22	730410*	Pin, Cotter, 3/32 x 1-1/4"
23	730310*	Washer
24	787307	Panel, Outer LH, SS 30/36" Range
	787309	Panel, Outer LH, Blk 30/36" Range

Not Shown

811716	Slide, Drip Tray, Lh
811717	Slide, Drip Tray, Rh

* - Prior to Serial Number (PTS) 17000000
** - Starting with Serial Number (SWS) 17000000

30" Range Dress Panels View

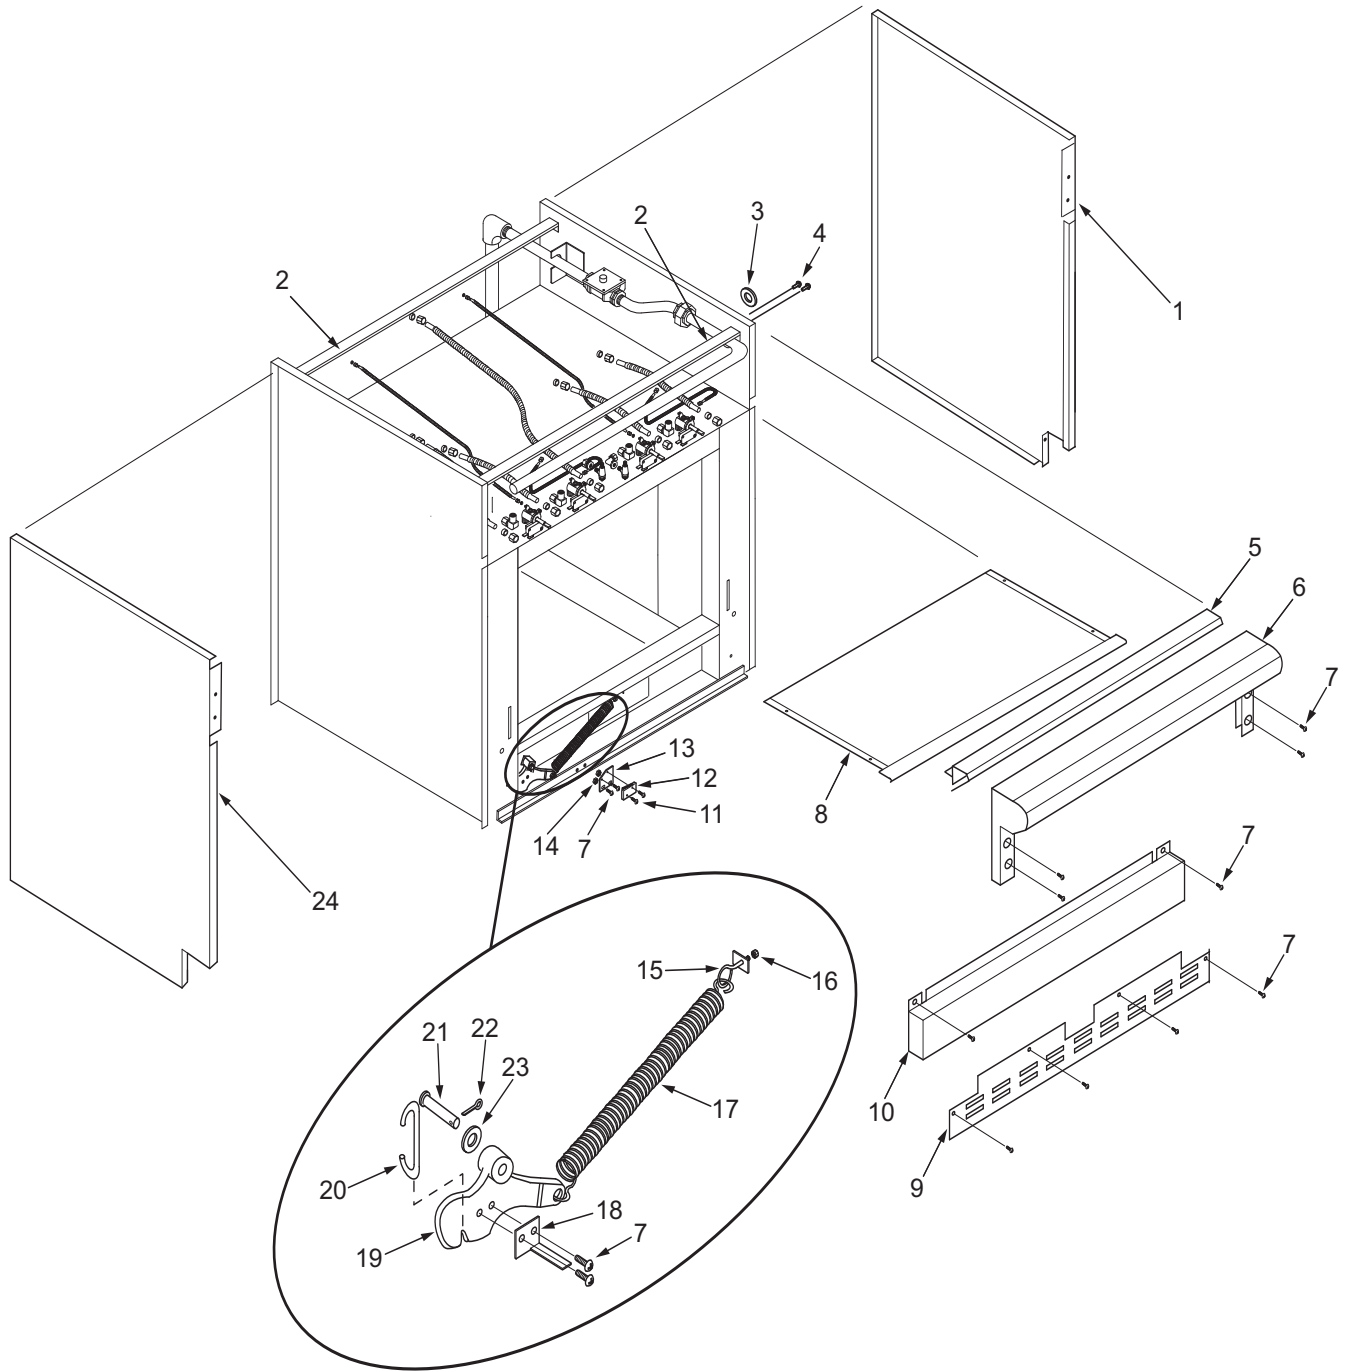


30" Range Top Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	720829	Grate, Spider (See SN Breaks)
	811561	Grate, Spider (See SN Breaks)
2	722421	Grate Foot Pad (See SN Breaks)
3	722422	Washer, Silicone, Spider Grate (See SN Breaks)
4	800041	Burner, Inner Head, Black Enamel
	720801	Burner, Inner Head, Plated
5	720887	Base, Inner Burner (See SN Breaks)
	800044	Burner, Inner Base, Black Enamel (See SN Breaks)
6	720803	Burner, Outer (See SN Breaks)
	801150	Cap, Burner, Outer Head, Black Enamel
7	720802	Ring, Cross
	801151	Ring, Burner, Inner Base, Black Enamel
8	803965	Burner Ring/Cap, Service Package
9	766446	Top, Pressed Stl Porc (See SN Breaks)
	805519	Top, Pressed Steel (See SN Breaks)
10	800010	S Grate Spacer
11	800137	S Grate, Front (See SN Breaks)
	804228	S Grate, Front (See SN Breaks)
12	800146	S Grate, Rear (See SN Breaks)
	804229	S Grate, Rear (See SN Breaks)
13	801149	Burner, Body Assy
14	806483	Service Components, Electrode
15	800872	Orifice, Outer Burner, Natural Gas
	800051	Orifice, Outer Burner, LP Gas
16	722162	Screw, Phillips Head
17	807864	Holder, Jet Assembly
18	720886	Venturi
19	730228	Screw #10-24 x 1/2"
20	800882	Orifice, Inner Burner, Natural Gas
	800052	Orifice, Inner Burner, LP
21	720900	Fitting, Inner Orifice
22	807598	Spring
23	720822	Ring
24	719566	Sleeve, 1/4" Fiberglass
25	807609	Spacer, Top, 30" Porcelain
26	767615	Panel, Burner Support
27	809019	Burner Assembly - Also Order 806483
28	801669	Grate, Wok (See SN Breaks)
	804230	Grate, Wok (See SN Breaks)
29	806563	Grate Assy., Center-R30
30	807017	Grate, Center Package

Not Shown

722218	Hook, Porcelain Top Remover
767627	Spacer, Burner Support
807066	Shield, Rubber - Electrode

30" Range Top View

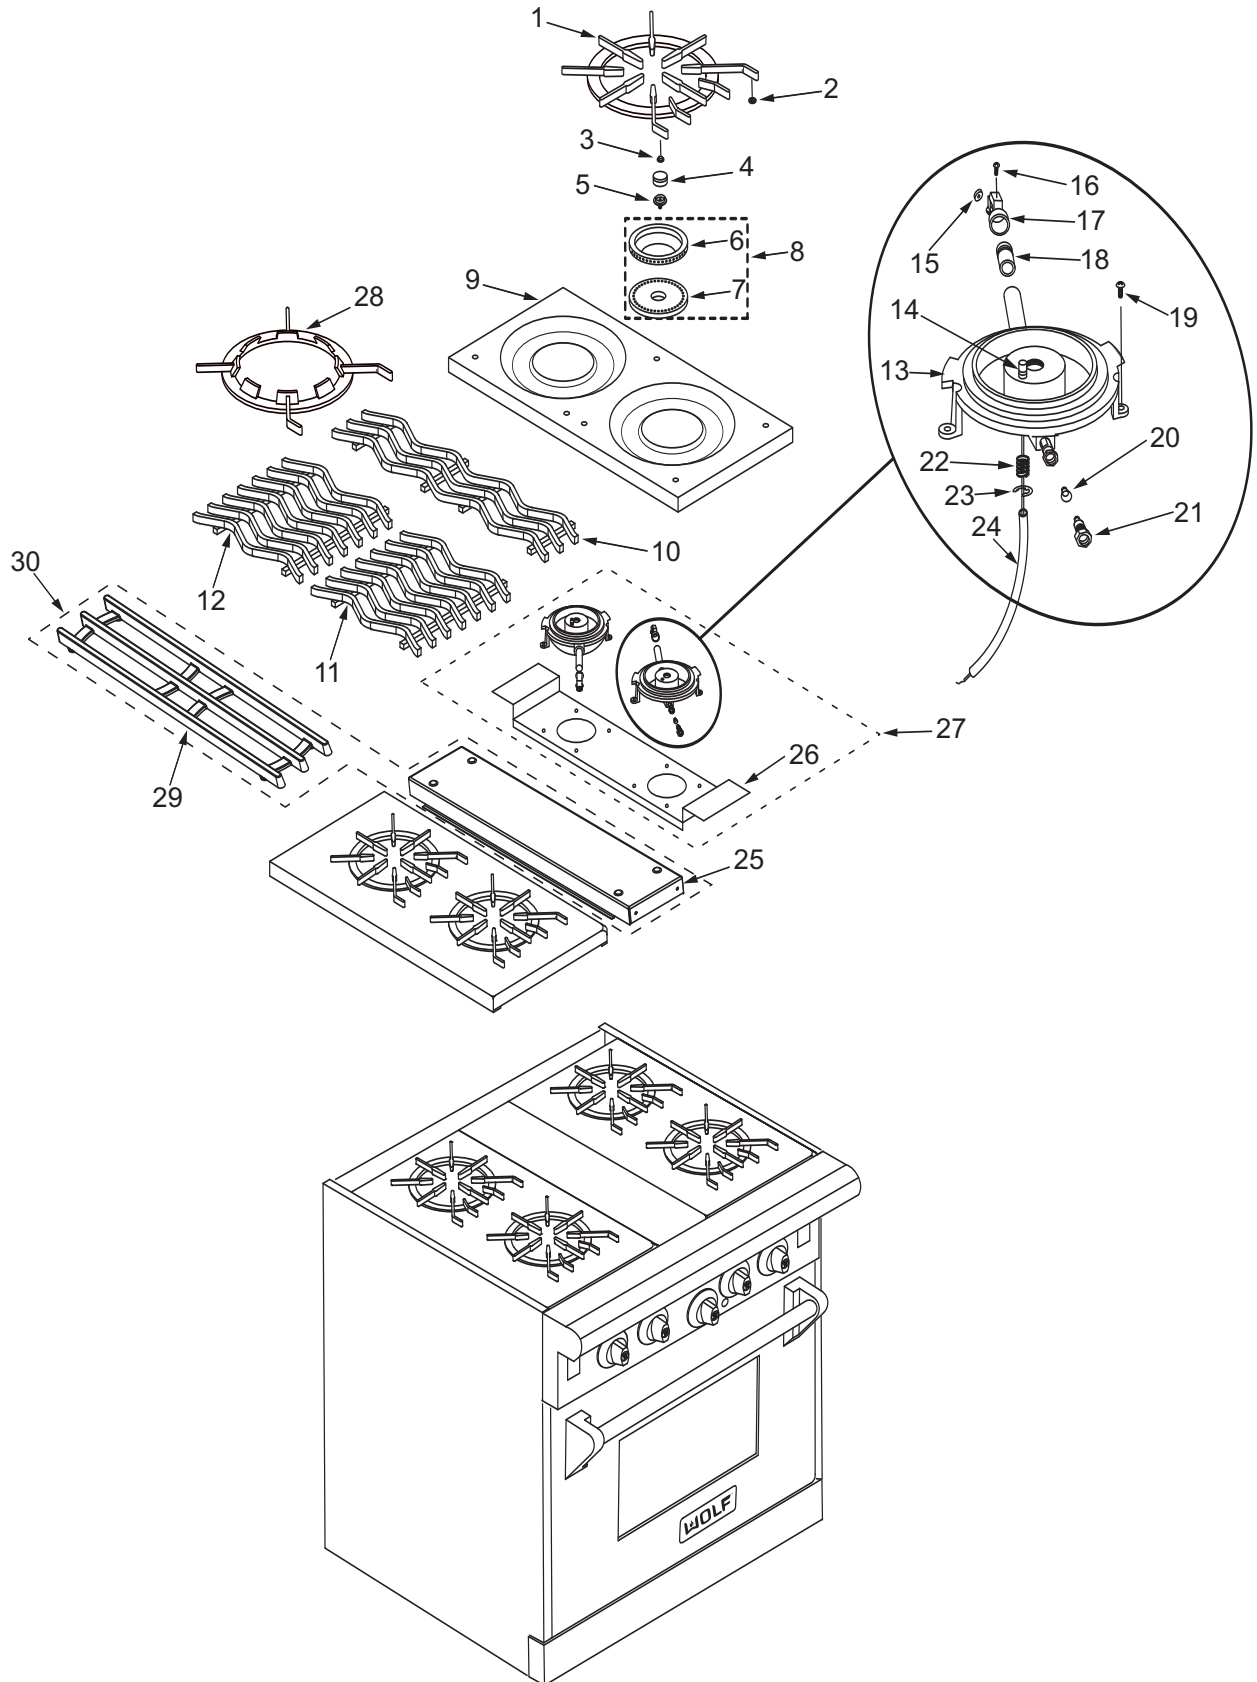


30" Range Front Panel Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	766543	Baffle, Broiler
2	720690	Seal, Door Top (See SN Breaks)
	803809	Gasket, Door 30" (See SN Breaks)
3	720692	Seal, Door Side (See SN Breaks)
	803809	Gasket, Door 30" (See SN Breaks)
4	722712	Label, Fan Switch
5	766423	Panel, Front R304 (See SN Breaks)
		Also need to order # 722712 and # 722713
	801078	Panel, Front R304 (See SN Breaks)
		Also need to order # 722712 and # 722713
6	720815	Switch, Oven Fan
7	720879	Knob, Control, Red (See SN Breaks)
	801312	Knob, Surface Burner Valve, Red (See SN Breaks)
	720880	Knob, Control, Black (See SN Breaks)
	801313	Knob, Surface Burner Valve, Red (See SN Breaks)
8	718146	Bezel, Thermostat (See SN Breaks)
	801348	Bezel, w/Tick Mark (See SN Breaks)
9	720818	Knob, Oven Thermostat, Red (See SN Breaks)
	801308	Knob, Oven Therm, W/Broil, Red (See SN Breaks)
	720819	Knob, Oven Thermostat, Black (See SN Breaks)
	801309	Knob, Oven Therm, W/Broil, Black (See SN Breaks)
10	730076	Screw, #6-32 x 1/4"
11	801346	Bezel, Front (See SN Break)
12	801347	Bezel, Rear (See SN Break)
13	720816	Switch, Oven Light
14	722564	Shield, Switch Terminal
15	715142	Terminal, Command Dummy
16	730229	Screw, 10-24 X 1-1/2" Pan HD
17	722713	Label, Light Switch
18	714902	Thermostat, Oven
19	720017	Light, Indicator, Red, Oven
20	718195	Bolt, Trunion
	803579	Bolt, Trunion, Offset
	730310	Washer, Trunion Shim
21	730311	Washer, Lock
22	730513	Nut, Hex 3/8-16
23	730228	Screw #10-24 x 1/2"
24	720691	Seal, Door Bottom (See SN Breaks)
	803809	Gasket, Door 30" (See SN Breaks)
25	721013	Leg, Range, 3"
26	803436	Caster, Dual Wheel, 2"

Not Shown

803239	Wrench, Caster Adjusting
805293	Bumper, Door

30" Range Front Panel View

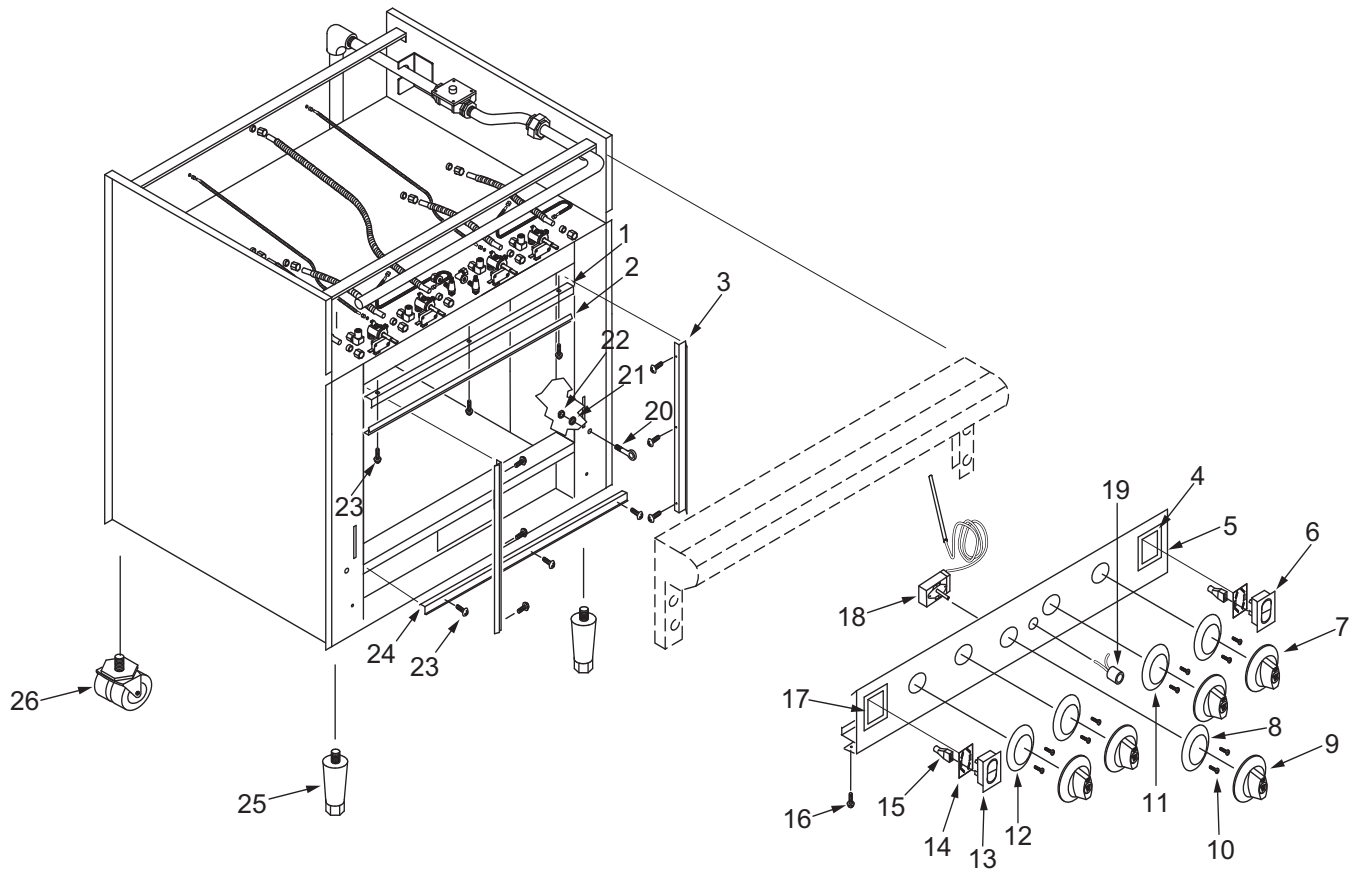


30" Range Manifold Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	803171	Flex Tubing Service Package 5/16" x 14"
2	807667	Ferrule, Sleeve Brass, 5/16"
3	807677	Nut, Compress Brass, 5/16"
4	801937	Flex Tubing Service Package 3/16" x 27"
5	803172	Flex Tubing Service Package 3/8" x 42"
6	714361	Connector, 3/8"
7	722133	Screw, Hex Head
8	720885	Bracket, Valve Mounting
9	804417	Manifold (R304)
10	801936	Flex Tubing Service Package 3/16" x 16"
11	800892	Orifice, Bypass Inner, Natural Gas
	800055	Orifice, Bypass Inner, LP Gas
12	800884	Orifice, Bypass Outer, Natural Gas
	800054	Orifice, Bypass Outer, LP Gas
13	809153	Burner Valve & Switch Assy, Nat
	809154	Valve, Burner, LP Gas
14	807141	Valve, Switch
15	720330	Valve, Shut Off, Oven
16	719393	Elbow, Brass 3/8"
17	722278	Elbow, Adapter, Compression
18	719370	Plug, Hex Head, 1/8"
19	807668	Ferrule, 3/8"
20	807678	Nut, 3/8"
21	807665	Ferrule, 3/16"
22	720888	Fitting, 3/16"
23	723350	Regulator, 3/4" Convertible
	801358	Regulator, 1/2" Convertible
24	722832	Pipe, Offset
25	719033	Union, 1/2" Black
26	803169	Flex Tubing Service Package 3/8" x 48"
27	807678	Nut, Compressed Brass, 3/8"
28	807668	Ferrule, Sleeve, Brass 3/8"
29	786977	Shield, Corner Wire

Not Shown

806376	Wiring Harness, Manifold R304
806377	Wiring Harness, Rear R304
810521	Harness Rpl Component, R304


30" Range Manifold View

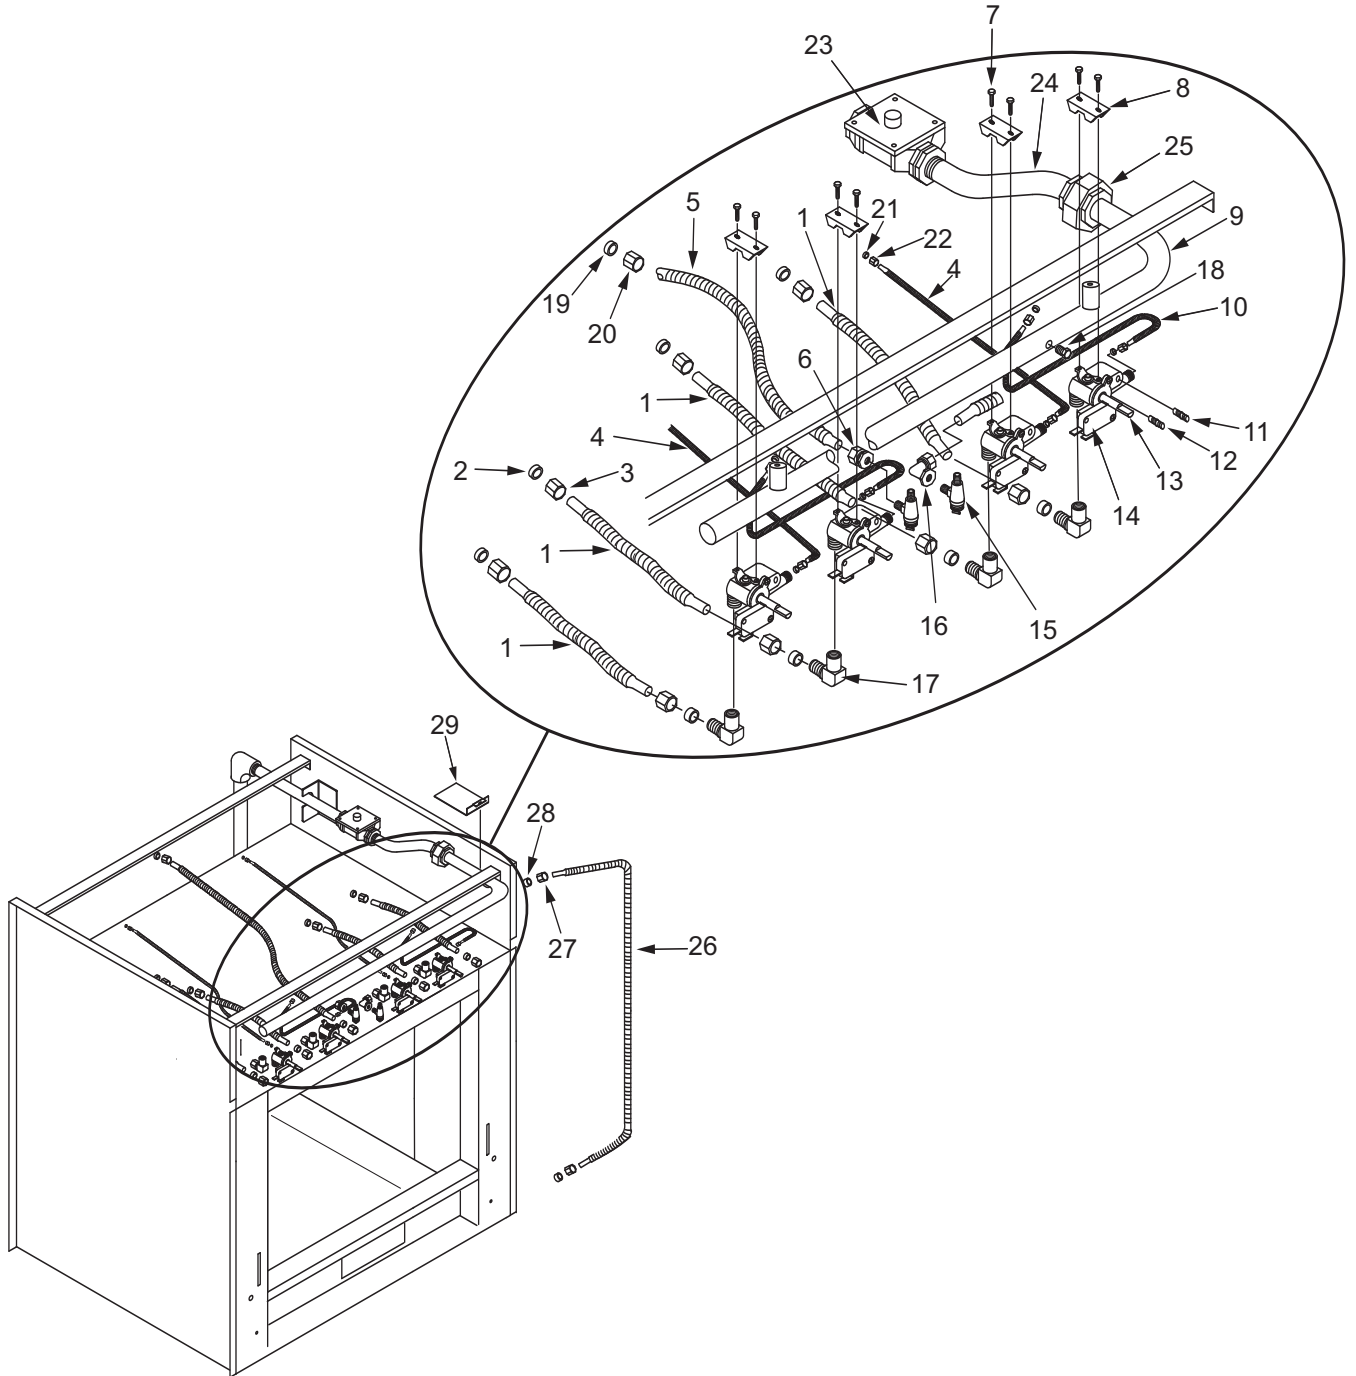

30" Range Oven Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	809157	Burner, Infrared Oven
2	801686	Bracket, Burner Left/Right
3	766592	Bracket, Burner Front/Rear
4	730228	Screw, #10-24 x 1/2"
5	766499	Bracket, Igniter, IR Range
6	723060	Igniter, Hot Surface
7	801690	Cover, Igniter Shield, Range
8	730230	Screw #8-32 x 3/8"
9	806873	Thermo Bulb Housing Assembly
10	806873	Thermo Bulb Housing Assembly
11	800120	Oven Deflector Rest
12	718601	Igniter, Norton
13	720696	Lamp, Oven Assembly
14	342766	Lamp, Oven 40w, 120v
15	720830	Lens
16	715221	Motor, Fan Oven
17	766451	Plug, Motor Mount
18	800628	Blade, Convection Fan
19	730229	Screw, #10-24 x 1-1/2"
20	766456	Cover, Blower Oven
21	720683	Rack, Oven 30" Range
22	809669	Grill, Broiler Pan
23	766420	Deflector, Oven Bottom Range
24	766418	Panel, Oven Bottom 30" (See SN Break)
	807945	Panel Oven Bottom 30" (See SN Break)
25	720682	Rack, Guide
26	719393	Elbow, Brass 3/8"
27	812107	Valve, Oven Safety Single Hole
28	803166	Flex Tubing Service Package 3/8" x 6"
29	719385	Orifice Holder
30	800071	Orifice, Lg Oven, Natural Gas, #36
	803882	Orifice, Lg Oven, LP, 1.65 Mm
31	807734	Orifice Bracket, Range
32	807861	Baffle, Lower Front
33	803973	Heatsink
34	803814	Burner Tube, Oven (See SN Break)
	807729	Buner Tube, Bake (See SN Break)
35	766546	Baffle, Flue Range
36	809668	Pan, Broiler


30" Range Oven View

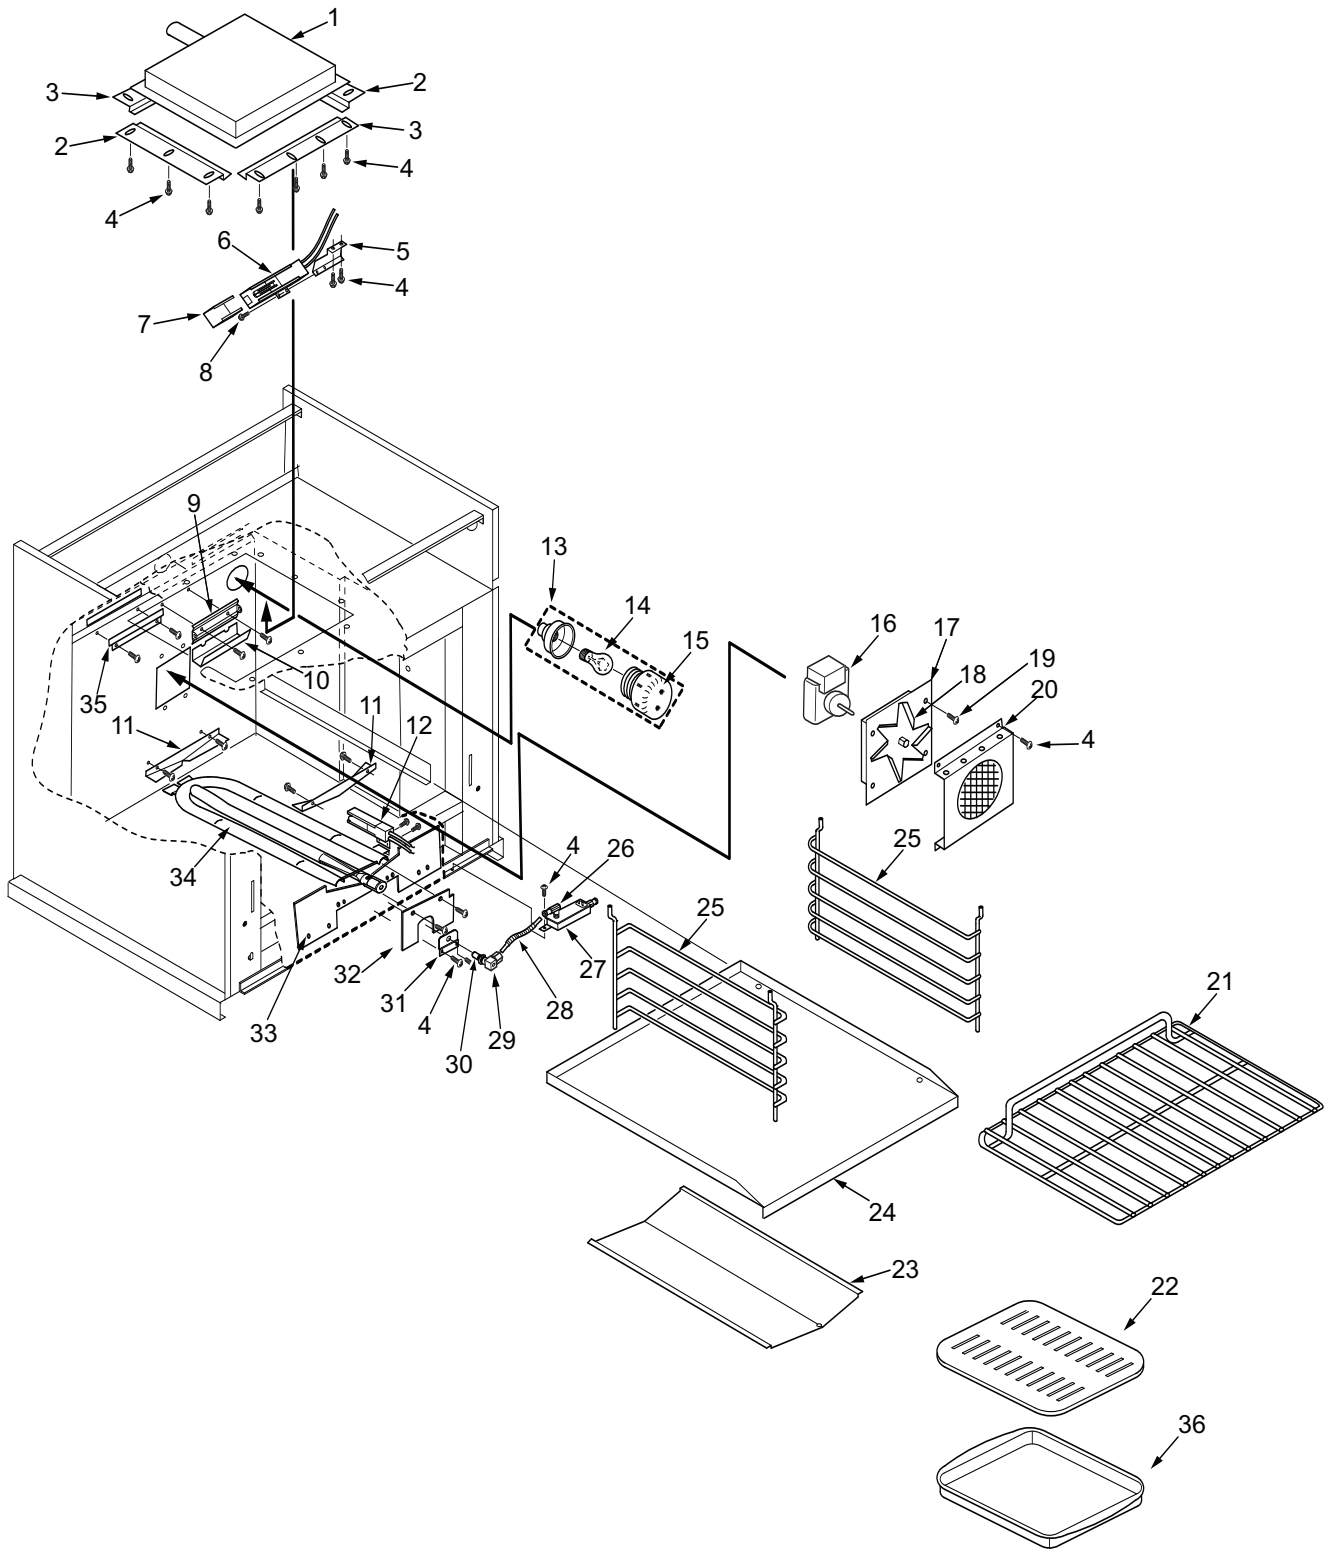

30" Range Rear Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	809243	Cord, Power
2	719393	Elbow, 3/8" x 3/8"
3	730230	Screw #8-32 x 3/8"
4	807678	Ferrule, Sleeve 3/8"
5	807668	Nut, Compress
6	803166	Flex Tubing Service Package 3/8" x 6"
7	812106	Valve, Broiler Safety
8	766542	Bracket, Safety Valve-Relay
9	719068	Bushing, Snap
10	786776	Box, Flue Assembly
11	730228	Screw #10-24 x 1/2" Phillips
12	786835	Box, Flue Center Assembly
13	730239	Screw #8 x 3/8"
14	722383	Relay, Fan
15	809417	Module, Spark 4 Point
16	811868	Panel, Module Range
17	800246	Washer, Flat, Teflon
18	766482	Cover, Blower Motor, Range
19	766593	Angle, Wall Brace
20	766458	Brace, Rear Bottom
21	719502	Box, Electrical
22	719503	Plate, Face Electrical Box
23	713813	Connector, 3/8", Power Cord
24	719049	Elbow, 3/4" X 3/4"
	801457	Elbow, 1/2" x 1/2"
25	713494	Nipple, 3/4" x 22 3/4"
	801456	Nipple, 1/2" x 22 3/4"
26	786768	Bracket, Manifold Support
27	801459	Nipple, 1/2" x 3/2"
28	721030	Gasket, Red Rubber
29	722278	Elbow, Adapter Compression
30	800259	Orifice, W/ELB Broil Natural (Stamp #48)
	800057	Orifice, IR Broil (LP) 1.181MM (Stamp #56)
		<u>Not Shown</u>
	800247	Silicone, Red High Temp.
	720809	Harness, Wiring

30" Range Rear View

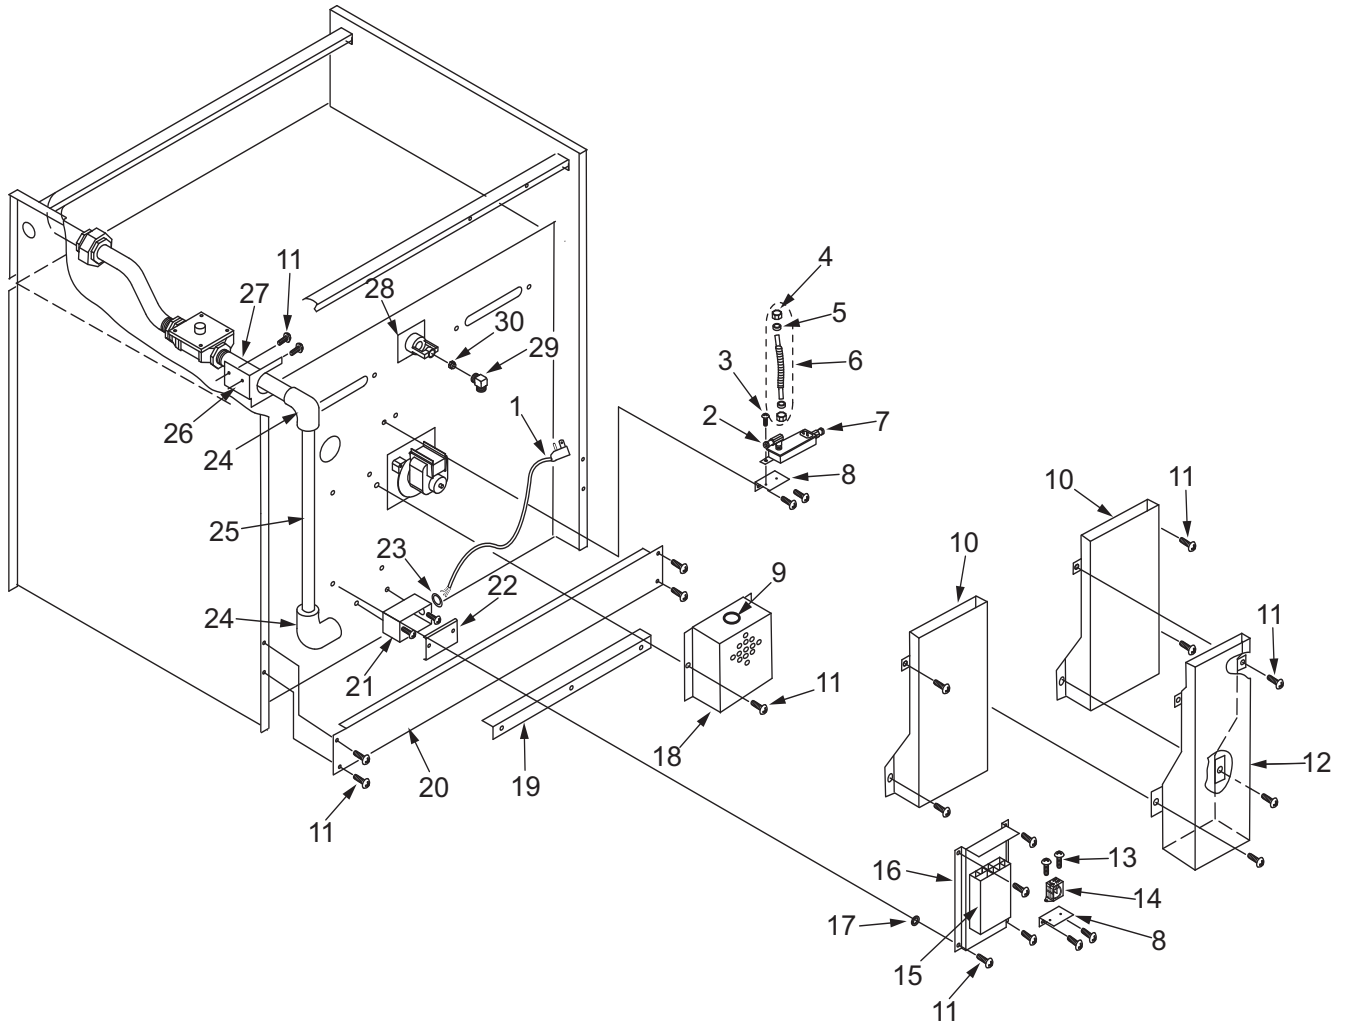

36" Range Door and Riser Parts List


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787624	Strip, Filler (Island Trim)
2	714589	Ring, Retaining
3	719287	Pin, Door Hinge
4	802808	Hinge, Door Stiffener Support Assy Lh
5	*Special Order, Call Factory Parts Department	
		Door, Oven Assy, 36"
6	767835	Panel, Back 36" Range
7	730228	Screw, #10-24 x 1/2"
8	767665	Liner, Door Assy 36" (See SN Breaks)
	802811	Liner, Door Assy 36" (See SN Breaks)
9	720814	Window, Oven Door Lg.
10	723296	Clip, Oven Glass Retainer
11	722328	Glass, Oven Door
12	800636	36" Door Insulation
13	802807	Hinge, Door Stiffener Support Assy Rh
14	800636	36" Door Insulation
15	730141	Screw, 1/4-20" x 1/2"
16	730308	Washer, Lock 1/4
17	787592	Channel Door Spacer
18	730239	Screw, #8 x 3/8"
19	767664	Skin, Door SS, 36" Range
	800984	Skin, Door SS, 36" Range (See SN Breaks)
	767663	Skin, Door Black, 36" Range
20	719628	Bracket, Belly Bar Rh
21	719627	Bracket, Belly Bar Lh
22	720838	Handle, Oven Door, 36" Range
23	800925	Logo, Wolf, Large
24	730509	Clip, Tinnerman
25	730335	Washer, Lock #10
26	730028	Screw, #10-24 x 1"
27	722424	Trim, J Oven Window Lg.
28	803865	Spacer, Door 36" Range

NOTE: Door and door components prior to serial number 17000000. See page 20 & 21 for door and door components starting with serial number 17000000.

Not Shown

806660	Riser 5-R36
800016	Riser 10-R36
800020	Riser 20-R36

36" Range Door and Riser View

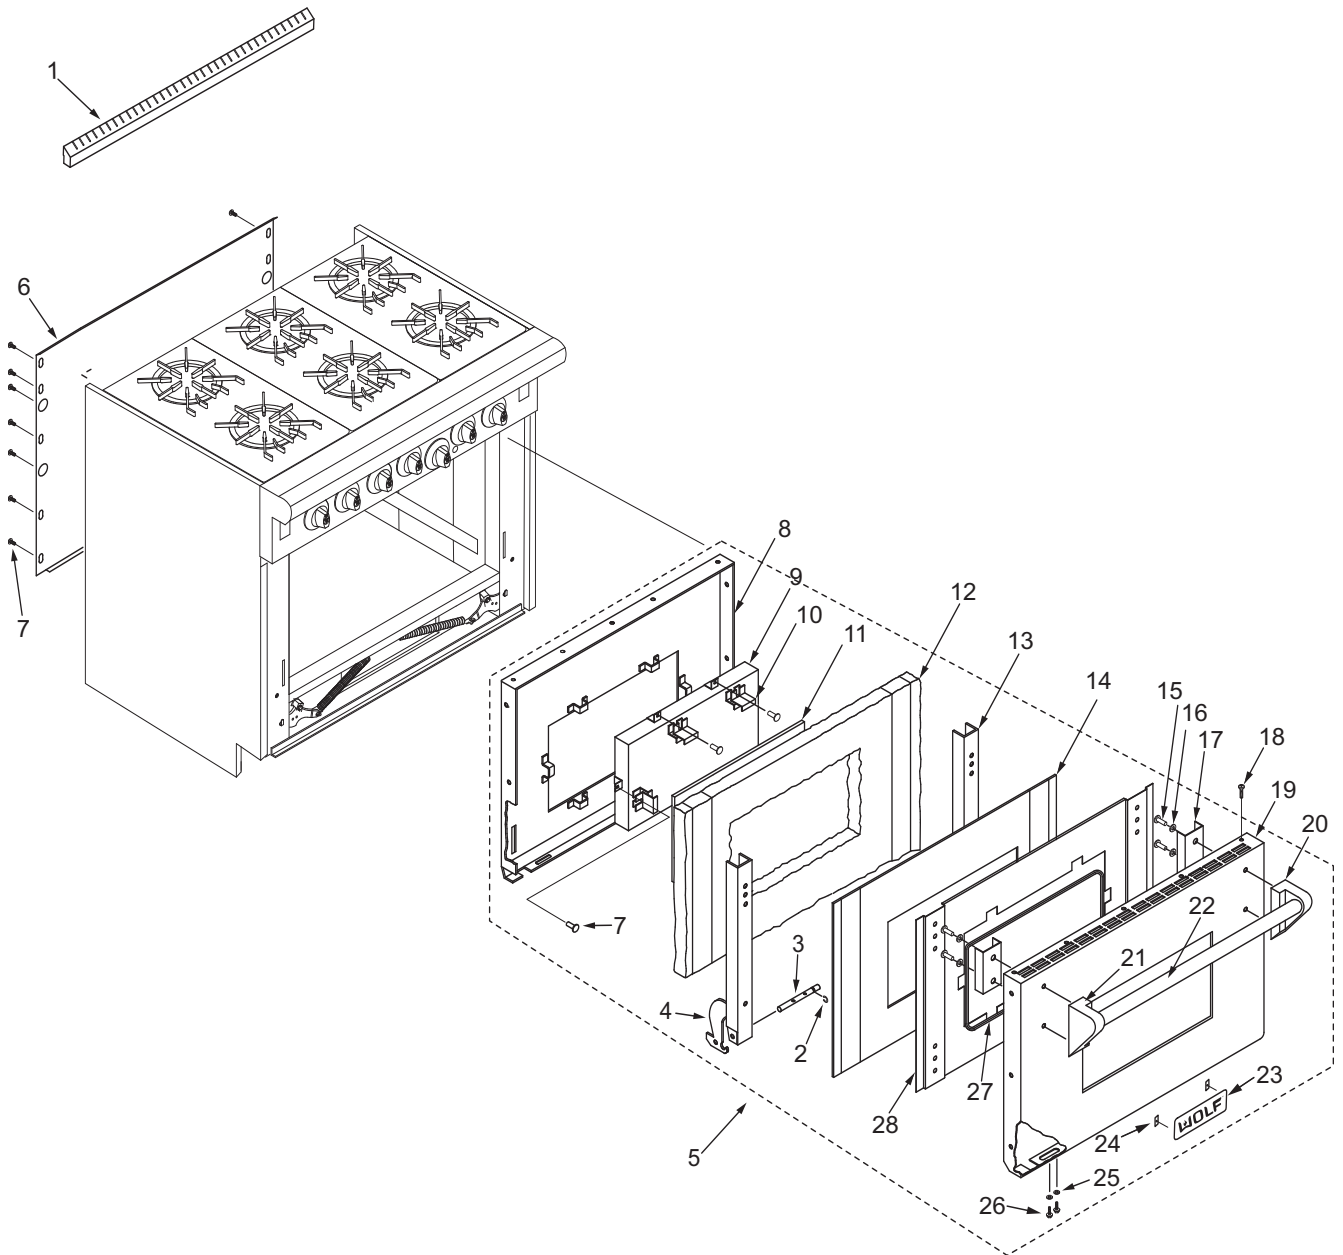


36" Range Door Parts List (Starting with Serial Number 17000000)

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1		*Special Order, Call Factory Parts Department Door, Oven Assy, 36" Door Assy. SS
2	809662	Liner, 36" Door-Range, SVCE
3	809637	Hinge Hydraulic, SVCE
4	809658	Hinge, Spring, 36"SVCE
5	809667	Clip, Oven Glass Retainer, SVCE
6	730228	Screw, #10-24 x 1/2"
7	809651	Window, Oven Door Large, SVCE
8	809664	Glass, Oven Door, Large, SVCE
9	809661	Insulation, Blkt, 36", SVCE
10	809639	Bracket Assy, End Cap, Range, SVCE
11	730141	Screw, 1/4-20" x 1/2"
12	809640	Handle End Cap, Right, SVCE
13	809641	Handle End Cap, Left, SVCE
14	804396	8-32x .375 Set Screw
15	809659	Handle Bar, 36", SVCE
16	800925	Logo, Wolf, Large
17	809656	Door, Skin - 36" Logo Assy, SVCE
18	809663	J-Trim, Oven Window Lg, SVCE
19	809660	Baffle, 36" Door - Range SVCE
20	803273	Pin, Pilot
21	809373	Retainer, Hinge, SVCE
22	730239	Screw, #8x3/8"
23	803372	#10-16 X 1/2" Screw CR Truss HD
	804789	Washer, Fiber
24	801541	8-18 X 1/2" Screw TYPE B H/W/HD

NOTE: Door and door components starting with serial number 17000000. See page 18 & 19 for door and door components prior to serial number 17000000.

36" Range Door View (Starting with Serial Number 17000000)

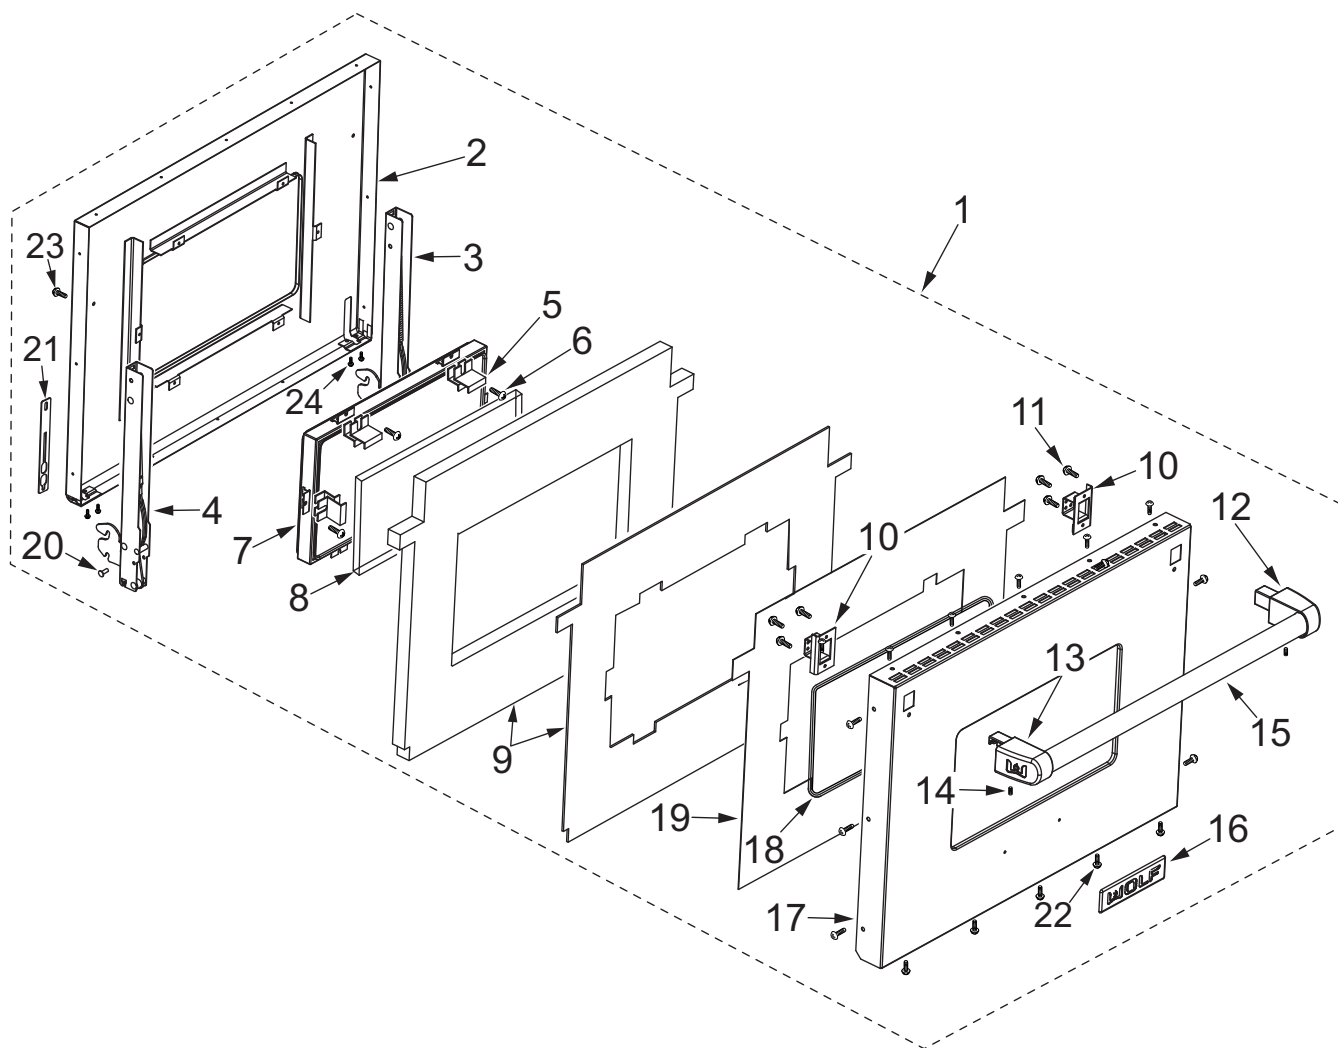

36" Range Dress Panels Parts List


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787306	Panel, Outer RH, SS 30/36" Range
	787308	Panel, Outer RH, Blk 30/36" Range
2	786714	Pan, Grease SS W/O Dimples
	801687	Pan, Grease W/Dimples
3	768259	Baffle, Roll Front 36" Range
4	811540	Roll Front
5	730228	Screw #10-24 x 1/2" Phillips
6	807587	Skirt, Front SS, 36" Range
	767668	Skirt, Front Black, 30" Range
7	809367	Panel, Lower Front, SS
	767645	Panel, Lower Front, Black 3
8	788028	Pan, Drip Assy. (See SN Breaks)
	801361	Drip Tray, 36" (See SN Breaks)
9	719711	Arm, Rocker RH
10	766547*	Bracket, Door Switch
	809377**	Bracket, Door Switch
11	804532*	Switch, Door Interlock
	809365**	Switch, Door Interlock
12	730228	Screw 10-24 X 1/2" Phillips Head
13	730535*	Nut, 6-32 Lock
14	730506*	Nut, Oversize
15	719331*	Bolt, Eye 1/4-20 x 3"
16	718361*	Spring, Door
17	768260*	Angle, Switch
18	719710*	Arm, Rocker, LH
19	719344*	Hook, "S", Oven Door
20	719350*	Pin, Clevis, 3/8 x 2"
21	730410*	Pin, Cotter, 3/32" x 1-1/4"
22	730310*	Washer
23	787307	Panel, Outer LH, SS 30/36" Range
	787309	Panel, Outer LH, Blk 30/36" Range
24	767622	Channel, Front, 36" Range
25	767623	Channel, Rear, 36" Range
26	714369	Bushing, Snap 1/2"
27	722270	Rivet, Pop 3/16"

Not Shown

811716	Slide, Drip Tray, Lh
811717	Slide, Drip Tray, Rh

* - Prior to Serial Number (PTS) 17000000
** - Starting with Serial Number (SWS) 17000000

36" Range Dress Panels View

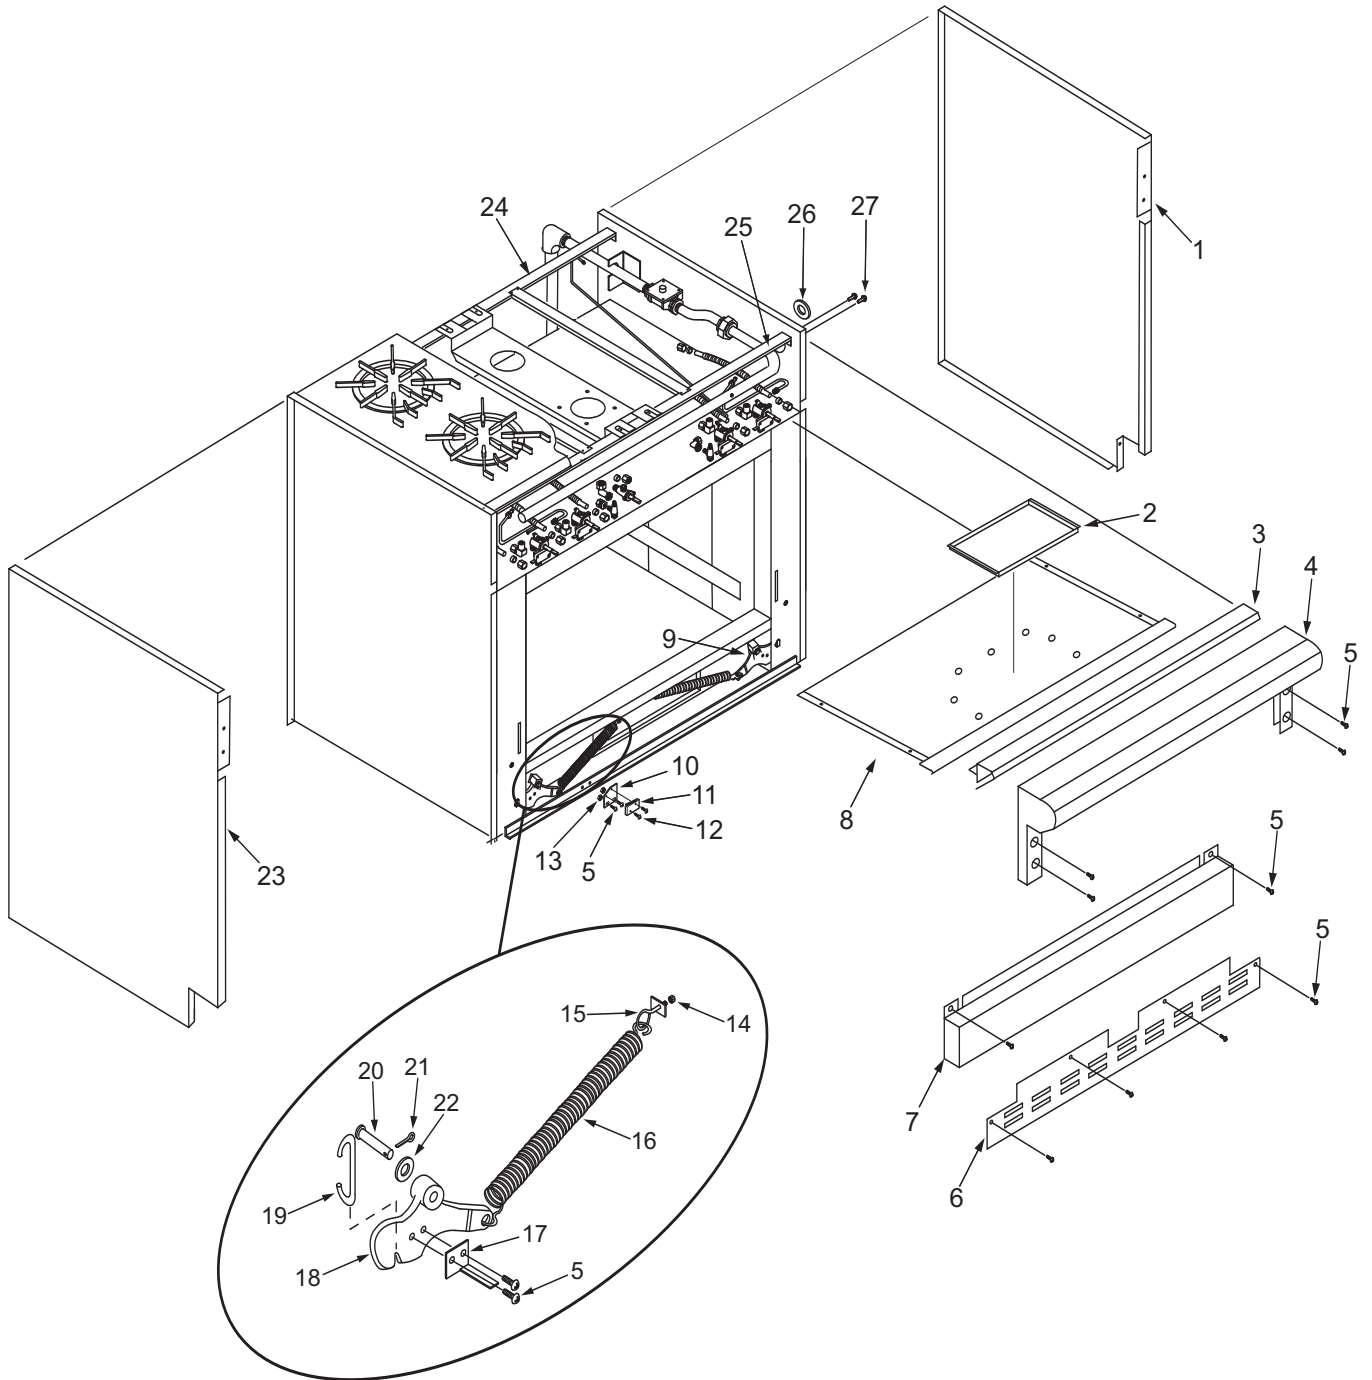

36" Range Top Parts List


Ref #	Part #	Description	Ref #	Part #	Description	
1	720829	Grate, Spider (See SN Breaks)	30	809183	Burner, Infrared Assy, Griddle/Char	
	811561	Grate, Spider (See SN Breaks)	31	800048	Orifice, IR Charbroiler, Natural Gas	
2	722421	Grate Foot Pad (See SN Breaks)		800050	Orifice, IR Charbroiler, LP Gas	
3	722422	Washer, Silicone, Spider Grate (See SN Breaks)	32	800258	Elbow, 3/8" x 3/8"	
			33	786978	Baffle, Burner Front	
4	800041	Burner, Inner Head, Black Enamel	34	810099	Spacer, IR Burner	
	720801	Burner, Inner Head, Plated	35	786029	Bracket, Sparker	
5	720887	Base, Inner Burner (See SN Breaks)	36	714415	Sparker	
	800044	Burner, Inner Base, Black Enamel (See SN Breaks)	37	801265	Single Griddle Cover Kit - 11" Griddle (See SN Breaks)	
				809311	Griddle Cover - 11" New Style Griddle	
6	720803	Burner, Outer (See SN Breaks)		801266	Double Griddle Cover Kit - 22" Griddle Old Style Griddle Cover & BackSplash (See SN Breaks)	
	801150	Cap, Burner, Outer Head, Black Enamel		809312	Griddle Cover - 22" New Style (See SN Breaks)	
7	720802	Ring, Cross (See SN Breaks)			Griddle Assembly, 11"	
	801151	Ring, Burner, Inner Base, Black Enamel	38	802508	Griddle Assembly, 22"	
8	803965	Burner Ring/Cap, Service Package		800067	Seal, Griddle, 20"	
9	766446	Top, Pressed Stl Porc (See SN Breaks)	39	800066	Seal, Griddle, 9"	
	805519	Top, Pressed Steel (See SN Breaks)	40	800048	Orifice, IR Charbroiler, Natural Gas	
			41	800050	Orifice, IR Charbroiler, LP Gas	
10	801149	Burner, Body Assy	42	786127	Baffle, Griddle	
11	806483	Service Components, Electrode	43	803168	Flex Tubing Service Package 3/8" x 18"	
12	722162	Screw, Phillips Head		44	770093	Valve, Solenoid (Coil Only)
13	807864	Holder, Jet Assembly		45	730229	Screw #10-24 x 1-1/2"
14	720886	Venturi		46	719376	Elbow, Brass 3/8"
15	730228	Screw #10-24 x 1/2"			719377	Fitting, Straight 3/8"
16	800882	Orifice, Inner Burner, Natural Gas	47	804404	Holder, Single Solenoid	
	800052	Orifice, Inner Burner, LP Gas			756302	Holder, Double Solenoid
17	720900	Fitting, Inner Orifice	48	803167	Flex Tubing Service Package 3/8" x 12"	
18	807598	Spring		49	807622	Valve, Single Solenoid, w/fittings
19	720822	Ring			807623	Valve, Double Solenoid, w/fittings
20	719566	Sleeve, 1/4" Fiberglass		50	804230	Grate, Wok, (See SN Breaks)
21	800872	Orifice, Outer Burner, Natural Gas		51	800146	S Grate, Rear (See SN Breaks)
	800051	Orifice, Outer Burner, LP Gas			804229	S Grate, Rear (See SN Breaks)
22	767615	Panel, Burner Support		52	800137	S Grate, Front (See SN Breaks)
23	809019	Burner Assembly - Also need to order # 806483			804228	S Grate, Front (See SN Breaks)
24	762215	Back Splash, Decorative		53	800010	S Grate Spacer (See SN Breaks)
25	759715	Cover, Charbroiler/Griddle, 11"		54	804711	Shield, Charbroiler Electrode
26	803581	Rack - Charbroiler Assy				
27	769593	Frame, Charbroiler				
28	722631	Screen, Reverberator				
29	762444	Plate, Blank Off				

Not Shown


722218	Hook, Porcelain Top Remover
767627	Spacer, Burner Support
807066	Shield, Rubber - Electrode

36" Range Top View



Surface Burner

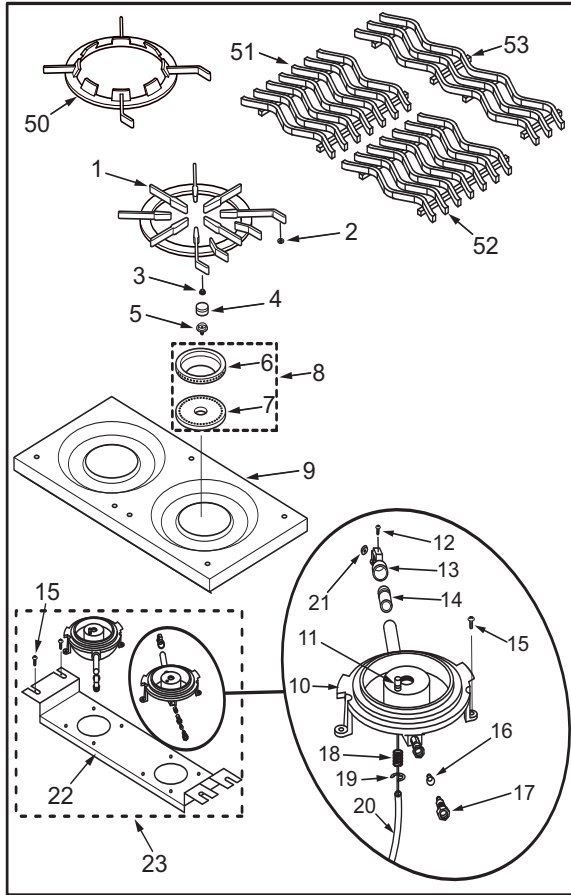

IR Charbroiler

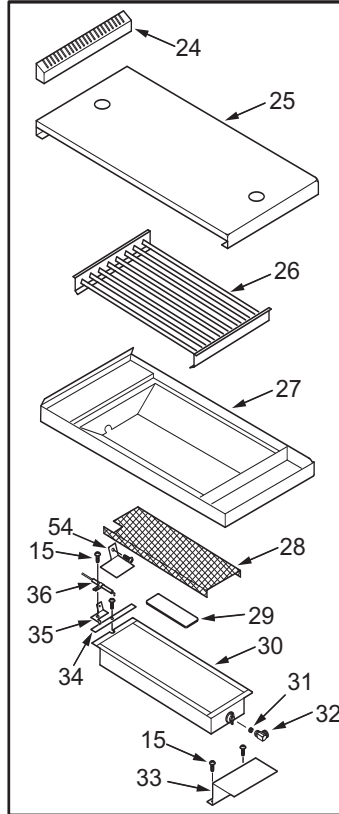

IR Griddle

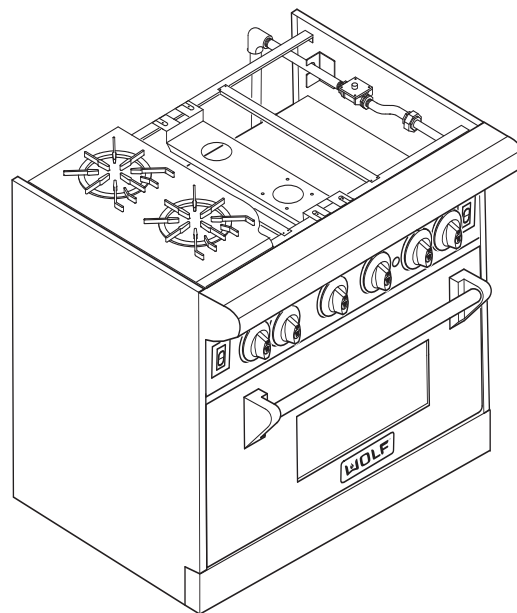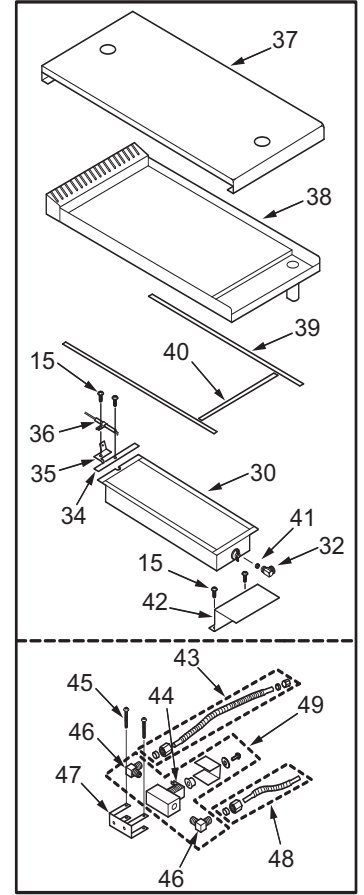

36" Range Front Panel Parts List


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>	<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	767670	Baffle, Broiler Range	19	801346	Bezel, Front (See SN Breaks)
2	722282	Seal, Door Top (See SN Break)	20	801347	Bezel, Rear (See SN Break)
	803810	Gasket, Door 36" (See SN Break)	21	720017	Light, Indicator, Red, Oven
3	720692	Seal, Door Side (See SN Break)	22	720816	Switch, Oven Light
	803810	Gasket, Door 36" (See SN Break)	23	722564	Shield, Switch Terminal
4	730513	Nut, Hex Head	24	715142	Terminal, Command Dummy
5	730311	Washer, Lock	25	730239	Screw #8-32 x 3/8"
6	718195*	Bolt, Trunion	26	722713	Label, Light Switch
	803579*	Bolt, Trunion, Offset	27	721017	Knob, Charbroiler Red (See SN Breaks)
	730310*	Washer, Trunion Shim			Knob, Char/French Top, Red (See SN Breaks)
7	722283	Seal, Door Bottom (See SN Break)		801306	Knob, Char/French Top, Black (See SN Breaks)
	803810	Gasket, Door 36" (See SN Break)		721018	Knob, Charboiler, Black (See SN Breaks)
8	730228	Screw #10-24 x 1/2"		801307	Knob, Char/French Top, Black (See SN Breaks)
9	721013	Leg, Range, 3"	28	767642	Panel, Front, R364C - Also need to order # 722712 and # 722713 (See SN Breaks)
10	803436	Caster, Dual Wheel, 2"		801079	Panel, Front, R364C (See SN Breaks) - Also need to order # 722712 and # 722713
11	714902	Thermostat, Oven	29	805787	Thermostat, Griddle
12	767656	Panel, Front, R366 (See SN Breaks) - Also need to order # 722712 and # 722713	30	767660	Panel, Front, R364G (See SN Breaks) - Also need to order # 722712 and # 722713
	801080	Panel, Front, R366 (See SN Breaks) - Also need to order # 722712 and # 722713		801081	Panel, Front, R364G (See SN Breaks) - Also need to order # 722712 and # 722713
13	722712	Label, Fan Switch	31	721014	Knob, Thermostat W/Griddle, Red (See SN Breaks)
14	720815	Switch, Oven Fan		801310	Knob, Griddle Thermostat, Red (See SN Breaks)
15	720879	Knob, Control, Red (See SN Breaks)		721015	Knob, Thermostat W/Griddle, Black (See SN Breaks)
	801312	Knob, Surface Burner Valve, Red (See SN Breaks)		801311	Knob, Griddle Thermostat, Black (See SN Breaks)
	720880	Knob, Control, Black (See SN Breaks)			
	801313	Knob, Surface Burner Valve, Red (See SN Breaks)			
16	718146	Bezel, Thermostat (See SN Breaks)			
	801348	Bezel, w/Tick Mark (See SN Breaks)			
17	720818	Knob, Oven Thermostat, Red (See SN Breaks)			
	801308	Knob, Oven Therm, W/Broil, Red (See SN Breaks)			
	720819	Knob, Oven Thermostat, Black (See SN Breaks)			
	801309	Knob, Oven Therm, W/Broil, Black (See SN Breaks)			
18	730076	Screw #6-32 x 1/4"			

* - Prior to Serial Number (PTS) 17000000
 ** - Starting with Serial Number (SWS) 17000000

Not Shown

803239 Wrench, Caster Adjusting

36" Range Front Panel View

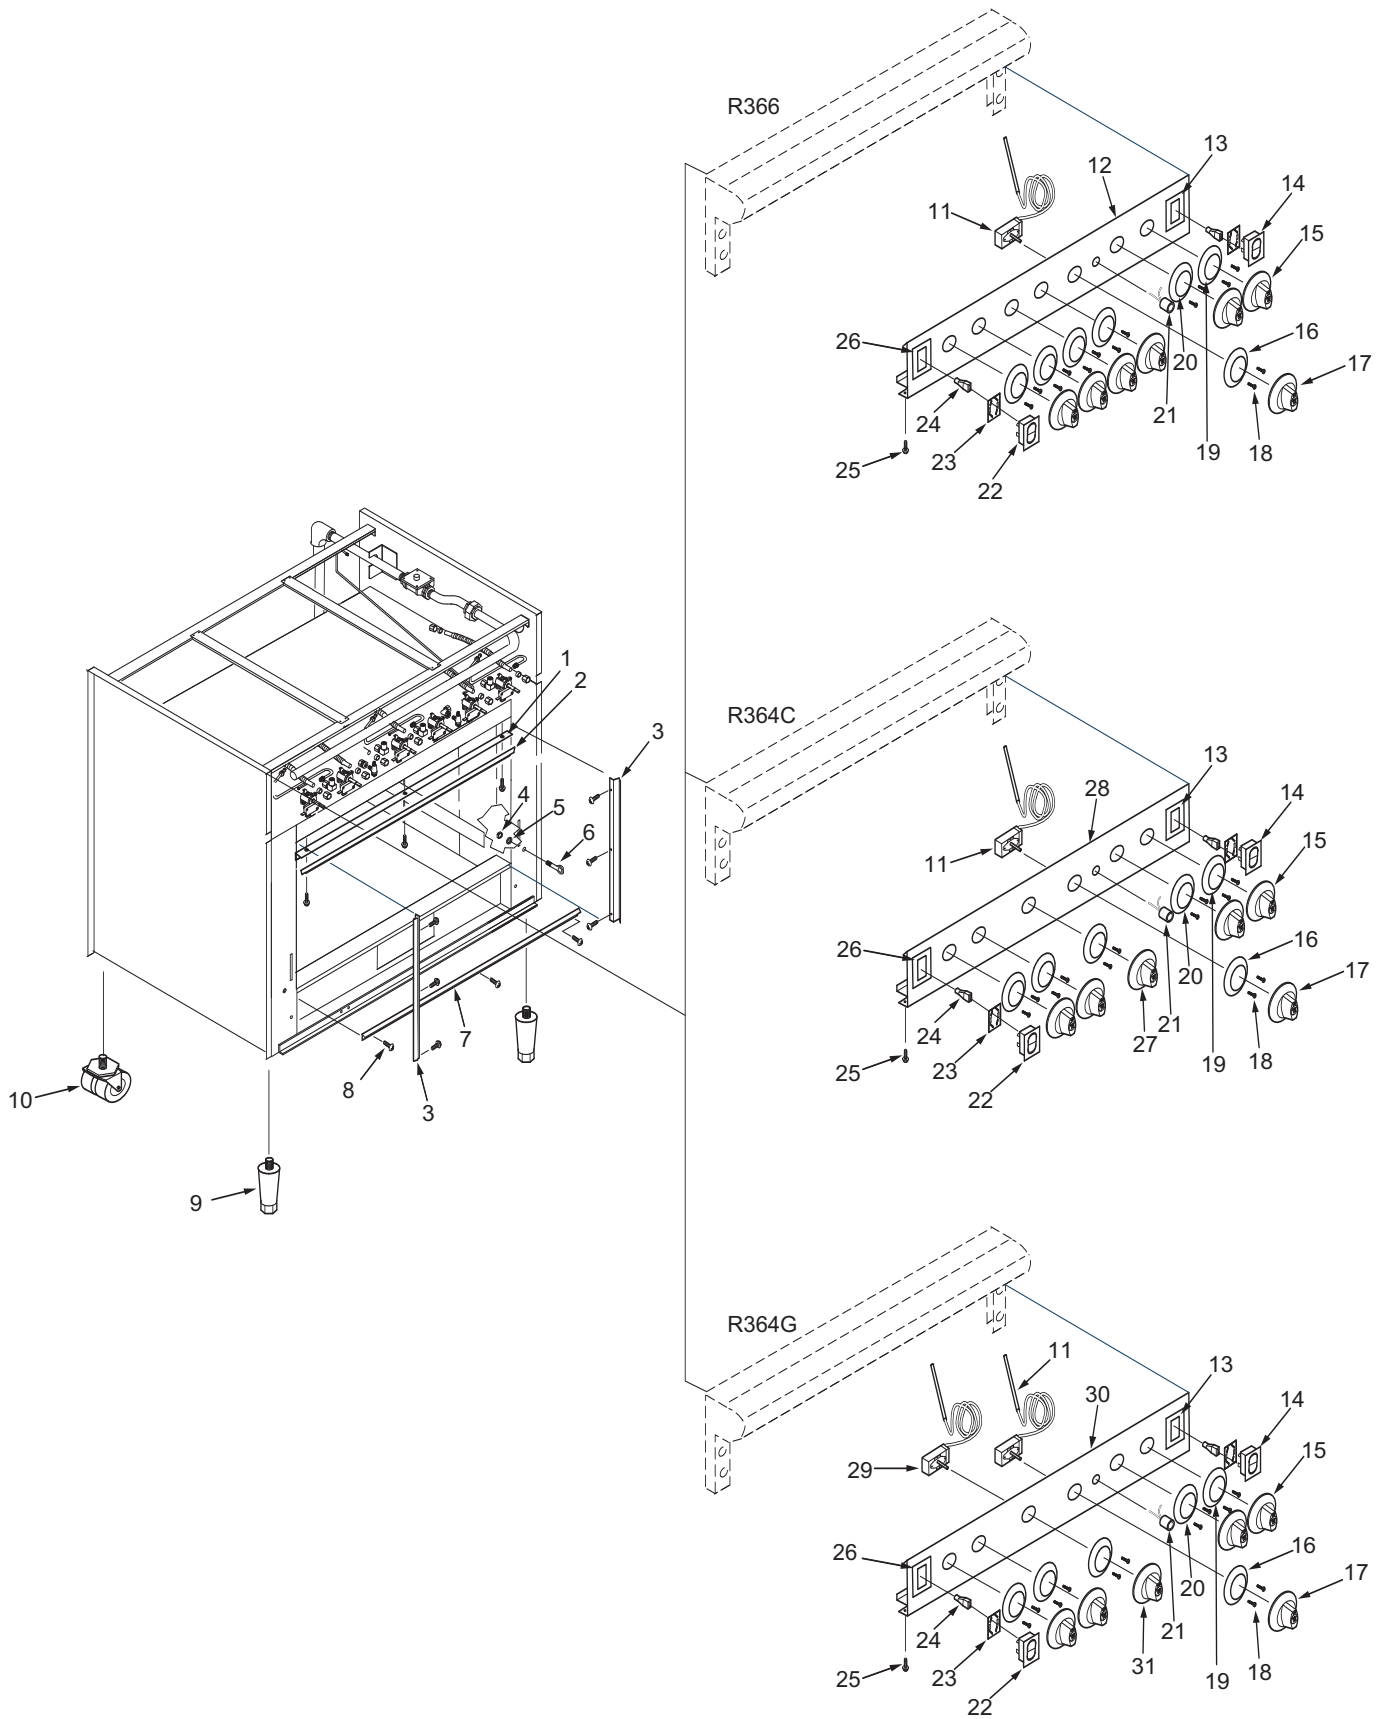


36" Range Manifold Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	803171	Flex Tubing Service Package 5/16" x 14"
2	807667	Ferrule, Sleeve Brass
3	807677	Nut, Compress Brass
4	801937	Flex Tubing Service Package 3/16 x 27"
5	803172	Flex Tubing Service Package 3/8" x 42"
6	714361	Connector, 3/8"
7	722133	Screw, Hex Head
8	720885	Bracket, Valve Mounting
9	807665	Ferrule, 3/16"
10	720888	Fitting, 3/16"
11	723350	Regulator,, Pressure Convertible 3/4"
	801358	Regulator, 1/2" Convertible
12	722832	Pipe, Offset
13	719033	Union, 1/2" Black
14	804418	Manifold (R366)
15	719370	Plug, Hex Head, 1/8"
16	801936	Flex Tubing Service Package 3/16" x 16"
17	800892	Orifice, Bypass Inner, Natural Gas
	800055	Orifice, Bypass Inner, LP Gas
18	800884	Orifice, Bypass Outer, Natural Gas
	800054	Orifice, Bypass Outer, LP Gas
19	809153	Burner Valve & Switch Assy, Nat
	809154	Valve, Burner, LP Gas
20	807141	Valve, Switch
21	803169	Flex Tubing Service Package 3/8" x 48"
22	719393	Elbow, Brass, 3/8"
23	720330	Valve, Shut Off, Oven
24	722278	Elbow, Adapter, Compression
25	807668	Ferrule, 3/16"
26	807678	Nut, 3/8"
27	803167	Flex Tubing Service Package 3/8" x 12"
28	722413	Valve, Brass
29	713810	Switch, Valve Ignition
30	804418	Manifold (R366)
	805655	Manifold (R364C)
	805654	Manifold R364G)
31	714296	Tee
32	803168	Flex Tubing Service Package 3/8" x 18"
33	786977	Shield, Corner Wire

Not Shown

806378	Wiring Harness, Manifold, R366
806379	Wiring Harness, Rear, R366
806380	Wiring Harness, Manifold, R34C
806381	Wiring Harness, Rear, R34C
806382	Wiring Harness, Manifold, R364G
810524	Wiring Harness, Rear, R364G
810522	Harness Rpl Component, R366
810523	Harness Rpl Component, R364C
810524	Harness Rpl Component, R364G


36" Range Manifold View

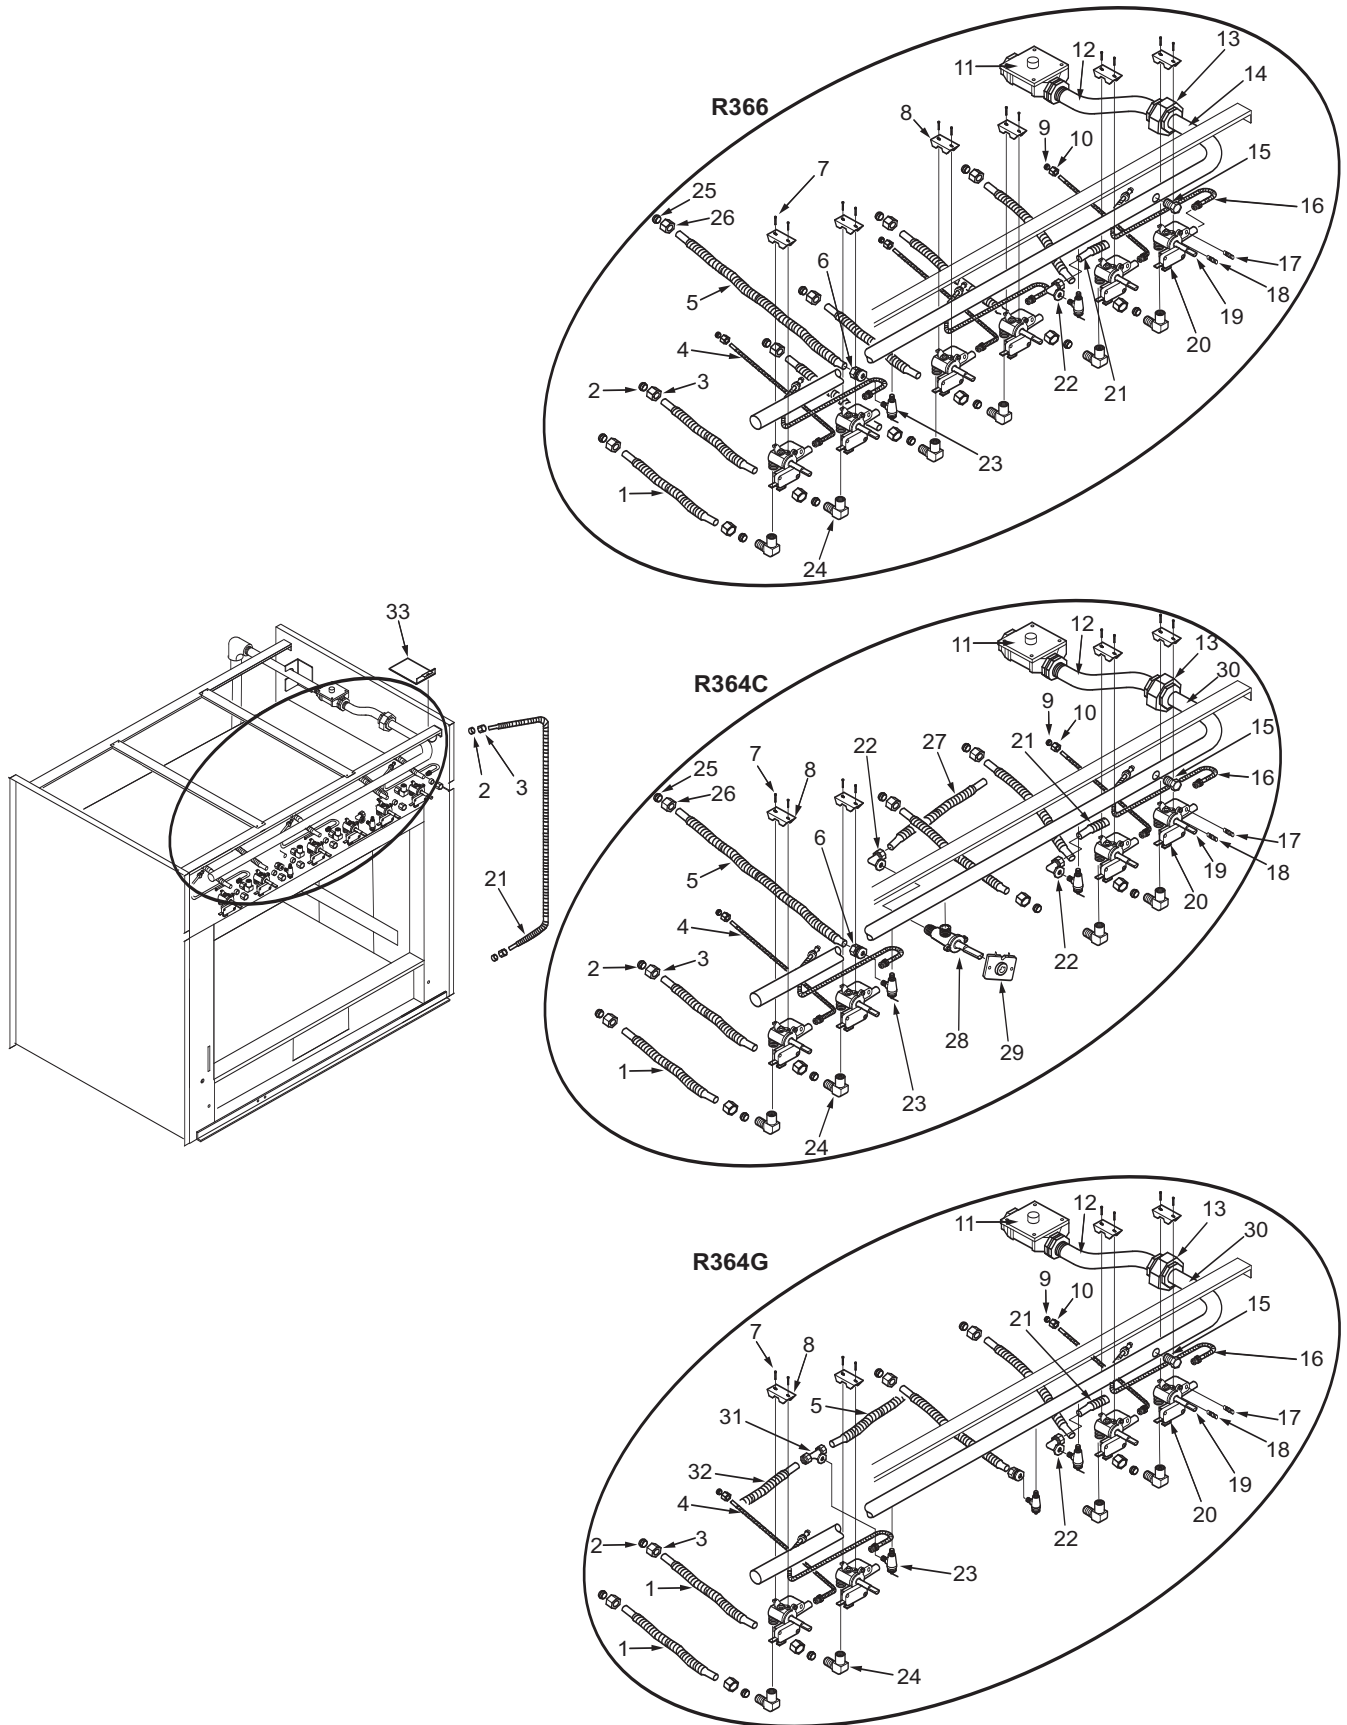

36" Range Oven Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	809157	Burner, Infrared Oven
2	801686	Bracket, Burner Left/Right
3	766592	Bracket, Burner Front/Rear
4	730228	Screw, #10-24 x 1/2"
5	766499	Bracket, Igniter, IR Range
6	723060	Igniter, Hot Surface
7	801690	Cover, Igniter Shield, Range
8	730230	Screw #8-32 x 3/8"
9	806873	Thermo Bulb Housing Assembly
10	806873	Thermo Bulb Housing Assembly
11	800120	Oven Deflector Rest
12	718601	Igniter, Norton
13	720696	Lamp, Oven Assembly
14	342766	Lamp, Oven 40w, 120v
15	720830	Lens
16	715221	Motor, Fan Oven
17	766451	Plug, Motor Mount
18	800628	Blade, Convection Fan
19	730229	Screw, #10-24 x 1-1/2"
20	766456	Cover, Blower Oven
21	720841	Rack, Oven 36" Range
22	809669	Grill, Broiler Pan
23	766420	Deflector, Oven Bottom Range
24	767626	Panel, Oven Bottom 36" (See SN Break)
	803544	Panel, Oven Bottom 36" (See SN Break)
25	720682	Rack, Guide
26	719393	Elbow, Brass 3/8"
27	812107	Valve, Oven Safety Single Hole
28	803166	Flex Tubing Service Package 3/8" x 6"
29	719385	Orifice Holder
30	800071	Orifice, Lg Oven, Natural Gas, #36
	803882	Orifice, Lg Oven, LP, 1.65 Mm
31	807734	Orifice Bracket, Range
32	807861	Baffle, Lower Front
33	803973	Heatsink
34	803814	Burner Tube, Oven (See SN Break)
	807729	Buner Tube, Bake (See SN Break)
35	766546	Baffle, Flue Range
36	809668	Pan, Broiler

36" Range Oven View

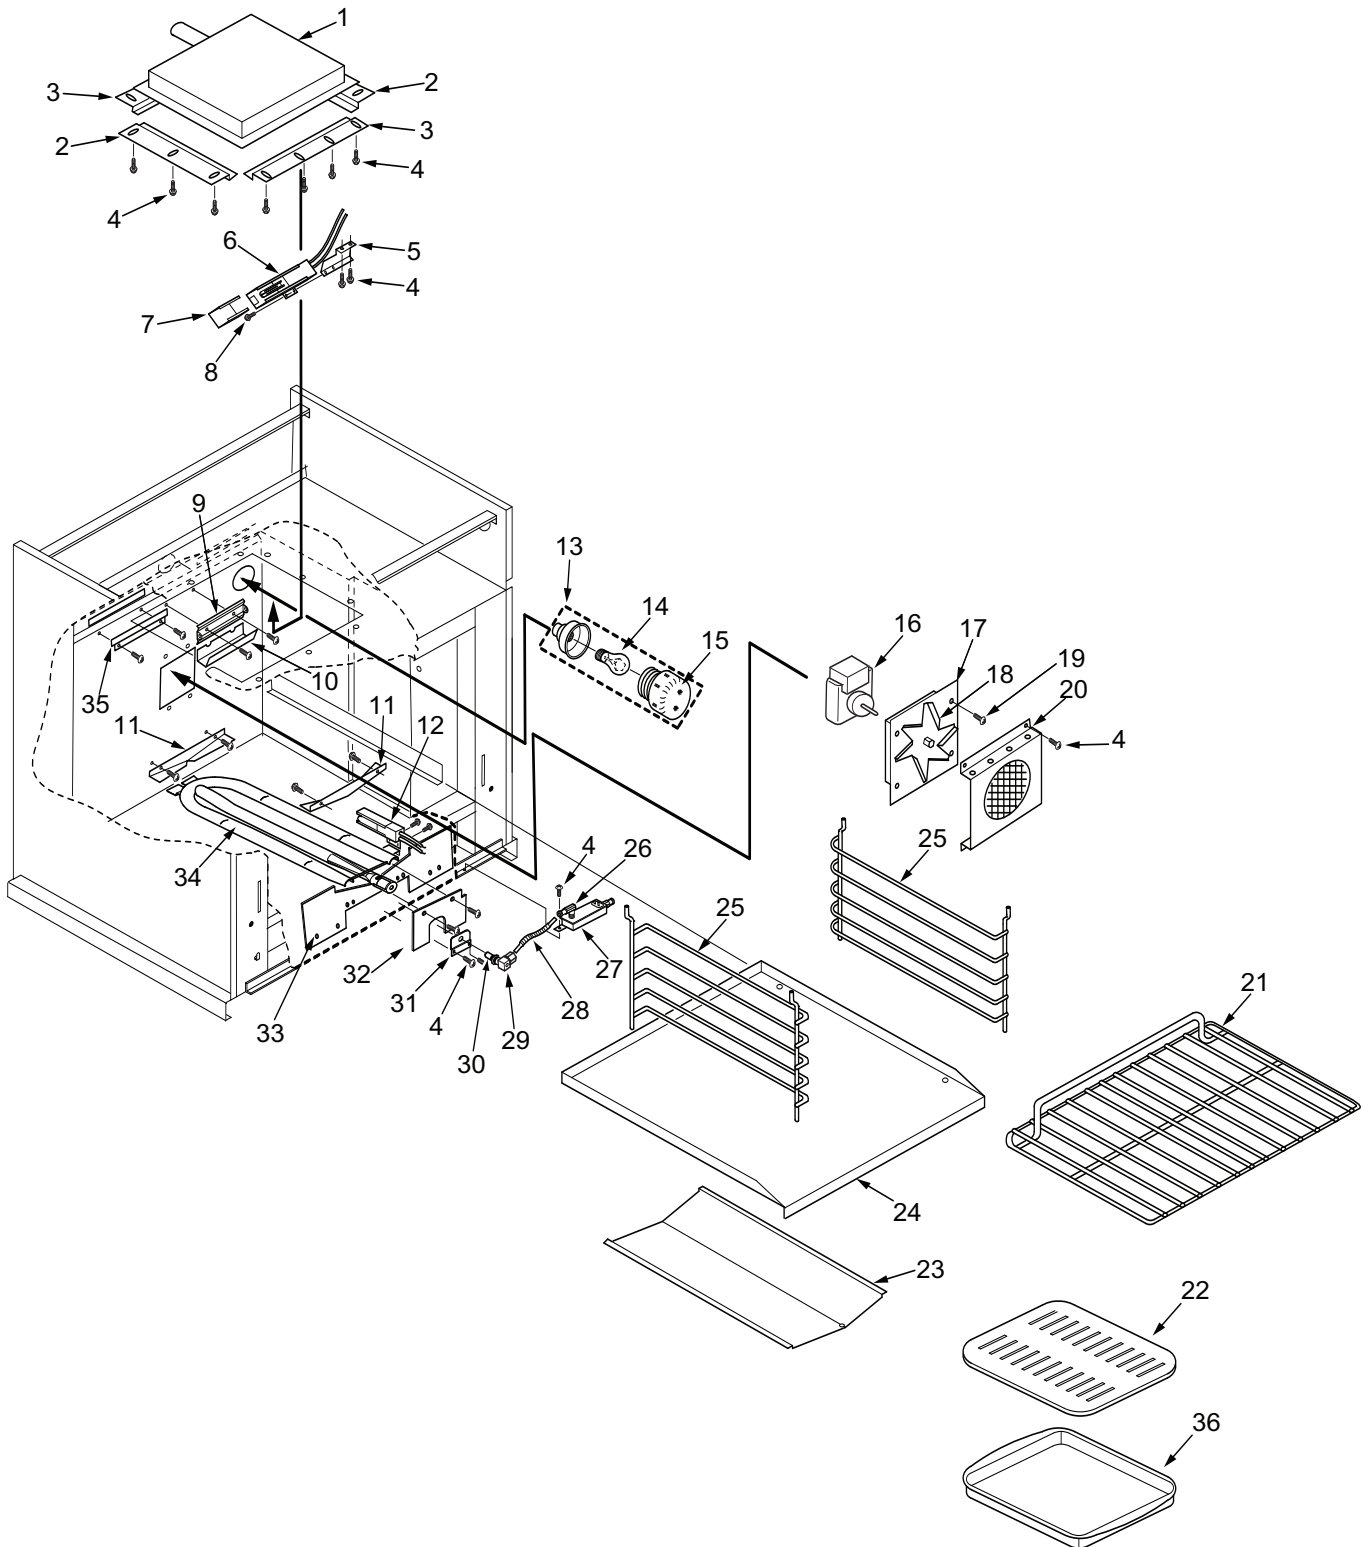


36" Range Rear Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	809243	Cord, Power
2	719393	Elbow, 3/8" x 3/8"
3	730230	Screw #8-32 x 3/8"
4	807668	Ferrule, Sleeve 3/8"
5	807678	Nut, Compress
6	803166	Flex Tubing Service Package 3/8" x 6"
7	812106	Valve, Broiler Safety
8	766542	Bracket, Safety Valve-Relay
9	714345	Bushing, Snap
10	786776	Box, Flue Assembly
11	730228	Screw #10-24 x 1/2" Phillips
12	786835	Box, Flue Center Assembly
13	730239	Screw #8 x 3/8"
14	722383	Relay, Fan
15	809416	Module, Spark 6 Point
16	811868	Panel, Module Range
17	800246	Washer, Flat, Teflon
18	766482	Cover, Blower Motor, Range
19	766593	Angle, Wall Brace
20	766458	Brace, Rear Bottom
21	719502	Box, Electrical
22	719503	Plate, Face Electrical Box
23	713813	Connector, 3/8", Power Cord
24	801457	Elbow, 1/2" x 1/2"
25	801456	Nipple, 1/2" x 22 3/4"
26	786768	Bracket, Manifold Support
27	801459	Nipple, 1/2" x 3-1/2"
28	721030	Gasket, Red Rubber
29	722278	Elbow, Adapter Compression
30	800259	Orifice, W/ELB Broil Natural (Stamp #48)
	800057	Orifice, IR Broil (LP) 1.181MM (Stamp #56)

Not Shown

800247 Silicone, Red High Temp.

36" Range Rear View

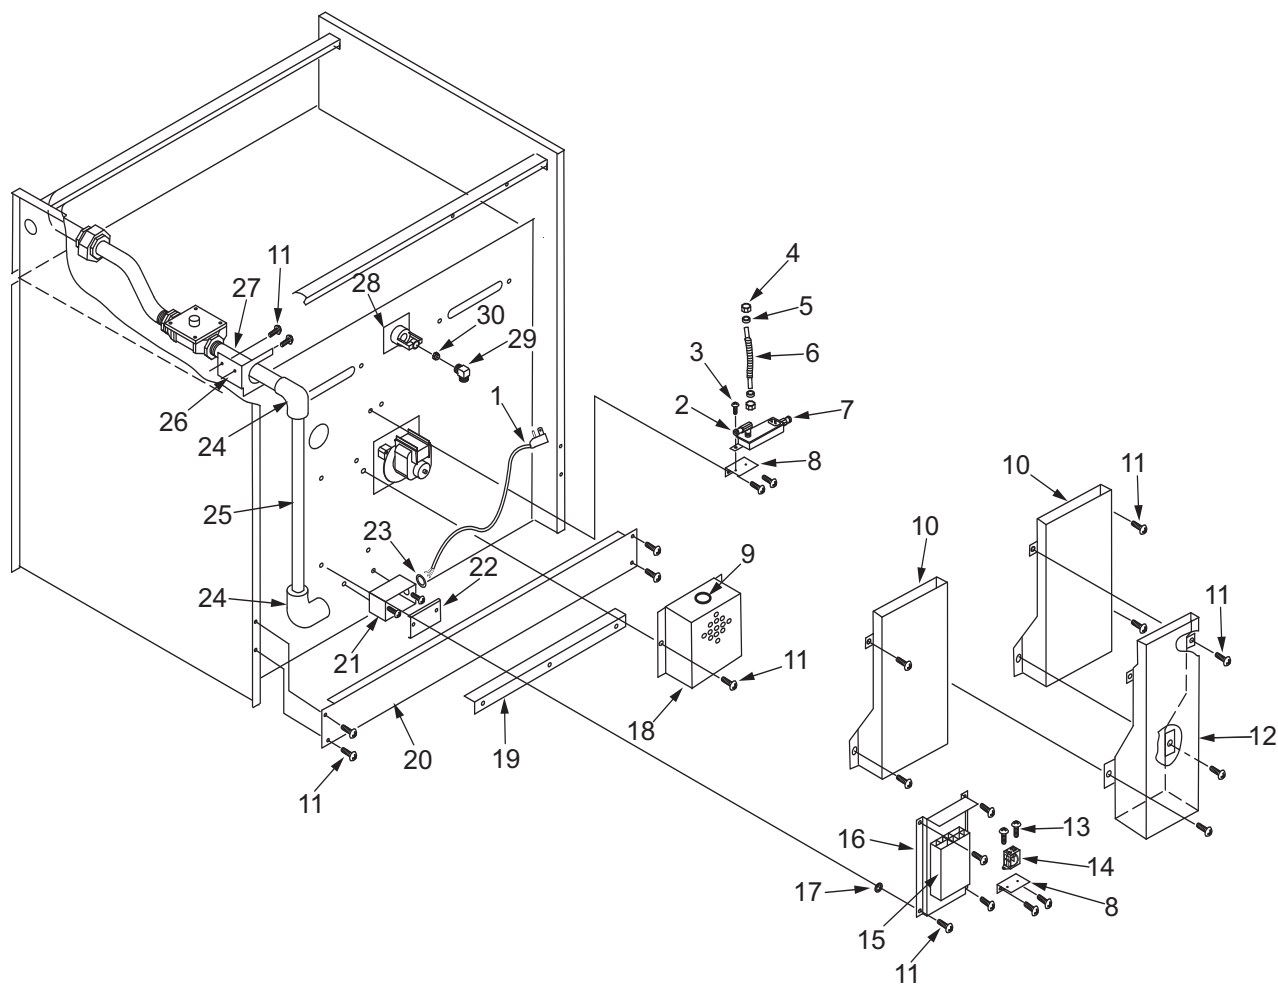

48" Range Door and Riser Parts List


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>	<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787626	Strip, Filler (Island Trim)	20	719628	Bracket, Belly Bar RH
2	722791	Handle, 18" Oven Door	21	719627	Bracket, Belly Bar LH
3	722862	Trim, J Oven Door, Small	22	720770	Handle, Oven Door, 30" Range
4	803864	Spacer, Door 18" Range	23	800925	Logo, Wolf New
5	*Special Order	Order, Call Factory Parts Department, Door, Oven, Assy. 18	24	730509	Clip, Tinnerman
6	809814	Panel, Back 48" Range	25	730335	Washer, Lock #10
7	730228	Screw, #10-24 x 1/2"	26	730028	Screw, #10-24 x 1"
8	769576	Liner, Door Assy 30"	27	722424	Trim, J Oven Window Lg.
	802809	Liner, Door Assy 30" (See SN Breaks)	28	803863	Spacer, Door, 30" Range
9	720814	Window, Oven Door Lg.	29	714589	Ring, Retaining
10	723296	Clip, Oven Glass Retainer	30	719287	Pin, Door Hinge
11	722328	Glass, Oven Door	31	802808	Hinge, Door Stiffener Support Assy, Lh
12	800635	30" Door Insulation	32	*Special Order	Order, Call Factory Parts Department Door, Oven, Assy. 30"
13	766374	Hinge, Door Stiffener Support Assy, Rh	33	786644	Liner, Door Assy, 18" Range (See SN Breaks)
	802807	Hinge, Door Stiffener Support Assy, Rh		802810	Liner, Door Assy, 18" Range (See SN Breaks)
14	800636	36" Door Insulation	34	722774	Window, Oven Door, Small
15	730141	Screw, 1/4-20" x 1/2"	35	722859	Glass Oven Door, Small
16	730308	Washer, Lock 1/4	36	800634	18" Door Insulation
17	787592	Channel Door Spacer	37	800634	18" Door Insulation
18	730239	Screw, #8 x 3/8"	38	786643	Skin, Door S/S, 18" Range
19	769565	Skin, Door SS, 30" Range (See SN Breaks)		786642	Skin, Black Door, 18" Range
	800983	Skin, Door SS, 30" Range (See SN Breaks)	39	722791	Handle, 18" Oven Door
	769564	Skin, Door Black, 30" Range	40	722862	Trim, J Oven Door, Small
			41	803864	Spacer, Door 18" Range
			42	*Special Order	Order, Call Factory Parts Department, Door, Oven, Assy. 18

NOTE: Door and door components prior to serial number 17000000. See page 36 & 37 for door and door components starting with serial number 17000000.

Not Shown

806663 Riser 5-R48
 800017 Riser 10-R48
 800021 Riser 20-R48

48" Range Door and Riser View

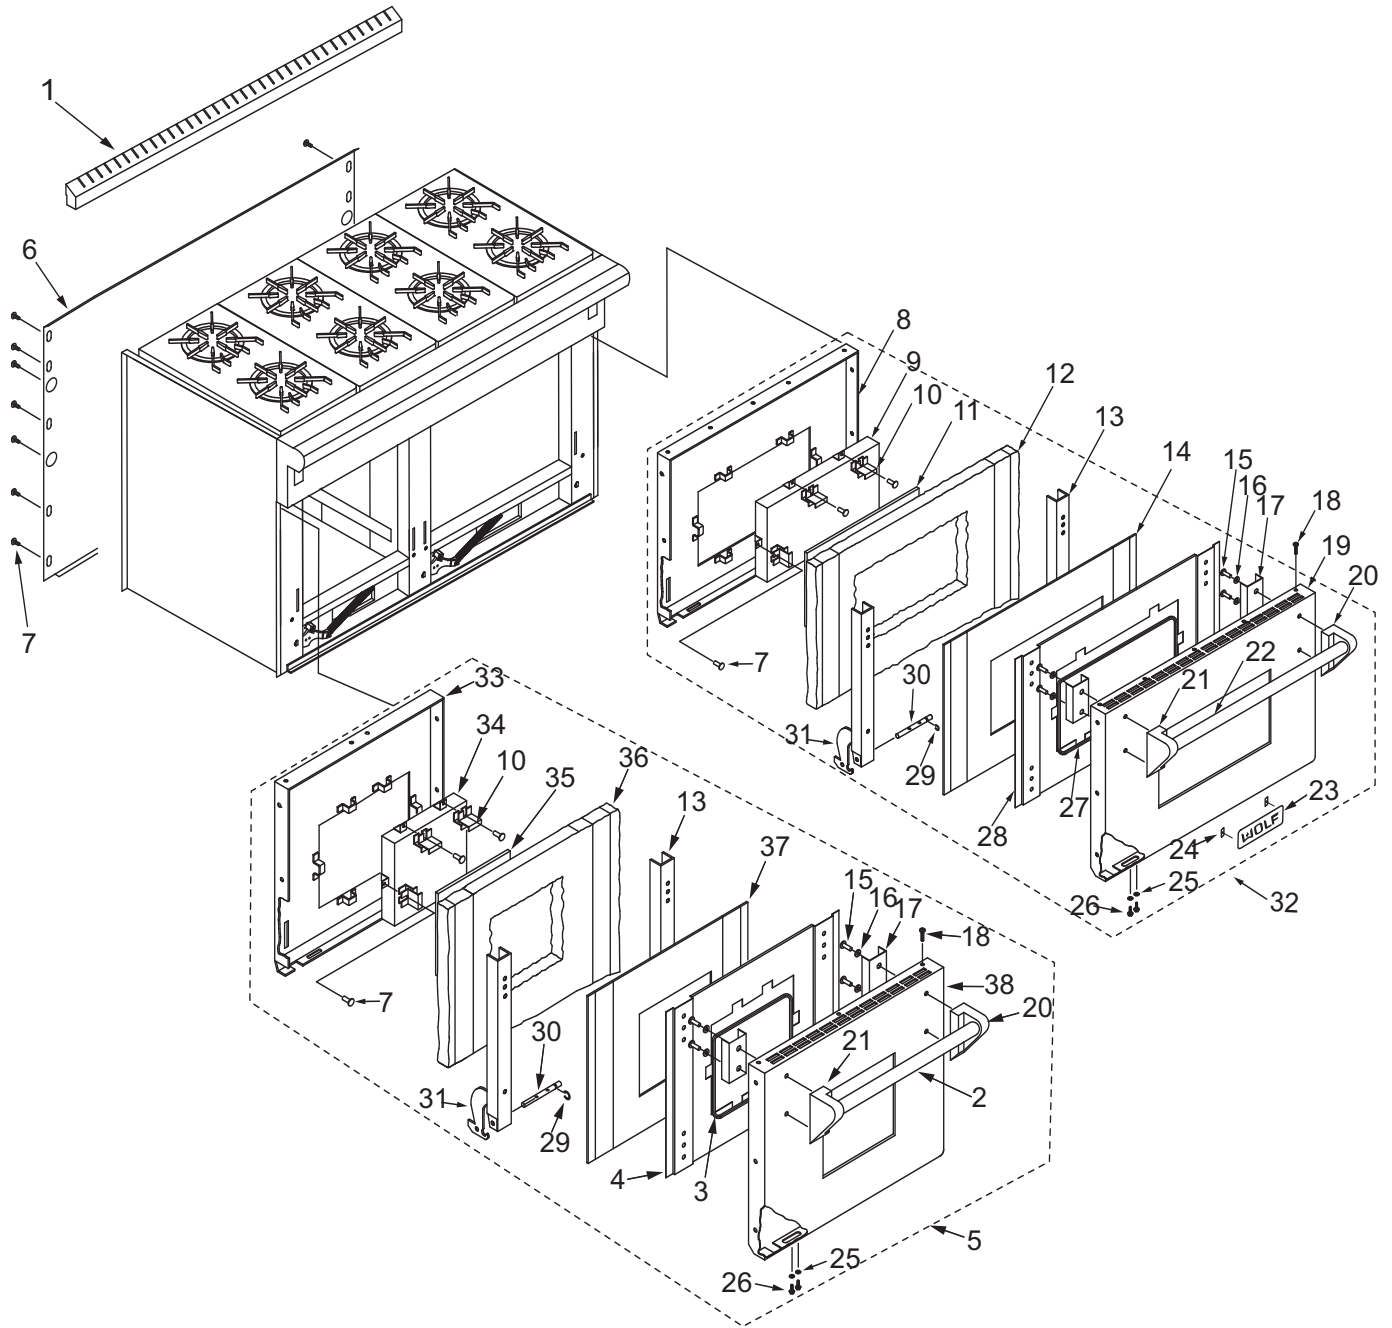


48" Range Door Parts List (Starting with Serial Number 17000000)

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1		*Special Order, Call Factory Parts Department Door, Oven Assy, 30" Door Assy. SS
2	809654	Liner, 30" Door-Range, SVCE
3	809637	Hinge Hydraulic, SVCE
4	809638	Hinge, Spring, 18", SVCE
5	809667	Clip, Oven Glass Retainer, SVCE
6	730228	Screw, #10-24 x 1/2"
7	809651	Window, Oven Door Large, SVCE
8	809664	Glass, Oven Door, Large, SVCE
9	809653	Insulation, Blkt, 30", SVCE
10	809639	Bracket Assy, End Cap, Range, SVCE
11	730141	Screw, 1/4-20" x 1/2"
12	809640	Handle End Cap, Right, SVCE
13	809641	Handle End Cap, Left, SVCE
14	804396	8-32x .375 Set Screw
15	809650	Handle Bar, 30", SVCE
16	800925	Logo, Wolf, Large
17	809647	Door, Skin - 30" Logo Assy, SVCE
18	809663	J-Trim, Oven Window Lg, SVCE
19	809652	Baffle, 30" Door - Range SVCE
20	803273	Pin, Pilot
21	809373	Retainer, Hinge, SVCE
22	730239	Screw, #8x3/8"
23	803372	#10-16 X 1/2" Screw CR Truss HD
	804789	Washer, Fiber
24	801541	8-18 X 1/2" Screw TYPE B H/W/HD
25	809646	Liner, 18" Door-Range, SVCE
26	809643	Window, Oven Door, Small
27	809666	Glass Oven Door, Small
28	809645	Insulation, Blkt, 18", SVCE
29	809644	Baffle, 18" Door - Range SVCE
30	809636	Skin, 18" Door-Range, SVCE
31	809642	Handle Bar, 18"
32		*Special Order, Call Factory Parts Department 18" Door Assy. SS

NOTE: Door and door components starting with serial number 17000000. See page 34 & 35 for door and door components prior to serial number 17000000.

48" Range Door View (Starting with Serial Number 17000000)

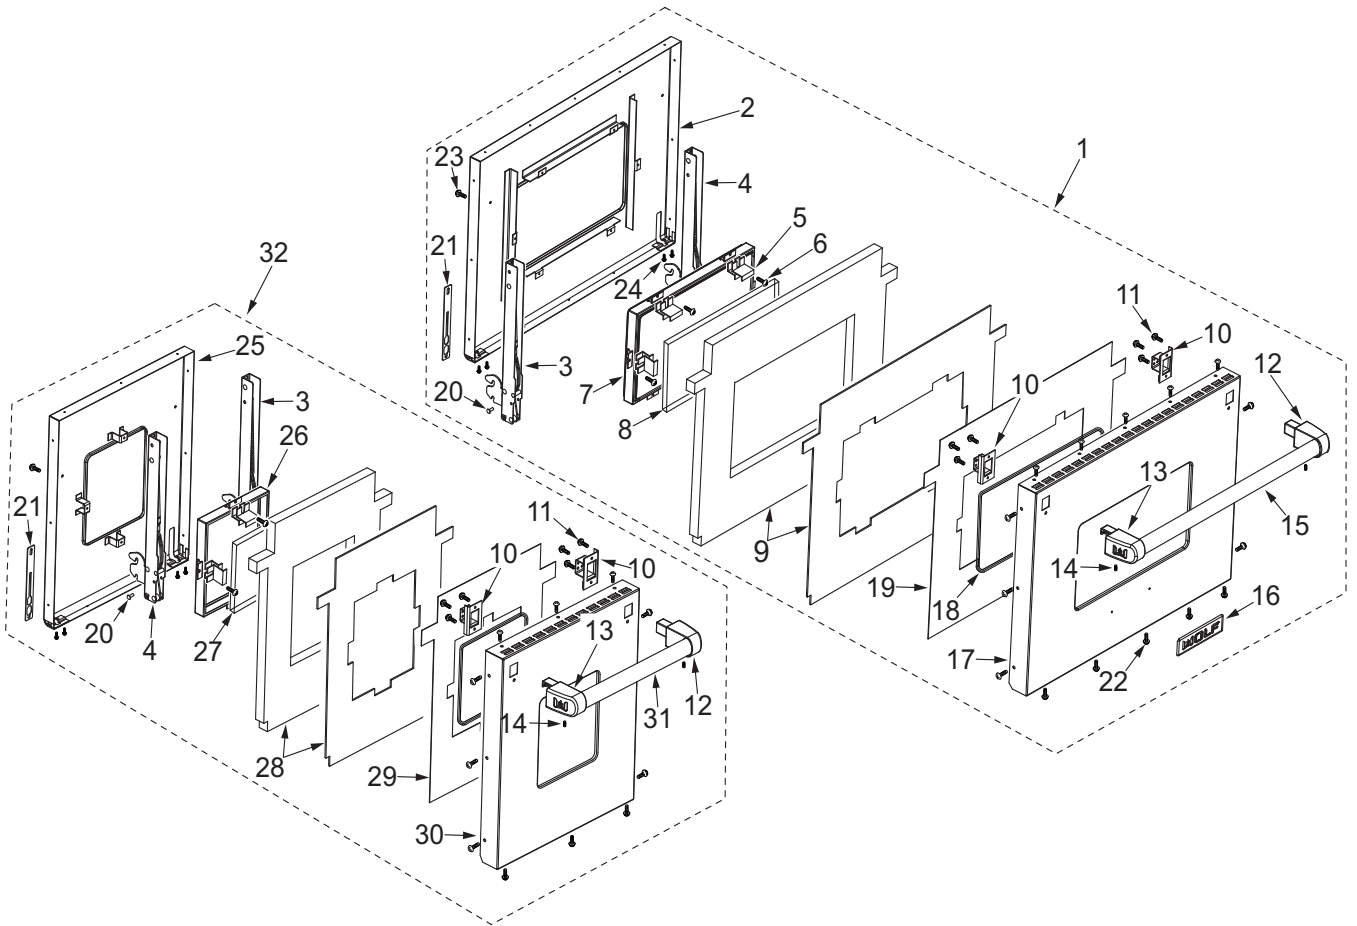

48" Range Dress Panels Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	786493	Channel, Rear, 48" Range
2	786492	Channel, Front, 48" Range
3	714369	Bushing, Snap 1/2"
4	722270	Rivet, Pop 3/16"
5	787310	Panel, Outer RH, SS 48" Range (See SN Breaks)
	801569	Panel, Outer RH, SS 48" Range (See SN Breaks)
6	786714	Pan, Grease SS (12-3/8" X 7") (See SN Breaks)
	801687	Tray, Grease Range (With dimples, 11-1/2" X 9-1/2") (See SN Breaks)
7	787578	Pan, Drip Assembly (See SN Breaks)
	801362	Drip Tray Assembly (See SN Breaks)
8	786654	Baffle, Roll Front 48" Range
9	730228	Screw #10-24 x 1/2" Phillips
10	807588	Skirt, Front SS, 48" Range
11	809368	Panel, Lower Front, SS 48" Range
12	811541	Roll Front
13	730228	Screw 10-24 X 1/2" Phillips Head
14	804532*	Switch, Door Interlock
	809365**	Switch, Door Interlock
15	766547*	Bracket, Door Switch
	809377**	Bracket, Door Switch
16	730535*	Nut, 6-32 Lock
17	719331*	Bolt, Eye 1/4-20 x 3"
18	730506*	Nut, Oversize
19	718361*	Spring, Door
20	768260*	Angle, Switch
21	719710*	Arm, Rocker, LH
22	719344*	Hook, "S", Oven Door
23	719350*	Pin, Clevis, 3/8 x 2"
24	730410*	Pin, Cotter, 3/32 x 1-1/4"
25	730310*	Washer
26	787311	Panel, Outer LH, SS 48" Range (See SN Breaks)
	801570	Panel, Outer LH, SS 48" Range (See SN Breaks)
27	769579	Shield, Inner T-stat, 36" Range
28	801680	Support, Channel Front
		<u>Not Shown</u>
	811716	Slide, Drip Tray, Lh
	811717	Slide, Drip Tray, Rh

<p>* - Prior to Serial Number (PTS) 17000000 ** - Starting with Serial Number (SWS) 17000000</p>

48" Range Top Parts List


Ref #	Part #	Description	Ref #	Part #	Description
1	801669	Grate, Wok (See SN Breaks)	36	786978	Baffle, Charbroiler
	804230	Grate, Wok (See SN Breaks)	37	810099	Spacer, IR Burner
2	800146	S Grate, Rear (See SN Breaks)	38	786029	Bracket, Sparker
	804229	S Grate, Rear (See SN Breaks)	39	714415	Sparker
3	800137	S Grate, Front (See SN Breaks)	40	804711	Shield, Charbroiler Electrode
	804228	S Grate, Front (See SN Breaks)	41	801265	Single Griddle Cover Kit - 11"
4	720829	Grate, Spider (See SN Breaks)			Griddle (See SN Breaks)
	811561	Grate, Spider (See SN Breaks)		809311	Griddle Cover - 11" New Style
5	722421	Grate Foot Pad (See SN Breaks)			Griddle (See SN Breaks)
6	722422	Washer, Silicone, Spider Grate (See SN Breaks)		801266	Double Griddle Cover Kit - 22"
7	720801	Burner, Inner Head, Plated			Griddle Old Style Griddle Cover & BackSplash (See SN Breaks)
	800041	Burner, Inner Head, Black Enamel		809312	Griddle Cover - 22" New Style (See SN Breaks)
8	720887	Base, Inner Burner			
	800044	Burner, Inner Base, Black Enamel	42	802508	Griddle Assembly, 11"
9	720803	Burner, Outer (See SN Breaks)		802509	Griddle Assembly, 22"
	801150	Cap, burner, Outer Head, Black Enamel	43	800067	Seal, Griddle, 20"
			44	800066	Seal, Griddle, 9"
10	720802	Ring, Cross (See SN Breaks)	45	800048	Orifice, IR Charbroiler, Natural Gas
	801151	Ring, Burner, Inner Base, Black Enamel		800050	Orifice, IR Charbroiler, LP Gas
11	803965	Burner Ring/Cap, Service Package	46	786127	Baffle, Griddle
12	766446	Top, Pressed Steel, Porcelain (See SN Breaks)	47	803168	Flex Tubing Service Package 3/8" x 18"
	805519	Top, Pressed Steel, (See SN Breaks)	48	770093	Solenoid, (Coil Only)
			49	730229	Screw #10-24 x 1-1/2"
13	722162	Screw, Phillips Head	50	719376	Elbow, Brass 3/8"
14	807864	Holder, Jet Assembly		719377	Fitting, Straight 3/8"
15	720886	Venturi	51	804404	Holder, Single Solenoid
16	730228	Screw #10-24 x 1/2"		756302	Holder, Double Solenoid
17	800882	Orifice, Inner Burner, Natural Gas	52	803167	Flex Tubing Service Package 3/8" x 12"
	800052	Orifice, Inner Burner, LP Gas	53	807622	Valve, Single Solenoid, w/fittings
18	720900	Fitting, Inner Orifice		807623	Valve, Double Solenoid, w/fittings
19	719566	Sleeve, 1/4" Fiberglass	54	803374	Vent, Frenchtop
20	720822	Ring	55	786718	Spacer, Rear
21	807598	Spring	56	NLA	Ring, Center French Top
22	801149	Base, Burner	57	NLA	Ring, Inner French Top
23	806483	Service Components, Electrode	58	NLA	Ring, Outer French Top
24	800872	Orifice, Outer Burner, Natural Gas	59	NLA	Plate, French Top
	800051	Orifice, Outer Burner, LP Gas	60	806466	Components, Frenchtop
25	767615	Panel, Burner Support	61	805658	Spacer, Front - FT Cover
26	809019	Burner Assembly - Also need to order 806483	62	786727	Ring, Flame
			63	723063	Burner Head
27	762215	Backsplash, Decorative	64	722521	Venturi, Gas Hotplate
28	759715	Cover, Charbroiler 11"	65	722536	Burner Base
	(Order 2 for Double Charbroiler 22")		66	723011	Electrode, French Top
29	786081	Rack, Charbroiler	67	786716	Pan, Burner
30	769593	Frame, Charbroiler	68	809880	Baffle, Pan French Top
31	722631	Screen, Reverberator	69	723010	Clip, Retaining
32	762444	Plate, Blank Off	70	722522	Nut, Hotplate
33	809183	Burner, Infrared Assy, Griddle/Charb	71	800062	Electrode Wire
			72	800060	Orifice, French Top Natural Gas
34	800048	Orifice, IR Charbroiler, Natural Gas		800061	Orifice, French Top LP Gas
	800050	orifice, IR Carbroiler, LP Gas	73	722530	Holder, Jet Gas
35	800258	Elbow	74	803170	Flex Tubing Service Package 1/4" x 12"
36	786978	Baffle, Charbroiler			

Not Shown


805637	Cover, Frenchtop Assy-Pro Series
787520	Hook, Center Plate French Top
722218	Hook, Porcelain Top Remover
767627	Spacer, Burner Support
722537	Seal, O-Ring Gas Hotplate (FT)
807066	Shield, Rubber - Electrode

48" Range Top View


Surface Burner

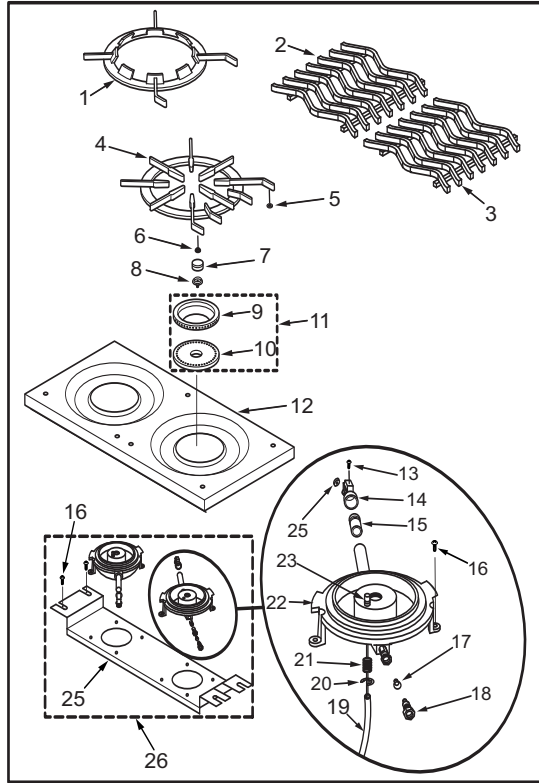



IR Charbroiler

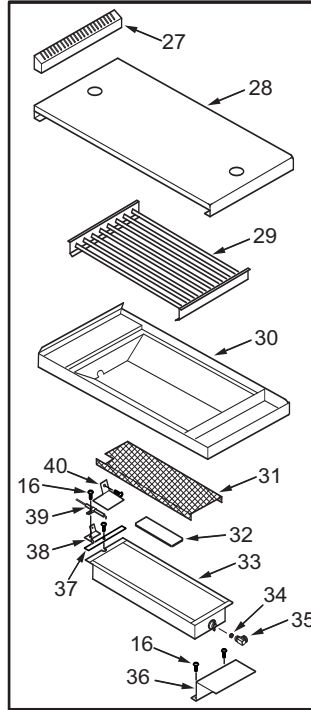

IR Griddle

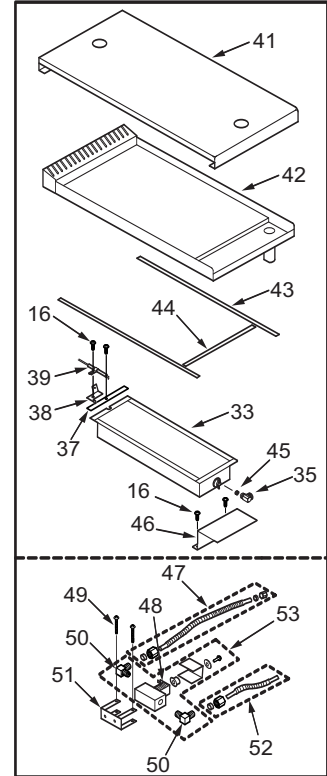

French Top

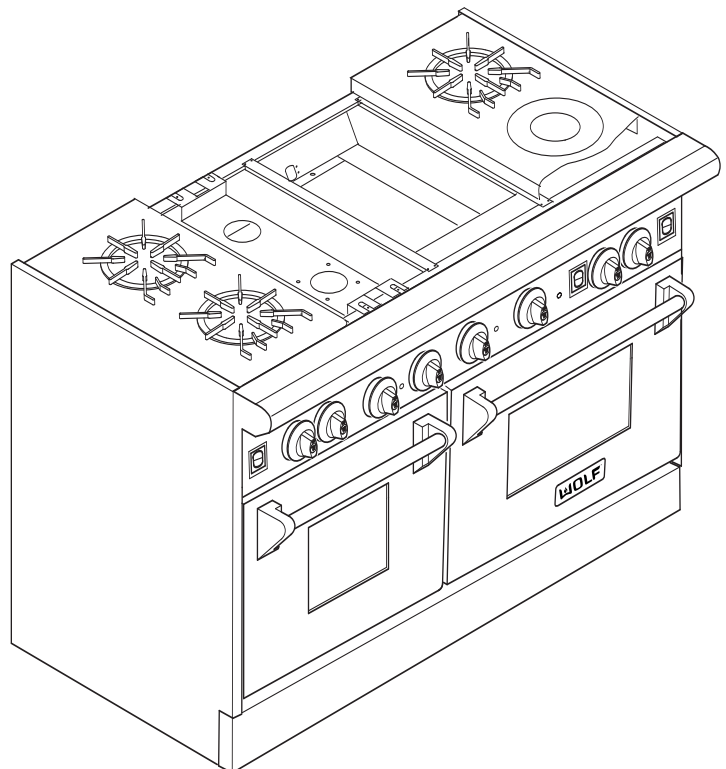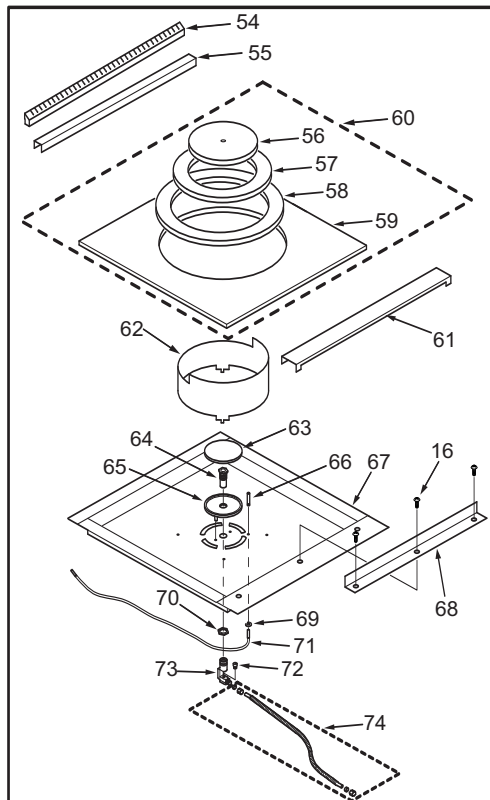

48" Range Front Panel Parts List (1 of 2)

Ref #	Part #	Description	Ref #	Part #	Description
1	766543	Baffle, Broiler	26	720017	Light, Indicator, Red, Oven
2	720690	Seal, Door Top (See SN Break)	27	720951	Knob, Small Oven Thermostat Red (See SN Break)
	803809	Gasket, Door 30" (See SN Break)		801304	Knob, Oven, no/Broil, Red (See SN Break)
3	720692	Seal, Door Side (See SN Break)		720952	Knob, Sm. Oven Thermostat Black (See SN Break)
	803809	Gasket, Door 30" (See SN Break)		801305	Knob, Oven, no/Broil, Black (See SN Break)
4	730228	Screw #10-24 x 1/2"	28	730076	Screw #6-32 x 1/4
5	730513*	Nut, Hex Head	29	801347	Bezel, Rear (See SN Break)
6	730311*	Washer, Lock	30	801346	Bezel, Front (See SN Break)
7	718195*	Bolt, Trunion	31	722564	Terminal, Command Dummy Panel, Front - Also need to order #722713 and 722712 (See SN Break)
	803579*	Bolt, Trunion, Offset	32	786733	Panel, Front, R486C - Also need to order #722713 and 722712 (See SN Break)
	730310*	Washer, Trunion Shim		801083	Panel, Front, R486G - Also need to order #722713 and 722712 (See SN Break)
8	720691	Seal, Door Btm (See SN Break)	33	721017	Knob, Charbroiler Red (See SN Break)
	803809	Gasket, Door 30" (See SN Break)		801306	Knob, Char/French Top, Red (See SN Break)
9	722861	Seal, Door Bottom, 18" (See SN Break)		721018	Knob, Charboiler, Black (See SN Break)
	803811	Gasket, Door 18" (See SN Break)		801307	Knob, Char/French Top Valve, Black (See SN Break)
10	722860	Seal, Door Top 18" (See SN Break)	34	805787	Thermostat, Griddle
	803811	Gasket, Door 18" (See SN Break)	35	801084	Panel, Front, R486G - Also need to order #722713 and 722712 (See SN Break)
11	767670	Baffle, Broiler 18"	36	721014	Knob, Thermostat W/Griddle Red (See SN Break)
12	803436	Caster, Dual Wheel, 2"		801310	Knob, Griddle Thermostat, Red (See SN Break)
13	721013	Leg, Range, 3"		721015	Knob, Thermostat W/Griddle, Black (See SN Break)
14	730239	Screw #8-32 x 3/8"		801311	Knob, Griddle Thermostat, Black (See SN Break)
15	722713	Label, Light Switch	37	786741	Panel, Front - Also need to order #722713 and 722712 (See SN Break)
16	714982	Thermostat, Oven, Small		801087	Panel, Front, R484DG - Also need to order #722713 and 722712 (See SN Break)
17	714902	Thermostat, Oven w/Broil			
18	722712	Label, Fan Switch			
19	786731	Panel, Front, R488 - Also need to order #722713 and 722712 (See SN Break)			
	801082	Panel, Front, R488 - Also need to order #722713 and 722712 (See SN Break)			
20	715142	Shield, Switch Terminal			
21	720816	Switch, Oven Light			
22	720879	Knob, Surface Burner Valve, Red (See SN Break)			
	801312	Knob, Control, Red (See SN Break)			
	720880	Knob, Surface Burner Valve, Black (See SN Break)			
	801313	Knob, Surface Burner Valve, Black (See SN Break)			
23	720815	Switch, Oven, Fan			
24	720818	Knob, Oven Thermostat, Red (See SN Break)			
	801308	Knob, Oven W/Broil, Red (See SN Break)			
	720819	Knob, Oven Thermostat Black (See SN Break)			
	801309	Knob, Oven Therm, w/Broil, Black (See SN Break)			
25	718146	Bezel, Thermostat (See SN Break)			
	801348	Bezel, w/Tick Mark(See SN Break)			



* - Prior to Serial Number (PTS) 17000000
 ** - Starting with Serial Number (SWS) 17000000

Not Shown

803239 Wrench, Caster Adjusting

48" Range Front Panel View (1 of 2)

NOTE: SEE FOLLOWING PAGE FOR ADDITIONAL 48" RANGE FRONT PANEL VIEWS

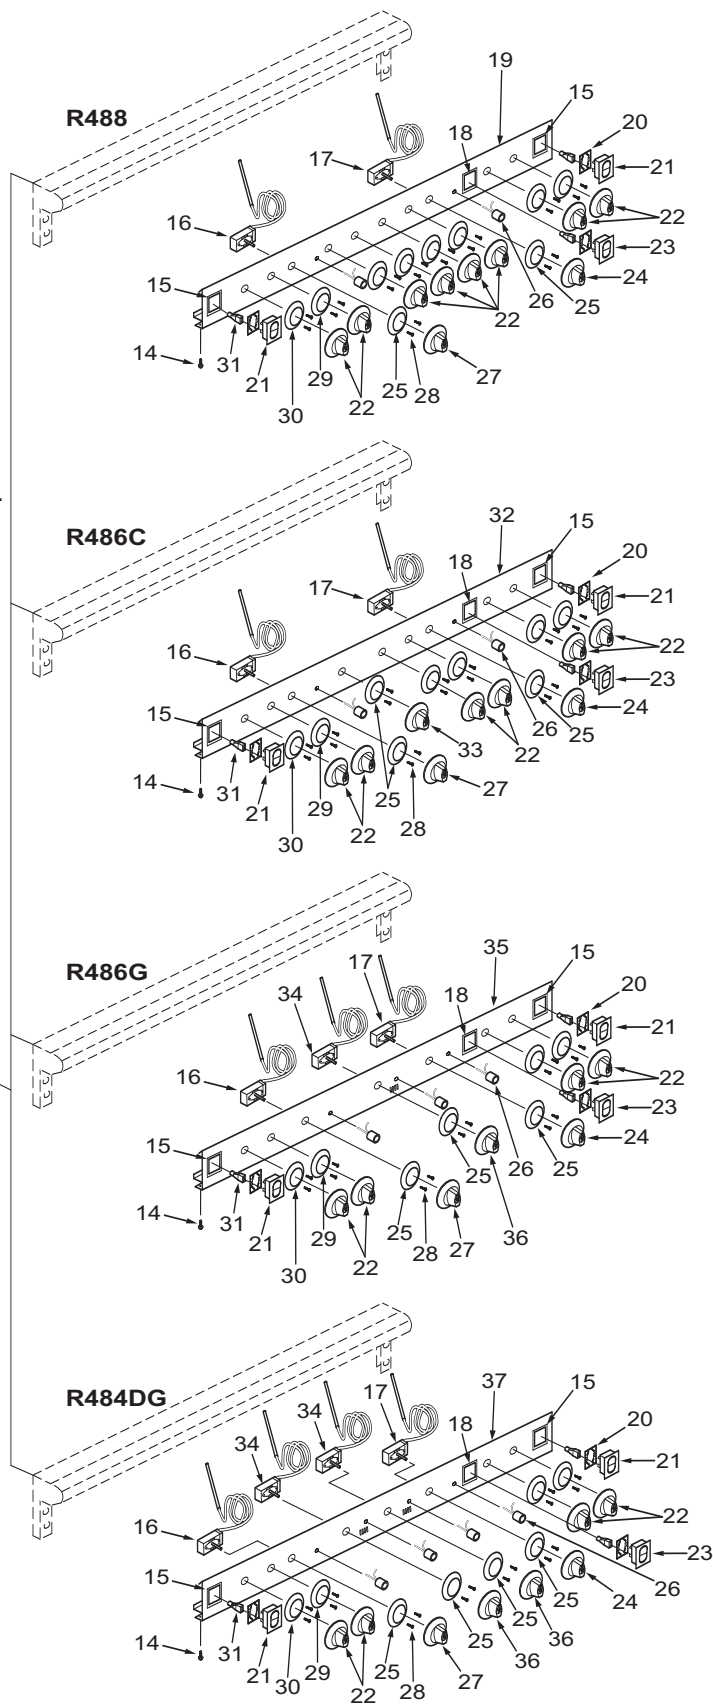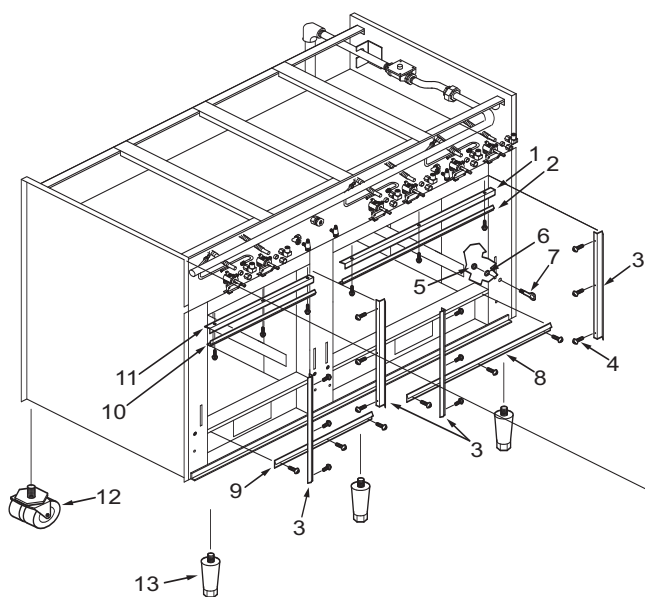

48" Range Control Panel Parts List (2 of 2)

Ref #	Part #	Description	Ref #	Part #	Description
1	766543	Baffle, Broiler	26	720017	Light, Indicator, Red, Oven
2	720690	Seal, Door Top (See SN Break)	27	720951	Knob, Small Oven Thermostat, Red (See SN Breaks)
	803809	Gasket, Door 30" (See SN Break)		801304	Knob, Oven, no/Broil, Red (See SN Breaks)
3	720692	Seal, Door Side (See SN Break)		720952	Knob, Sm. Oven Thermostat, Black (See SN Breaks)
	803809	Gasket, Door 30" (See SN Break)		801305	Knob, Oven, no/Broil, Black (See SN Breaks)
4	730228	Screw #10-24 x 1/2"	28	730076	Screw #6-32 x 1/4"
5	730513*	Nut, Hex Head	29	801347	Bezel, Rear (See SN Breaks)
6	730311*	Washer, Lock	30	801346	Bezel, Front (See SN Breaks)
7	718195*	Bolt, Trunion	31	722564	Terminal, Command Dummy
	803579*	Bolt, Trunion, Offset	32	721017	Knob, Charbroiler Red (See SN Breaks)
	730310*	Washer, Trunion Shim		801306	Knob, Char/French Top, Red (See SN Breaks)
8	720691	Seal, Door Btm (See SN Break)		721018	Knob, Charboiler, Black (See SN Breaks)
	803809	Gasket, Door 30" (See SN Break)		801307	Knob, Char/French Top, Black (See SN Breaks)
9	722861	Seal, Door Bottom, 18" (See SN Break)	33	805787	Thermostat, Griddle
	803811	Gasket, Door 18" (See SN Break)	34	786737	Panel, Front (See SN Breaks) Also need to order # 722712 and # 722713
10	722860	Seal, Door Top 18" (See SN Break)		801085	Panel, Front, R484CG (See SN Breaks) - Also need to order # 722712 and # 722713
	803811	Gasket, Door 18" (See SN Break)	35	721014	Knob, Thermostat W/Griddle Red (See SN Breaks)
11	767670	Baffle, Broiler 18"		801310	Knob, Griddle Thermostat, Red (See SN Breaks)
12	803436	Caster, Dual Wheel, 2"		721015	Knob, Thermostat W/Griddle, Black (See SN Breaks)
13	721013	Leg, Range, 3"		801311	Knob, Griddle Thermostat, Black (See SN Breaks)
14	730239	Screw #8-32 x 3/8"	36	786743	Panel, Front (See SN Breaks) Also need to order # 722712 and # 722713
15	722713	Label, Light Switch		801088	Panel, Front, R484F (See SN Breaks) - Also need to order # 722712 and # 722713
16	714982	Thermostat, Oven, Small	37	786958	Panel, Front (See SN Breaks) Also need to order # 722712 and # 722713
17	714902	Thermostat, Oven, w/Broil		801089	Panel, Front, R482CF (See SN Breaks) - Also need to order # 722712 and # 722713
18	722712	Label, Fan Switch			
19	786739	Panel, Front (See SN Breaks) Also need to order # 722712 and # 722713			
	801086	Panel, Front, R484DC (See SN Breaks) - Also need to order # 722712 and # 722713			
20	715142	Shield, Switch Terminal			
21	720816	Switch, Oven Light			
22	720879	Knob, Control, Red (See SN Breaks)			
	801312	Knob, Surface Burner Valve, Red (See SN Breaks)			
	720880	Knob, Control, Black (See SN Breaks)			
	801313	Knob, Surface Burner Valve, Black (See SN Breaks)			
23	720815	Switch, Fan			
24	720818	Knob, Oven Thermostat, Red (See SN Breaks)			
	801308	Knob, Oven Therm, w/Broil, Red (See SN Breaks)			
	720819	Knob, Oven Thermostat Black (See SN Breaks)			
	801309	Knob, Oven Therm, w/Broil, Black (See SN Breaks)			
25	718146	Bezel, Thermostat (See SN Breaks)			
	801348	Bezel, w/Tick Mark (See SN Breaks)			



* - Prior to Serial Number (PTS) 17000000
 ** - Starting with Serial Number (SWS) 17000000

Not Shown

803239 Wrench, Caster Adjusting

48" Range Control Panel View (2 of 2)

NOTE: SEE PRECEDING PAGE FOR ADDITIONAL 48" RANGE FRONT PANEL VIEWS

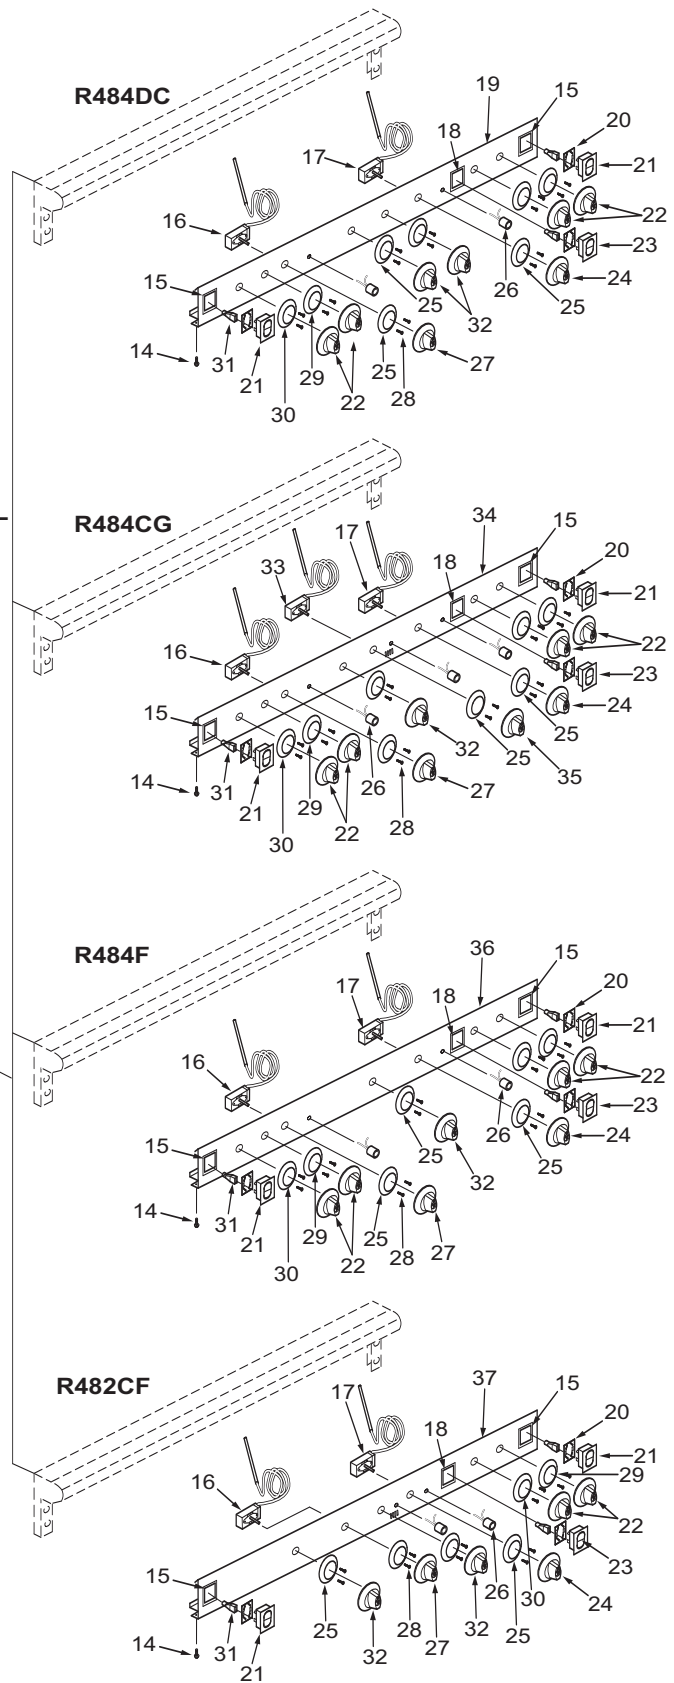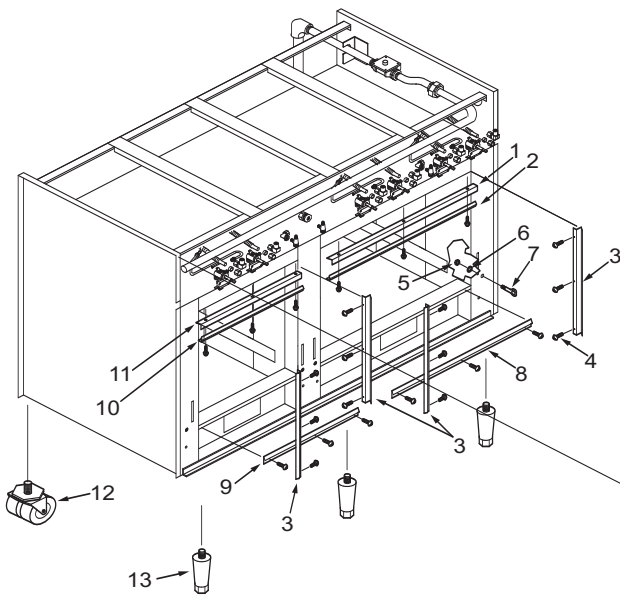

48" Range Manifold Parts List (1 of 2)






Ref #	Part #	Description
1	803169	Flex Tubing Service Package 3/8" x 48"
2	714369	Bushing, Snap 1/2"
3	786977	Shield, Corner Wire
4	807667	Ferrule, Sleeve Brass
5	807677	Nut, Compress Brass
6	803172	Flex Tubing Service Package 3/8" x 42"
7	803171	Flex Tubing Service Package 5/16" x 14"
8	807677	Nut, Compress Brass
9	807667	Ferrule, Sleeve Brass
10	807665	Ferrule, 3/16"
11	720888	Fitting, 3/16"
12	801937	Flex Tubing Service Package 3/16 x 27"
13	807668	Ferrule, 3/8"
14	807678	Nut, 3/8"
15	714361	Connector, 3/8"
16	720885	Bracket, Valve Mounting
17	722133	Screw, Hex Head
18	723350	Regulator, Pressure Convertible 3/4"
	801358	Regulator, 1/2" Convertible
19	722832	Pipe, Offset
20	719033	Union, 1/2" Black
21	804422	Manifold (R488)
22	801936	Flex Tubing Service Package 16"
23	809153	Burner Valve & Switch Assy, Nat
	809154	Valve, Burner, LP Gas
24	800892	Orifice, Bypass Inner, Natural Gas
	800055	Orifice, Bypass Inner, LP Gas
25	800884	Orifice, Bypass Outer, Natural Gas
	800054	Orifice, Bypass Outer, LP Gas
26	807141	Valve, Switch
27	719393	Elbow, Brass 3/8"
28	719370	Plug, Hex Head, 1/8"
29	722278	Elbow, Adapter, Compression
30	720330	Valve, Shut Off, Oven
31	722413	Valve, Brass
32	713810	Switch, Valve Ignition
33	803167	Flex Tubing Service Package 3/8 x 12"
34	714296	Tee, 3/8"CC X 3/8"CC X 3/8"UNS
35	804421	Manifold (R486C)
36	804422	Manifold, (R486G)
37	805675	Manifold (R484DG)

Not Shown

806384	Wiring Harness - Manifold, R488
806385	Wiring Harness - Rear, R488
806386	Wiring Harness - Manifold, R486C
806387	Wiring Harness - Rear, R486C
806388	Wiring Harness - Manifold, R486G
806389	Wiring Harness - Rear, R486G
806394	Wiring Harness - Manifold, R486DG
806395	Wiring Harness - Rear, R484DG

48" Range Manifold View (1 of 2)

**NOTE: SEE FOLLOWING PAGE FOR
ADDITIONAL 48" RANGE
MANIFOLD VIEWS**

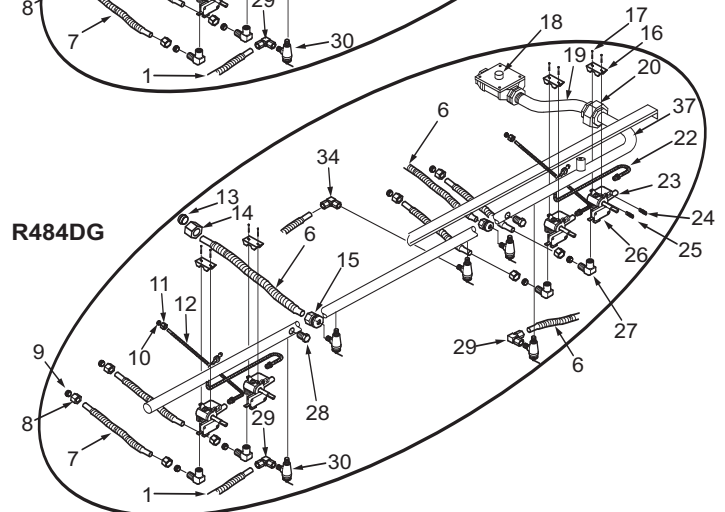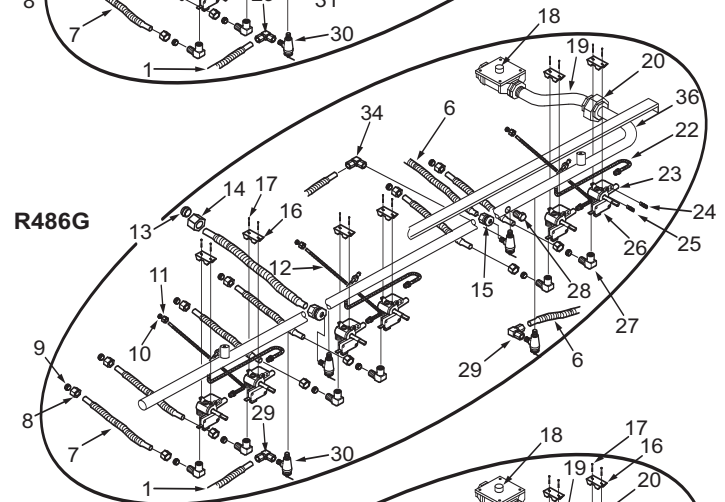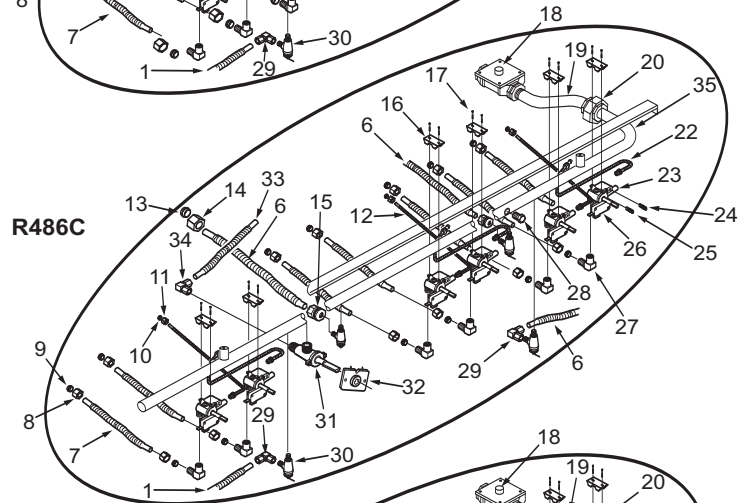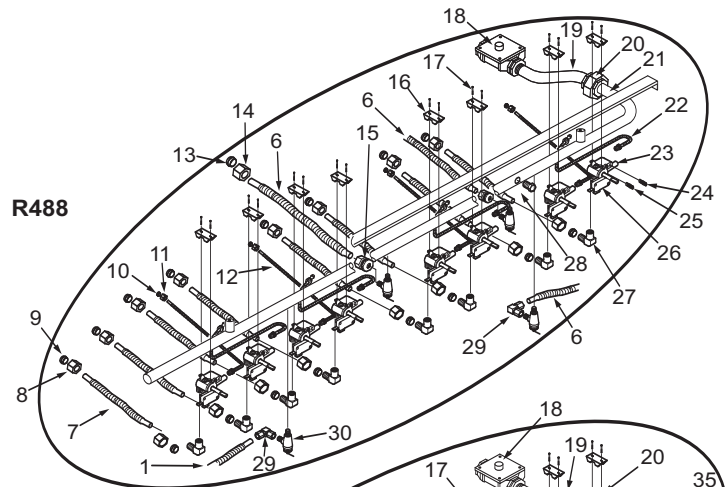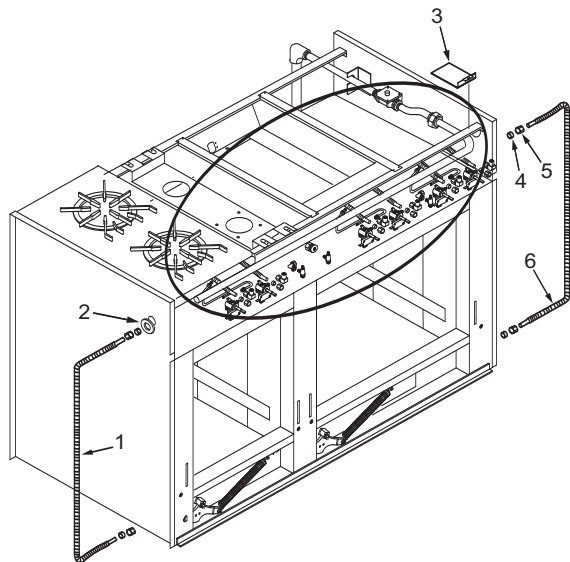

48" Range Manifold Parts List (2 of 2)






<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	803169	Flex Tubing Service Package 3/8" x 48"
2	714369	Bushing, Snap 1/2"
3	786977	Shield, Corner Wire
4	807667	Ferrule, Sleeve Brass
5	807677	Nut, Compress Brass
6	803172	Flex Tubing Service Package 3/8" x 42"
7	803171	Flex Tubing Service Package 5/16" x 14"
8	807677	Nut, Compress Brass
9	807667	Ferrule, Sleeve Brass
10	807665	Ferrule, 3/16"
11	720888	Fitting, 3/16"
12	801937	Flex Tubing Service Package 3/16 x 27"
13	807668	Ferrule, 3/8"
14	807678	Nut, 3/8"
15	803172	Flex Tubing Service Package 3/8 x 42"
16	714361	Connector, 3/8"
17	720885	Bracket, Valve Mounting
18	722133	Screw, Hex Head
19	723350	Regulator, Pressure Convertible 3/4"
	801358	Regulator, 1/2" Convertible
20	722832	Pipe, Offset
21	719033	Union, 1/2" Black
22	805673	Manifold (R484CG)
	805674	Manifold (R484DC)
	805675	Manifold (R484DG)
	805676	Manifold (R484F)
23	801936	Flex Tubing Service Package 3/16 x 16"
24	809153	Burner Valve & Switch Assy, Nat
	809154	Valve, Burner, LP Gas
25	800892	Orifice, Bypass Inner, Natural Gas
	800055	Orifice, Bypass Inner, LP Gas
26	800884	Orifice, Bypass Outer, Natural Gas
	800054	Orifice, Bypass Outer, LP Gas
27	807141	Valve, Switch
28	719393	Elbow, Brass 3/8"
29	719370	Plug, Hex Head, 1/8"
30	722278	Elbow, Adapter, Compression
31	720330	Valve, Shut Off, Oven
32	713810	Switch, Valve Ignition
33	722413	Valve, Brass
34	803167	Flex Tubing Service Package 3/8 x 12"
35	801812	Pipe, Manifold 48" Range 2B
		Charboiler/French Top
	804424	Manifold (R482CF)

Not Shown

806392	Wiring Harness - Manifold, R484DC
806393	Wiring Harness - Rear, R484DC
806390	Wiring Harness - Manifold, R484CG
806391	Wiring Harness - Rear, R484CG
806396	Wiring Harness - Manifold, R484F
806397	Wiring Harness - Rear, R484F
806398	Wiring Harness - Manifold, R482CF
806399	Wiring Harness - Rear, R482CF

48" Range Manifold View (2 of 2)


**NOTE: SEE PRECEDING PAGE FOR
ADDITIONAL 48" RANGE
MANIFOLD VIEWS**

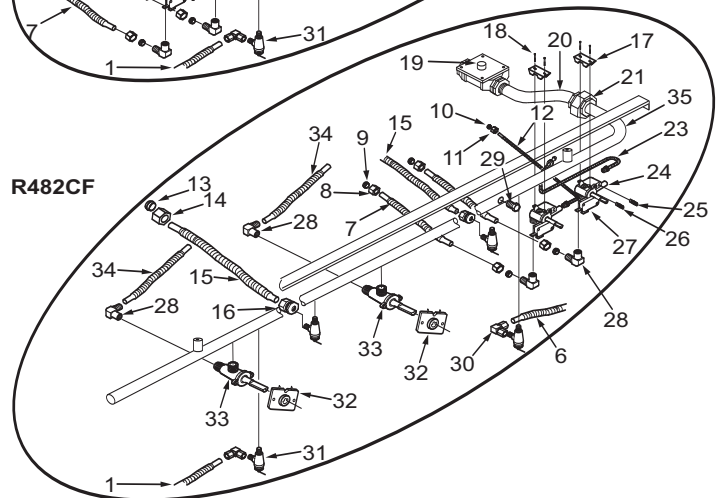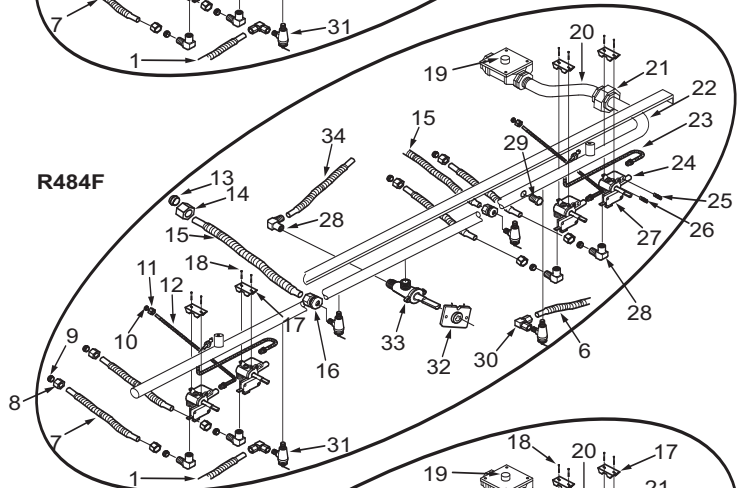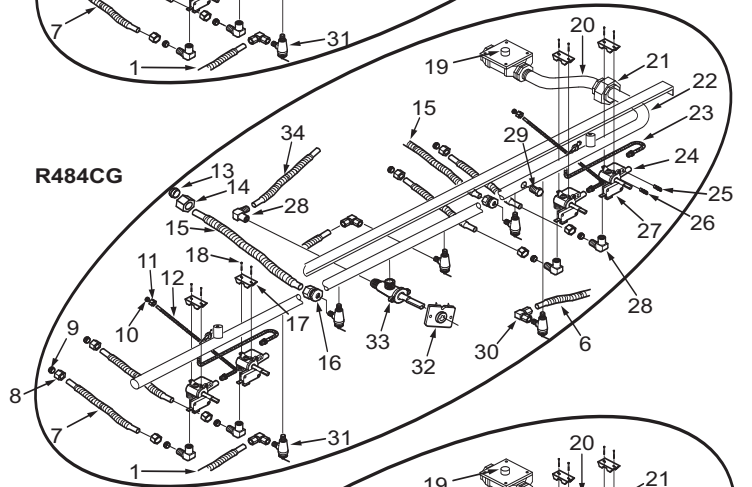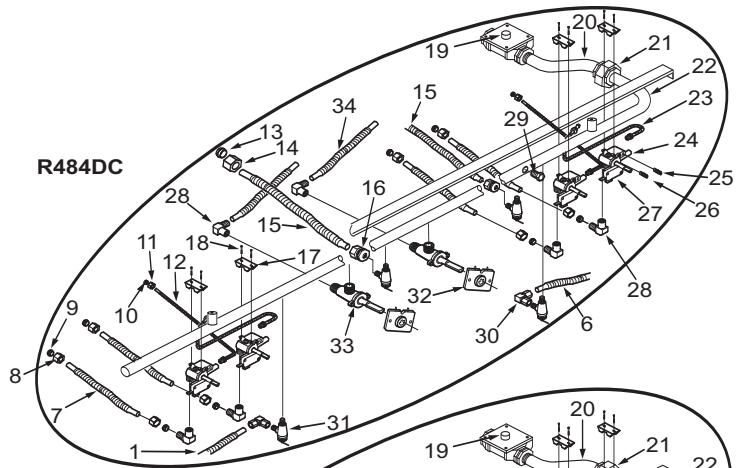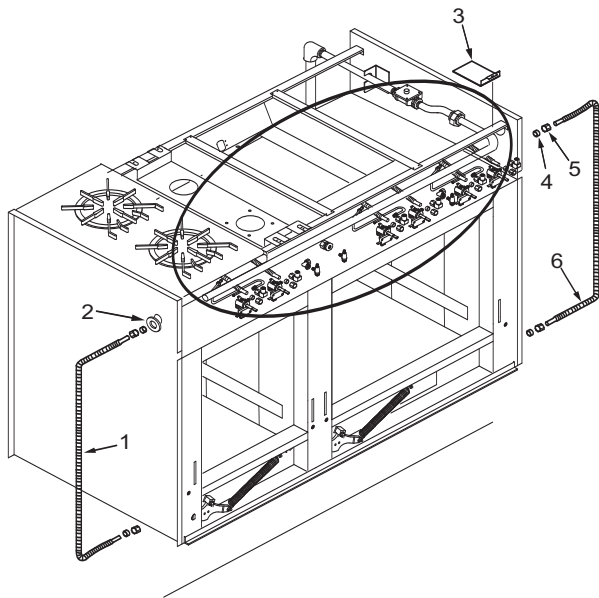

48" Range Oven Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	809157	Burner, Infrared Oven
2	801686	Bracket, Burner Left/Right
3	766592	Bracket, Burner Front/Rear
4	730228	Screw, #10-24 x 1/2"
5	766499	Bracket, Igniter, IR Range
6	723060	Igniter, Hot Surface
7	801690	Cover, Igniter Shield, Range
8	730230	Screw #8-32 x 3/8"
9	806873	Thermo Bulb Housing Assembly
	800123	Thermo Bulb Housing Assembly, 18"
10	800120	Oven Deflector Rest
11	718601	Igniter, Norton
12	720696	Lamp, Oven Assembly
13	342766	Lamp, Oven 40w, 120v
14	720830	Lens
15	766451	Plug, Motor Mount
16	715221	Motor, Oven Fan
17	800628	Blade, Convection Fan
18	730229	Screw, #10-24 x 1-1/2"
19	766456	Cover, Blower Oven
20	720682	Rack, Guide
21	720683	Rack, Oven 30" Range
22	809669	Grill, Broiler Pan
23	722790	Rack, Oven 18" Range
24	766420	Deflector, Oven Bottom Range
25	766418	Panel, Oven Bottom 30" Range (See SN Break)
	807945	Panel, Oven Bottom 30" (See SN Break)
26	786638	Panel, Oven Bottom 18" Range (See SN Break)
	803545	Panel, Oven Bottom 18" (See SN Break)
27	812107	Valve, Oven Safety Single Hole
28	803166	Flex Tubing Service Package 6"
29	719385	Orifice Holder
30	800071	Orifice, Large Oven Natural Gas
	800059	Orifice, Large Oven LP
31	807734	Orifice Bracket, Range
32	766545	Baffle, Lower Front
	807861	Baffle, Lower Front
33	803973	Heatsink
34	803814	Burner Tube, Oven (See SN Break)
	807729	Buner Tube, Bake (See SN Break)
35	766546	Baffle, Flue Range
36	809668	Pan, Broiler
37	813104	Flex Tubing Service Package 8"


48" Range Oven View

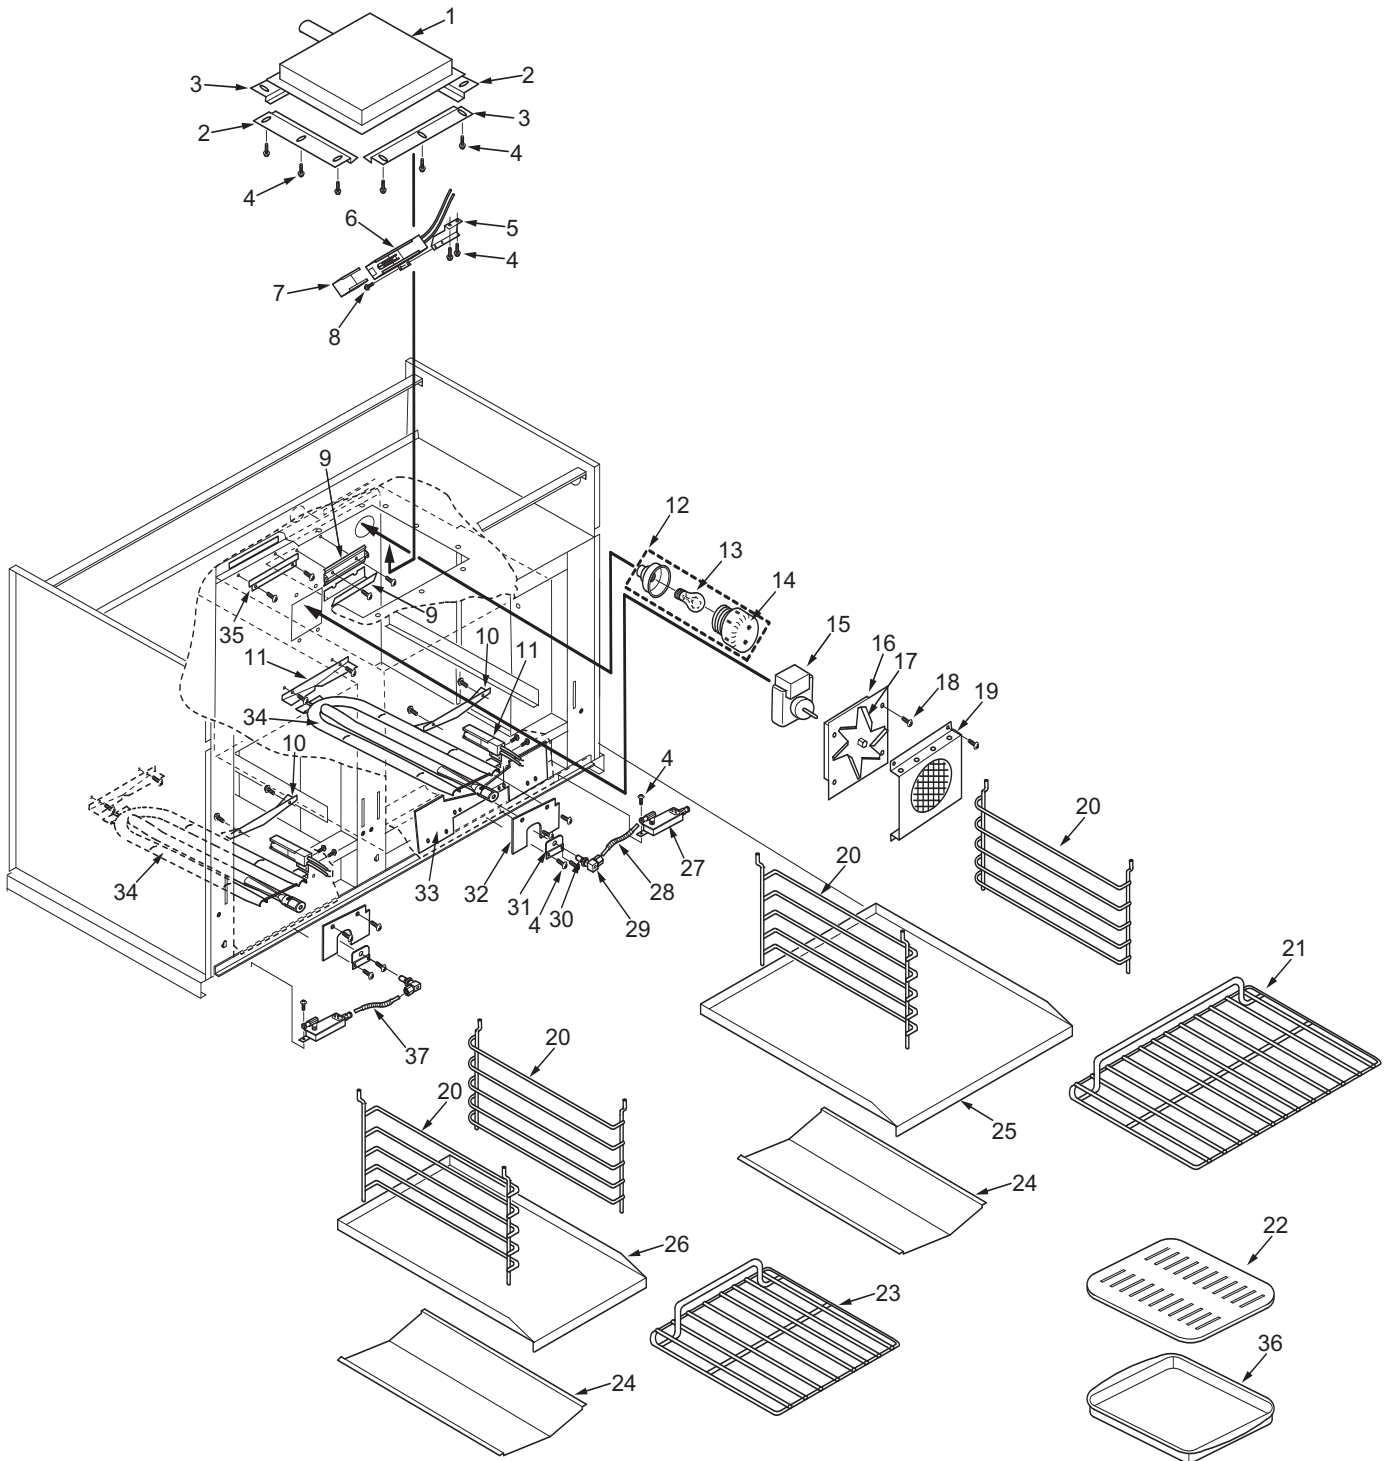

48" Range Rear Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	809243	Cord, Power
2	719393	Elbow, 3/8" x 3/8"
3	730230	Screw #8-32 x 3/8"
4	803166	Flex Tubing Service Package 3/8" x 6"
5	812106	Valve, Broiler Safety
6	766542	Bracket, Safety Valve-Relay
7	787250	Bracket, Spark Module
8	809420	Module, Spark, Single Point
9	730228	Screw #10-24 x 1/2" Phillips
10	786776	Box, Flue Assembly
11	786835	Box, Flue Center Assembly
12	722383	Relay, Fan
13	730239	Screw #8 x 3/8"
14	809416	Module, Spark 6 Point
	809417	Module, Spark 4 Point
15	800246	Washer, Flat, Teflon
16	811868	Panel, Module Range
17	766482	Cover, Blower Motor, Range
18	766593	Angle, Wall Brace
19	786650	Brace, Rear Bottom, 48" Range
21	719503	Plate, Face Electrical Box
22	719068	Bushing, 3/4" NPT X 1/2" NPT
20	719502	Box, Electrical
23	719049	Elbow, 3/4" NPT X 3/4" NPT
	801457	Elbow 1/2" x 1/2"
24	713494	Nipple, 3/4" x 22", Large
	801456	Nipple, 1/2" x 22-3/4"
25	786768	Bracket, Manifold Support
26	801459	Nipple, 1/2" x 3-1/2"
27	721030	Gasket, Red Rubber
28	722278	Elbow, Adapter Compression
29	800259	Orifice, W/ELB Broil Natural (Stamp #48)
	800057	Orifice, IR Broil (LP) 1.181MM (Stamp #56)
		<u>Not Shown</u>
	800247	Silicone, Red High Temp.

48" Range Rear View

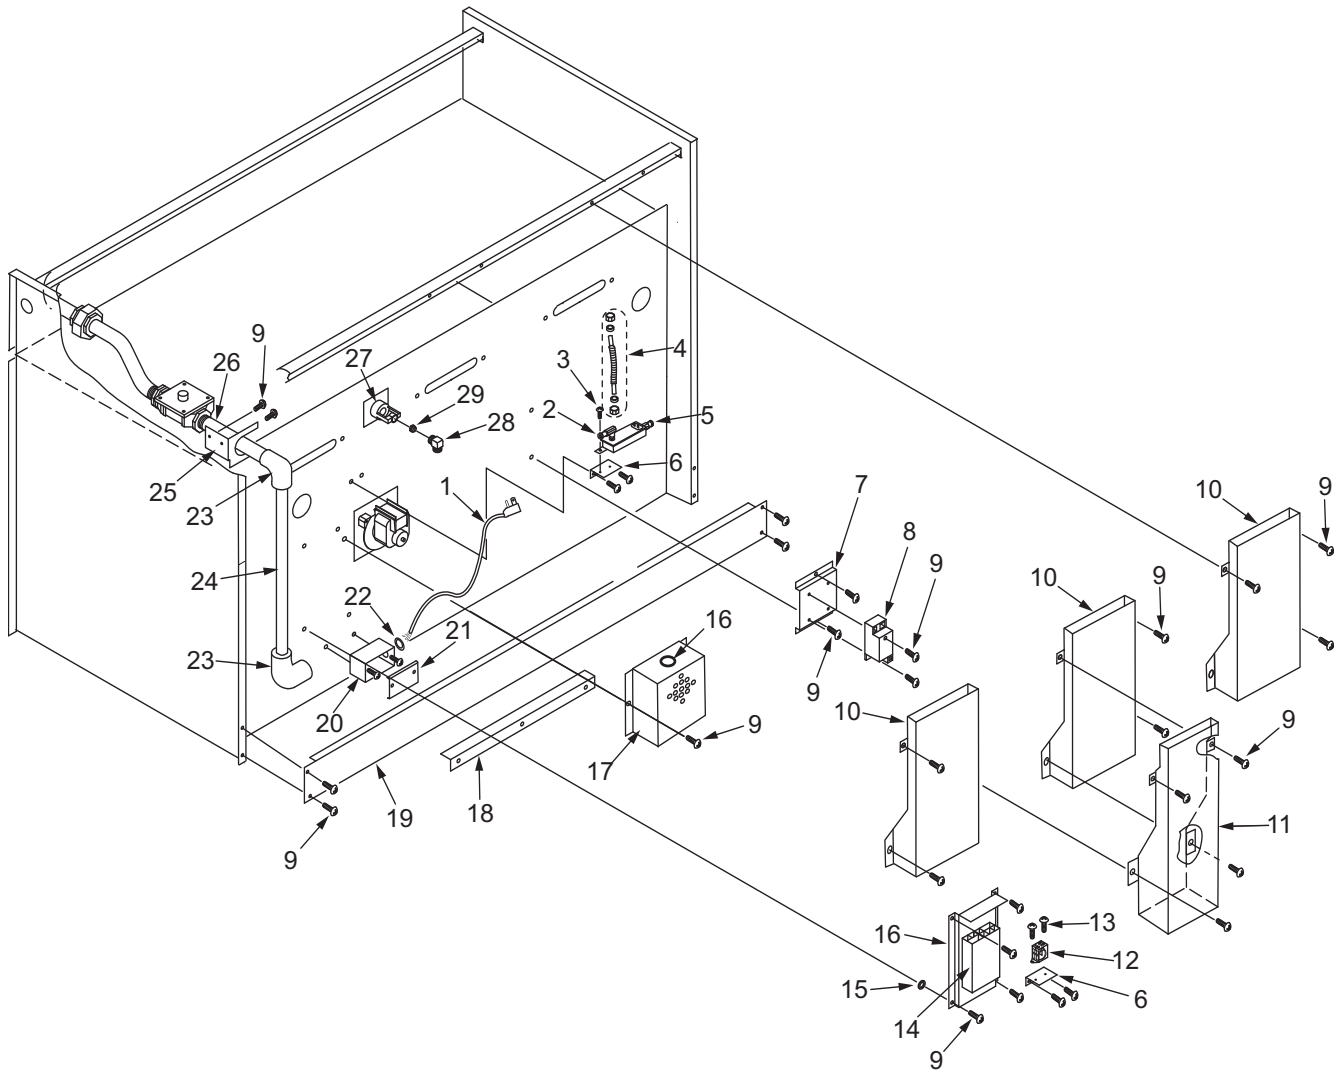

60" Range Door and Riser Parts List


<u>Ref #</u>	<u>Part #</u>	<u>Description</u>	<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787820	Strip, Filler (Island Trim)	15	800635	30" Door Insulation
2	802808	Hinge, Door Stiffener Support Assy LH	16	730141	Screw, 1/4-20" x 1/2"
3	787524	Trim, Center Post, 60"	17	730308	Washer, Lock 1/4"
4	787591	Panel, Door 30" W/O Logo	18	787592	Channel Door Space
5	*Special Order, Call Factory Parts Department	Door, Oven Assy, 30"Door Assy. SS	19	730239	Screw, #8 x 3/8"
6	*Special Order, Call Factory Parts Department	Door Assy. W/O Logo SS	20	769565	Skin, Door SS, 30" Range (See SN Breaks)
7	787830	Panel, Back 60" Range		800983	Skin, Door SS, 30" Range (See SN Breaks)
8	730228	Screw #10-24 x 1/2"		767564	Skin, Door Black, 30" Range
9	769576	Liner, Door Assy 30" (See SN Breaks)	21	719628	Bracket, Belly Bar RH
	802809	Liner, Door Assy 30" (See SN Breaks)	22	719627	Bracket, Belly Bar LH
10	720814	Window, Oven Door Lg.	23	720770	Handle, Oven Door, 30" Range
11	723296	Clip, Oven Glass Retainer	24	800925	Logo, Wolf Log Large
12	722328	Glass, Oven Door	25	730509	Clip, Tinnerman
13	800635	30" Door Insulation	26	730335	Washer, Lock #10
14	802807	Hinge, Door Stiffener Support Assy RH	27	730028	Screw, #10-24 x 1"
			28	722424	Trim, J Oven Window Lg.
			29	803863	Spacer, Door, 30" Range
			30	714589	Ring, Retaining
			31	719287	Pin, Door Hinge

Not Shown

806665	Riser 5-R60
800018	Riser 10-R60
800022	Riser 20-R60

NOTE: Door and door components prior to serial number 17000000. See page 56 & 57 for door and door components starting with serial number 17000000.

60" Range Door and Riser View

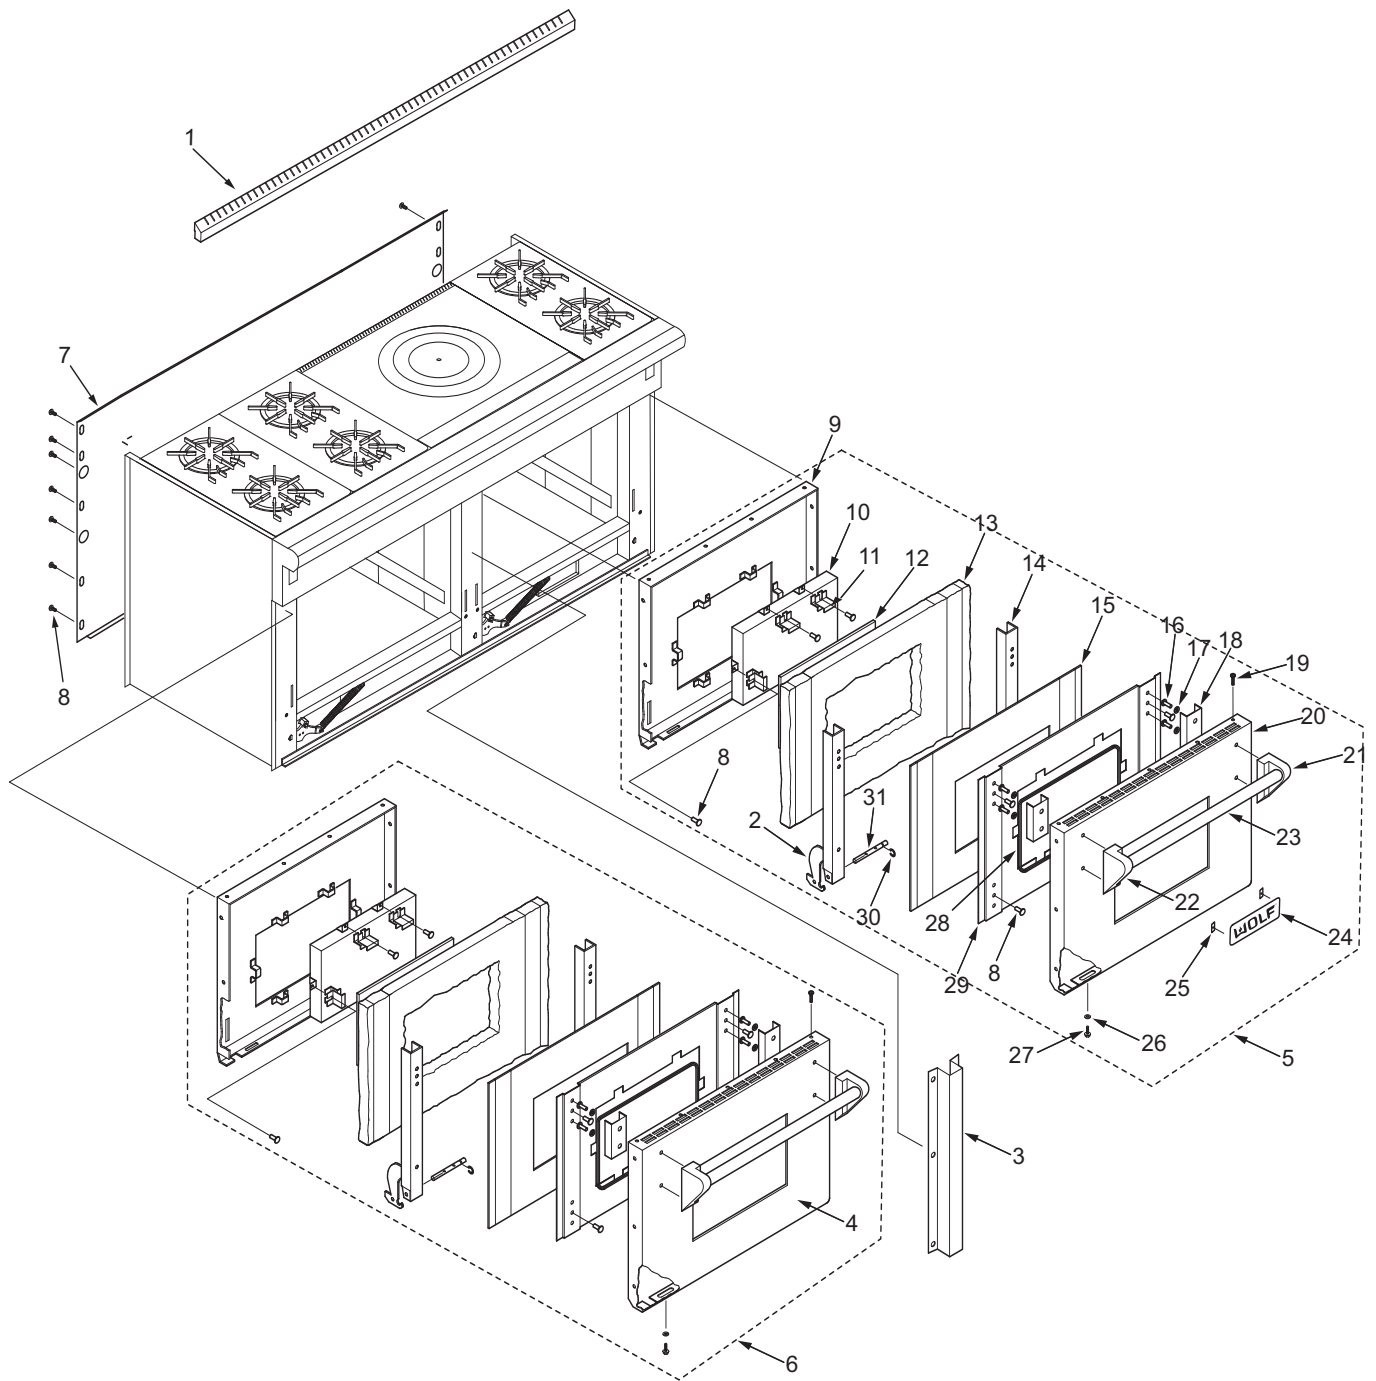


60" Range Door Parts List (Starting with Serial Number 17000000)

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1		*Special Order, Call Factory Parts Department Door, Oven Assy, 30" Door Assy. SS
2	809654	Liner, 30" Door-Range, SVCE
3	809637	Hinge Hydraulic, SVCE
4	809649	Hinge, Spring, SVCE
5	809667	Clip, Oven Glass Retainer, SVCE
6	730228	Screw, #10-24 x 1/2"
7	809651	Window, Oven Door Large, SVCE
8	809664	Glass, Oven Door, Large, SVCE
9	809653	Insulation, Blkt, 30", SVCE
10	809639	Bracket Assy, End Cap, Range, SVCE
11	730141	Screw, 1/4-20" x 1/2"
12	809640	Handle End Cap, Right, SVCE
13	809641	Handle End Cap, Left, SVCE
14	804396	8-32x .375 Set Screw
15	809650	Handle Bar, 30", SVCE
16	800925	Logo, Wolf, Large
17	809647	Door, Skin - 30" Logo Assy, SVCE
18	809663	J-Trim, Oven Window Lg, SVCE
19	809652	Baffle, 30" Door - Range SVCE
20	803273	Pin, Pilot
21	809373	Retainer, Hinge, SVCE
22	730239	Screw, #8x3/8"
23	803372	#10-16 X 1/2" Screw CR Truss HD
	804789	Washer, Fiber
24	801541	8-18 X 1/2" Screw TYPE B H/W/HD
25	809655	Door, Skin - 30" No Logo Assy, SVCE
26		*Special Order, Call Factory Parts Department Door Assy. 30" W/O Logo SS

NOTE: Door and door components starting with serial number 17000000. See page 54 & 55 for door and door components prior to serial number 17000000.

60" Range Door View (Starting with Serial Number 17000000)

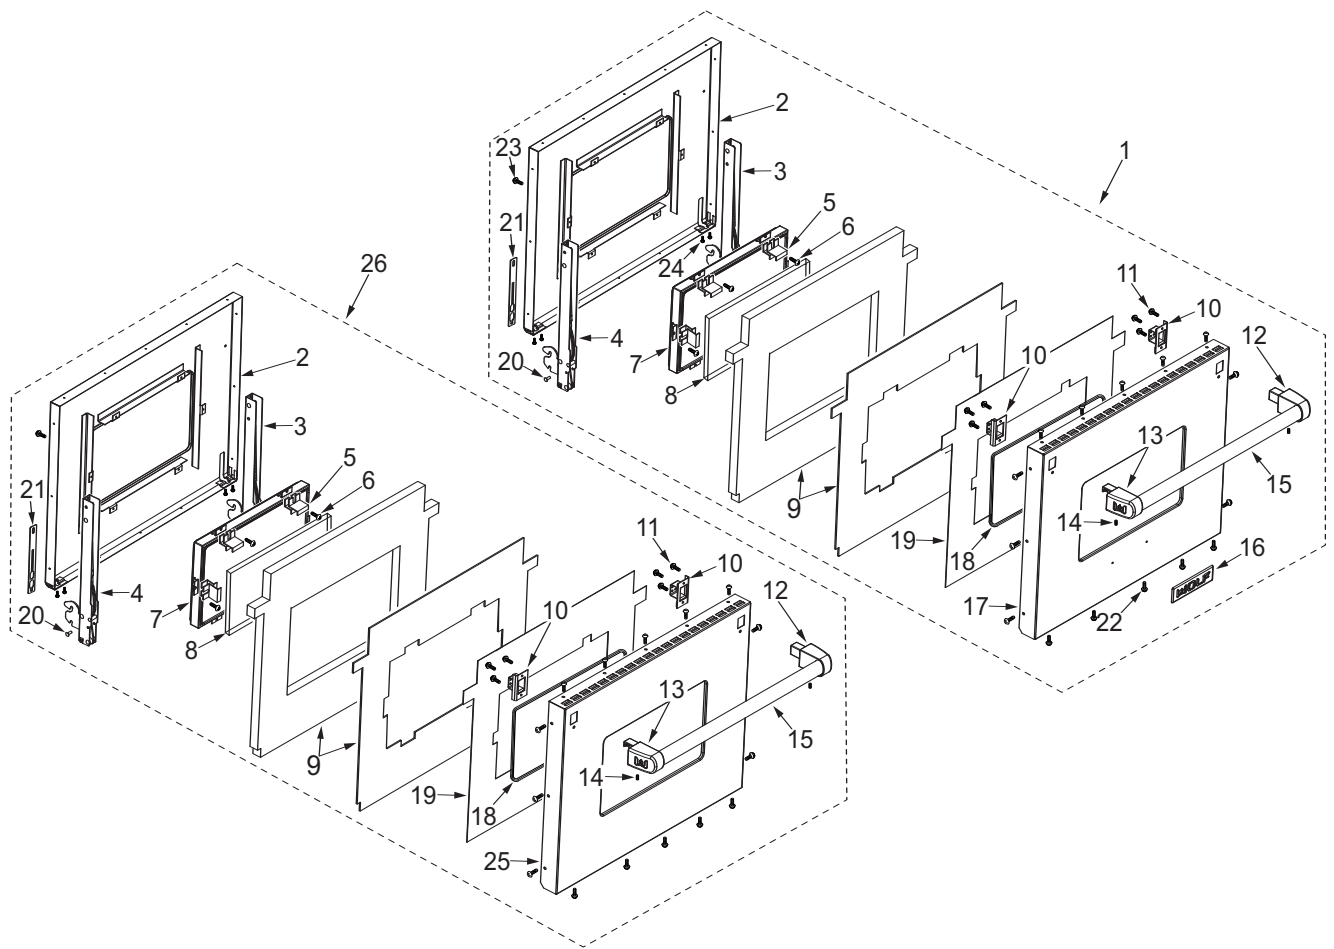

60" Range Dress Panels Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787515	Channel, Rear 60"
2	787514	Channel, Front, 60"
3	714369	Bushing, Snap 1/2"
4	722270	Rivet, Pop 3/16"
5	787516	Panel, Outer RH, SS 60" Range (See SN Breaks)
	801571	Panel, Outerside-RH Range 60" (See SN Breaks)
	787518	Panel, Outer RH, Black 60" Range
6	786714	Pan, Grease SS (12-3/8" X 7") (See SN Breaks)
	801687	Tray, Grease Range (With Dimples, 11-1/2" X 9-1/2") (See SN Breaks)
7	787583	Pan, Drip Assembly See SN Breaks)
	801360	Drip Tray Assembly (30"/60") (See SN Breaks)
8	787556	Baffle, Roll Front 60" Range
9	730228	Screw #10-24 x 1/2" Phillips
10	807589	Skirt, Front SS, 60" Range
	787834	Skirt, Front Black, 60" Range
11	809369	Panel, Lower Front, SS 60" Range
	787550	Panel, Lower Front, Blk 60" Range
12	811542	60" Range Roll Front
13	766547*	Bracket, Door Switch
	809377**	Bracket, Door Switch
14	804532*	Switch, Door Interlock
	809365**	Switch, Door Interlock
15	730228	Screw, 10-24 X 1/2" Phillips Head
16	730535*	Nut, 6-32 Lock
17	730506*	Nut, Oversize
18	719331*	Bolt, Eye 1/4-20 x 3"
19	718361*	Spring, Door
20	768260*	Angle, Switch
21	719710*	Arm, Rocker, LH
22	719344*	Hook, "S", Oven Door
23	730310*	Washer
24	719350*	Pin, Clevis, 3/8 x 2"
25	730410*	Pin, Cotter, 3/32 x 1-1/4"
26	787517	Panel, Outer LH, SS 60" Range (See SN Breaks)
	801572	Panel, Outerside-LH Range 60" (See SN Breaks)
	787519	Panel, Outer LH, Black 60" Range


Not Shown

800293	Wiring Harness, Kickplate, R606CG
800514	Wiring Harness, Kickplate, R606DC
806403	Wiring Harness, Kickplate, R606DG
800289	Wiring Harness, Kickplate, R606F
800297	Wiring Harness, Kickplate, R604CF
800281	Wiring Harness, Kickplate, R604GF

* - Prior to Serial Number (PTS) 17000000

** - Starting with Serial Number (SWS) 17000000

60" Range Dress Panels View

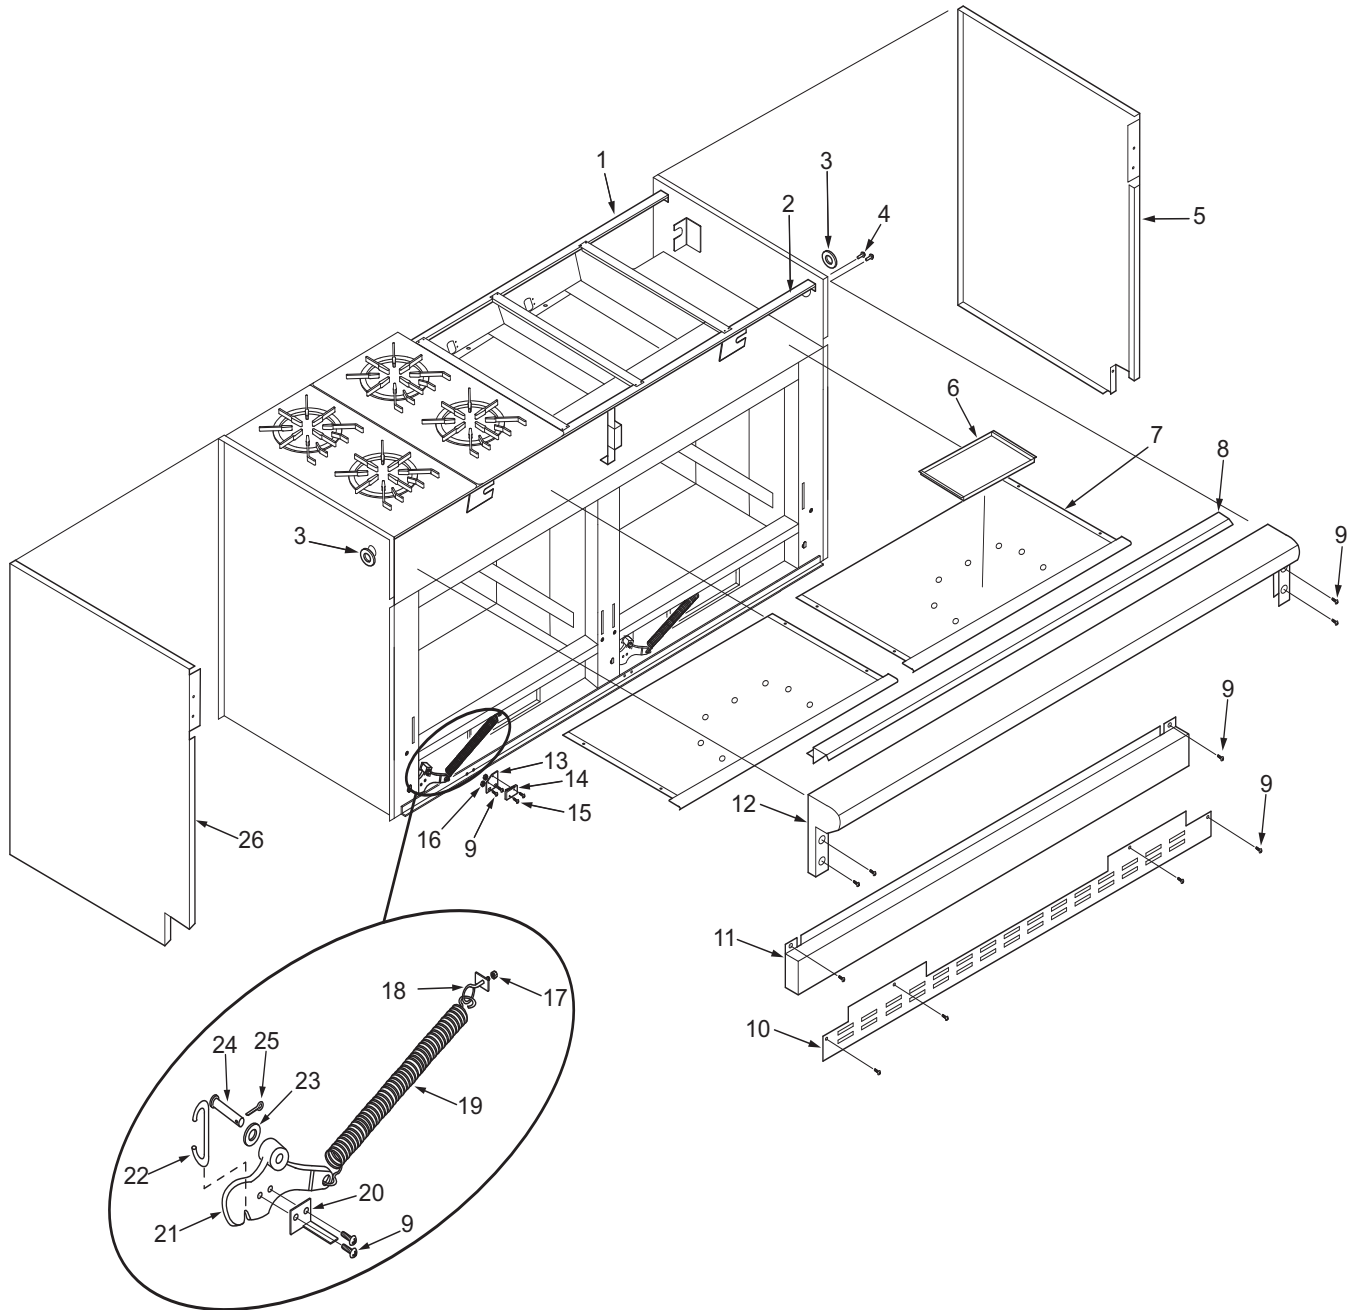

60" Range Top Parts List


Ref #	Part #	Description	Ref #	Part #	Description
1	801669	Grate, Wok (See SN Breaks)	35	800258	Elbow
	804230	Grate, Wok (See SN Breaks)	36	786978	Baffle, Charbroiler
2	800146	S Grate, Rear (See SN Breaks)	37	810099	Spacer, IR Burner
	804229	S Grate, Rear (See SN Breaks)	38	786029	Bracket, Sparker
3	800137	S Grate, Front (See SN Breaks)	39	714415	Sparker
	804228	S Grate, Front (See SN Breaks)	40	804711	Shield, Charbroiler Electrode
4	720829	Grate, Spider (See SN Breaks)	41	801265	Single Griddle Cover Kit - 11" Griddle (See SN Breaks)
	811561	Grate, Spider (See SN Breaks)		809311	Griddle Cover - 11" New Style Griddle (SEE SN Breaks)
5	722421	Grate Foot Pad (See SN Breaks)		801266	Double Griddle Cover Kit - 22" Griddle Old Style Griddle Cover & BackSplash (See SN Breaks)
6	722422	Washer, Silicone, Spider Grate (See SN Breaks)		809312	Griddle Cover - 22" New Style (See SN Breaks)
7	720801	Burner, Inner Head, Plated		802508	Griddle Assembly, 11"
	800041	Burner, Inner Head, Black Enamel		802509	Griddle Assembly, 22"
8	720887	Base, Inner Burner		800067	Seal, Griddle, 20"
	800044	Burner, Inner Base, Black Enamel	42	800066	Seal, Griddle, 9"
9	720803	Burner, Outer (See SN Breaks)		800048	Orifice, IR Charbroiler, Natural Gas
	801150	Cap, burner, Outer Head, Black Enamel	43	800050	Orifice, IR Charbroiler, LP Gas
10	720802	Ring, Cross (See SN Breaks)	44	786127	Baffle, Griddle
	801151	Ring, Burner, Inner Base, Black Enamel	45	803168	Flex Tubing Service Package 3/8" x 18"
11	803965	Burner Ring/Cap, Service Package	46	770093	Solenoid, (Coil Only)
12	766446	Top, Pressed Steel, Porcelain (See SN Breaks)	47	730229	Screw #10-24 x 1-1/2"
	805519	Top, Pressed Steel, (See SN Breaks)	48	719376	Elbow, Brass 3/8"
13	722162	Screw, Phillips Head	49	719377	Fitting, Straight 3/8"
14	807864	Holder, Jet Assembly	50	804404	Holder, Single Solenoid
15	720886	Venturi	51	756302	Holder, Double Solenoid
16	730228	Screw #10-24 x 1/2"	52	803167	Flex Tubing Service Package 3/8" x 12"
17	800882	Orifice, Inner Burner, Natural Gas		807622	Valve, Single Solenoid, w/fittings
	800052	Orifice, Inner Burner, LP Gas	53	807623	Valve, Double Solenoid, w/fittings
18	720900	Fitting, 3/16"	54	803374	Vent, Frenchtop
19	719566	Sleeve, 1/4" Fiberglass	55	786718	Spacer, Rear
20	720822	Ring	56	NLA	Ring, Center French Top
21	807598	Spring	57	NLA	Ring, Inner French Top
22	801149	Base, Burner	58	NLA	Ring, Outer French Top
23	806483	Service Components, Electrode	59	NLA	Plate, French Top
24	800872	Orifice, Outer Burner, Natural Gas	60	806466	Components, Frenchtop
	800051	Orifice, Outer Burner, LP Gas	61	805658	Spacer, Front - FT Cover
25	767615	Panel, Burner Support	62	786727	Ring, Flame
26	809019	Burner Assembly - Also need to order 806483	63	723063	Burner Head
27	762215	Backsplash, Decorative	64	722521	Venturi, Gas Hotplate
28	759715	Cover, Charbroiler 11"	65	722536	Burner Base
	(Order 2 for Double Charbroiler 22")		66	723011	Electrode, French Top
29	786081	Rack, Charbroiler	67	786716	Pan, Burner
30	769593	Frame, Charbroiler	68	809880	Baffle, Pan French Top
31	722631	Screen, Reverberator	69	723010	Clip, Retaining
32	762444	Plate, Blank Off	70	722522	Nut, Hotplate
33	809183	Burner, Infrared Assy, Griddle/Charb	71	800062	Electrode Wire
34	800048	Orifice, IR Charbroiler, Natural Gas	72	800060	Orifice, French Top Natural Gas
	800050	Orifice, IR Charbroiler, LP Gas		800061	Orifice, French Top LP Gas
35	800258	Elbow	73	722530	Holder, Jet Gas
36	786978	Baffle, Charbroiler	74	803170	Flex Tubing Service Package 1/4" x 12"

Not Shown


805637	Cover, Frenchtop Assy-Pro Series
787520	Hook, Center Plate French Top
722218	Hook, Porcelain Top Remover
767627	Spacer, Burner Support
722537	Seal, O-Ring Gas Hotplate (FT)
807066	Shield, Rubber - Electrode

60" Range Top View


Surface Burner

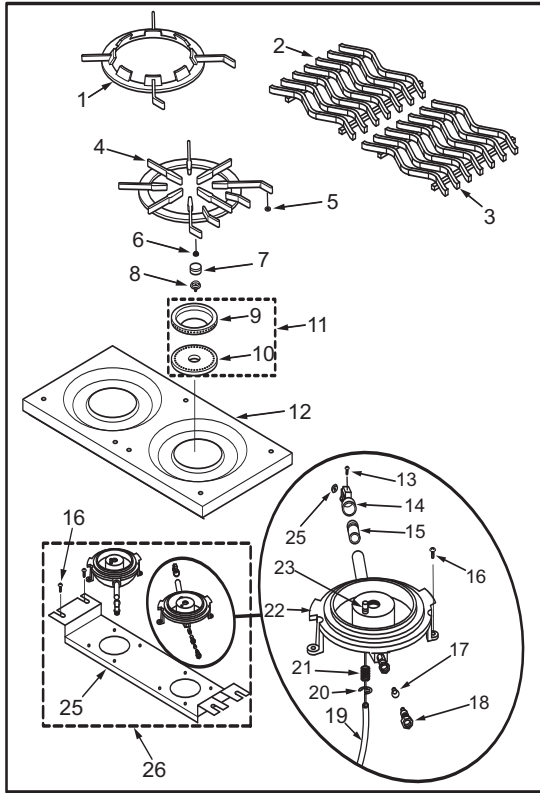



IR Charbroiler

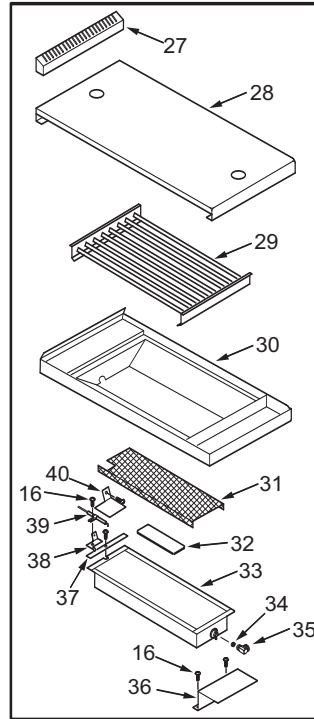

IR Griddle

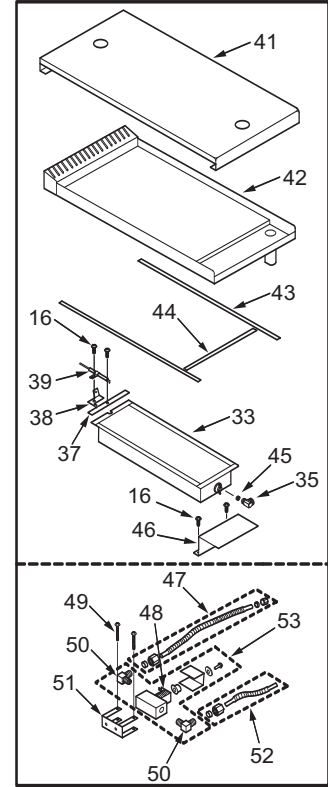

French Top

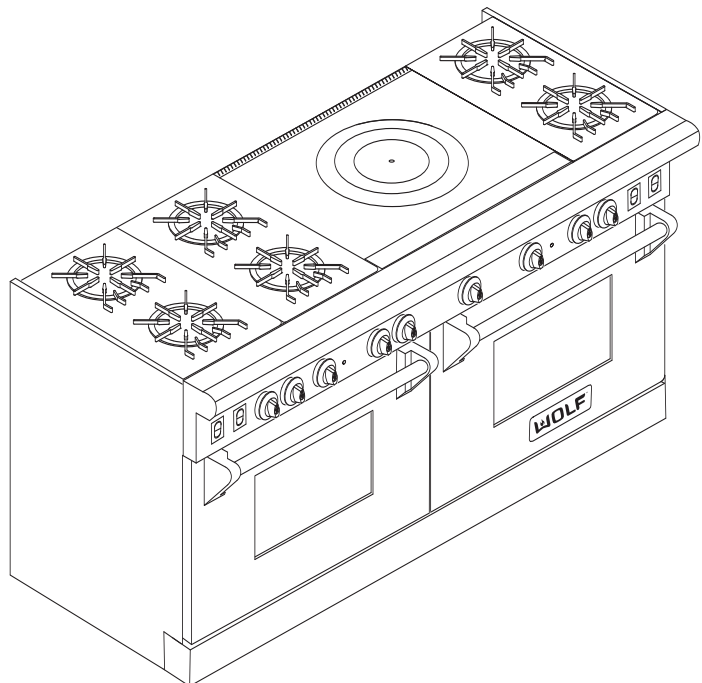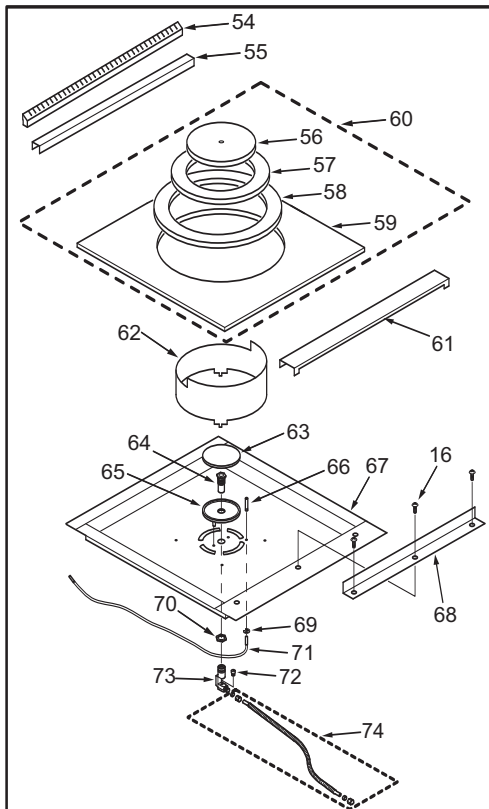


60" Range Front Panel Parts List (1 of 2)

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	766543	Baffle, Broiler 30" Range
2	720690	Seal, Door Top (See SN Break)
	803809	Gasket, Door 30" (See SN Break)
3	720692	Seal, Door Side (See SN Break)
	803809	Gasket, Door 30" (See SN Break)
4	730513*	Nut, Hex 3/8-16
5	730311*	Washer, Lock
6	718195*	Bolt, Trunion
	803579*	Bolt, Trunion, Offset
	730310*	Washer, Trunion Shim
7	730228	Screw #10-24 x 1/2"
8	720691	Seal, Door Bottom (See SN Break)
	803809	Gasket, Door 30" (See SN Break)
9	721013	Leg, Range, 3"
10	803436	Caster Dual Wheel 2"
11	730239	Screw #8-32 x 3/8"
12	722713	Label, Light Switch
13	722712	Label, Fan Switch
14	714902	Thermostat, Oven
15	805787	Thermostat, Griddle
16	787540	Panel, Front (See SN Breaks)
	801093	Panel, Front R606CG Also need to order # 722713 and # 722712 (See SN Breaks)
17	715142	Terminal, Command Dummy
18	722564	Shield, Switch Terminal
19	720816	Switch, Oven Light
20	720815	Switch, Oven Fan
21	720879	Knob, Control, Red (See SN Breaks)
	801312	Knob, Surface Burner Valve, Red
	720880	Knob, Control, Black (See SN Breaks)
	801313	Knob, Surface Burner Valve, Black
22	718146	Bezel, Oven Thermostat (See SN Breaks)
	801348	Bezel, W/Tick Mark (See SN Breaks)
23	720818	Knob, Oven, Red (See SN Breaks)
	801308	Knob, Oven Therm, W/ Broil, Red See SN Breaks)
	720819	Knob, Oven, Black (See SN Breaks)
	801309	Knob, Oven Therm, W/ Broil, Black (See SN Breaks)
24	721014	Knob, Thermostat Griddle, Red (See SN Breaks)
	801310	Knob, Thermostat Griddle, Red (See SN Breaks)
	721015	Knob, Thermostat Griddle, Black See SN Breaks)
25	730076	Screw #6-32 x 1/4"
26	721017	Knob, Charbroiler, Red (See SN Breaks)
	801306	Knob, Charbroiler/French To, Red (See SN Breaks)
	721018	Knob, Charbroiler, Black (See SN Breaks)
	801307	Knob, Charbroiler/French Top, Black (See SN Breaks)
27	801347	Bezel, Rear (See SN Breaks)
28	801346	Bezel, Front (See SN Breaks)
29	720017	Light, Indicator, Red, Oven
30	787536	Panel, Front, 6OB & 22" Charbroil (See SN Breaks)
	801091	Panel, Front R606DC Also need to order # 722713 and # 722712 (See SN Breaks)
31	787534	Panel, Front, 6OB & 22" Griddle (See SN Breaks)
	801090	Panel, Front R606DG Also need to order # 722713 and # 722712 (See SN Breaks)

<p>* - Prior to Serial Number (PTS) 17000000 ** - Starting with Serial Number (SWS) 17000000</p>

60" Range Front Panel View (1 of 2)

NOTE: SEE FOLLOWING PAGE FOR
ADDITIONAL 60" RANGE
FRONT PANEL VIEWS

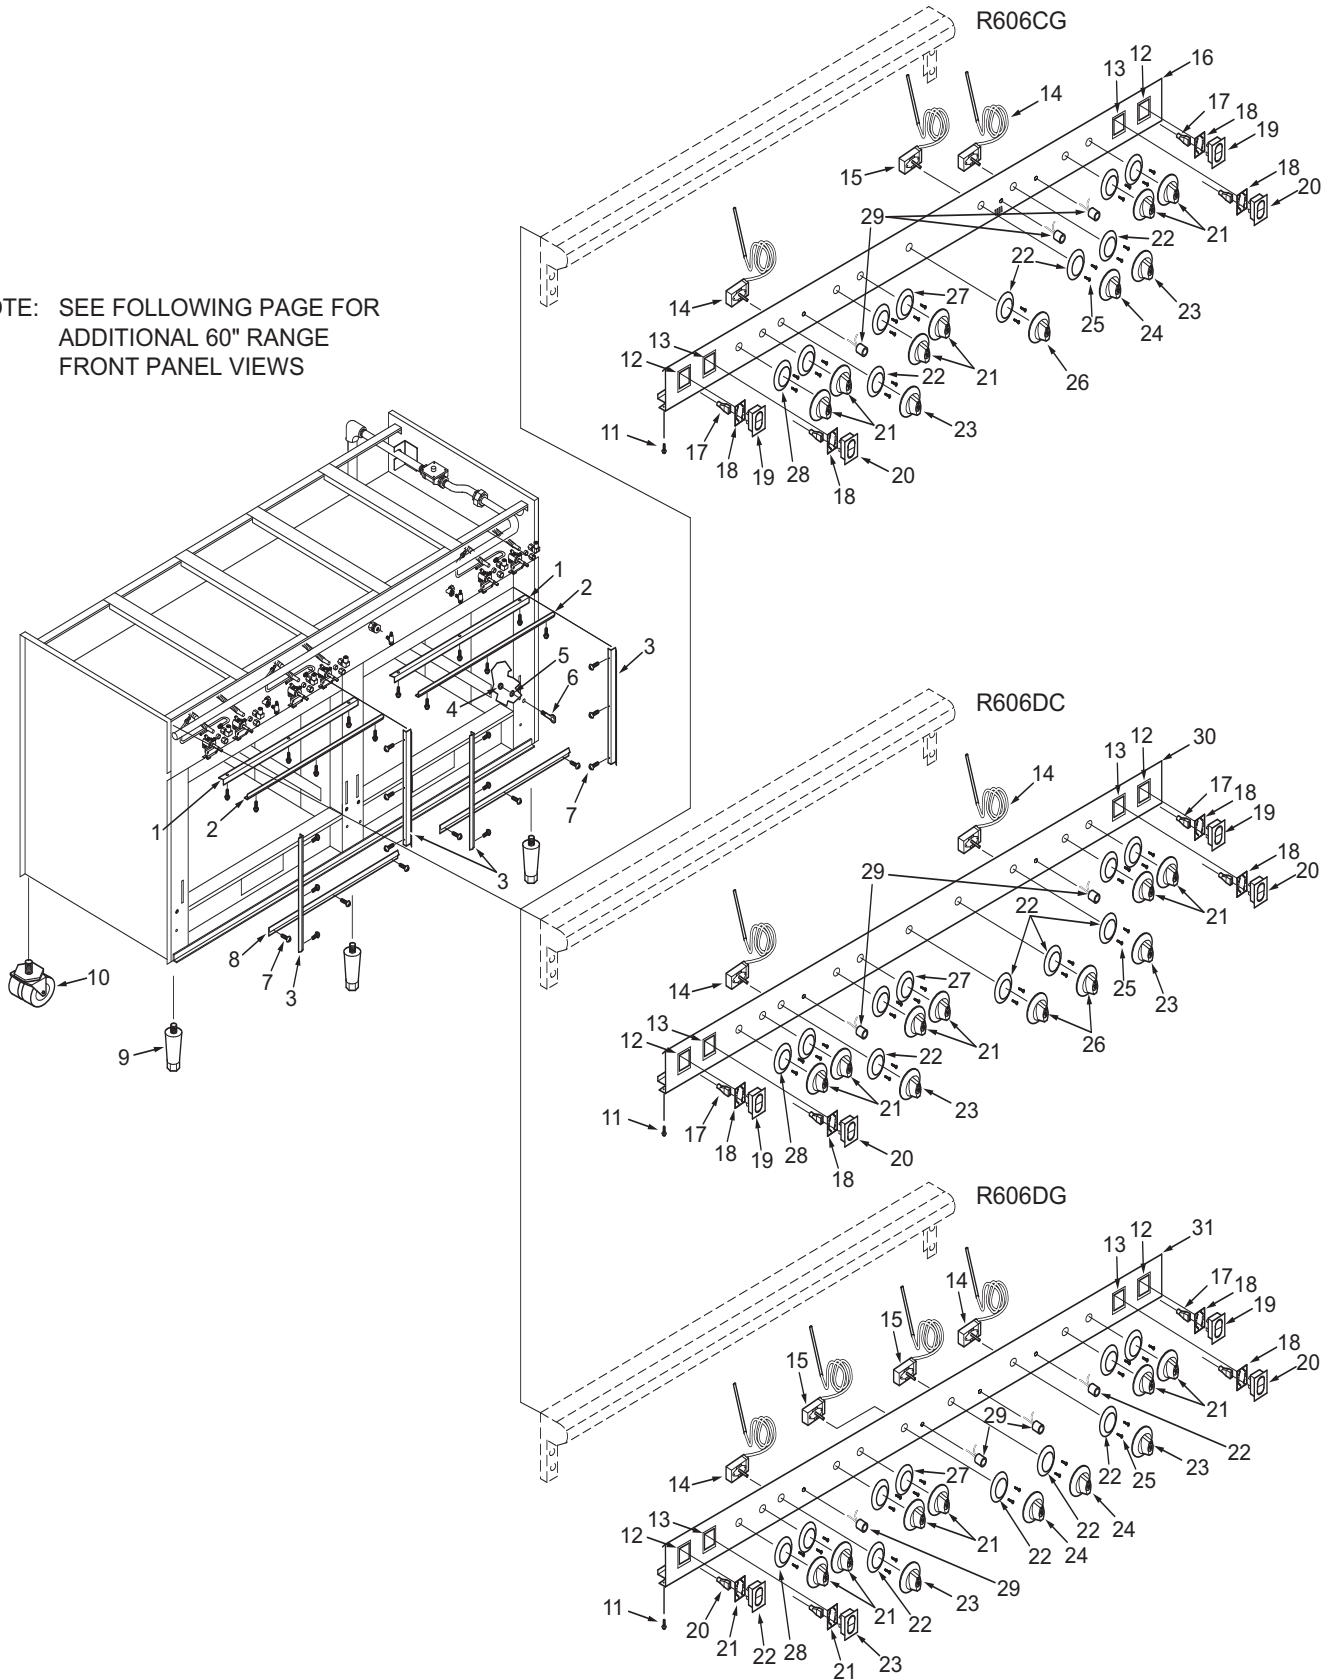


60" Range Front Panel Parts List (2 of 2)

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	766543	Baffle, Broiler 30" Range
2	720690	Seal, Door Top (See SN Break)
	803809	Gasket, Door 30" (See SN Break)
3	720692	Seal, Door Side (See SN Break)
	803809	Gasket, Door 30" (See SN Break)
4	730513*	Nut, Hex 3/8-16
5	730311*	Washer, Lock
6	718195*	Bolt, Trunion
	803579*	Bolt, Trunion, Offset
	730310*	Washer, Trunion Shim
7	730228	Screw #10-24 x 1/2"
8	720691	Seal, Door Bottom (See SN Break)
	803809	Gasket, Door 30" (See SN Break)
9	721013	Leg, Range, 3"
10	803436	Caster Dual Wheel 2"
11	730239	Screw #8-32 x 3/8"
12	722713	Label, Light Switch
13	722712	Label, Fan Switch
14	714902	Thermostat, Oven
15	787538	Panel, Front, 6OB & French Top
	801092	Panel, Front R606F Also need to order # 722713 and # 722712 (See SN Break)
16	715142	Terminal, Command Dummy
17	722564	Shield, Switch Terminal
18	720816	Switch, Oven Light
19	720815	Switch, Oven Fan
20	720879	Knob, Control, Red (See SN Break)
	801312	Knob, Surface Burner Valve, Red
	720880	Knob, Control, Black (See SN Break)
	801313	Knob, Surface Burner Valve, Black
21	720017	Light, Indicator, Red, Oven
22	720818	Knob, Oven, Red (See SN Break)
	801308	Knob, Oven Therm, W/ Broil, Red (See SN Break)
	720819	Knob, Oven, Black (See SN Break)
	801309	Knob, Oven Therm, W/ Broil, Black (See SN Break)
23	730076	Screw #6-32 x 1/4"
24	718146	Bezel, Oven Thermostat (See SN Break)
	801348	Bezel, W/Tick Mark (See SN Break)
25	721017	Knob, Charbroiler, Red (See SN Break)
	801306	Knob, Charbroiler/French Top Valve, Red (See SN Break)
	721018	Knob, Charbroiler, Black (See SN Break)
	801307	Knob, Charbroiler/French Top Valve, Black (See SN Break)
26	801347	Bezel, Rear (See SN Break)
27	801346	Bezel, Front (See SN Break)
28	787542	Panel, Front, 4OB, French Top, 11" Charbroiler
	801094	Panel, Front R606CF Also need to order # 722713 and # 722712 (See SN Break)
29	805787	Thermostat, Griddle
30	787544	Panel, Front, 4OB, French Top, 11" Griddle
	801095	Panel, Front R606GF Also need to order # 722713 and # 722712 (See SN Break)
31	721017	Knob, French Top, Red (See SN Break)
	801306	Knob, Charbroiler/French Top, Red (See SN Break)
	721018	Knob, French Top, Black (See SN Break)
	801307	Knob, Charbroiler/French Top, Black (See SN Break)

<p>* - Prior to Serial Number (PTS) 17000000 ** - Starting with Serial Number (SWS) 17000000</p>

60" Range Front Panel View (2 of 2)

NOTE: SEE PRECEDING PAGE FOR
ADDITIONAL 60" RANGE
FRONT PANEL VIEWS

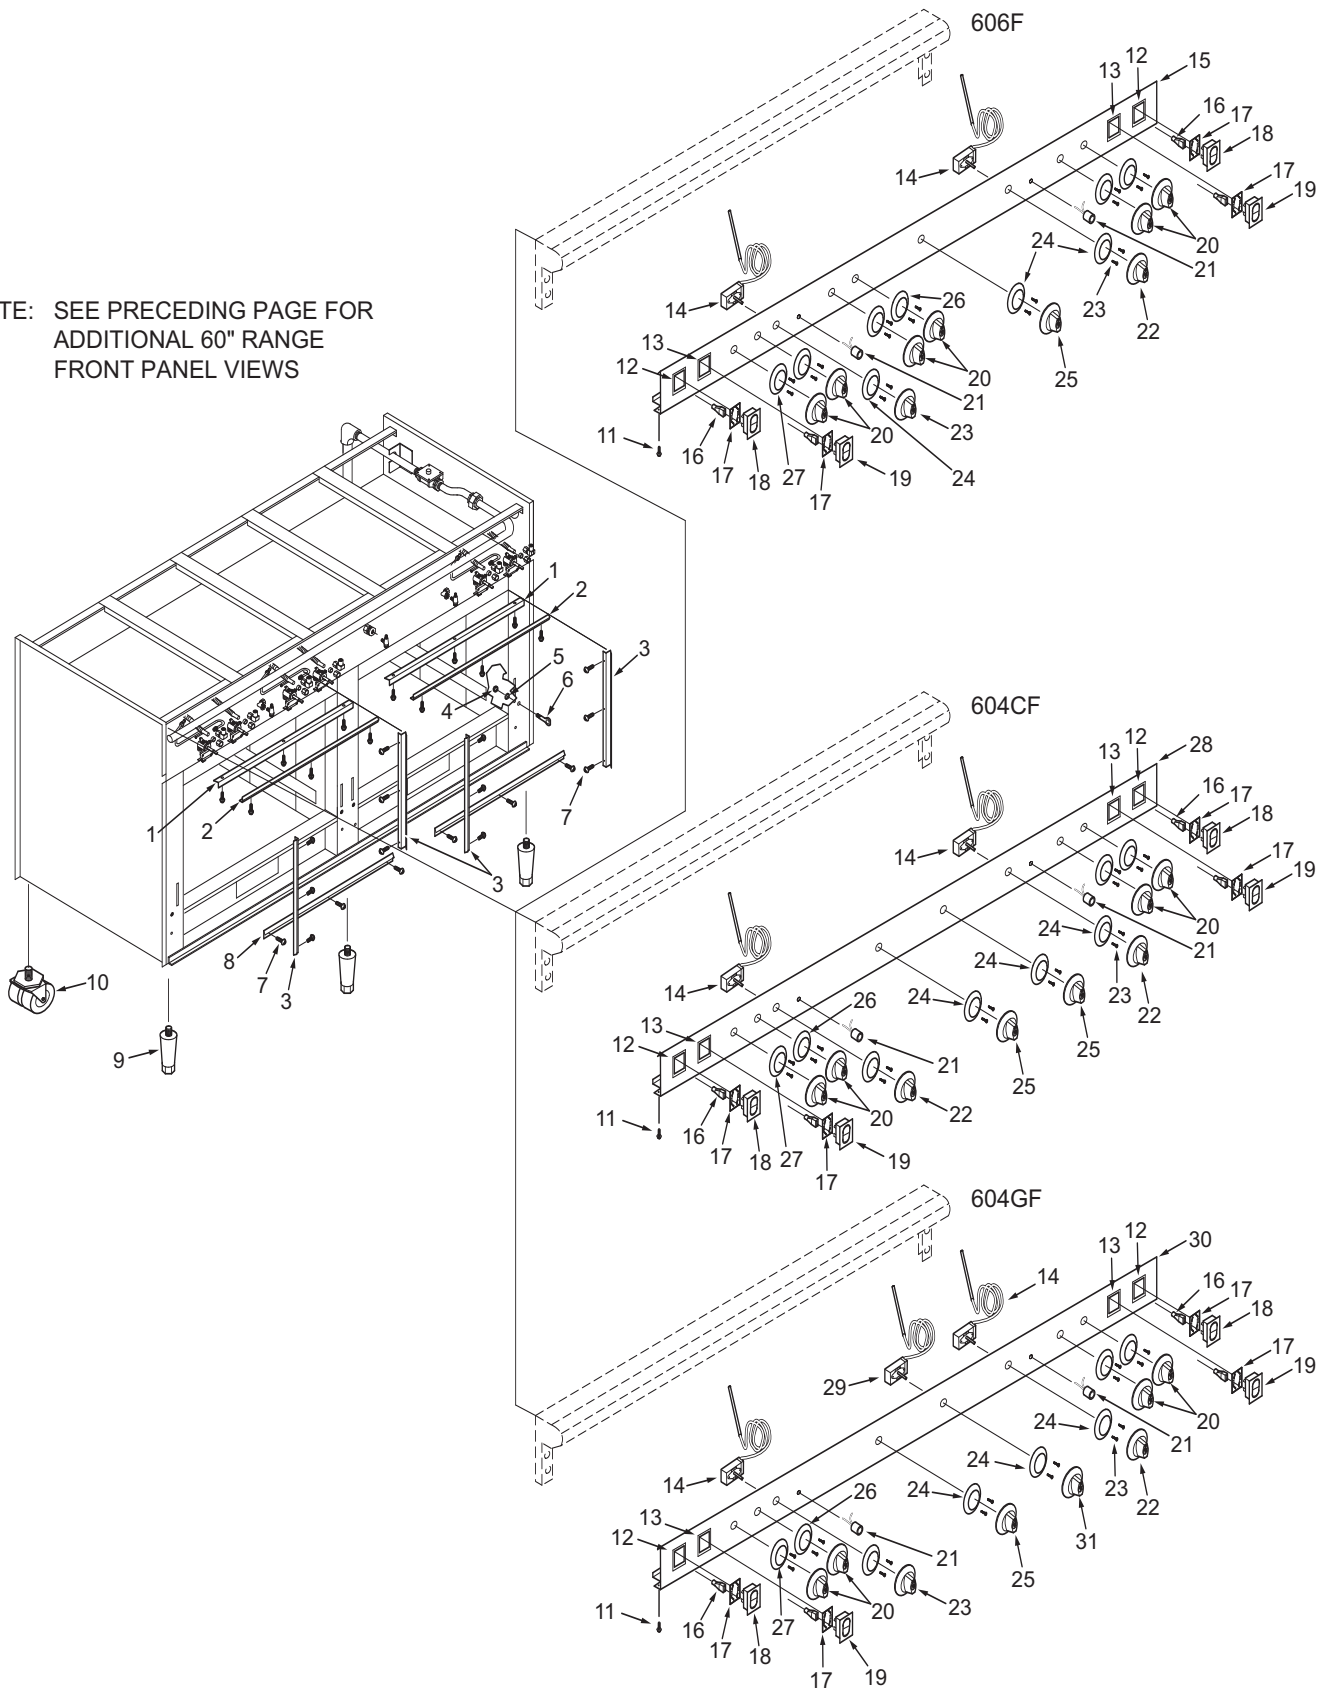

60" Range Manifold Parts List (1 of 2)





<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	803169	Flex Tubing Service Package 3/8" x 48"
2	714369	Bushing, Snap 1/2"
3	786977	Shield, Corner Wire
4	807667	Ferrule, Sleeve Brass
5	807677	Nut, Compress Brass
6	803172	Flex Tubing Service Package 3/8" x 42"
7	803171	Flex Tubing Service Package 5/16" x 14"
8	807677	Nut, Compress Brass
9	807667	Ferrule, Sleeve Brass
10	803172	Flex Tubing Service Package 3/8" x 42"
11	722133	Screw, Hex Head
12	722278	Elbow,Adapter, Compression
13	803167	Flex Tubing Service Package 3/8" x 12"
14	801937	Flex Tubing Service Package 3/16" x 27"
15	720888	Fitting, 3/16"
16	807665	Ferrule, 3/16"
17	723350	Regulator, Pressure Convertible 3/4'
	801358	Regulator, 1/2" Convertible
18	722832	Pipe, Offset
19	720885	Bracket, Valve Mounting
20	719033	Union, 1/2" Black
21	805678	Manifold (R606DC)
	805679	Manifold (R606DG)
	805680	Manifold (R606CG)
22	801936	Flex Tubing Service Package 3/16" x 16"
23	809153	Burner Valve & Switch Assy, Nat
	809154	Valve, Burner, LP Gas
24	800892	Orifice, Bypass Inner, Natural Gas
	800055	Orifice, Bypass Inner, LP Gas
25	800884	Orifice, Bypass Outer, Natural Gas
	800054	Orifice, Bypass Outer, LP Gas
26	807141	Valve, Switch
27	719393	Elbow Brass, 3/8"
28	719370	Plug, Hex Head, 1/8"
29	720330	Valve, Shut Off, Oven
30	713810	Switch, Valve Ignition
31	722413	Valve, Brass 3/8"
32	714361	Connector, 3/8"
33	714296	Tee, 3/8"
34	722224	Tubing, Flex, 3/8" x 30"

Not Shown

800292	Wiring Harness, Manifold, R606CG
800513	Wiring Harness, Manifold, R606DC
806404	Wiring Harness, Manifold, R606DG
800294	Wiring Harness, Cover, R606CG
800515	Wiring Harness, Cover, R606DC
806406	Wiring Harness, Cover, R606DG

60" Range Manifold View (1 of 2)

NOTE: SEE FOLLOWING PAGE FOR
ADDITIONAL 60" RANGE
MANIFOLD VIEWS

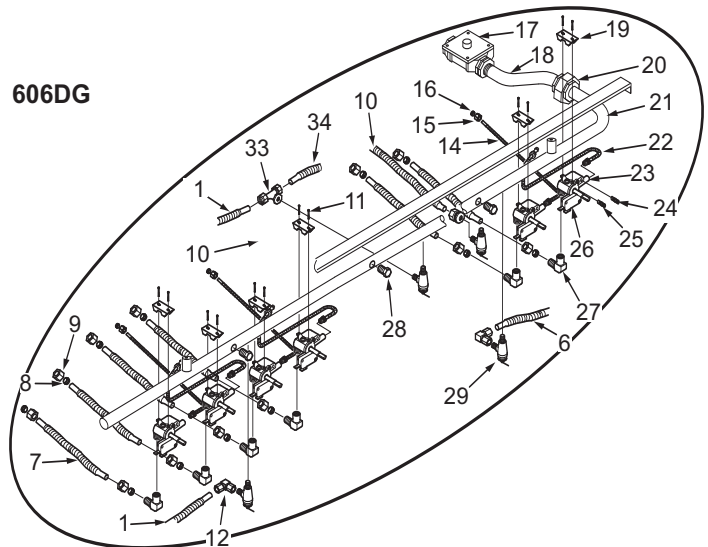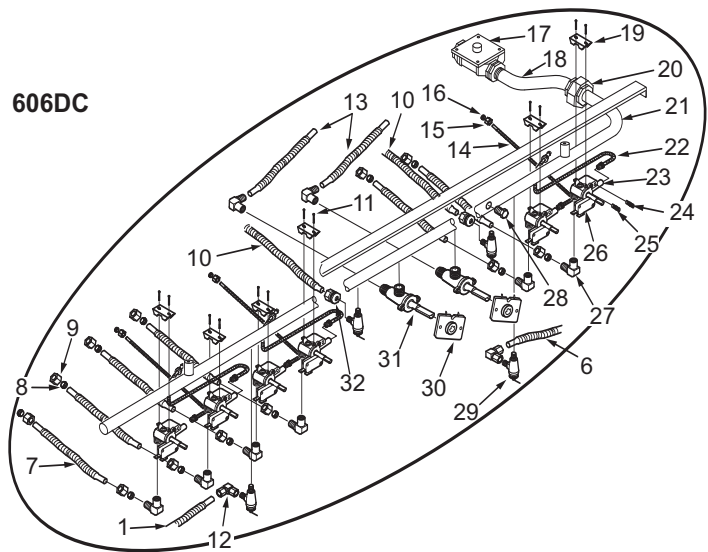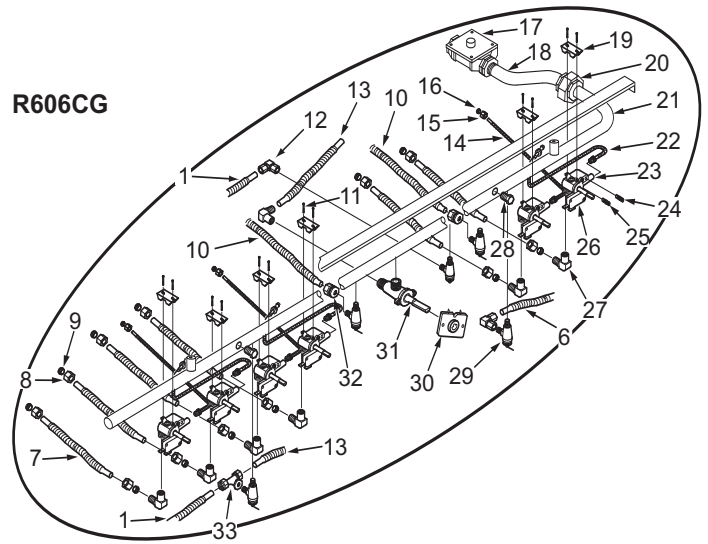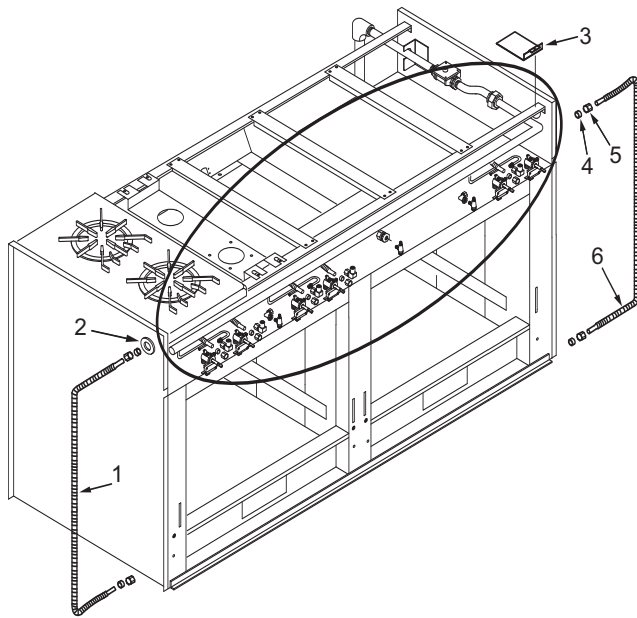

60" Range Manifold Parts List (2 of 2)





<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	803169	Flex Tubing Service Package 3/8" x 48"
2	714369	Bushing, Snap 1/2"
3	786977	Shield, Corner Wire
4	807667	Ferrule, Sleeve Brass
5	807677	Nut, Compress Brass
6	803172	Flex Tubing Service Package 3/8" x 42"
7	803171	Flex Tubing Service Package 5/16" x 14"
8	807677	Nut, Compress Brass
9	807667	Ferrule, Sleeve Brass
10	803172	Flex Tubing Service Package 3/8" x 42"
11	803167	Flex Tubing Service Package 3/8" x 12"
12	722133	Screw, Hex Head
13	720885	Bracket, Valve Mounting
14	801937	Flex Tubing Service Package 3/16" x 27"
15	720888	Fitting, 3/16"
16	807665	Ferrule, 3/16"
17	723350	Regulator, Pressure Convertible 3/4'
	801358	Regulator, 1/2" Convertible
18	722832	Pipe, Offset
19	719033	Union, 1/2" Black
20	805677	Manifold (R606F)
21	801936	Flex Tubing Service Package 3/16" x 16"
22	809153	Burner Valve & Switch Assy, Nat
	809154	Valve, Burner, LP Gas
23	800892	Orifice, Bypass Inner, Natural Gas
	800055	Orifice, Bypass Inner, LP Gas
24	800884	Orifice, Bypass Outer, Natural Gas
	800054	Orifice, Bypass Outer, LP Gas
25	807141	Valve, Switch
26	719393	Elbow Brass, 3/8"
27	719370	Plug, Hex Head, 1/8"
28	720330	Valve, Shut Off, Oven
29	722278	Elbow,Adapter, Compression
30	714361	Connector, 3/8"
31	713810	Switch, Valve Ignition
32	722413	Valve, Brass 3/8"
33	805671	Manifold (R604CF)
	805672	Manifold (R604GF)
34	714296	Tee, 3/8"
35	722224	Tubing, Flex, 3/8" x 30"

Not Shown

800288	Wiring Harness, Manifold, R606F
800296	Wiring Harness, Manifold, R604CF
800280	Wiring Harness, Manifold, R604GF
800290	Wiring Harness, Cover, R606F
800298	Wiring Harness, Cover, R604CF
800282	Wiring Harness, Cover, R604GF

60" Range Manifold View (2 of 2)


**NOTE: SEE PRECEDING PAGE FOR
ADDITIONAL 60" RANGE
MANIFOLD VIEWS**

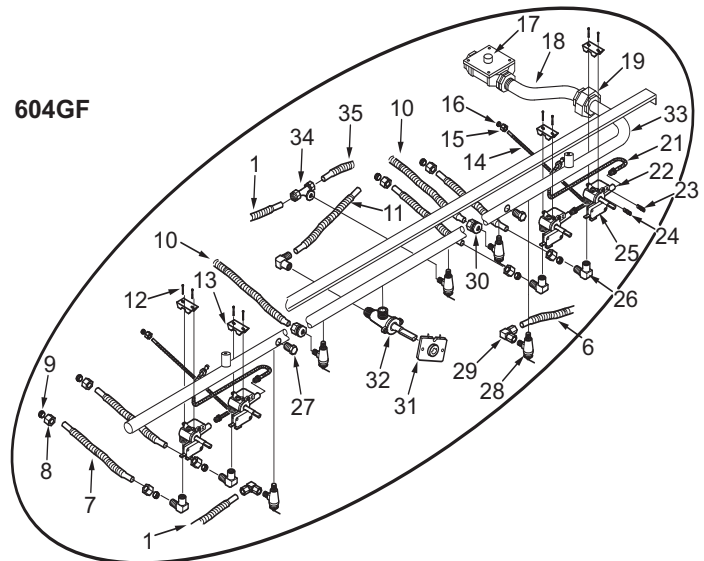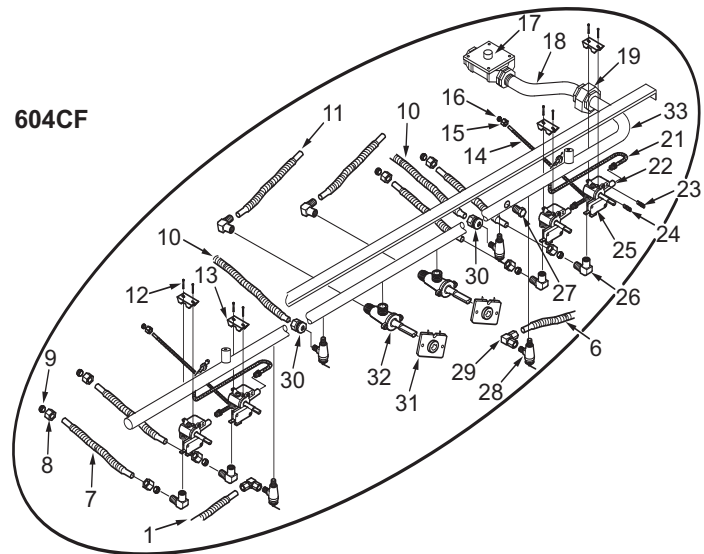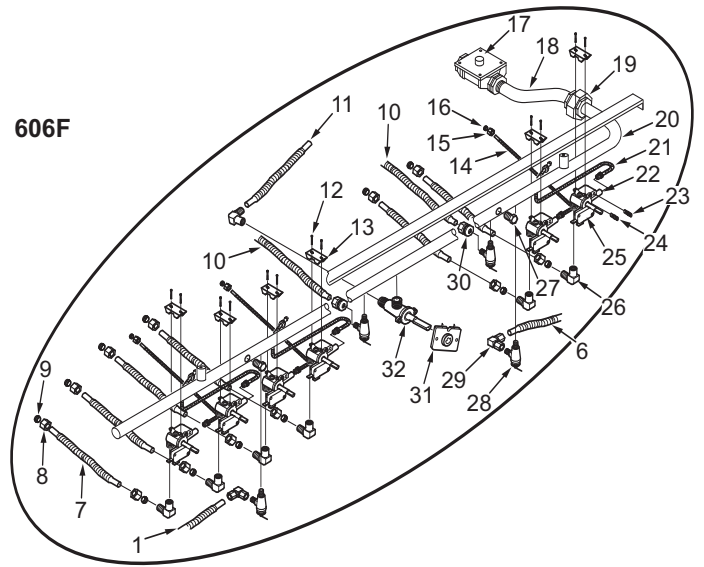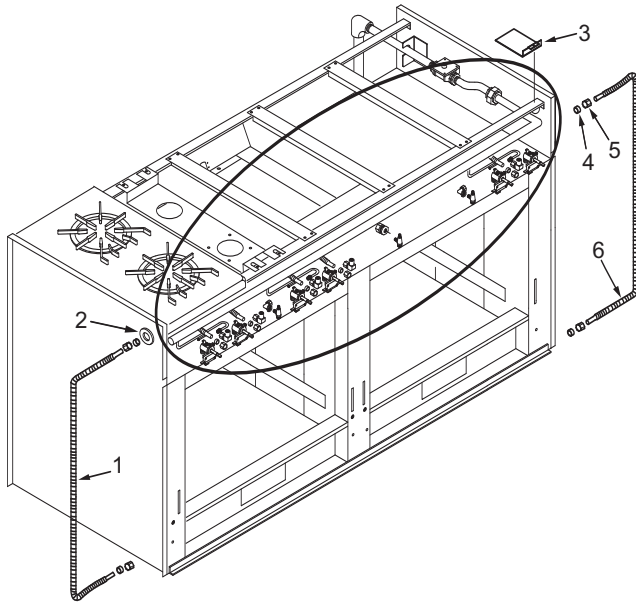

60" Range Oven Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	809157	Burner, Infrared Oven
2	801686	Bracket, Burner Left/Right
3	766592	Bracket, Burner Front/Rear
4	730228	Screw, #10-24 x 1/2"
5	801258	Bracket, Igniter, IR Range
6	723060	Igniter, Hot Surface
7	801690	Cover, Igniter Shield, Range
8	730230	Screw #8-32 x 3/8"
9	806873	Thermo Bulb Housing Assembly
10	806873	Thermo Bulb Housing Assembly
11	800120	Oven Deflector Rest
12	718601	Igniter, Norton
13	720696	Lamp, Oven Assembly
14	342766	Lamp, Oven 40w, 120v
15	720830	Lens
16	715221	Motor, Oven Fan
17	766451	Plug, Motor Mount
18	800628	Blade, Convection Fan
19	730229	Screw, #10-24 x 1-1/2"
20	766456	Cover, Blower Oven
21	720682	Rack, Guide
22	720683	Rack, Oven 30" Range
23	809669	Grill, Broiler Pan
24	766420	Deflector, Oven Bottom Range
25	766418	Panel, Oven Bottom 30" Range (See SN Break)
	807945	Panel Oven Bottom 30" (See SN Break)
26	812107	Valve, Oven Safety Single Hole
27	803166	Flex Tubing Service Package 6"
28	719385	Orifice Holder
29	800071	Orifice, Large Oven Natural Gas
	800059	Orifice, Large Oven LP
30	807734	Orifice Bracket, Range
31	766545	Baffle, Lower Front
	807861	Baffle, Lower Front
32	803973	Heatsink
33	803814	Burner Tube, Oven (See SN Break)
	807729	Buner Tube, Bake (See SN Break)
34	766546	Baffle, Flue Range
35	801258	Bracket, Igniter
36	719393	Elbow, Brass 3/8"
37	809668	Pan, Broiler

60" Range Oven View

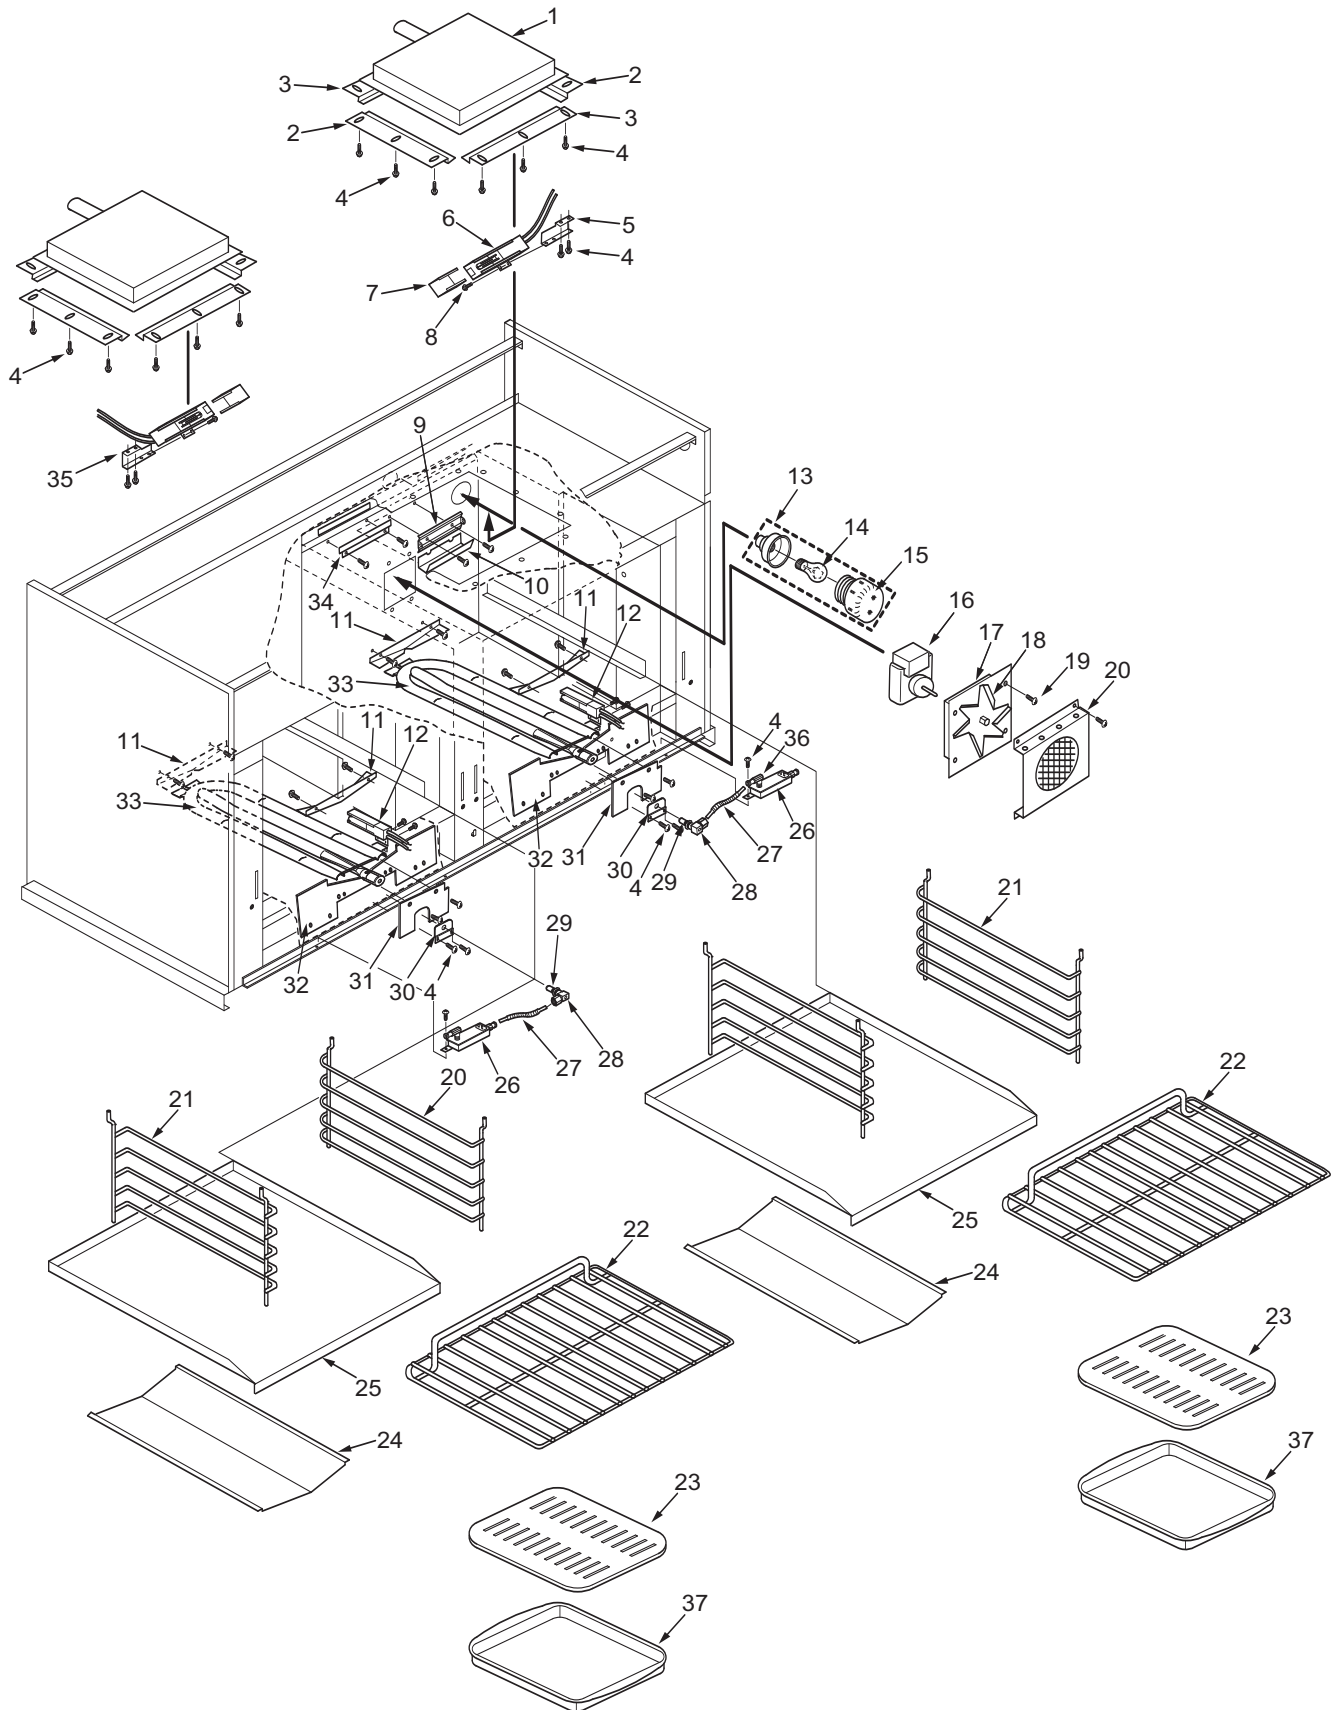


60" Range Rear Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	809243	Cord, Power
2	719393	Elbow, 3/8" x 3/8"
3	730230	Screw #8-32 x 3/8"
4	803166	Flex Tubing Service Package 3/8" x 6"
5	812106	Valve, Broiler Safety
6	766542	Bracket, Safety Valve-Relay
7	766482	Cover, Blower Motor, Range
8	730228	Screw #10-24 x 1/2" Phillips
9	800246	Washer, Flat, Teflon
10	811868	Panel, Module Range
11	730239	Screw #8 x 3/8"
12	722383	Relay, Fan
13	809416	Module, Spark 6 Point
	809418	Module, Spark 4 Point
14	786776	Box, Flue Assembly
15	786835	Box, Flue Center Assembly
16	766593	Angle, Wall Brace
17	786650	Brace, Rear Bottom, 48" Range
18	719503	Plate, Face Electrical Box
19	719502	Box, Electrical
20	719068	Bushing, 3/4" NPT X 1/2" NPT
21	719049	Elbow, 3/4"
	801457	Elbow 1/2" x 1/2"
22	713494	Nipple, 3/4" x 22", Large
	801456	Nipple, 1/2" x 22-3/4"
23	786768	Bracket, Manifold Support
24	801459	Nipple, 1/2" x 3-1/2"
25	721030	Gasket, Red Rubber
26	722278	Elbow, Adapter Compression
27	800259	Orifice, W/ELB Broil Natural (Stamp #48)
	800057	Orifice, IR Broil (LP) 1.181MM (Stamp #56)

Not Shown

800247	Silicone, Red High Temp.
800291	Wiring Harness, Back, R606CG
800512	Wiring Harness, Back, R606DC
800283	Wiring Harness, Back, R606DG
800287	Wiring Harness, Back, R606F
800295	Wiring Harness, Back, R604CF
800279	Wiring Harness, Back, R604GF

60" Range Rear View

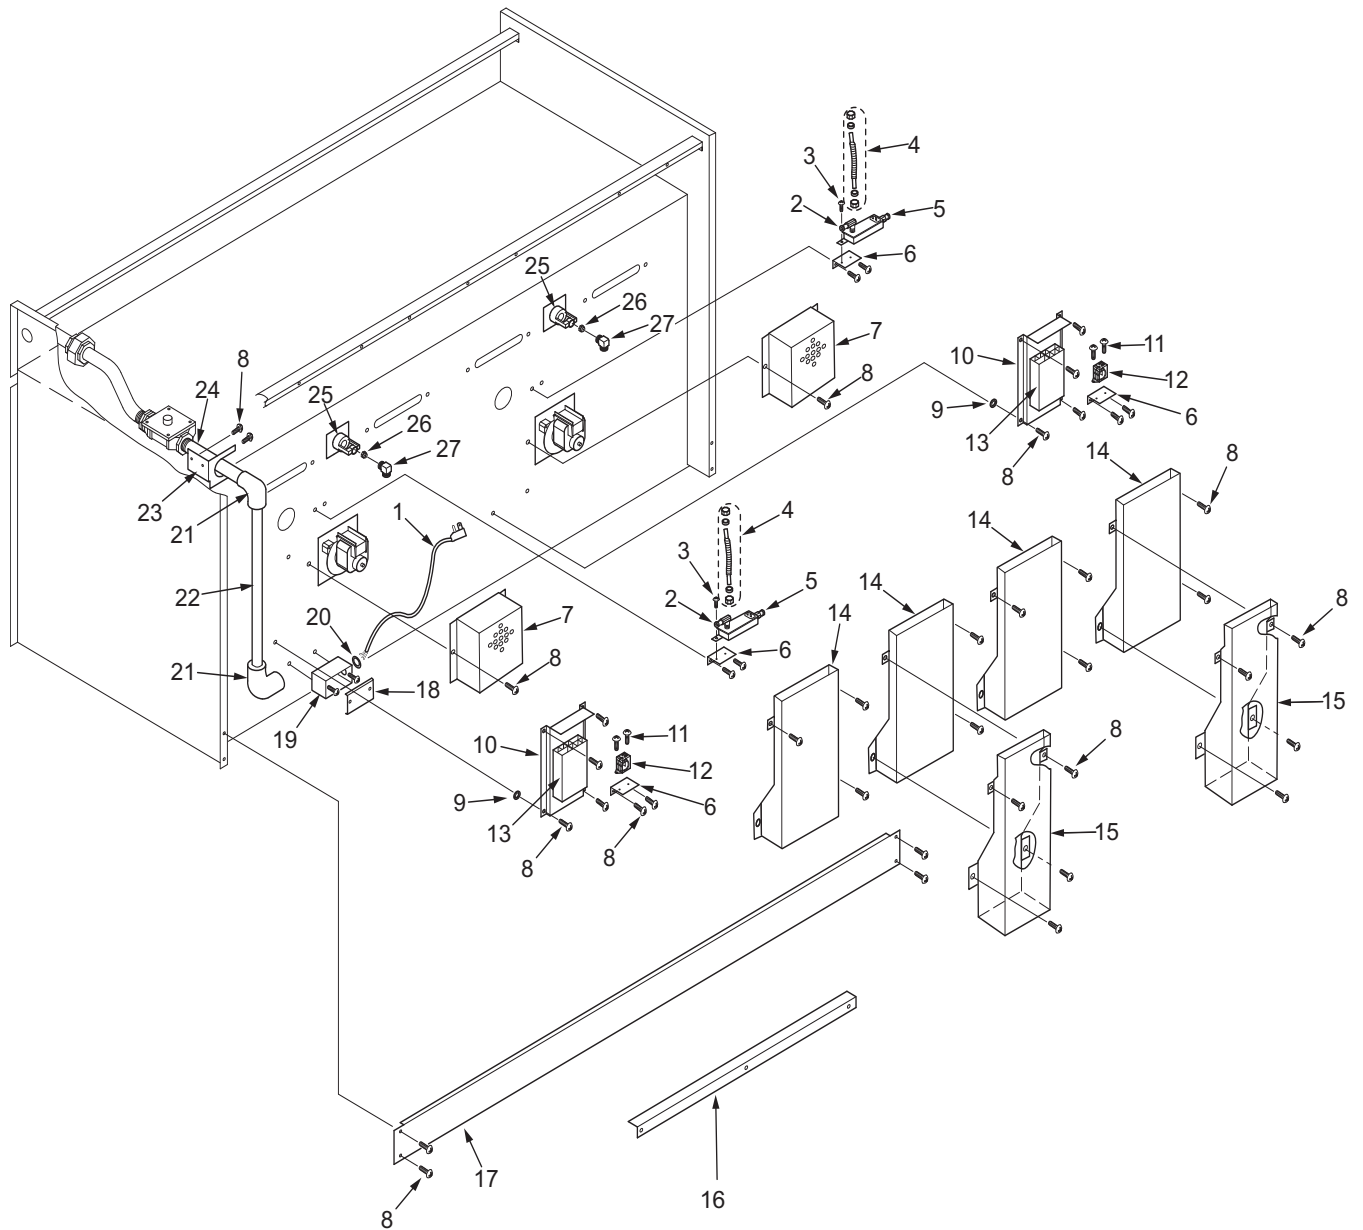

36" Rangetop Top & Dress Panels Parts List


Ref #	Part #	Description	Ref #	Part #	Description
1	801669	Grate, Wok (See SN Breaks)	37	810099	Spacer, IR Burner
	804230	Grate, Wok (See SN Breaks)	38	786029	Bracket, Sparker
2	800146	S Grate, Rear (See SN Breaks)	39	714415	Sparker
	804229	S Grate, Rear (See SN Breaks)	40	804711	Shield, Charbroiler Electrode
3	800137	S Grate, Front (See SN Breaks)	41	801265	Single Griddle Cover Kit - 11"
	804228	S Grate, Front (See SN Breaks)			Griddle (See SN Breaks)
4	720829	Grate, Spider (See SN Breaks)		809311	Griddle Cover - 11" New Style
	811561	Grate, Spider (See SN Breaks)			Griddle
5	722421	Grate Foot Pad (See SN Breaks)	42	802508	Griddle Assembly, 11"
6	722422	Washer, Silicone, Spider Grate (See SN Breaks)	43	800067	Seal, Griddle, 20"
			44	800066	Seal, Griddle, 9"
7	720801	Burner, Inner Head, Plated	45	800048	Orifice, IR Charbroiler, Natural Gas
	800041	Burner, Inner Head, Black Enamel		800050	Orifice, IR Charbroiler, LP Gas
8	720887	Base, Inner Burner	46	786127	Baffle, Griddle
	800044	Burner, Inner Base, Black Enamel	47	803168	Flex Tubing Service Package 3/8" x 18"
9	720803	Burner, Outer (See SN Breaks)	48	770093	Solenoid, (Coil Only)
	801150	Cap, burner, Outer Head, Black Enamel	49	730229	Screw #10-24 x 1-1/2"
			50	719376	Elbow, Brass 3/8"
10	720802	Ring, Cross (See SN Breaks)		719377	Fitting, Straight 3/8"
	801151	Ring, Burner, Inner Base, Black Enamel	51	804404	Holder, Single Solenoid
				756302	Holder, Double Solenoid
11	803965	Burner Ring/Cap, Service Package	52	803167	Flex Tubing Service Package 3/8" x 12"
12	766446	Top, Pressed Steel, Porcelain (See SN Breaks)	53	807622	Valve, Single Solenoid, w/fittings
	805519	Top, Pressed Steel, (See SN Breaks)	54	803374	Valve, Double Solenoid, w/fittings
			55	786718	Vent, Frenchtop
13	722162	Screw, Phillips Head	56	NLA	Spacer, Rear
14	807864	Holder, Jet Assembly	57	NLA	Ring, Center French Top
15	720886	Venturi	58	NLA	Ring, Inner French Top
16	730228	Screw #10-24 x 1/2"	59	NLA	Ring, Outer French Top
17	800882	Orifice, Inner Burner, Natural Gas	60	806466	Plate, French Top
	800052	Orifice, Inner Burner, LP Gas	61	805658	Components, Frenchtop
18	720888	Fitting, 3/16"	62	786727	Spacer, Front - FT Cover
19	719566	Sleeve, 1/4" Fiberglass	63	723063	Ring, Flame
20	720822	Ring	64	722521	Burner Head
21	807598	Spring	65	722536	Venturi, Gas Hotplate
22	801149	Base, Burner	66	723011	Burner Base
23	806483	Service Components, Electrode	67	786716	Electrode, French Top
24	800872	Orifice, Outer Burner, Natural Gas	68	809880	Pan, Burner
	800051	Orifice, Outer Burner, LP Gas	69	723010	Baffle, Pan French Top
25	767615	Panel, Burner Support	70	722522	Clip, Retaining
26	809019	Burner Assembly - Also need to order 806483	71	800062	Nut, Hotplate
			72	800060	Electrode Wire
27	762215	Backsplash, Decorative		800061	Orifice, French Top Natural Gas
28	759715	Cover, Charbroiler 11"		800061	Orifice, French Top LP Gas
29	786081	Rack, Charbroiler	73	722530	Holder, Jet Gas
30	769593	Frame, Charbroiler	74	803170	Flex Tubing Service Package 1/4" x 12"
31	722631	Screen, Reverberator	75	811332	End, Body LH
32	762444	Plate, Blank Off	76	714522	Insulation
33	809183	Burner, Infrared Assy, Griddle/Charb	77	722270	Rivet, Pop 3/16" Alum Multigrip
			78	811331	End, Body RH
34	800048	Orifice, IR Charbroiler, Natural Gas	79	786714	Pan, Grease SS W/O Dimples
	800050	orifice, IR Carbroiler, LP Gas		801687	Pan, Grease W/Dimples
35	800258	Elbow	80	787399	Pan, Drip Assy. (See SN Breaks)
36	786978	Baffle, Charbroiler		801471	Drip Tray, 36" (See SN Breaks)
			81	801925	36" Roll Front Assy

Not Shown


805637	Cover, Frenchtop Assy-Pro Series
811716	Slide Lh Drip Tray.
811717	Slide Rh Drip Tray
787520	Hook, Center Plate French Top
722218	Hook, Porcelain Top Remover
767627	Spacer, Burner Support
722537	Seal, O-Ring Gas Hotplate (FT)
807066	Shield, Rubber - Electrode

36" Rangetop Top & Dress Panels View


Surface Burner

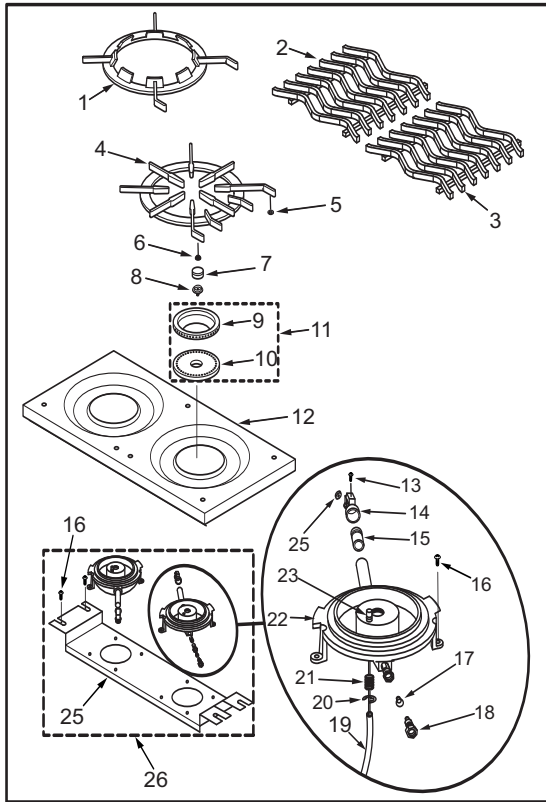



IR Charbroiler

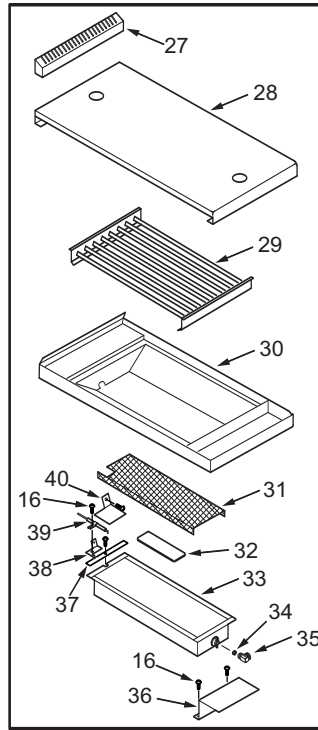

IR Griddle

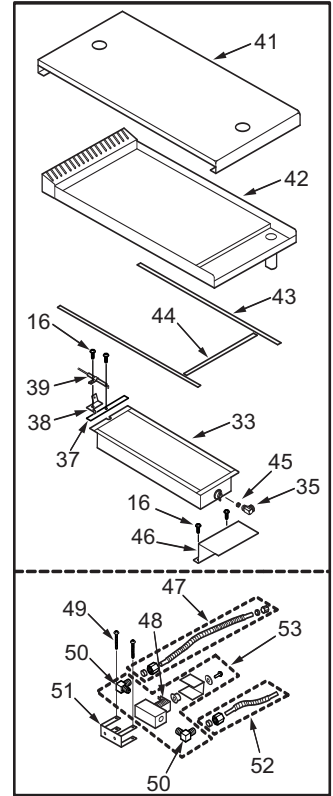


French Top

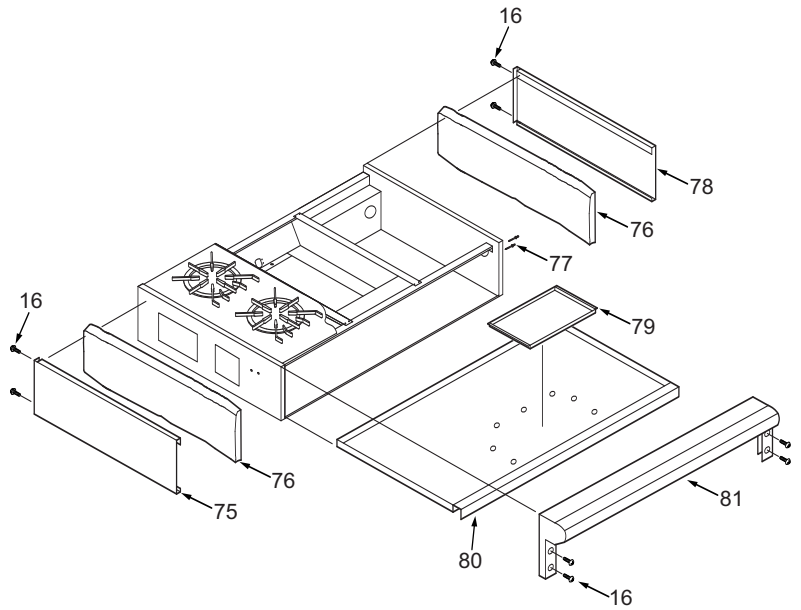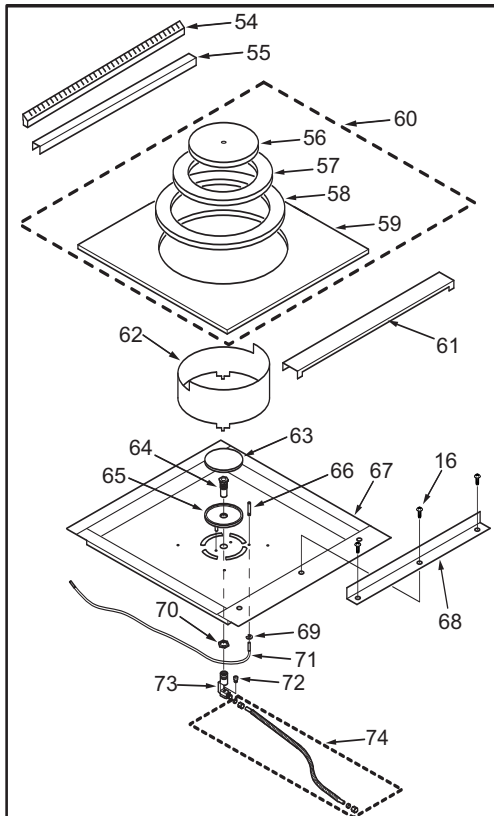

36" Rangetop Front Panel Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787405	Panel, Front SB366 (See S/N Breaks)
	806281	Panel, Front RT366 (See S/N Breaks)
2	801347	Bezel, Rear (See SN Breaks)
3	720879	Knob, Control, Red (See SN Breaks)
	801312	Knob, Surface Burner Valve, Red
	720880	Knob, Control, Black (See SN Breaks)
	801313	Knob, Surface Burner Valve, Black
4	800924	Wolf Logo
5	730509	Clip, Tinnerman
6	730076	Screw #6-32 x 1/4"
7	801346	Bezel, Front (See SN Breaks)
8	730239	Screw #8-32 x 3/8"
9	718146	Bezel, Thermostat
	801348	Bezel, W/Tick Mark
10	721017	Knob, Charbroiler/French Top, Red (See S/N Breaks)
	801306	Knob, Charbroiler/French Top, Red (See S/N Breaks)
	721018	Knob, Char/French Top, Black (See S/N Breaks)
	801307	Knob, Char/French Top, Black (See S/N Breaks)
11	787406	Panel, Front SB364B (See S/N Breaks)
	806282	Panel, Front RT364C (See S/N Breaks)
12	787407	Panel, Front SB364G (See S/N Breaks)
	806283	Panel, Front RT364G (See S/N Breaks)
13	805787	Thermostat, Griddle
14	721014	Knob, Thermostat w/Griddle, Red (See S/N Breaks)
	801310	Knob, Thermostat w/Griddle, Red (See S/N Breaks)
	721015	Knob, Thermostat w/Griddle, Black
	801311	Knob, Thermostat w/Griddle, Black (See S/N Breaks)
	787408	Panel, Front SB362F (See S/N Breaks)
15	806284	Panel, Front RT362F (See S/N Breaks)

36" Rangetop Front Panel View

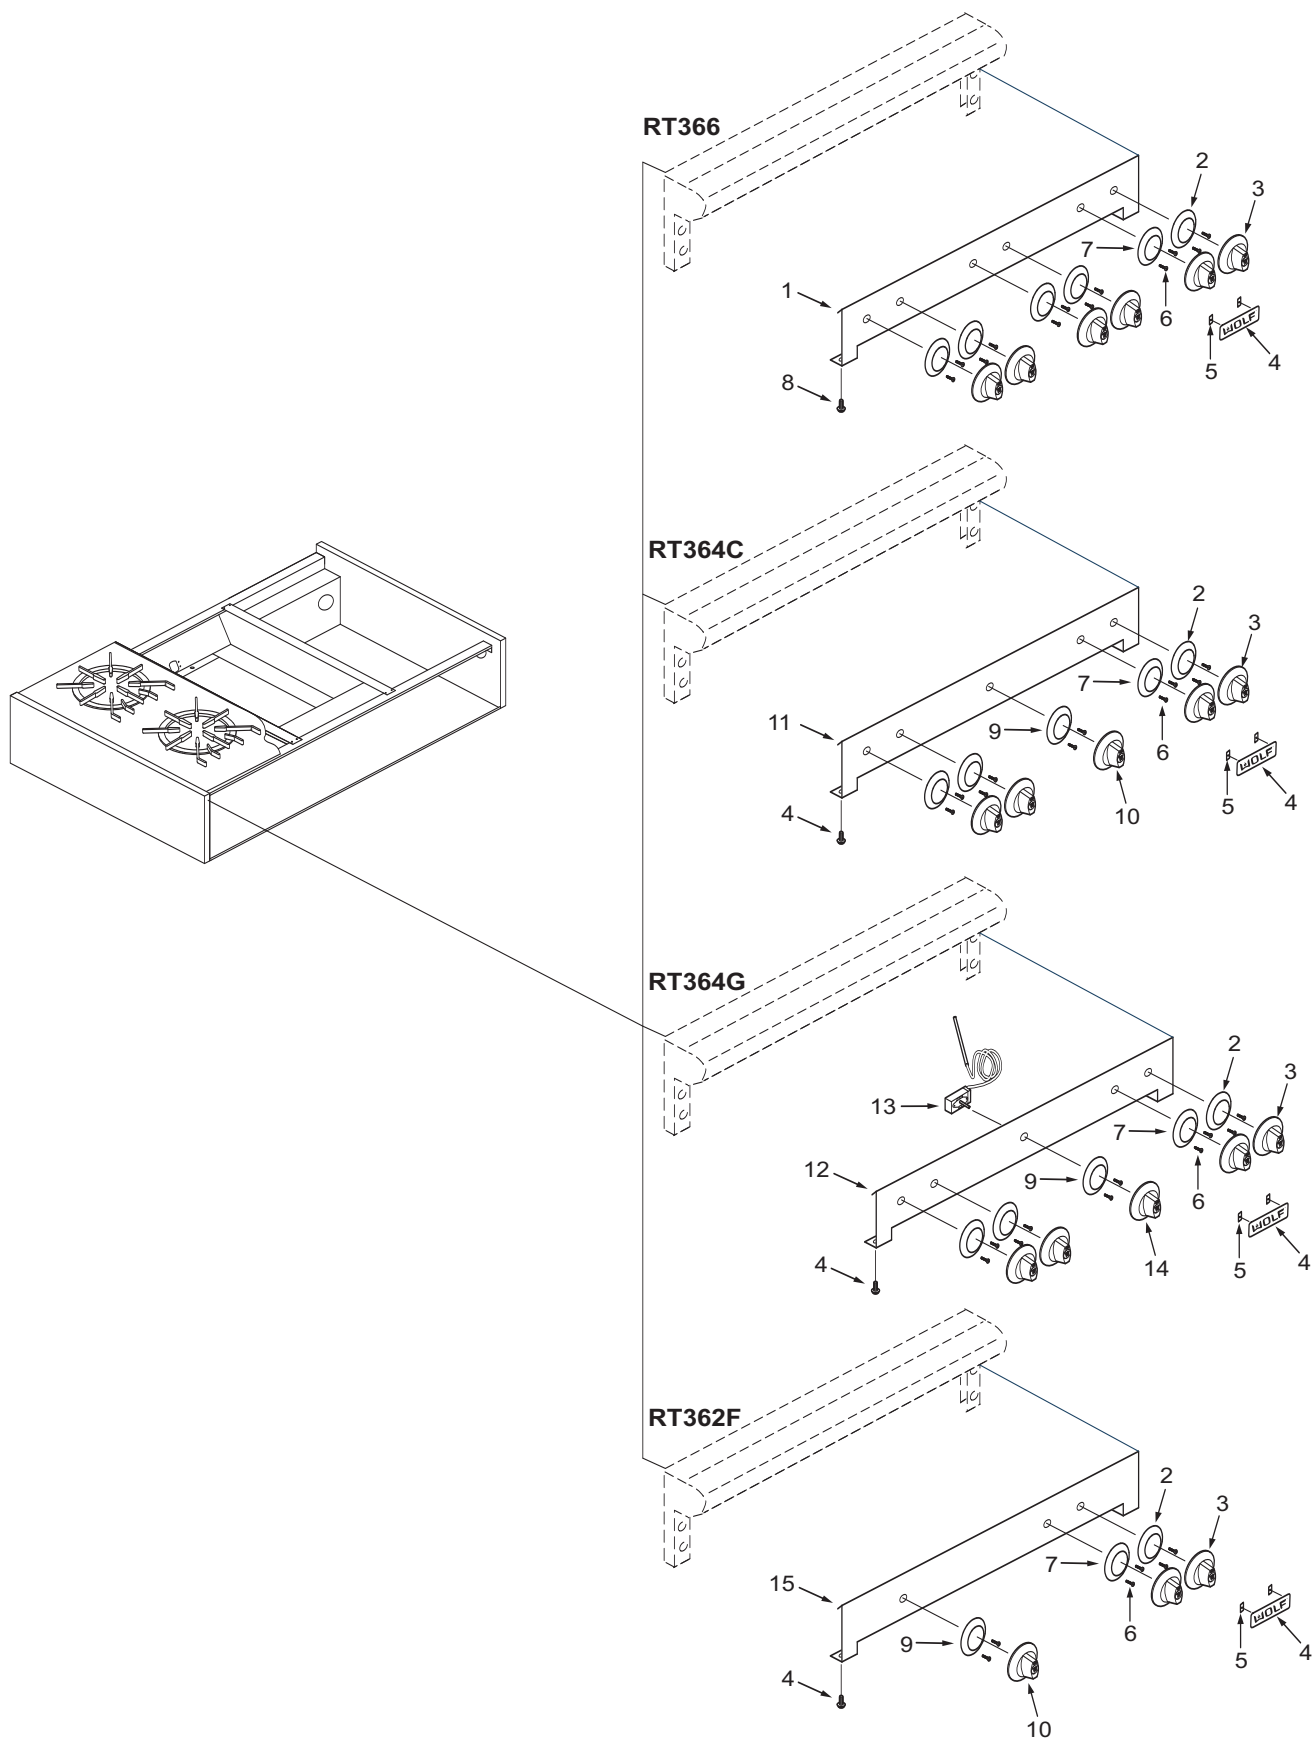


36" Rangetop Manifold Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>	<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	768318	Bracket, Access	23	720885	Bracket, Valve Mounting
2	809418	Module, Spark +4 Point	24	722133	Screw, Hex Head
	809420	Module, Spark 0+1 Tech	25	720888	Fitting, 3/16"
3	730228	Screw #10-24 x 1/2"	26	807665	Ferrule, 3/16"
4	723350	Regulator, 3/4" Convertible	27	804427	Manifold (RT366)
	801358	Regulator, 1/2" Convertible	28	719370	Plug, Hex Head, 1/8"
5	N/A		29	801936	Flex Tubing Service Package
6	N/A				3/16" x 16"
7	769122	Channel, Electrical	30	800892	Orifice, Bypass Inner, Natural Gas
8	N/A			800055	Orifice, Bypass Inner, LP Gas
9	809243	Cord, Power	31	800884	Orifice, Bypass Outer, Natural Gas
10	804189	Nipple, .50 X2.5 LG Black Pipe		800054	Orifice, Bypass Outer, LP Gas
11	801457	Elbow, 1/2"Npt x 1/2"Npt	32	809153	Burner Valve & Switch Assy, Nat
12	787418	Channel, Rear		809154	Valve, Burner, LP Gas
13	711302	Nipple, 1/2" x 5"	33	807141	Valve, Switch
14	719033	Union, 1/2" Black	34	719393	Elbow, Brass 3/8"
15	717417	Channel, Front	35	722278	Elbow, Adapter, Compression
16	722270	Rivet, Pop 3/16" Alum Multigrip	36	803166	Flex Tubing Service Package
17	800023	10-1/2" Riser Package, Rt36			3/8" x 6"
18	808975	Panel, Rear	37	804428	Manifold (RT364C)
19	803171	Flex Tubing Service Package	38	713810	Switch, Valve Ignition
		5/16" x 14"	39	722413	Valve, Brass
20	807667	Ferrule, Sleeve Brass	40	722223	Tubing, Flexible, 3/8 x 24"
21	807677	Nut, Compress Brass	41	714296	Tee
22	801937	Flex Tubing Service Package	42	804429	Manifold (RT364G)
		3/16" x 27"	43	720330	Valve, Shut Off, Oven
			44	804430	Manifold (RT362CF)

Not Shown

<u>Part #</u>	<u>Description</u>
800171	Wiring Harness RT366
800172	Wiring Harness RT364C
800173	Wiring Harness RT364G
800174	Wiring Harness RT362F
714771	Riser, Insulation, 1/8" x 17" x 33"
803876	Riser, Back Panel Assy
803880	Riser, front Panel Assy
763047	Strip Filler, Left Hand
763048	Strip Filler, Right Hand
800001	Island Trim Strip LH, RH & Rear
762141	Panel, Back
762053	Strip, Back Filler

36" Rangetop Manifold View

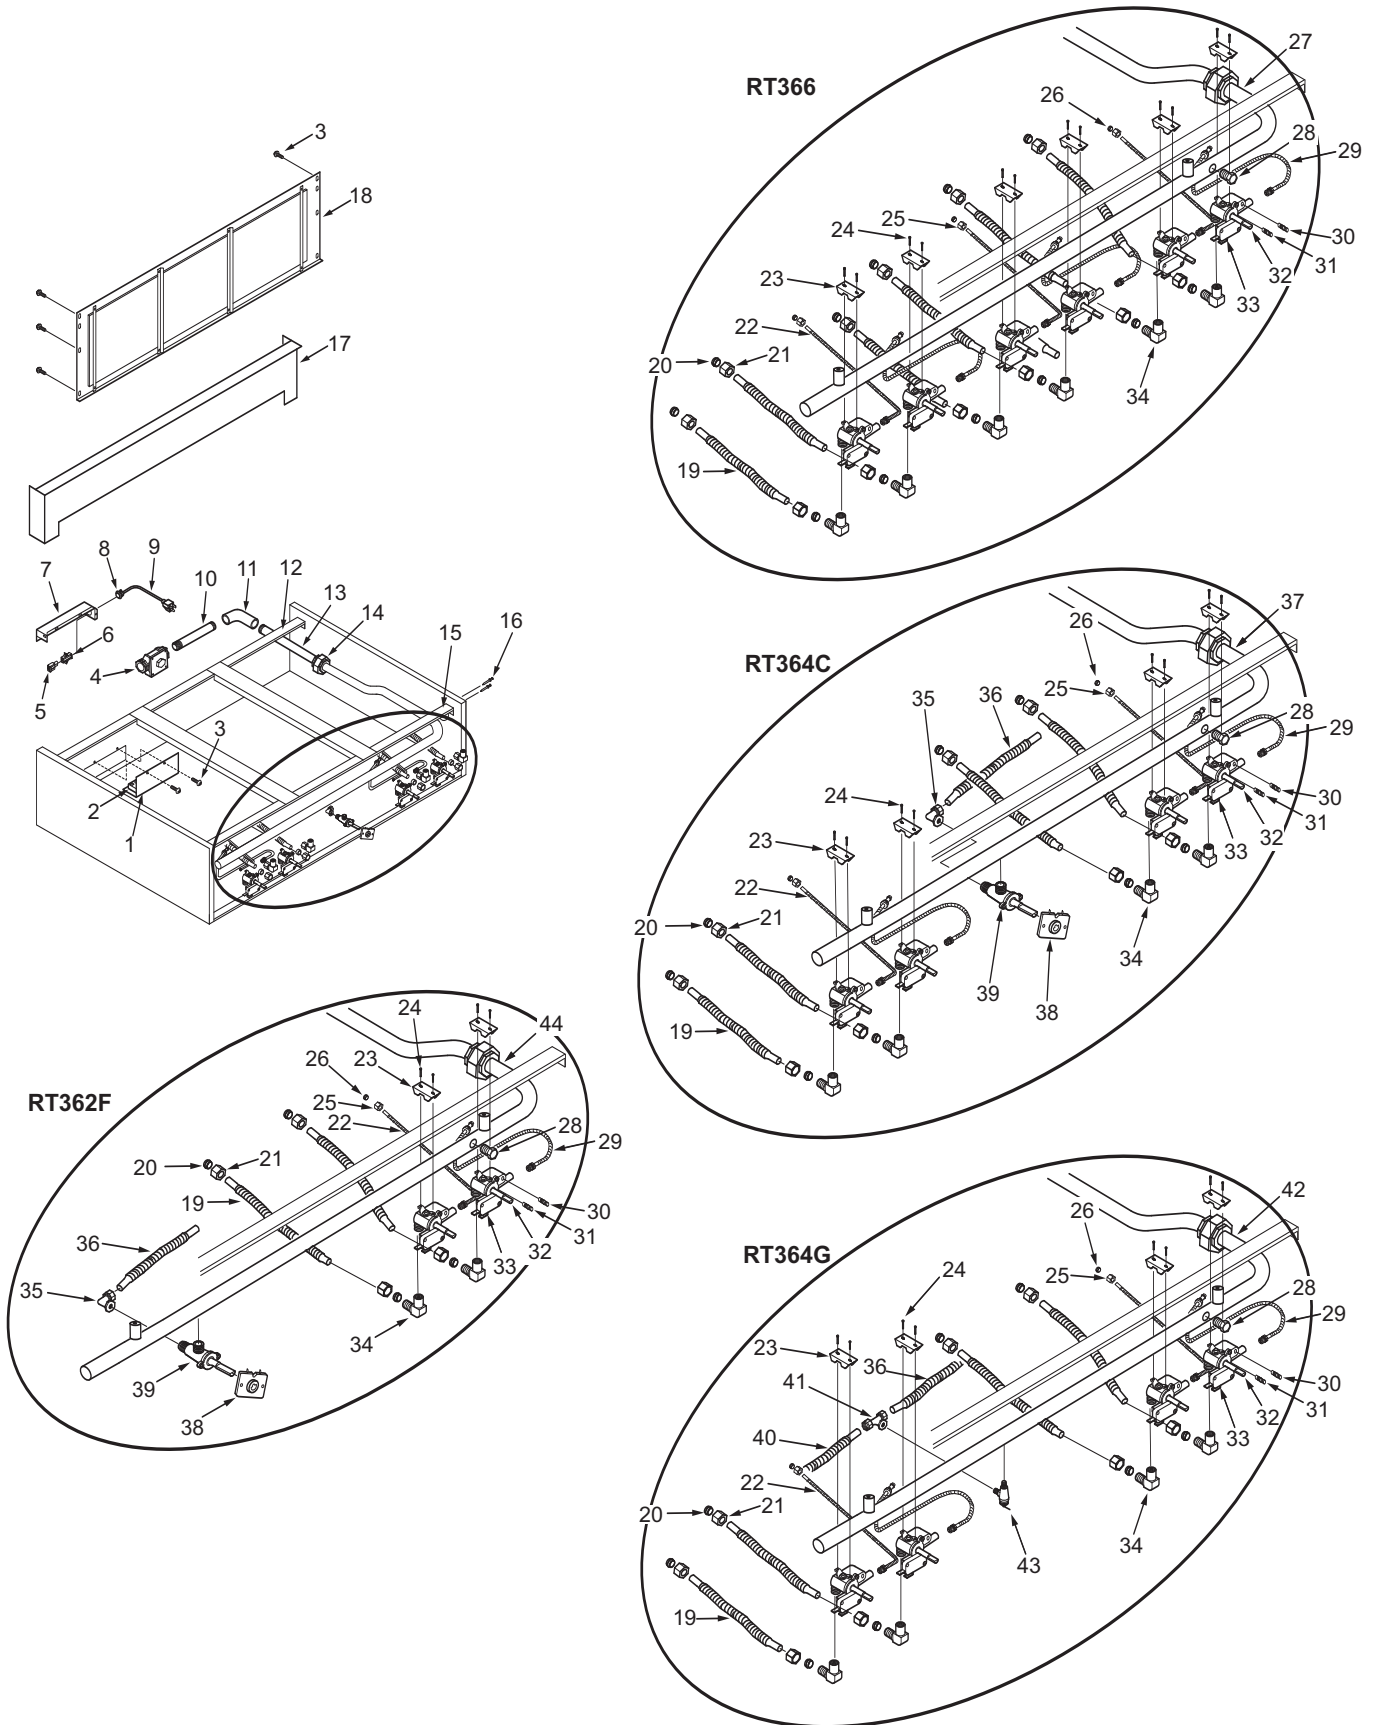

48" Rangetop Top & Dress Panels Parts List


Ref #	Part #	Description	Ref #	Part #	Description
1	801669	Grate, Wok (See SN Breaks)	40	804711	Shield, Charbroiler Electrode
	804230	Grate, Wok (See SN Breaks)	41	801265	Single Griddle Cover Kit - 11"
2	800146	S Grate, Rear (See SN Breaks)			Griddle (See SN Breaks)
	804229	S Grate, Rear (See SN Breaks)		809311	Griddle Cover - 11" New Style
3	800137	S Grate, Front (See SN Breaks)			Griddle (See SN Breaks)
	804228	S Grate, Front (See SN Breaks)		809312	Griddle Cover - 22" New Style
4	720829	Grate, Spider (See SN Breaks)		801266	Double Griddle Cover Kit - 22"
	811561	Grate, Spider (See SN Breaks)			Griddle Old Style Griddle Cover & Backsplash (See SN Breaks)
5	722421	Grate Foot Pad (See SN Breaks)	42	802508	Griddle Assembly, 11"
6	722422	Washer, Silicone, Spider Grate (See SN Breaks)		802509	Griddle Assembly, 22"
7	720801	Burner, Inner Head, Plated	43	800067	Seal, Griddle, 20"
	800041	Burner, Inner Head, Black Enamel	44	800066	Seal, Griddle, 9"
8	720887	Base, Inner Burner	45	800048	Orifice, IR Charbroiler, Natural Gas
	800044	Burner, Inner Base, Black Enamel		800050	Orifice, IR Charbroiler, LP Gas
9	720803	Burner, Outer (See SN Breaks)	46	786127	Baffle, Griddle
	801150	Cap, burner, Outer Head, Black Enamel	47	803168	Flex Tubing Service Package 3/8" x 18"
10	720802	Ring, Cross (See SN Breaks)	48	770093	Solenoid, (Coil Only)
	801151	Ring, Burner, Inner Base, Black Enamel	49	730229	Screw #10-24 x 1-1/2"
11	803965	Burner Ring/Cap, Service Package	50	719376	Elbow, Brass 3/8"
12	766446	Top, Pressed Steel, Porcelain (See SN Breaks)		719377	Fitting, Straight 3/8"
	805519	Top, Pressed Steel, (See SN Breaks)	51	804404	Holder, Single Solenoid
13	722162	Screw, Phillips Head		756302	Holder, Double Solenoid
14	807864	Holder, Jet Assembly	52	803167	Flex Tubing Service Package 3/8" x 12"
15	720886	Venturi	53	807622	Valve, Single Solenoid, w/fittings
16	730228	Screw #10-24 x 1/2"		807623	Valve, Double Solenoid, w/fittings
17	800882	Orifice, Inner Burner, Natural Gas	54	803374	Vent, Frenchtop
	800052	Orifice, Inner Burner, LP Gas	55	786718	Spacer, Rear
18	720888	Fitting, 3/16"	56	NLA	Ring, Center French Top
19	719566	Sleeve, 1/4" Fiberglass	57	NLA	Ring, Inner French Top
20	720822	Ring	58	NLA	Ring, Outer French Top
21	807598	Spring	59	NLA	Plate, French Top
22	801149	Base, Burner	60	806466	Components, Frenchtop
23	806483	Service Components, Electrode	61	805658	Spacer, Front - FT Cover
24	800872	Orifice, Outer Burner, Natural Gas	62	786727	Ring, Flame
	800051	Orifice, Outer Burner, LP Gas	63	723063	Burner Head
25	767615	Panel, Burner Support	64	722521	Venturi, Gas Hotplate
26	809019	Burner Assembly - Also need to order 806483	65	722536	Burner Base
27	762215	Backsplash, Decorative	66	723011	Electrode, French Top
28	759715	Cover, Charbroiler 11" (Order 2 for Double Charbroiler 22")	67	786716	Pan, Burner
			68	809880	Baffle, Pan French Top
29	786081	Rack, Charbroiler	69	723010	Clip, Retaining
30	769593	Frame, Charbroiler	70	722522	Nut, Hotplate
31	722631	Screen, Reverberator	71	800062	Electrode Wire
32	762444	Plate, Blank Off	72	800060	Orifice, French Top Natural Gas
33	809183	Burner, Infrared Assy, Griddle/Charb		800061	Orifice, French Top LP Gas
34	800048	Orifice, IR Charbroiler, Natural Gas	73	722530	Holder, Jet Gas
	800050	Orifice, IR Charbroiler, LP Gas	74	803170	Flex Tubing Service Package 1/4" x 12"
35	800258	Elbow	75	808027	End, Body LH
36	786978	Baffle, Charbroiler	76	714522	Insulation
37	810099	Spacer, IR Burner	77	722270	Rivet, Pop 3/16" Alum Multigrip
38	786029	Bracket, Sparker	78	808026	End, Body RH
39	714415	Sparker	79	786714	Pan, Grease SS (12-3/8" X 7") (See S/N Breaks)
40	804711	Shield, Charbroiler Electrode		801687	Tray, Grease Range (With Dimples, 11-1/2" X 9-1/2") (See S/N Breaks)
			80	811544	48" Roll Front Assy
			81	787400	Pan, Drip Assy. (See SN Breaks)
				801472	Drip Tray, 48" (See SN Breaks)

Not Shown


811716	Slide Lh Drip Tray	811717	Slide Rh Drip Tray
805637	Cover, Frenchtop Assy-Pro Series	787520	Hook, Center Plate French Top
722218	Hook, Porcelain Top Remover	767627	Spacer, Burner Support
722537	Seal, O-Ring Gas Hotplate (FT)	807066	Shield, Rubber - Electrode

48" Rangetop Top & Dress Panels View


Surface Burner

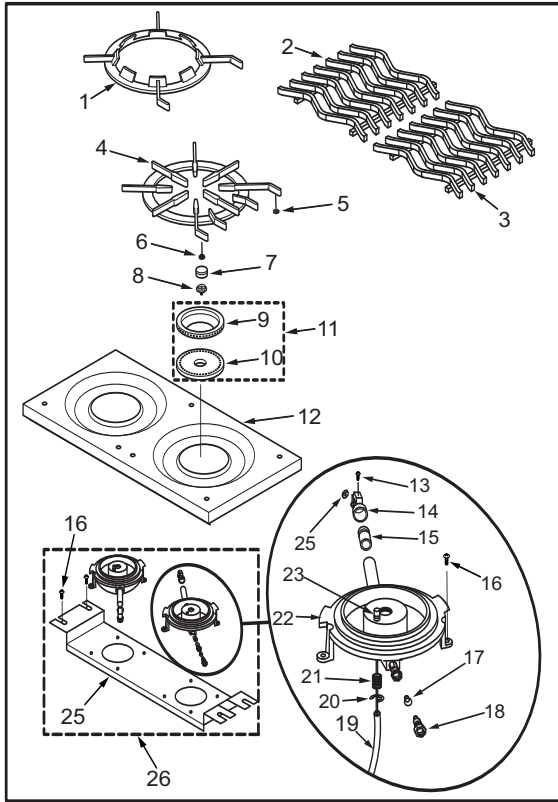



IR Charbroiler

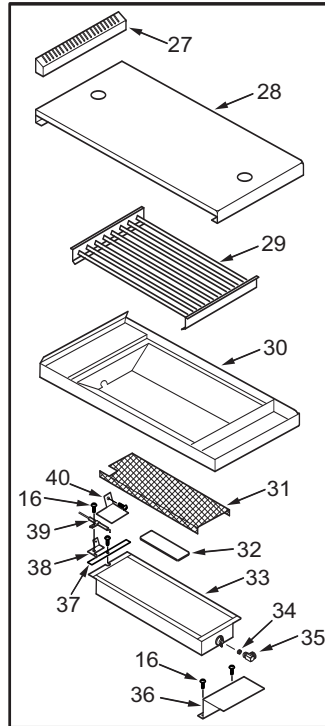

IR Griddle

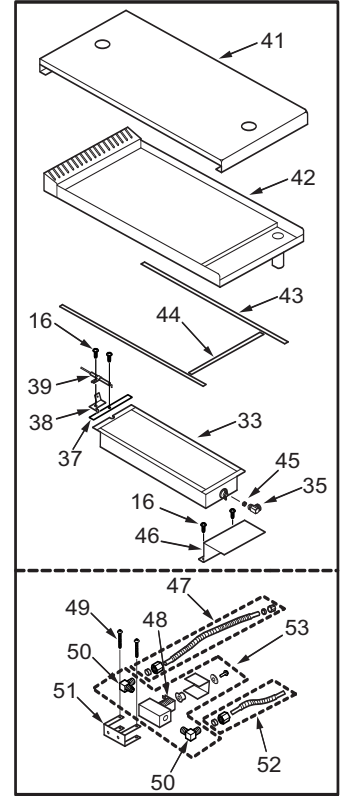

French Top

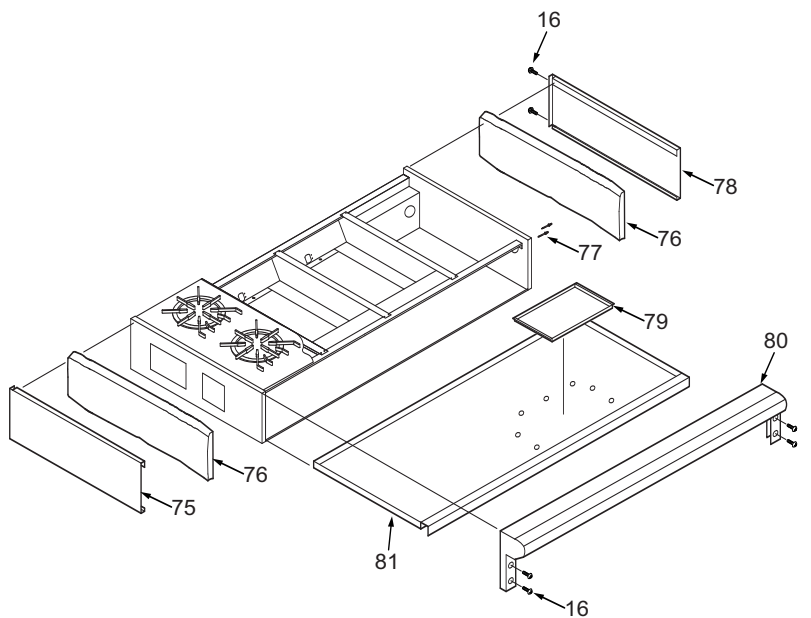
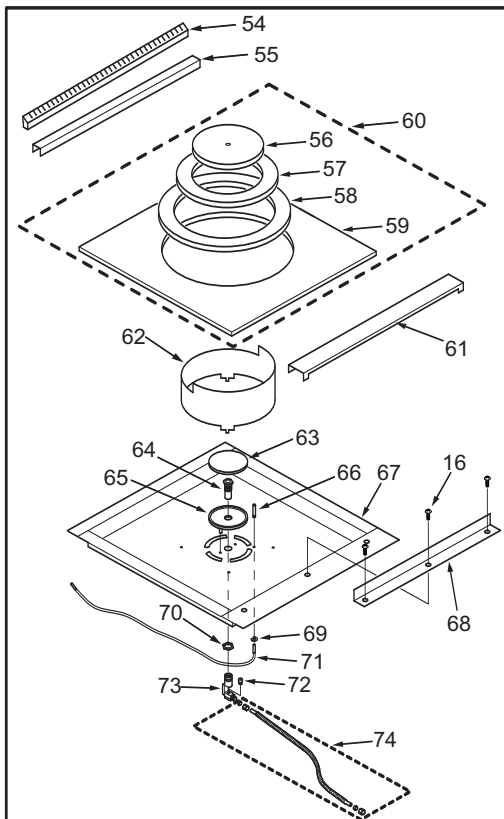


48" Rangetop Front Panel Parts List (1 of 2)

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787409	Panel, Front SB488 (See SN Breaks)
	806285	Panel, Front RT488 (See SN Breaks)
2	730239	Screw #8-32 x 3/8"
3	801346	Bezel, Front (See SN Breaks)
4	801347	Bezel, Rear (See SN Breaks)
5	720879	Knob, Control, Red (See SN Breaks)
	801312	Knob, Surface Burner Valve, Red
	720880	Knob, Control, Black (See SN Breaks)
	801313	Knob, Surface Burner Valve, Black
6	730076	Screw #6-32 x 1/4"
7	730509	Clip, Tinnerman
8	800924	Wolf Logo
9	787410	Panel, Front SB486B (See SN Breaks)
	806286	Panel, Front RT486C (See SN Breaks)
10	721017	Knob, Charbroiler/French Top, Red (See S/N Breaks)
	801306	Knob, Charbroiler/French Top, Red (See S/N Breaks)
	721018	Knob, Char/French Top, Black (See S/N Breaks)
	801307	Knob, Char/French Top, Black (See S/N Breaks)
11	718146	Bezel, Thermostat
	801348	Bezel, W/Tick Mark
12	787411	Panel, Front SB486G (See SN Breaks)
	806287	Panel, Front RT486G (See SN Breaks)
13	805787	Thermostat, Griddle
14	720017	Light, Indicator, Red
15	721014	Knob, Thermostat w/Griddle, Red (See S/N Breaks)
	801310	Knob, Thermostat w/Griddle, Red (See S/N Breaks)
	721015	Knob, Thermostat w/Griddle, Black
	801311	Knob, Thermostat w/Griddle, Black (See S/N Breaks)
16	787414	Panel, Front SB484DG (See SN Breaks)
	806290	Panel, Front RT484DG (See SN Breaks)

48" Rangetop Front Panel View (1 of 2)

**NOTE: SEE FOLLOWING PAGE FOR ADDITIONAL
48" RANGETOP FRONT PANEL VIEWS**

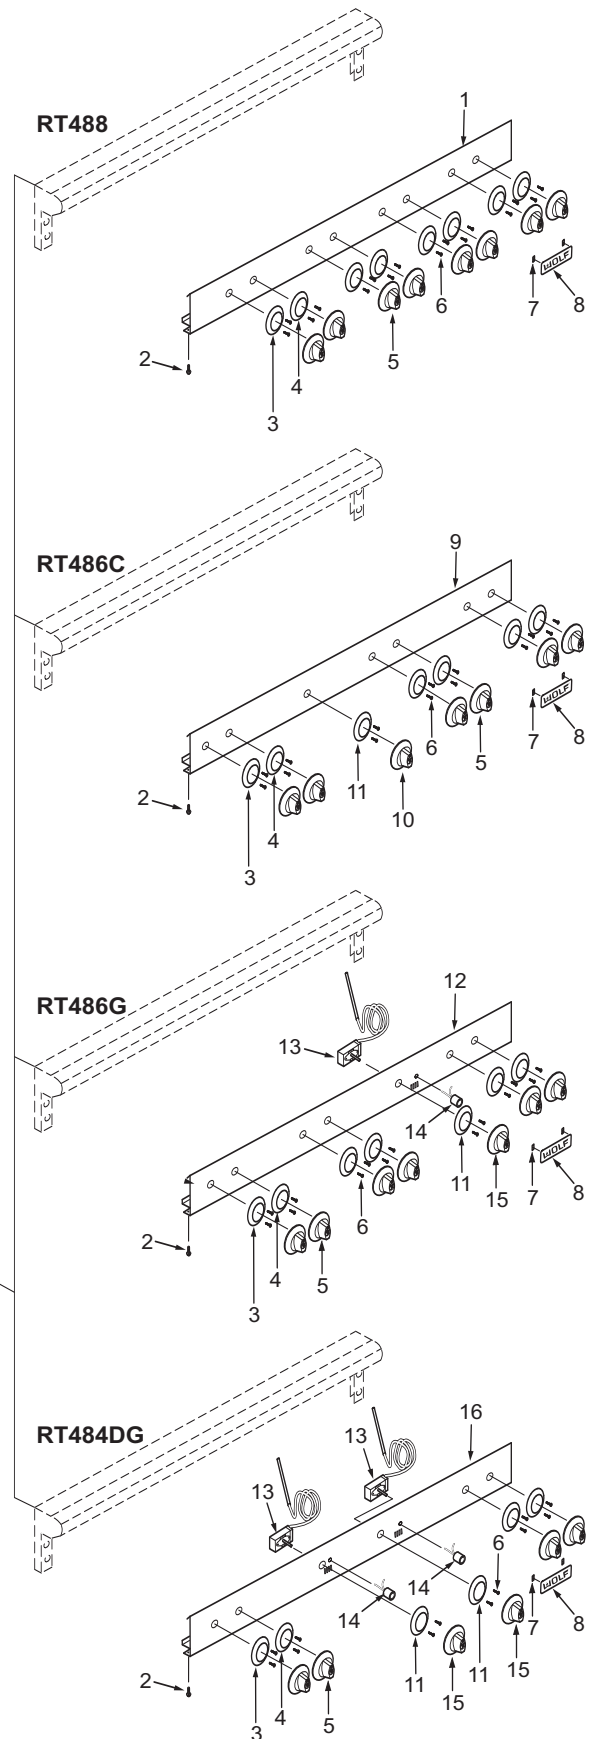
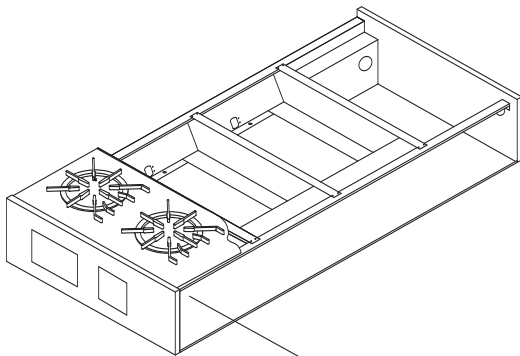


48" Rangetop Front Panel Parts List (2 of 2)

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787413	Panel, Front SB484B (See SN Breaks)
	806289	Panel, Front RT484DC (See SN Breaks)
2	730239	Screw #8-32 x 3/8"
3	801346	Bezel, Front (See SN Breaks)
4	801347	Bezel, Rear (See SN Breaks)
5	720879	Knob, Control, Red (See SN Breaks)
	801312	Knob, Surface Burner Valve, Red
	720880	Knob, Control, Black (See SN Breaks)
	801313	Knob, Surface Burner Valve, Black
6	730076	Screw #6-32 x 1/4"
7	721017	Knob, Charbroiler/French Top, Red (See S/N Breaks)
	801306	Knob, Charbroiler/French Top, Red (See S/N Breaks)
	721018	Knob, Char/French Top, Black (See S/N Breaks)
	801307	Knob, Char/French Top, Black (See S/N Breaks)
8	718146	Bezel, Thermostat
	801348	Bezel, W/Tick Mark
9	730509	Clip, Tinnerman
10	800924	Wolf Logo
11	718146	Bezel, Thermostat
	801348	Bezel, W/Tick Mark
12	787412	Panel, Front SB48GB (See SN Breaks)
	806288	Panel, Front RT484CG (See SN Breaks)
13	805787	Thermostat, Griddle
14	721014	Knob, Thermostat w/Griddle, Red (See S/N Breaks)
	801310	Knob, Thermostat w/Griddle, Red (See S/N Breaks)
	721015	Knob, Thermostat w/Griddle, Black
	801311	Knob, Thermostat w/Griddle, Black (See S/N Breaks)
15	720017	Light, Indicator, Red
16	787415	Panel, Front SB484F (See SN Breaks)
	806291	Panel, Front RT484F (See SN Breaks)
17	787416	Panel, Front SB48FB (See SN Breaks)
	806292	Panel, Front RT48CF (See SN Breaks)

48" Rangetop Front Panel View (2 of 2)

NOTE: SEE PRECEDING PAGE FOR ADDITIONAL 48" RANGETOP FRONT PANEL VIEWS

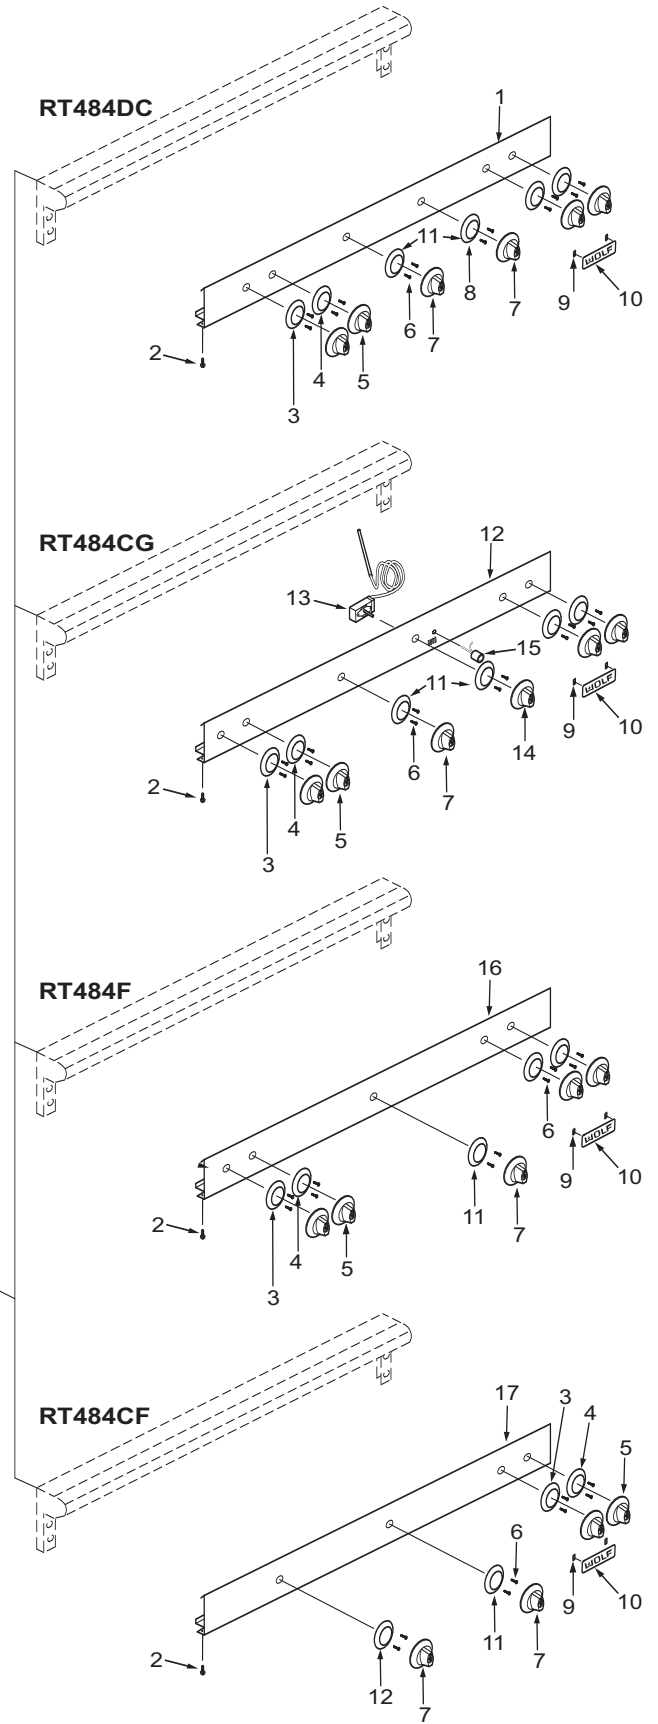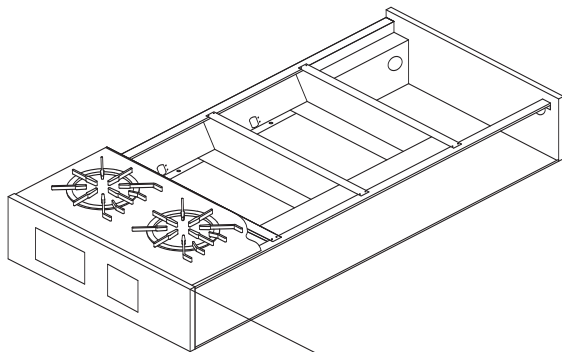

48" Rangetop Manifold Parts List (1 of 2)






<u>Ref #</u>	<u>Part #</u>	<u>Description</u>	<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	768318	Bracket, Access	24	801937	Flex Tubing Service Pkg 3/16"x27"
2	809418	Module, Spark +4 Point	25	720885	Bracket, Valve Mounting
	809420	Module, Spark 0+1 Tech	26	722133	Screw, Hex Head
3	730228	Screw #10-24 x 1/2"	27	804431	Manifold (RT488)
4	723350	Regulator, 3/4" Convertible	28	801936	Flex Tubing Service Pkg 3/16"x16"
	801358	Regulator, 1/2" Convertible	29	809153	Burner Valve & Switch Assy, Nat
5	NLA			809154	Valve, Burner, LP Gas
6	NLA		30	800892	Orifice, Bypass Inner, Natural Gas
7	769122	Channel, Electrical		800055	Orifice, Bypass Inner, LP Gas
8	NLA		31	800884	Orifice, Bypass Outer, Natural Gas
9	809243	Cord, Power		800054	Orifice, Bypass Outer, LP Gas
10	804189	Nipple, .50 X2.5 LG Black Pipe	32	807141	Valve, Switch
11	801457	Elbow, 1/2"Npt x 1/2"Npt	33	719393	Elbow, Brass 3/8"
12	787420	Channel, Rear	34	719370	Plug, Hex Head, 1/8"
13	711302	Nipple, 1/2" x 5"	35	804432	Manifold (RT486C)
14	719033	Union, 1/2" Black	36	713810	Switch, Valve Ignition
15	787419	Channel, Front	37	722413	Valve, Brass
16	722270	Rivet, Pop 3/16" Alum Multigrip	38	722278	Elbow, Adapter, Compression
17	800023	10-1/2" Riser Package, Rt36	39	803166	Flex Tubing Service Pkg 3/16" x 6"
18	804406	Panel, Rear	40	804433	Manifold (RT486G)
19	803171	Flex Tubing Service Pkg 5/16"x14"	41	720330	Valve, Shut Off, Oven
20	807677	Nut, Compress Brass	42	722223	Tubing, Flexible, 3/8 x 24"
21	807667	Ferrule, Sleeve Brass	43	804430	Manifold (RT484DG)
22	720888	Fitting, 3/16"			
23	807665	Ferrule, 3/16"			

Not Shown

800175	Wiring Harness RT488
800176	Wiring Harness RT486C
800177	Wiring Harness RT486G
800180	Wiring Harness RT484DG
714748	Riser, Insulation, 1/8" x x17" x 44"
803877	Riser, Back Panel Assy
803881	Riser, Front Panel Assy
800002	Regular Trim Strip Package, RT48
800003	Island Trim Strip, Lh & Rh, RT48
763049	Strip Filler, Left Hand
763050	Strip Filler, Right Hand
762214	Panel, Back
762212	Strip, Back Filler

48" Rangetop Manifold View (1 of 2)

**NOTE: SEE FOLLOWING PAGE FOR
ADDITIONAL 48" RANGETOP
MANIFOLD VIEWS**

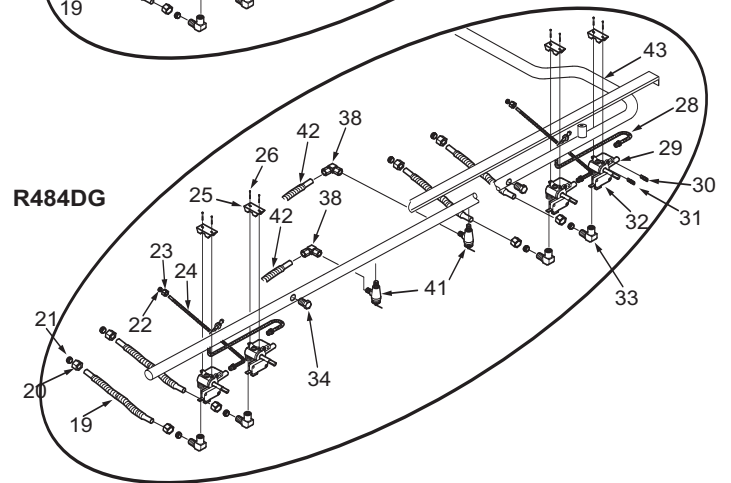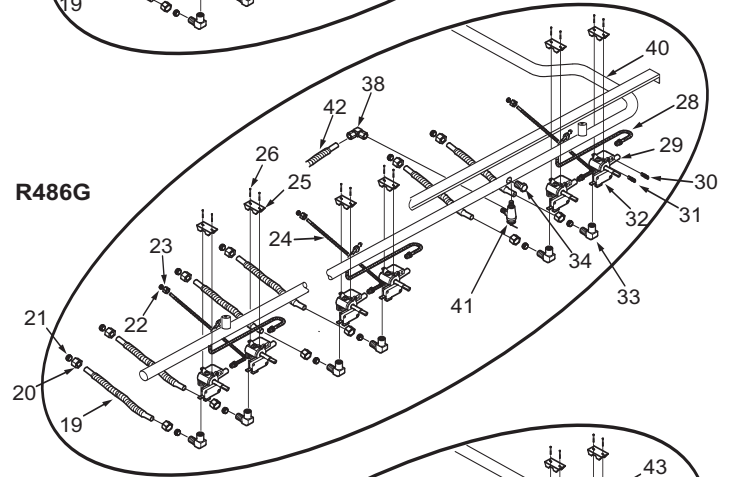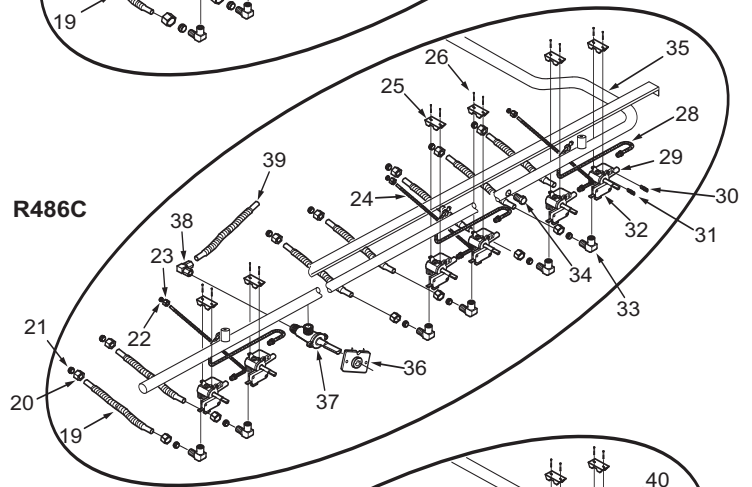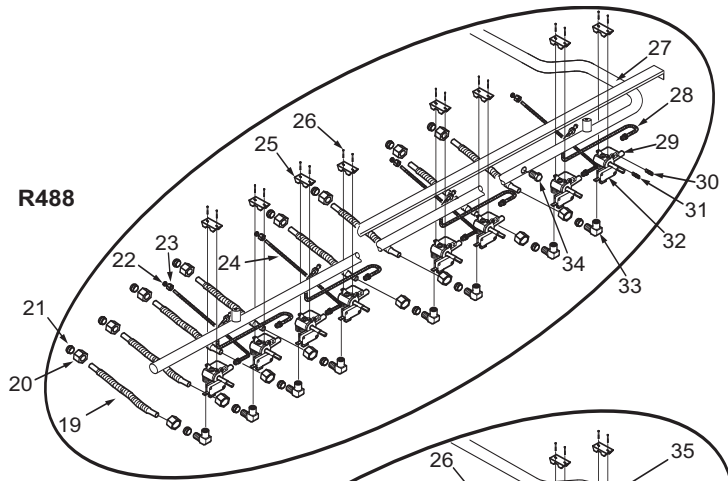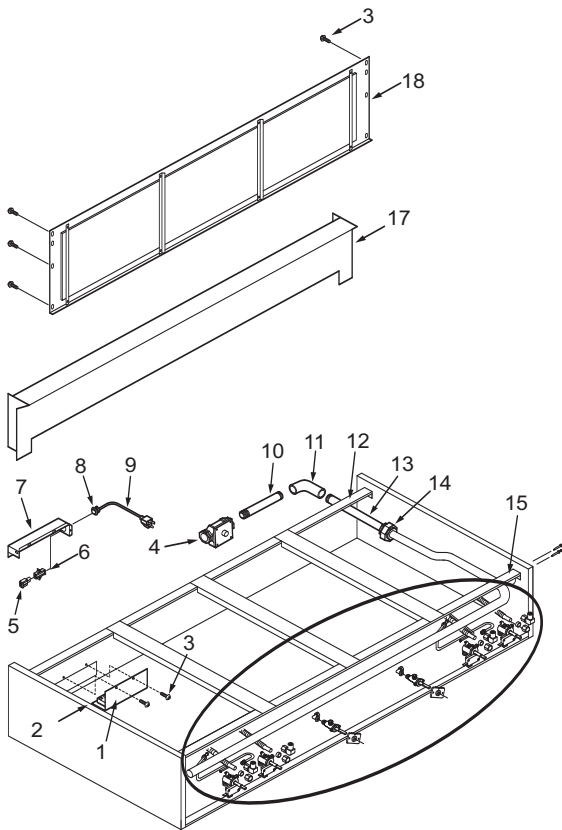

48" Rangetop Manifold Parts List (2 of 2)






Ref #	Part #	Description	Ref #	Part #	Description
1	768318	Bracket, Access	25	720885	Bracket, Valve Mounting
2	809418	Module, Spark +4 Point	26	722133	Screw, Hex Head
	809420	Module, Spark 0+1 Tech	27	719393	Elbow, Brass 3/8"
3	730228	Screw #10-24 x 1/2"	28	803166	Flex Tubing Service Pkg 3/8" x 6"
4	723350	Regulator, 3/4" Convertible	29	719370	Plug, Hex Head, 1/8"
	801358	Regulator, 1/2" Convertible	30	804435	Manifold (RT484DC, RT484F)
5	NLA		31	801936	Flex Tubing Service Pkg 3/16"x16"
6	NLA		32	809153	Burner Valve & Switch Assy, Nat
7	769122	Channel, Electrical		809154	Valve, Burner, LP Gas
8	NLA		33	800892	Orifice, Bypass Inner, Natural Gas
9	809243	Cord, Power		800055	Orifice, Bypass Inner, LP Gas
10	804189	Nipple, .50 X2.5 LG Black Pipe	34	800884	Orifice, Bypass Outer, Natural Gas
11	801457	Elbow, 1/2"Npt x 1/2"Npt		800054	Orifice, Bypass Outer, LP Gas
12	787420	Channel, Rear	35	807141	Valve, Switch
13	711302	Nipple, 1/2" x 5"	36	713810	Switch, Valve Ignition
14	719033	Union, 1/2" Black	37	722413	Valve, Brass
15	787419	Channel, Front	38	722223	Tubing, Flexible, 3/8 x 24"
16	722270	Rivet, Pop 3/16" Alum Multigrip	39	722278	Elbow, Adapter, Compression
17	800023	10-1/2" Riser Package, Rt36	40	804434	Manifold (RT484CG)
18	804406	Panel, Rear	41	720330	Valve, Shut Off, Oven
19	803171	Flex Tubing Service Pkg 5/16"x14"	42	803167	Flex Tubing Service Pkg 3/8"x12"
20	807677	Nut, Compress Brass	43	804437	Manifold (RT482CF)
21	807667	Ferrule, Sleeve Brass			
22	720888	Fitting, 3/16"			
23	807665	Ferrule, 3/16"			
24	801937	Flex Tubing Service Pkg 3/16"x27"			

Not Shown

800179	Wiring Harness RT484DC
800178	Wiring Harness RT484CG
800181	Wiring Harness RT484F
800182	Wiring Harness RT482CF
714748	Riser, Insulation, 1/8" x 17" x 44"
803877	Riser, Back Panel Assy
803881	Riser, Front Panel Assy
800002	Regular Trim Strip Package, RT48
800003	Island Trim Strip, Lh & Rh, RT48
763049	Strip Filler, Left Hand
763050	Strip Filler, Right Hand
762214	Panel, Back
762212	Strip, Back Filler

48" Rangetop Manifold View (2 of 2)

**NOTE: SEE PRECEDING PAGE FOR
ADDITIONAL 48" RANGETOP
MANIFOLD VIEWS**

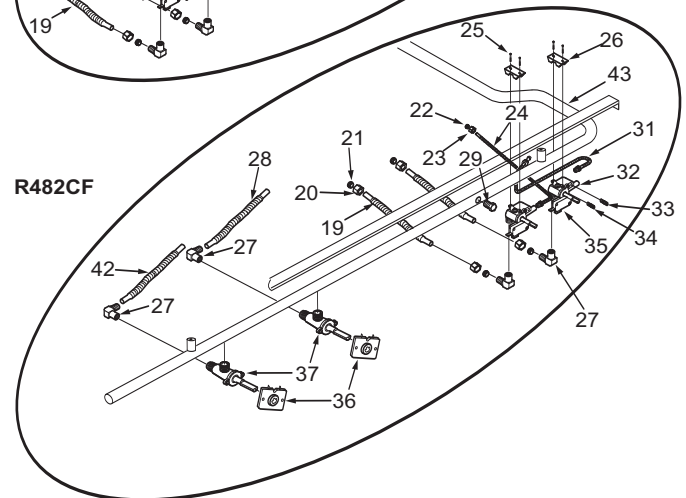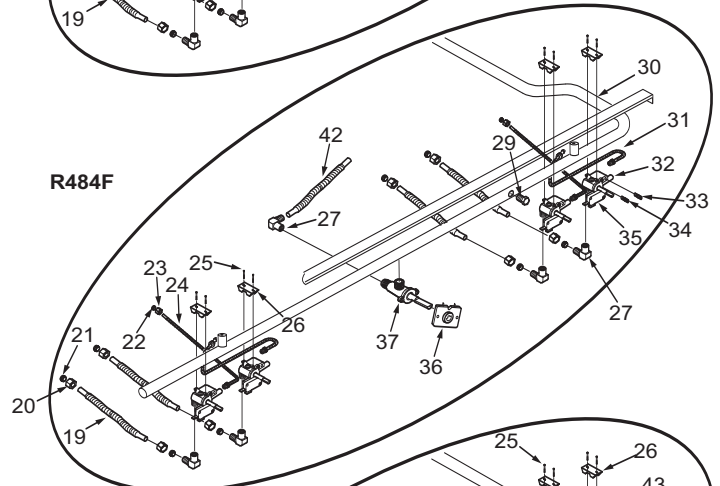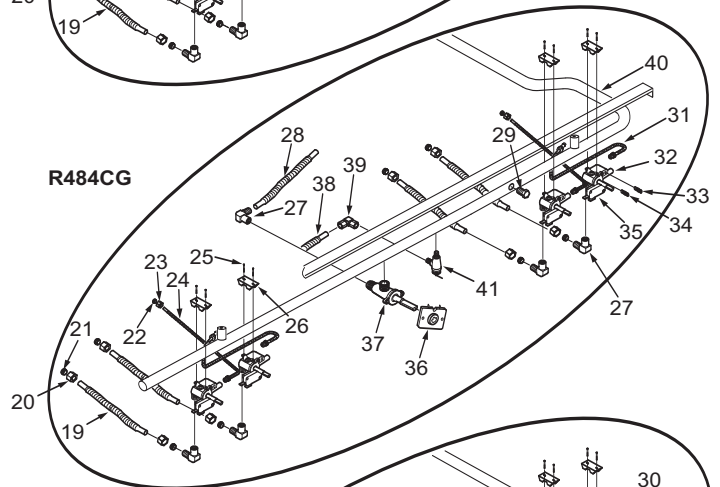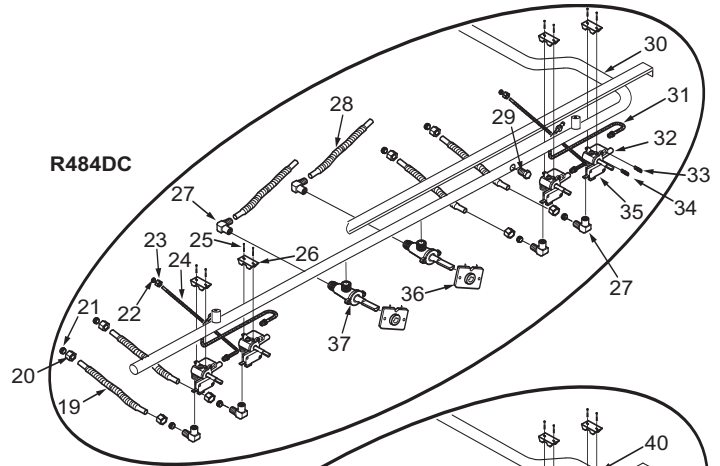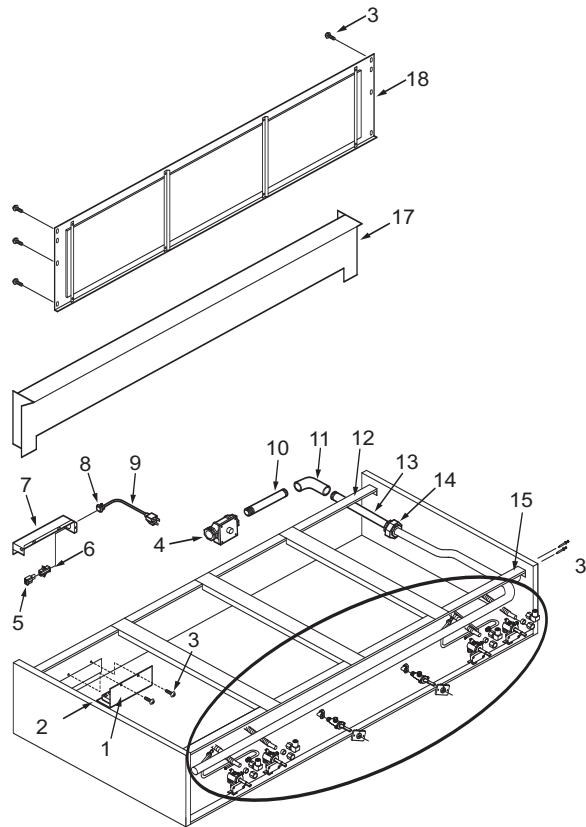

Range and Rangetop Spark Module Matrix

Spark Module Usage by Unit				Spark Module Usage by Spark Module			
Unit	Module	Qty.		Unit	Qty.	Unit	Qty.
R304	809417	1		R604CF	2	R486C	1
R366	809416	1		R604GF	2	R486G	1
R364G	809416	1		R606CG	2	R488	2
R364C	809416	1		R606DC	2	RT364C	1
				R606DG	2	RT364G	1
R488	809416	1		R606F	2	RT364F	1
				RT362F	1		
R486G	809416	1		RT364C	1		
				RT364G	1		
R486C	809416	1		RT366	2		
				RT482CF	1		
R484F	809416	1		RT484CG	2		
R484DG	809416	1		RT484DC	2		
R484DC	809416	1		RT484DG	2		
R482CF	809416	1		RT484F	1		
				RT486C	2		
R606F	809418	2		RT484G	2		
R606DG	809418	2		RT488	2		
R606DC	809418	2					
R606CG	809418	2					
R604GF	809418	2					
R604CF	809418	2					
RT366	809418	2					
RT364G	809418	1					
RT364C	809418	1					
RT362F	809418	1					
RT488	809418	2					
RT486G	809418	2					
RT486C	809418	2					
RT484F	809418	1					
RT484DG	809418	2					
RT484DC	809418	2					
RT484CG	809418	2					
RT484CF	809418	1					

Spark Module Usage by Unit				Spark Module Usage by Spark Module			
Unit	Module	Qty.		Unit	Qty.	Unit	Qty.
				R364C	1	R304	1
				R364G	1		
				R366	1		
				R484CG	1		
				R482CF	1		
				R484DC	1		
				R484F	1		
				R488	1		
				R486C	1		
				R486G	1		
				R484DG	1		

809418 Module, Spark +4 Point
 809420 Module, Spark 0+1 Tech
 809416 Module, Spark +6 Point Range
 809417 Module, Spark +4 Point Range