

Sunbeam

Health at Home®

IMPORTANT SAFEGUARDS


READ ALL INSTRUCTIONS PRIOR TO USE:

When using electrical appliances, especially when children are present, basic safety precautions should always be followed. Failure to follow these safety precautions may result in personal injury or property damage.

1. Always have water in the water tank when operating unit. Caution: The mist will automatically shut off when the tank is empty; however the fan will continue to run.
2. Use only clean, cool, tap water to fill tank (softened or distilled water is recommended, if tap water is hard).
3. To avoid white dust, you may use distilled water, or a demineralization cartridge, available at retail or through Consumer Services.
4. Be sure the filling cap of the tank is firmly tightened.
5. Always have the mist nozzle and the mist chamber in place while the unit is operating. Rotate the mist nozzle so it is aimed away from children, walls and furniture.
6. Use only 110-120V AC outlet. As with any electrical device, plug and unplug unit with dry hands only. Turn unit off to unplug and when tank is empty. **WARNING:** Do not operate without the tank in place.
7. To avoid the risk of fire, shock or personal injury, do not use an extension cord. **WARNING:** Never operate unit with a damaged cord or plug.
8. Always place unit on a flat, level surface away from direct sunlight or near computers or sensitive electronic equipment.
9. Unplug the unit when not in use and whenever you clean or move the unit.
10. Do not add medications of any type into the nozzle, base or water tank. Do not cover any opening of the unit or insert objects into any openings.
11. The unit should not be left unattended in closed rooms as air could become saturated and leave condensation on walls or furniture. Always leave room door partly open.
12. When cleaning inside of unit, keep water away from the air outlet. Exterior may be wiped with a damp cloth (except for electrical controls) when unit is off. Any part may be wiped with a damp cloth when unit is unplugged.
13. Do not tilt or tip unit or attempt to empty or fill it while it is operating. Do not overfill.
14. Do not use detergent to clean any water-containing parts of the unit. Detergent film dissolved in the water supply can interfere with the output of the unit.
15. The nebulizer (ultrasonic transducer) is highly sensitive. Keep this important part clean and treat it gently. **WARNING:** Do not touch the nebulizer while the unit is operating, as possible burns could result. Do not touch the nebulizer with bare fingers. Any residue on the metal will reduce

mist output.

16. **DANGER:** Never immerse the unit in water or any other liquid.
17. Do not place the humidifier directly on wood furniture or other surfaces that can be damaged by water. For best results, place on a waterproof surface.
18. To reduce the risk of electrical shock, this product has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into the outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

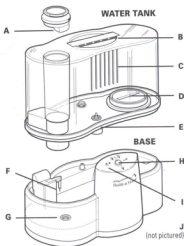

- | | | | |
|---|--------------------------------|---|-----------------------------------|
| A | Directional Mist Output Nozzle | F | Water Sensor |
| B | Handle | G | Nebulizer (Ultrasonic transducer) |
| C | Water Tank | H | On/Off Switch |
| D | Cap | I | Power On Light |
| E | Water Flow Valve | J | Cleaning Brush (not pictured) |

SAVE THESE INSTRUCTIONS