

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).




Therapure TPP201MB Owner's Manual

[Shop genuine replacement parts for Therapure
TPP201MB](#)



[Find Your Therapure Air Cleaner Parts - Select From 1 Models](#)

----- Manual continues below -----

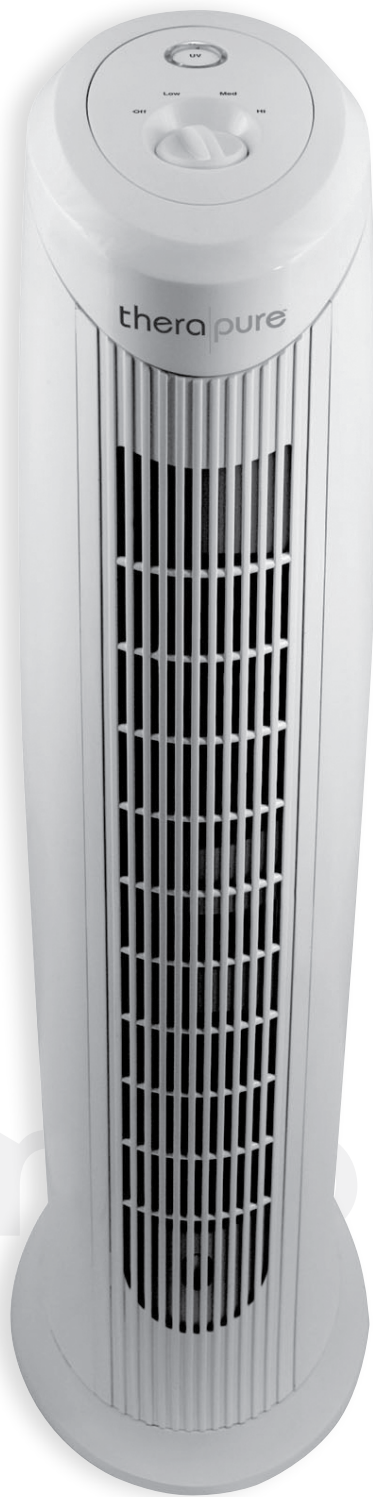

201M

thera|pure®
air purifier with uv light

owner's guide



Thank you for purchasing the Therapure® 201 air purifier. With UV germicidal protection to kill germs and permanent HEPA type filtration to purify the air, the Therapure® 201 air purifier will greatly improve the quality of the air in your home, office or other environments. We want you to be fully satisfied with your Therapure® 201. That's why your Therapure® 201 comes with a one-year limited warranty.

Once you've experienced the purity of Therapure® air, visit us at our website to find out more ways to improve the quality of your air and your life with our premium products and upgrades at www.therapureair.com.

Please be sure to read the following instructions carefully to ensure optimal performance and safety.

therapure

TABLE OF CONTENTS

SAFETY INSTRUCTIONS

IMPORTANT WARNINGS

- UV Lamp Notice
- Mercury Notice
- UV Lamp Disposal Notice
- UV Lamp Breakage

PRODUCT BENEFITS

MAIN PARTS

OPERATING THE THERAPURE

- Getting Ready
- Controls/Settings
- Operation

CLEANING & MAINTENANCE

- Cleaning the Permanent Filter
- Cleaning the UV Lamp
- Cleaning External Surfaces
- Replacing the UV Lamp

TROUBLE-SHOOTING

ONE-YEAR LIMITED WARRANTY

ARBITRATION AGREEMENT

SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

WARNING: RISK OF ELECTRICAL SHOCK

Safety precautions should always be used when operating this or any electrical appliance. Decrease the risk of electrocution, electric shock, injury or fire by reading and following all the warnings below.

Use only as described in this Therapure® manual. To reduce the risk of electric shock, do not attempt to service the product in any way other than in the manner described in the “Cleaning & Maintenance” section of this manual.

READ ALL INSTRUCTIONS BEFORE OPERATING THE AIR PURIFIER.

- » This product operates at 120V AC, 60Hz only.
- » Do not run power cord under carpets, and do not cover with throw rugs.
- » Do not operate the product in any greasy environment such as in the kitchen. This product is not intended to filter oil or grease from air.
- » Do not use the Therapure® 201 air purifier in bathrooms or other humid environments, near fireplaces or in areas where flammable or combustible vapors or products may exist.
- » Always unplug the power cord from electrical socket when the purifier is not in use, before cleaning, inserting or removing parts or before moving to another location.
- » Never run air purifier unless it is fully assembled.
- » To reduce the risk of electric shock, this product has a polarized plug (one blade is wider than the other). This plug will fit into a polarized outlet only one way. If the plug does not fit into the outlet, contact qualified service personnel to install the proper outlet. Do not alter the plug in any way.
- » Always turn off all controls before unplugging the Therapure® 201 air purifier from outlet.
- » Attempting to service the Therapure® 201 air purifier in any way that is not described in this owner's manual will cause the warranty to be voided and could cause serious personal injury to the user and/or result in considerable damage to the unit.
- » Do not place the cord near a heated surface.
- » Never operate the Therapure® 201 if the plug or cord is damaged or appears damaged. Only qualified service personnel should ever replace or attempt to replace a damaged power cord.
- » Never use the power cord to pick up, carry, drag, pull, or lift the Therapure® 201 air purifier. Do not pull the cord against or around sharp corners and edges. This could result in injury to the user or damage to the cord.
- » Always remove the plug from its power outlet by holding onto the plug itself and pulling gently.
- » Never pull on the cord itself to unplug it from its power outlet.
- » Use care when operating the Therapure® 201 air purifier by keeping all foreign objects, fingers, body parts, hair, loose clothing and jewelry away from openings.
- » Never touch the Therapure® 201 air purifier or its plug when your hands are wet.
- » The Therapure® 201 air purifier is an electrical appliance. Adult supervision is required when operating the Therapure® 201 in the presence of children.
- » To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control devices.

IMPORTANT WARNINGS

UV Lamp Notice

UV Light is harmful to bare skin and eyes. Never look directly at the UV lamp while it is on. Only view illumination through the viewing window. To avoid exposure to ultraviolet light, disconnect the power cord from the air purifier.

Mercury Notice

This device contains mercury in the UV lamp. Do not dispose of this device in the trash. Disposal of any item containing mercury is subject to local, state, and federal disposal or recycling laws and regulations.

UV Lamp Disposal


If the UV lamp breaks, turn off the power and use a vacuum to clean up breakage. Sweep up any remaining debris and contact your local waste management authority for disposal of old lamp(s). To order a replacement lamp, contact your retailer.

therapure

PRODUCT BENEFITS

Triple action purification:

1. Permanent HEPA type Filter takes particles out of the air, purifying it.
 2. UV lamp kills germs, such as viruses and bacteria.
 3. Photo catalyst filter removes VOCs (volatile organic compounds from the air), including toxic fumes and chemicals such as paint and new carpet fumes.
- » Effectively removes smoke, pollen, dust, animal dander, dust mites, mold and bacteria.
- » 3 speed fan setting—lets you select the desired cleaning level.

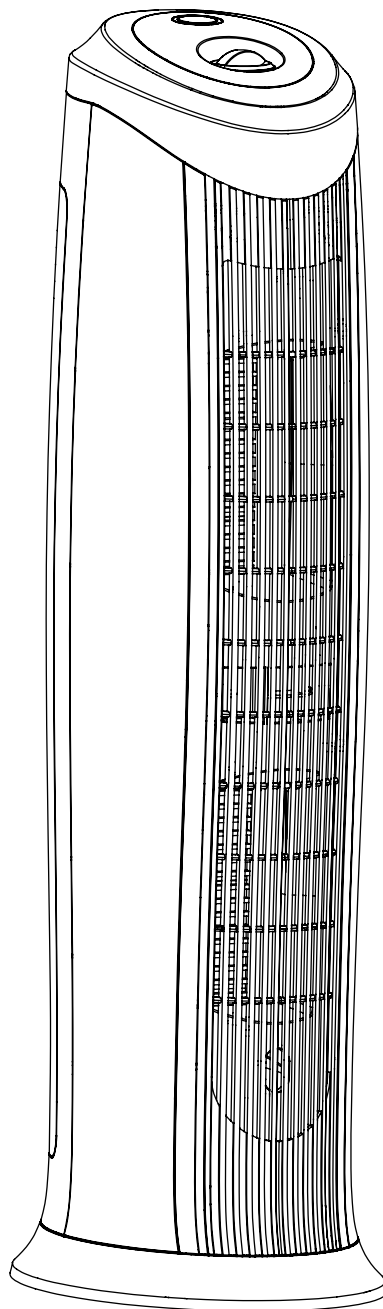


201M

MAIN PARTS

1. **Permanent HEPA Type Filter:** takes particles down to 0.1 microns in size.
2. **3-Speed Settings:** there are 3 speeds according to the air quality needed.
3. **UV Lamp Button:** the germicidal lamp kills germs and viruses.
4. **Locking Latch**
5. **Air Inlet Grill**
6. **Air Outlet Grill**
7. **UV Lamp View Window**
8. **Base of Unit**
9. **UV Lamp Access**

4. Locking Latch
5. Air Inlet Grill

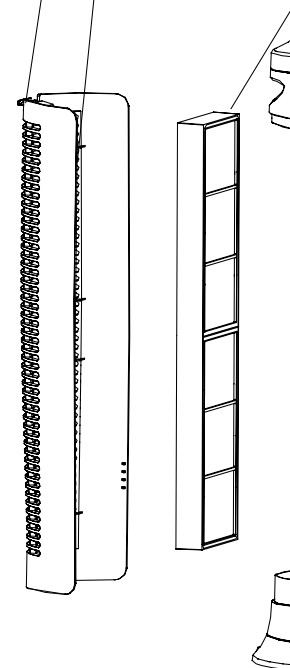

OPERATING THE THERAPURE® 201M

Before using your Therapure® 201 air purifier, please read the following important information

Electrical Ratings:

120V Setting: 120Vac, 60 Hz

Power consumption: 66 watts at high fan speed,

5 watt UV light bulb

Net weight: 12.1 lbs.

Dimension (LxWxH): 11.1" x 8.0" x 28.6"


Replacement Parts:

Lamp – TPP2010 (5w)

Filter – TPP201FB

Locate a level surface on which to place your Therapure® 201 air purifier near a 120V outlet (follow warnings in the “**SAFETY INSTRUCTIONS**” and “**IMPORTANT WARNINGS**” sections of this manual).

Position your Therapure® at least one foot (12 inches) from the wall. Plug in the unit. You are now ready to turn on your Therapure® 201 air purifier!

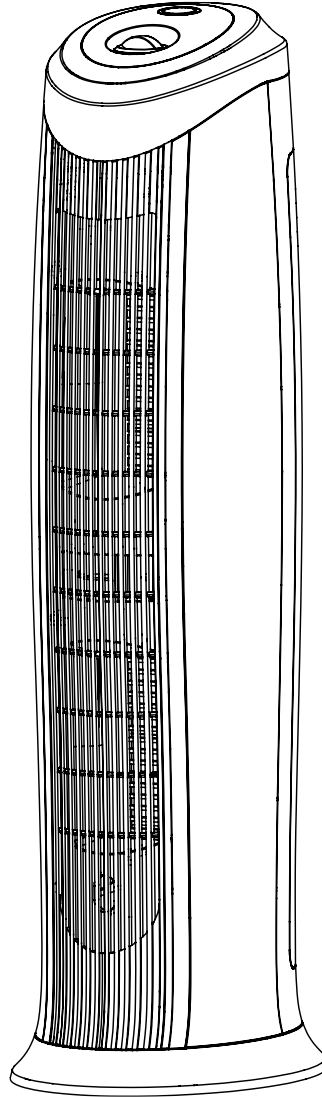

OPERATING THE

Controls/Settings

- OFF** – turns unit off.
- LOW** – at this setting, the unit will
- MED** – at this setting the unit will
- HI** – at this setting the unit will
- UV** – press the UV Control button to kill bacteria and germs. Press

Operation

To operate your Therapure® 201 air purifier, rotate the Speed Knob to activate your air purifier and select the speed of your choice. There are three speed settings controlled by the Speed Knob. The different settings are **LOW**, **MED** and **HI**.

Your Therapure® 201 air purifier has triple action purification. **First**, the Permanent HEPA type Filter removes pollutants such as dust, pollen, smoke and pet dander from the air. **Second**, the powerful UV technology kills airborne germs, bacteria, viruses, mold and mildew. **Third**, the photo catalyst filter removes odors and toxic chemicals and fumes.

Speed Knob


201M

OPERATING THE THERAPURE® 201M



Safety

1. Do not blow air directly into air purifier.
2. Keep both sides of the unit at least 1 foot away from a wall.
3. Do not place the unit near curtains.
4. Placing the unit close to the source of air pollution is an effective way to improve indoor air quality.


1.

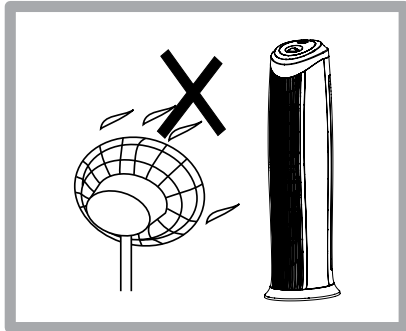

2.

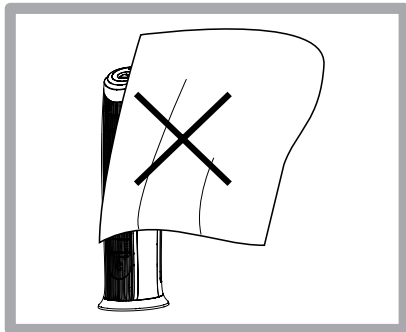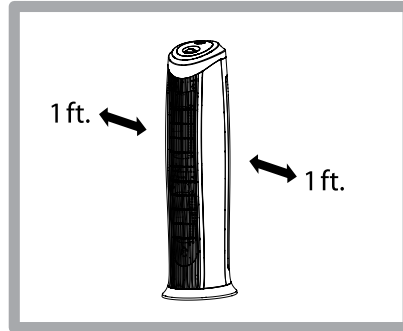

3.

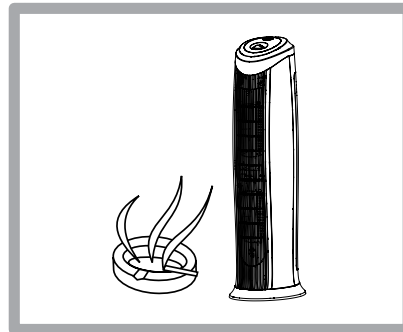

4.

CLEANING & MAINTENANCE

With very little effort, the Therapure® 201M can be cleaned in indoor environments.

Keep your Therapure® 201M functioning properly. Frequent cleaning will be necessary in environments with high concentrations of contaminants (excessive amounts of dust, etc.).


Exposing your Therapure® to candle smoke or other pollutants may require more frequent cleaning.

Remember: Always make sure you are cleaning the correct filter.


Cleaning the Permanent HEPA type Filter

- a. Clean the Permanent HEPA type filter.
 - b. Be sure to turn off and unplug the unit.
1. Release the inlet grill by pressing the release button.
 2. Remove the inlet grill from the unit.
 3. Grasp the left and right frames of the inlet grill and pull the sides of the filter enclosure apart.
 4. To clean the Permanent HEPA type filter, use a soft brush. Run the attachment along the inner surface of the filter enclosure as much as possible. **Do not use water or other liquids on the Permanent HEPA type Filter.**

1.

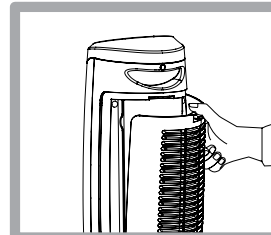

3.

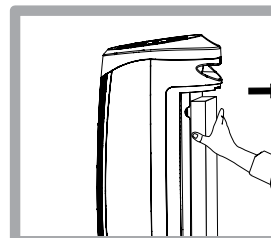

CLEANING & MAINTENANCE

NOTE:

- » Vacuuming will restore performance of the Permanent HEPA type Filter. However, the filter may appear stained. This is normal and does not affect performance in any way.
- » Do not use water or any household cleaners or detergents to clean the Permanent HEPA type Filter.
- » The Permanent HEPA type Filter has been designed to never need replacing. However, it does need servicing. We recommend that under normal conditions of continuous use, the filters be cleaned every month to maintain optimal functioning.
- » The inlet grill may be cleaned (after unit is turned off and unplugged) with a vacuum or a slightly damp cloth.

UV lamp

The lifetime of the UV lamp is up to 18 months of continuous, effective operation. After this time, the bulb may remain illuminated, but its effectiveness is greatly reduced. For maximum germicidal protection, please replace the UV bulb annually.

If the lamp stops functioning, please call 1.800.875.8577 to order a replacement lamp.

Cleaning External Surfaces

1. Turn off and unplug unit.
2. Use a washcloth slightly dampened with a little water and dishwashing soap to wipe the outer case surfaces.
3. Do not allow water to slip into the internal parts as this could damage your unit and result in electrical shock and injury to you.
4. Allow the unit to thoroughly dry before use.


CLEANING & MA

Before replacing the UV lamp, make sure the unit is turned off and unplugged.


Replacing the UV Lamp:

1. Take out the 2 screws which are on the cover and then remove the cover.
2. Pull out the UV lamp base assembly.
3. Pull out the old UV lamp from the base assembly.
4. Install the new UV lamp into the base assembly.
5. Install the UV lamp base assembly into the unit and it snaps into place.
6. Install the cover and the 2 screws.


1.

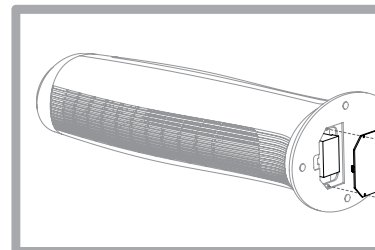

3.

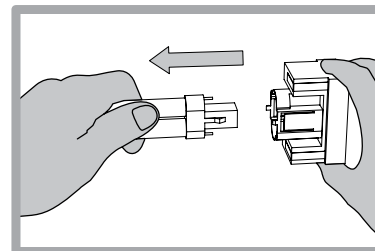


5.

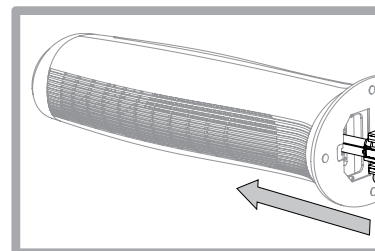

TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
Unit will not operate.	Speed Knob has not been turned on.	Turn on Speed Knob.
	Unit is unplugged.	Check to ensure unit is plugged in.
	The inlet grill has not been installed & locked into place.	Check to make sure filter is properly installed & locked into place.
Reduced airflow or poor filtering.	The inlet or outlet grill may be blocked.	Check to ensure nothing is blocking air inlet & air outlet.
	Permanent filter may be clogged.	Check & clean filter, if necessary.
No visible light in the UV light view window.	UV button is not turned on.	Check that the UV button is turned on.
	UV lamp is broken.	Replace the UV lamp.

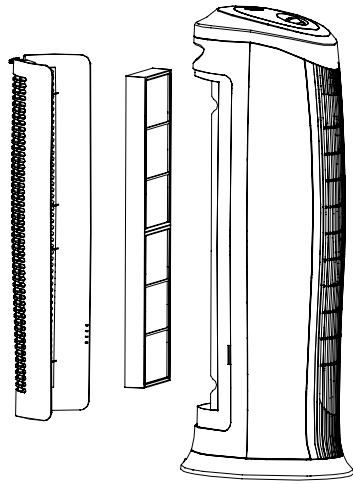

ONE-YEAR LIMITED WARRANTY

ONE YEAR LIMITED WARRANTY
 Your Therapure® 201 air purifier is warranted for one year from the original purchase date (in materials or workmanship, we will not be responsible for processing fee may apply). To obtain warranty service, contact our Customer Center toll-free at 1.800-554-6168.


This warranty does not cover any damage not intended and described in this owner's manual. This product as specified in this product manual of the Therapure® 201 air purifier.

Contact Info for Warranty Service

Ionic Pro
 P.O. Box 4135 | Hollywood, CA | 90028
 1.800-554-6168 | www.therapureair.com

© 2006-2008 Ionic Pro, LLC. All Rights Reserved.

The energy efficiency of this ENERGY STAR certified model's CADR for dust and the

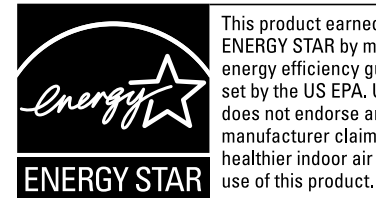

the

ARBITRATION AGREEMENT

THIS ARBITRATION AGREEMENT ("AGREEMENT") AFFECTS YOUR LEGAL RIGHTS AND REMEDIES BY PROVIDING THAT DISPUTES BETWEEN YOU AND THE SELLER OF THIS PRODUCT ("COMPANY"), MUST BE RESOLVED THROUGH BINDING ARBITRATION, RATHER THAN IN A COURT. PLEASE READ THIS AGREEMENT CAREFULLY. YOU ACCEPT THE TERMS OF THIS AGREEMENT BY RETAINING THE PRODUCT(S) SHIPPED IN CONNECTION WITH THIS AGREEMENT (THE "PRODUCT") FOR MORE THAN FOURTEEN (14) DAYS AFTER RECEIPT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, YOU MAY RETURN THE PRODUCT TO COMPANY WITHIN FOURTEEN (14) DAYS OF RECEIPT AT NO COST TO YOU.

1. RESOLUTION OF CLAIMS OR DISPUTES. Any claim or dispute between you and Company (or any of Company's subsidiaries or affiliates) arising out of or relating in any way to the Product or this Agreement shall be resolved through final, binding arbitration. This arbitration obligation applies regardless of whether the claim or dispute involves a tort, fraud, misrepresentation, product liability, negligence, violation of a statute, or any other legal theory. Both you and Company specifically acknowledge and agree that you waive your right to bring a lawsuit based on such claims or disputes and to have such lawsuit resolved by a judge or jury.

2. LIMITATION OF LEGAL REMEDIES. All arbitrations under this Agreement shall be conducted on an individual (and not a class-wide) basis, and an arbitrator shall have no authority to award class-wide relief. You acknowledge and agree that this Agreement specifically prohibits you from commencing arbitration proceedings as a representative of others or joining in any arbitration proceedings brought by any other person.

3. ARBITRATION PROCEDURES.

a. Before commencing any arbitration proceedings under this Agreement, you must first present the claim or dispute to Company by calling 818.217.2500 and asking for the Legal Department and allowing Company the opportunity to resolve the claim or dispute. If your claim or dispute is not resolved within sixty (60) days, you may commence arbitration proceedings in accordance with the terms of this Agreement.

b. The arbitration of any claim or dispute under this Agreement shall be conducted pursuant to the American Arbitration Association's ("AAA") United States Commercial Dispute Resolution Procedures and Supplementary Procedures for Consumer-Related Disputes. These rules and procedures are available by calling the AAA or by visiting its web site at www.adr.org.

c. The arbitration of any claim or dispute under this Agreement shall be conducted in the State of California or the location in which you received this Agreement.

d. All administrative expenses of arbitration proceedings commenced under this Agreement shall be divided equally between you and Company, except that: (a) if the claim or dispute that is the subject of the arbitration proceedings is less than ten thousand dollars (US\$10,000), you will be responsible for no more than one hundred twenty-five dollars (US\$125) in administrative expenses; (b) if the claim or dispute that is the subject of the arbitration proceedings is more than ten thousand dollars (US\$10,000) but less than seventy-five thousand dollars (US\$75,000), you will be responsible for no more than three hundred seventy-five dollars (US\$375) in administrative expenses; and (c) if the claim or dispute that is the subject of the arbitration proceedings is more than seventy-five thousand dollars (US\$75,000), then you will be responsible for administrative expenses in accordance with the Commercial Fee Schedule provided by the AAA. You acknowledge and agree that each party shall pay the fees and costs of its own counsel, experts and witnesses.

4. CHOICE OF LAW. This Agreement shall be governed by the United States Federal Arbitration Act and the laws of the state of California.

5. SEVERABILITY. If any provision of this Agreement is declared or found to be unlawful, unenforceable or void, such provision will be ineffective only to the extent that it is found unlawful, unenforceable or void, and the remainder of the provision and all other provisions shall remain fully enforceable.

UV LAMP REPLACEMENT

We recommend that you replace your UV lamp every 12 months.

UV lamp replaced on: _____

Purchased at: _____

UV lamp replaced on: _____

Purchased at: _____

UV lamp replaced on: _____

Purchased at: _____

UV lamp replaced on: _____

Purchased at: _____

UV lamp replaced on: _____


Purchased at: _____

UV lamp replaced on: _____

Purchased at: _____

UV lamp replaced on: _____

Purchased at: _____



201M

thera|pure®

thera|pur