

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# Thermos 465630003 Owner's Manual

[Shop genuine replacement parts for Thermos  
465630003](#)



[Find Your Thermos Grill Parts - Select From 1975 Models](#)

----- Manual continues below -----



**Model Number 465630003**  
**Owner's Manual**  
Assembly, Operation,  
Use and Care



**This Grill is for  
Outdoor Use Only**

Read and follow all safety statements, assembly instructions, and use and care directions before attempting to assemble and cook.

Installer/assembler:  
Leave these instructions with consumer.

Consumer: Keep this manual for future reference.



**WARNING**




Failure to follow all manufacturer's instructions could result in fire or explosion which could cause property damage, personal injury or death.




**CAUTION**



Some parts may contain sharp edges – especially as noted in the manual! Wear protective gloves if necessary.



**WARNING**



**FOR YOUR SAFETY**

1. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
2. An LP tank not connected for use shall not be stored in the vicinity of this or any other appliance.

**FOR YOUR SAFETY**

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. Open lid.
4. If odor continues, immediately call your gas supplier or your fire department.

### Safety Symbols

The symbols and boxes shown below explain what each heading means. Read and follow all of the messages found throughout the manual.



**DANGER**



**DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



**WARNING**



**WARNING:** Be alert to the possibility of serious bodily injury if the instructions are not followed. Be sure to read and carefully follow all of the messages.



**CAUTION**



**CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

### LP (Liquefied Petroleum Gas)

- Is nontoxic, odorless and colorless when produced. **For Your Safety**, LP gas has been given an odor (similar to rotten cabbage) so that it can be smelled.
- **LP gas is highly flammable and may ignite unexpectedly when mixed with air.**



### Call Grill Service Center for Help and Parts

- If you need help or warranty parts call **1-800-435-5194** U.S., **1-800-387-6057** CAN, or send a FAX to 1-706-576-6355. Business hours: Open 24 hours - Seven days a week.
- To order non-warranty replacement parts or accessories (*grill cover, 4' adapter hose*) call 1-800-993-2677, visit [www.grilllovers.com](http://www.grilllovers.com), or send a FAX to 1-706-565-2121.

### Installation Safety Precautions

- This grill is designed for use with LP (propane) gas. The regulator/valve supplied must be used. Replacement parts must be those specified by the manufacturer.
- Grill installation must conform with local codes, or in their absence with **National Fuel Gas Code, NFPA 54 / ANSI Z223.1** or **CAN/CGA-B149.2 Propane Installation Code**. Handling and storage of LP cylinders must conform to LP Gas Code **NFPA/ANSI 58**. Grill is not to be installed in or on recreational vehicles and/or boats. Keep any electrical cords and/or fuel supply hoses away from any hot surfaces.
- This grill is safety certified for use in the United States and Canada only. Do not modify for use in any other location. Modification will result in a safety hazard.

**This product is subject to patents pending in the U.S. and other countries.**

**IMPORTANT: Fill out the warranty information below.**

<b>Model Number</b> _____
<b>Serial Number (on grill)</b> _____
<b>Date Purchased</b> _____

## Warranty

Thermos warrants to the original consumer-purchaser that this product shall be free from defects in workmanship and materials under normal and reasonable use and correct assembly (If assembled by consumer-purchaser) as follows:

- (1) The aluminized top and bottom for a period of three (3) years from date of purchase; excluding the paint finish;
- (2) The burner/venturi assembly for a period of three (3) years from date of purchase;
- (3) The cooler and lifting mechanism for a period of one (1) year from date of purchase; and
- (4) All other parts, for a period of one (1) year from date of purchase.

Thermos will, at its option, refinish or replace any product or part found to be defective during the warranty period. Thermos will require you to return the part(s) claimed to be defective, for its inspection, freight or postage prepaid. If you wish to obtain performance of any obligation under this limited warranty, you should write to:


**THERMOS GRILLS**  
**Consumer Warranty / P.O. Box 1240**  
**Columbus, GA 31902-1240**

Thermos may require reasonable proof of purchase and we suggest you keep your receipt. In the state of California only, if refinishing or replacement of the product is not commercially practicable, the retailer selling this product or Thermos will refund the purchase price paid for the product, less the amount directly attributable to use by the original consumer-purchaser prior to discovery of the nonconformity. In addition, in the state of California only, you may take the product to the retail establishment from which it was purchased or to any retail establishment selling this product in order to obtain performance under this warranty. This warranty does not include the cost on any inconvenience or property damage due to failure of the product and does not cover damage due to misuse, abuse, accident, damage arising out of transportation of the product, or damage incurred through commercial use of the product. ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIODS SPECIFIED ABOVE FOR THE PARTS DESCRIBED THEREIN. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither dealers nor the retail establishment selling this product has any authority to make any warranties or to promise remedies in addition to or inconsistent with those stated above. Thermos' maximum liability, in any event, shall not exceed the purchase price of the product paid by the original consumer-purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The warranty gives you specific legal rights and may also have other rights which vary from state to state.


# TABLE OF CONTENTS

For Your Safety . . . . .	2
Safety Symbols	
LP (Liquefied Petroleum Gas) . . . . .	3
Grill Service Center	
Installation Safety Precautions	
Warranty Information	
Warranty . . . . .	4
Table of Contents . . . . .	5
Grill Features . . . . .	6-7
Parts List . . . . .	8
Parts Diagrams . . . . .	9-10
Assembly . . . . .	11-16
Tabletop Mode . . . . .	17-18
Use & Care . . . . .	19-28
Troubleshooting . . . . .	29

# FEATURES

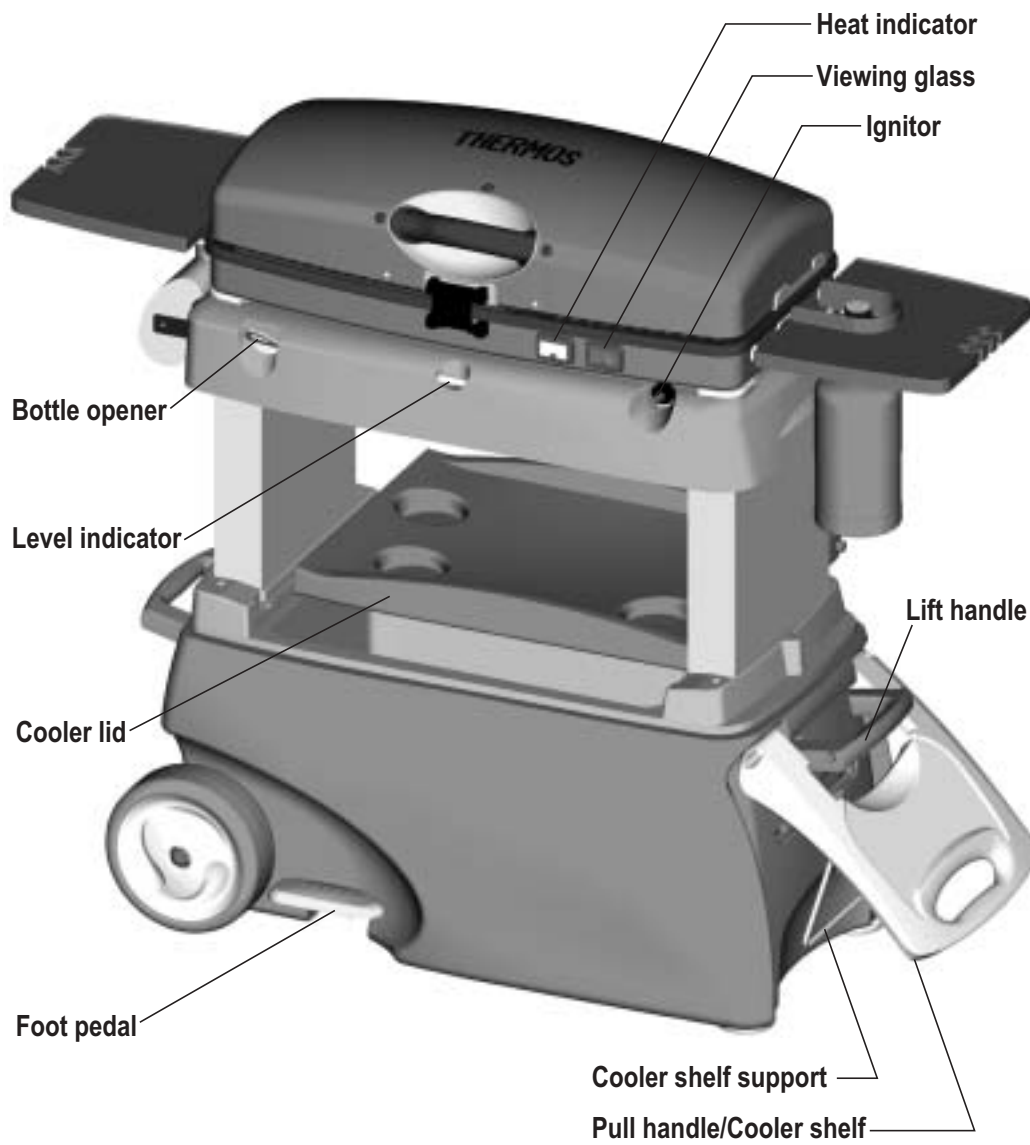

# FEATURES

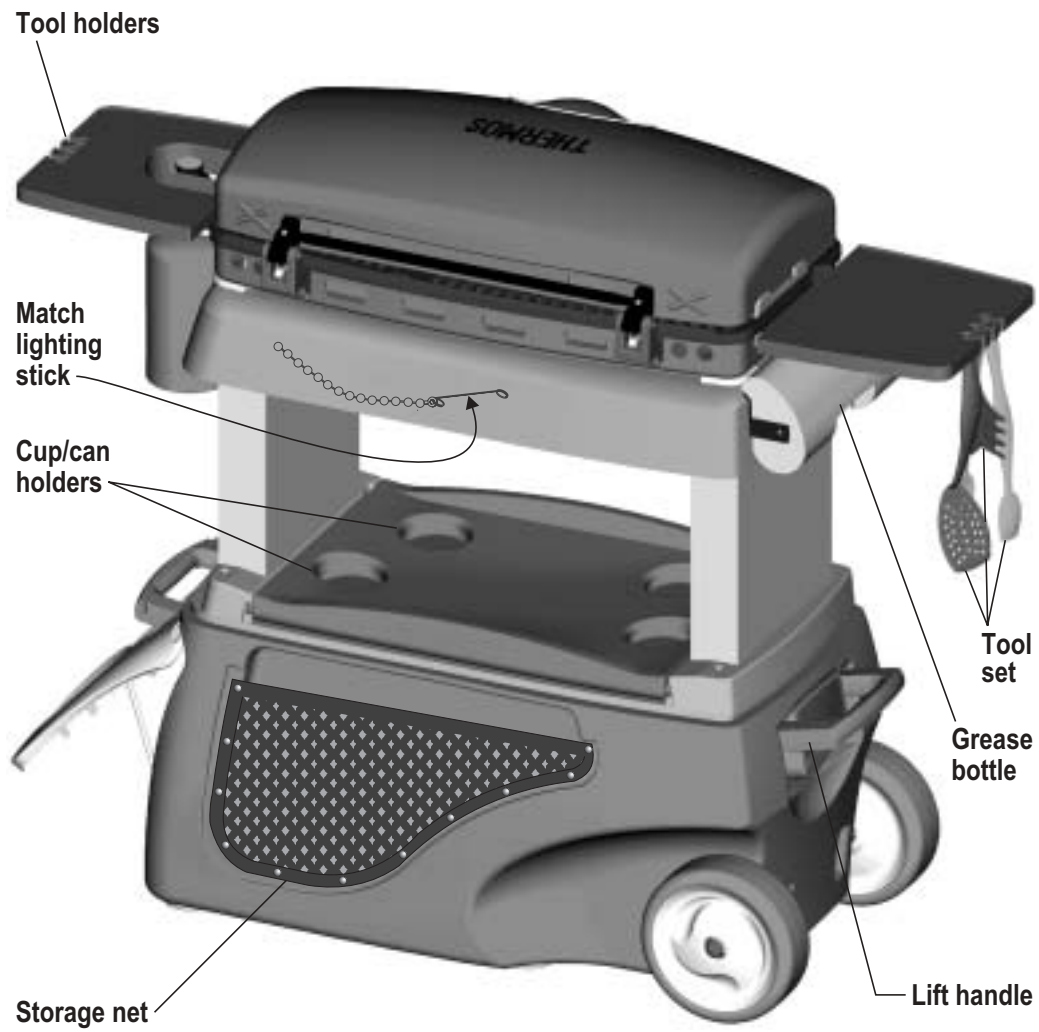





# PARTS LIST

Key	Quantity	Description	Part Number
1	1	Torsion Bar	21-6047-009-200
2	2	Upper Hinge	22-6047-004-200
3	1	Grill Lid	65-6048-018-200
4	2	Side Lid Spacer	13-6047-397-200
5	1	Center Lid Spacer	13-6047-399-200
6	1	Upper Latch	22-6047-040-200
7	1	Handle Assembly	69-6047-246-200
8	1	Heat Shield	21-6047-082-200
9	1	Grate	65-6047-339-200
10	1	Burner	69-6047-029-200
11	1	Collector Box	21-6047-338-200
12	1	Electrode	69-6047-331-200
13	1	Lower Heat Shield	21-6047-023-200
14	1	Side Shelf - Left	69-6048-043-200
15	2	Pivot Pin	41-6047-025-200
16	2	Lower Hinge	22-6047-010-200
17	1	Ignitor Wire	69-6047-332-200
18	1	Side Shelf - Right	69-6048-040-200
19	1	Grill Bottom	65-6048-023-200
20	1	Lower Latch	22-6047-011-200
21	1	Latch Clasp	11-6047-012-200
22	1	Heat Indicator	69-6047-013-200
23	1	Sight Glass	69-6047-017-200
24	1	Ignitor	69-6047-014-200
25	1	Ignitor Nut	43-9000-005-000
26	1	Venturi Guard	21-6047-024-200
27	1	Regulator Lock	13-6047-341-200
28	1	Regulator/Valve	69-6047-031-200
29	1	Plinth	69-6048-001-200
30	1	Match Lighting Stick	21-6047-366-200
31	1	Grease Bottle Assembly	69-6048-003-200
32	2	Wire Leg Assembly	69-6048-045-200
33	1	Skirt Assembly - Left	69-6048-010-200
34	1	Cooler Lid	11-6048-027-200
35	1	Left Bezel	11-6048-025-200
36	1	Right Bezel	11-6048-026-200
37	1	Cooler Body Assembly	69-6048-004-200
38	1	Pull Handle Support Wire	21-6048-012-200
39	2	Wheel	69-6048-011-200
40	1	Pedal	11-6048-046-200
41	1	Mesh	89-9000-368-000
42	1	Skirt Assembly - Right	69-6048-030-200
43	1	Ignitor Shield	21-6047-400-200
44	4	Side Lid Spacer Pin	13-6047-398-200

# PARTS DIAGRAM

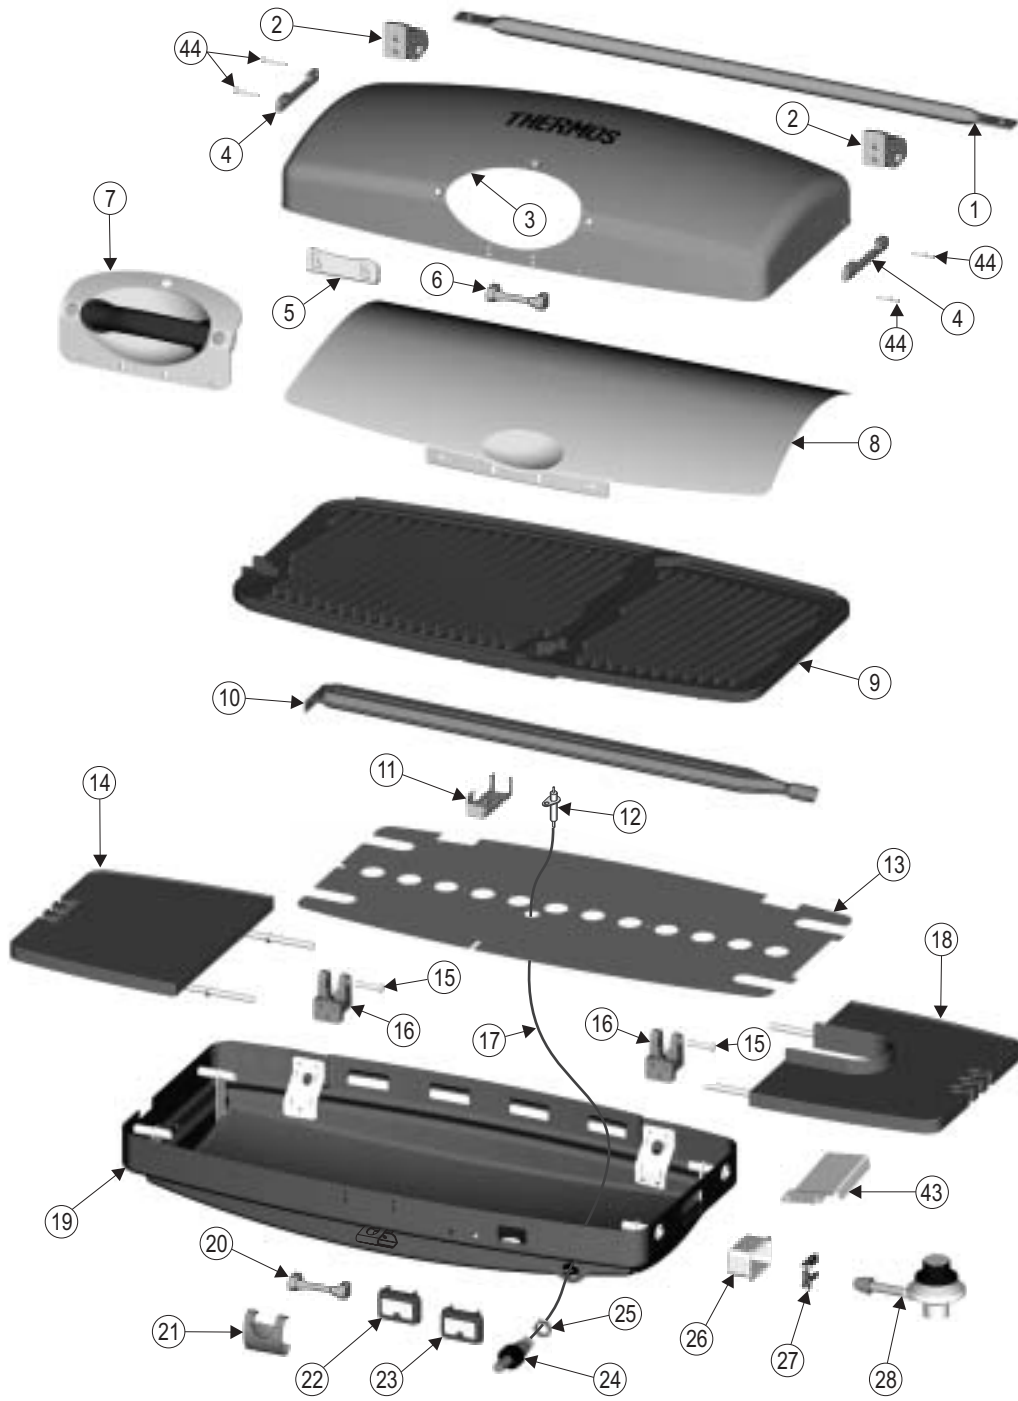


# PARTS DIAGRAM

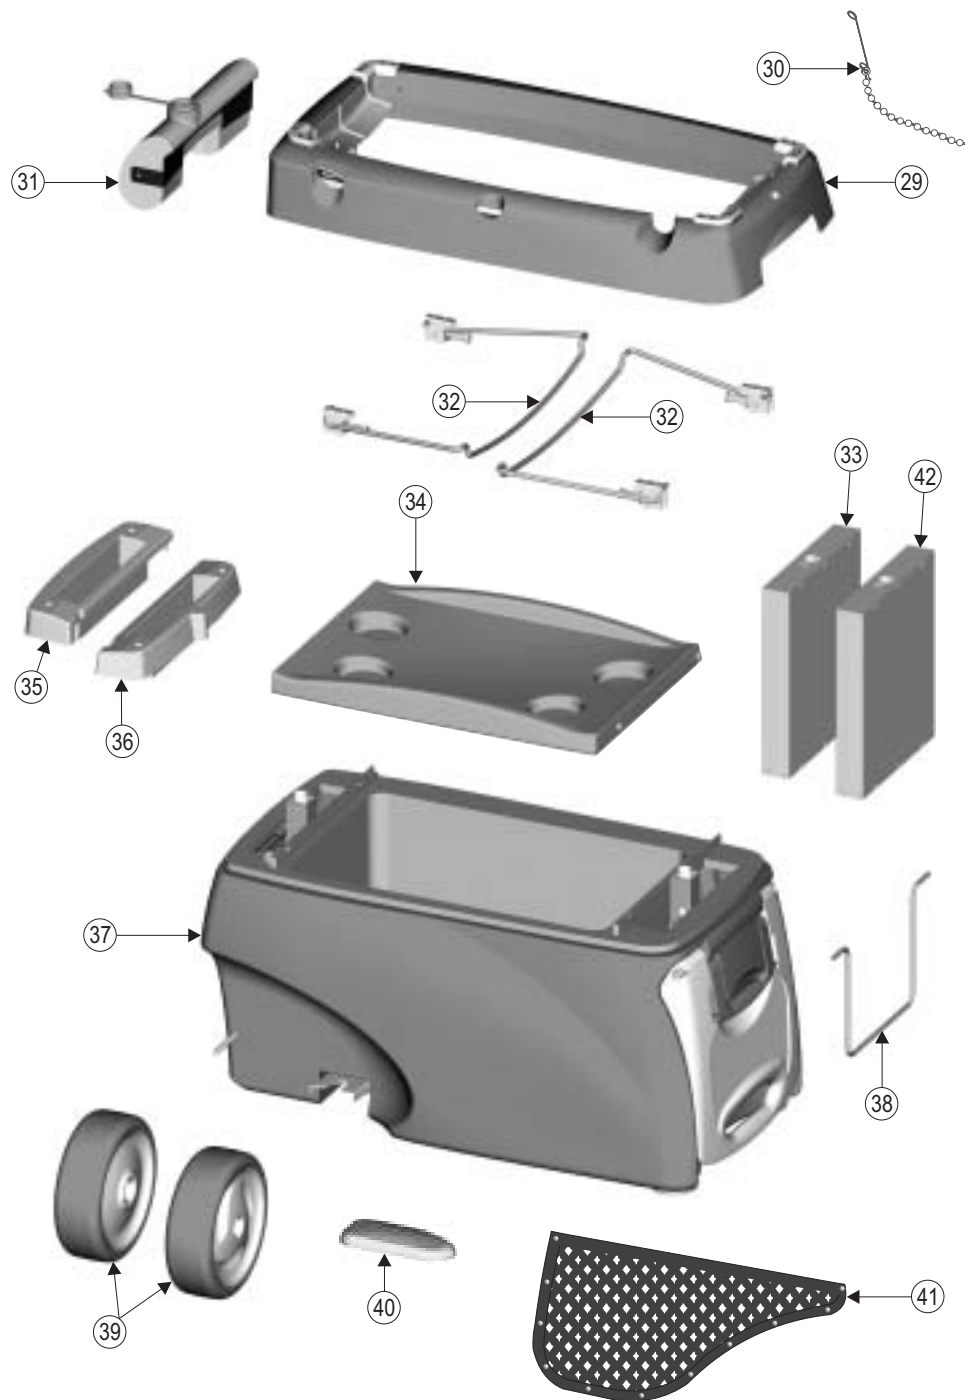

## ASSEMBLY

To raise grill . . . **PRESS** and **RELEASE** foot pedal on front of cooler. Foot pedal **MUST BE RELEASED** once the grill begins to rise so that the grill will lock into position.

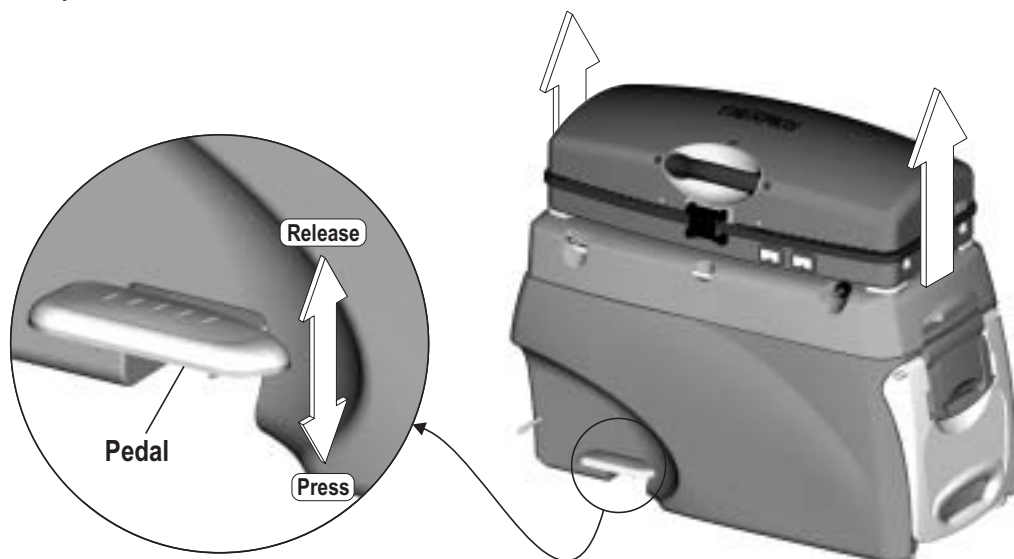

Slide cooler lid back to open and lift grill lid to remove packed components.


### Contents:

Side shelves  
Tools (3)  
Grease bottle  
Regulator  
Wheels/screws




To lower grill and begin assembly . . . Make sure cooler lid is in the closed position. **PRESS** foot pedal and push grill down by pressing on **OUTER EDGES** of grill lid. **RELEASE** foot pedal **BEFORE** grill reaches the cooler so that it will lock into position.

**IMPORTANT:** DO NOT attach gas regulator to grill at this point. Mechanism will not close if regulator is in place.

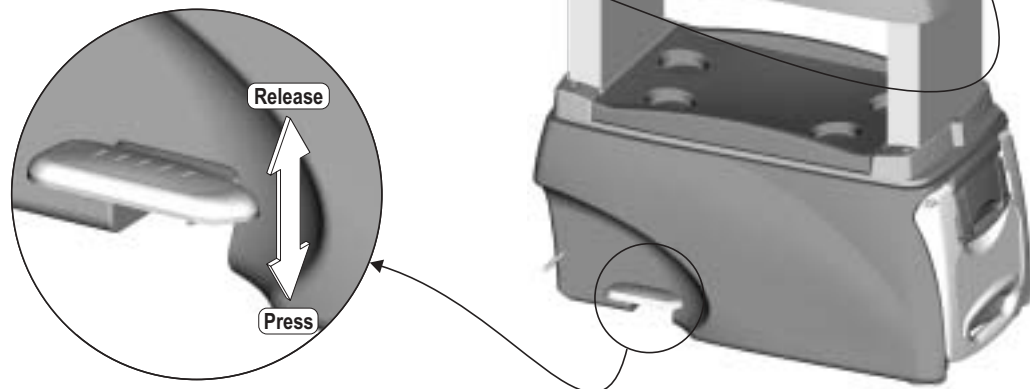

Slide wheels onto axle. Secure with axle screw into each end of the axle.

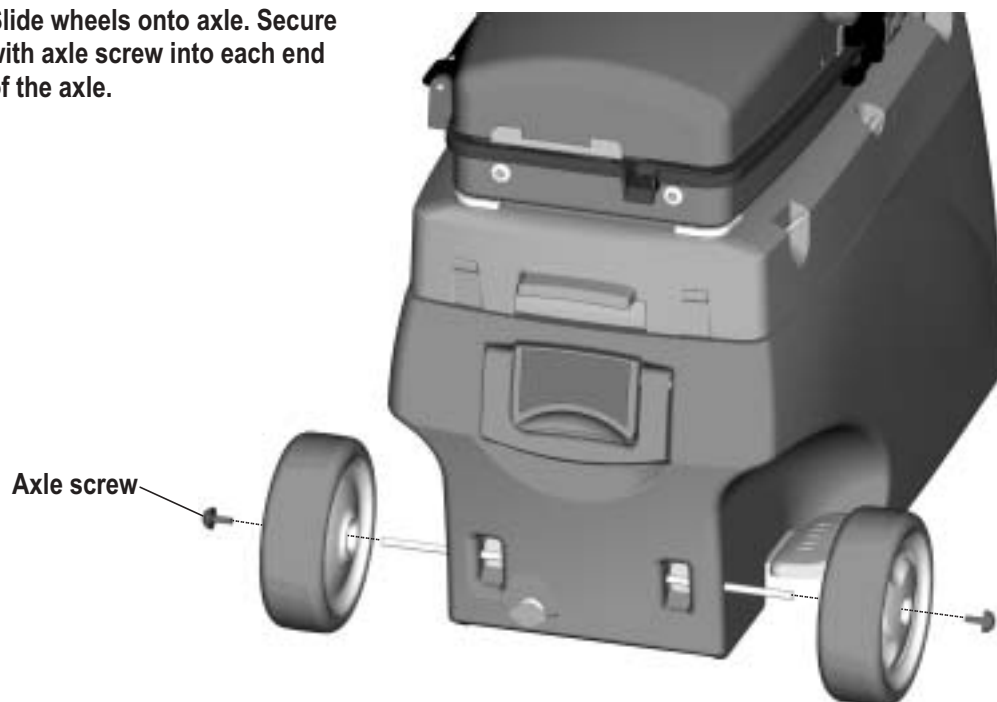

Attach grease bottle by sliding bottle bracket over tabs on left side of plinth.


Grease bottle



Twist 1 lb. LP gas cylinder (sold separately) into regulator.

Regulator

1 lb. LP gas cylinder

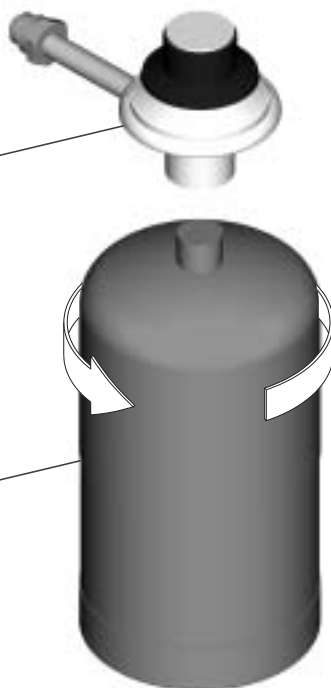




PRESS and **RELEASE** foot pedal on front of cooler. Foot pedal **MUST BE RELEASED** once the grill begins to rise so that the grill will lock into position.

To install regulator/cylinder . . .



1. Push and hold regulator lock to right.
2. Push and hold the gas interlock downward.
3. Insert regulator tube straight into burner tube.
4. Release regulator lock and gas interlock. Regulator lock should spring back to original position to lock regulator in place.

**NOTE:**

- Gas cylinder and regulator **MUST** be removed before lowering grill.
- Grill should not be removed when grill is in raised position.

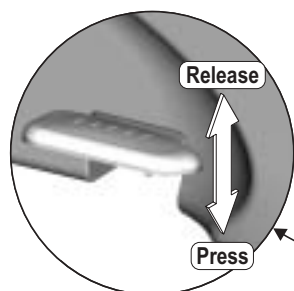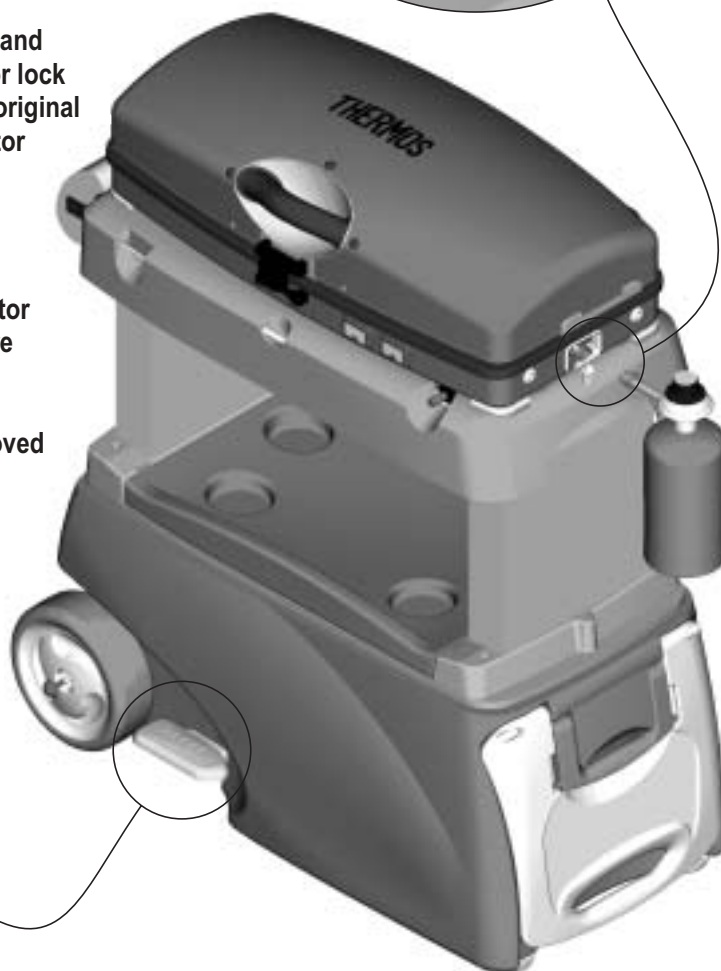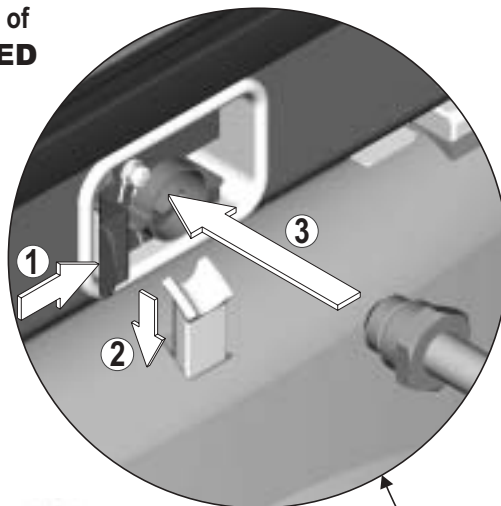

Attach side shelves by sliding shelf rods into holes on each side of grill.

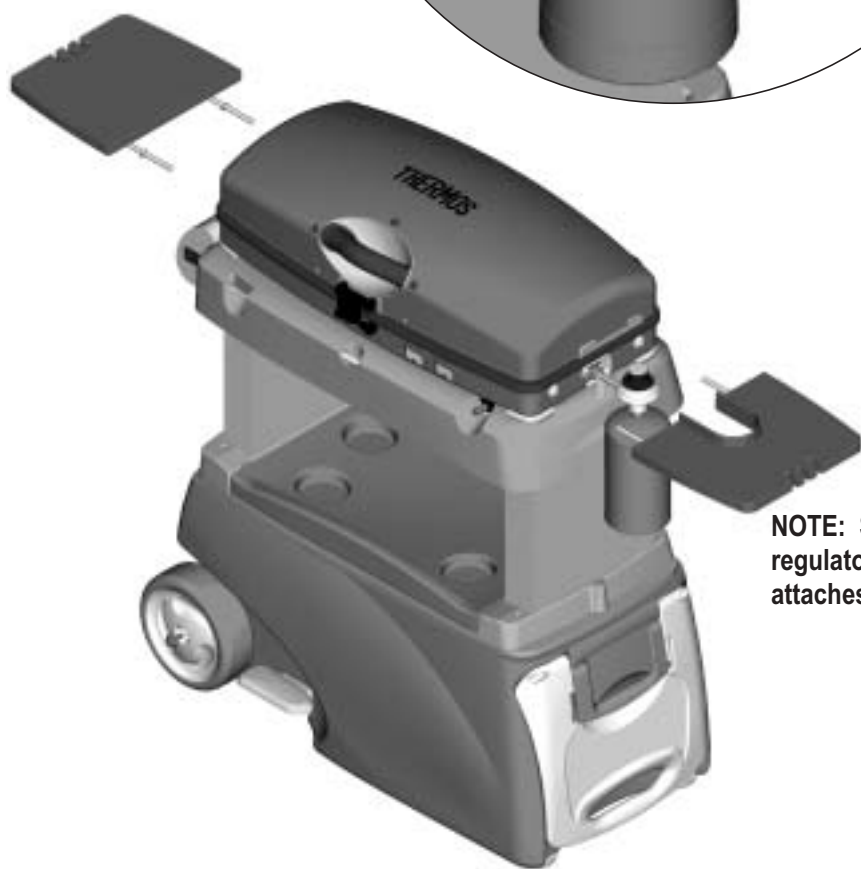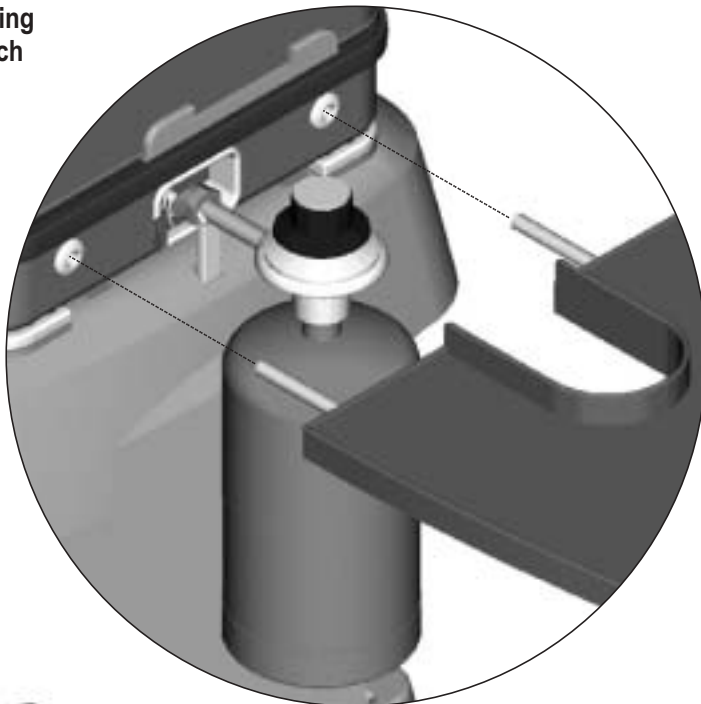


**NOTE:** Shelf with regulator cut-out attaches to right side.



**The pull handle on your cooler may converted for use as a shelf by utilizing the built-in support in the handle.**

**To use the pull handle as a shelf . . .**

- 1. Raise pull handle to horizontal position.**
- 2. Lower the support wire (built into handle).**
- 3. Place support wire into slot in cooler body.**

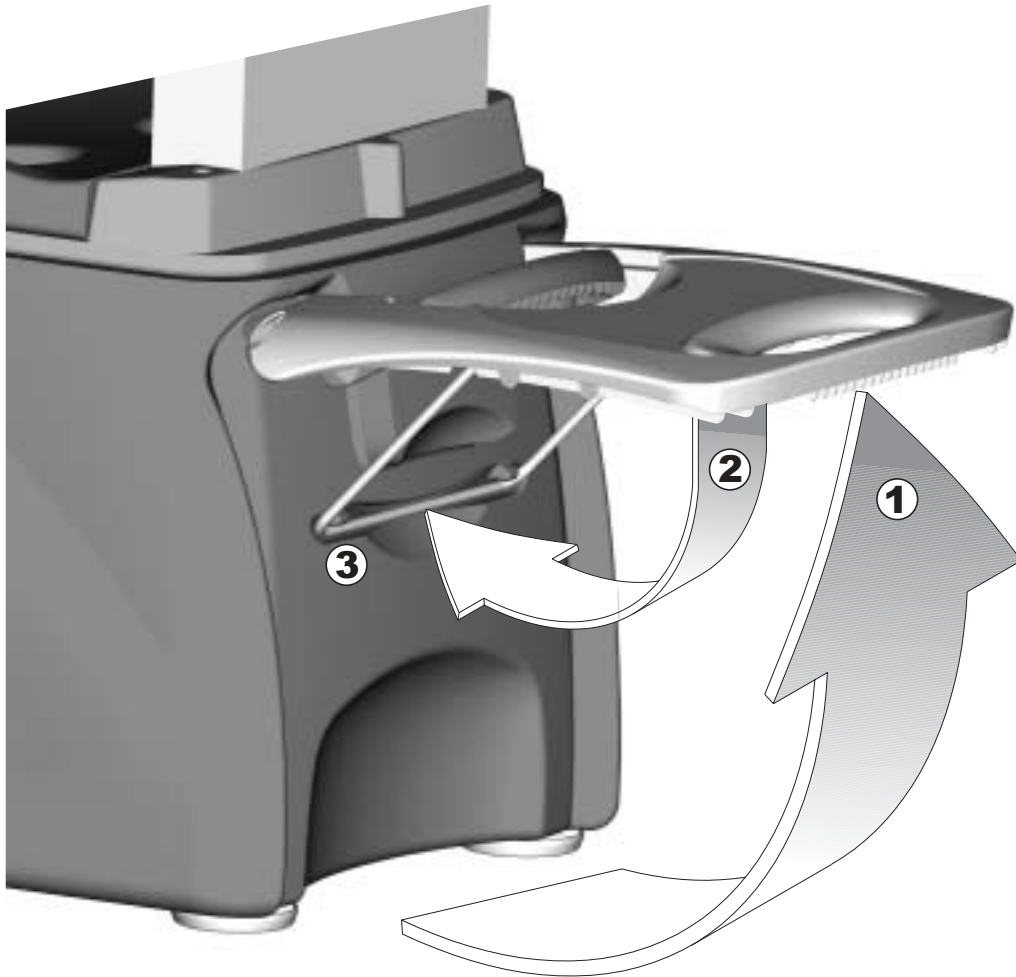

## TABLETOP MODE

To remove grill from cooler for tabletop use . . . Begin with grill in the lowered position. Grasp the plinth on each side (see arrows) and lift grill from cooler.

**NOTE:**

- Grill should not be removed when grill is in raised position.
- Do not press pedal when grill is removed. If pedal is accidentally pressed after grill is removed, the grill skirts will raise. If this happens, align and place grill properly back on skirts prior to lowering (see page 12 for lowering instructions).



Beneath the plinth, unfold the wire legs. Legs will lock into position when fully extended.

If grease bottle has been removed, attach to left side of plinth as shown on page 11.

Attach regulator and gas cylinder to right side of grill as shown on page 12.







To close legs and return grill to cooler . . . Press legs inward to release from locked position, then fold legs under plinth.

**NOTE:** Regulator and gas cylinder **MUST** be removed from grill before placing grill onto cooler.

Align posts beneath plinth with holes on top of cooler and slide grill downward onto cooler.

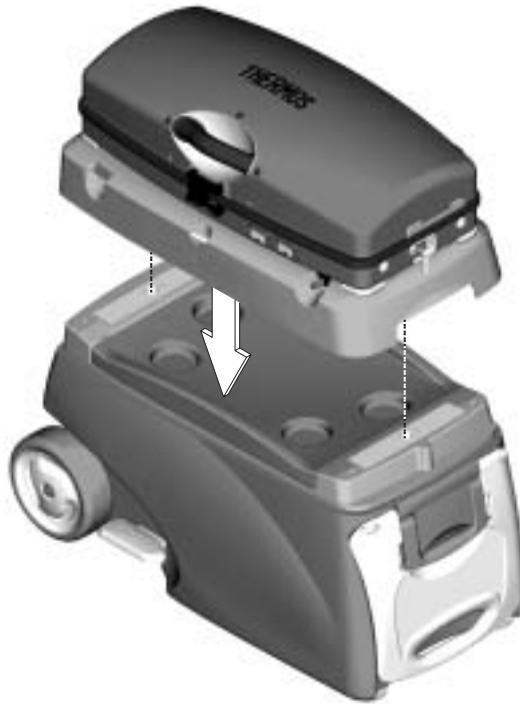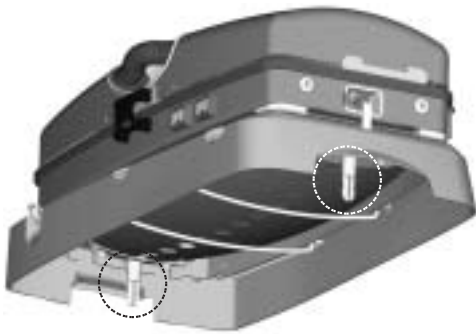

## USE AND CARE

### Propane Cylinder Use (1 lb. Disposable)

- Use only cylinder marked "Propane Fuel".
- Size should be 4" diameter, 8" height, or 3" diameter, 10" height.
- Save cylinder cap and reinstall when not in use.
- Cylinder supply system must be arranged for vapor withdrawal. Gas cylinder must be upright in use.


	<h2>WARNING</h2>	
<p>Use only 1 lb. propane bottles as specified above. Use of other gas bottles could cause gas leak or fire.</p>		

### Leak Testing (1 lb. Disposable) **IMPORTANT!**

- During leak test, keep grill away from open flames or sparks and do not smoke. Grill must be leak tested outdoors in a well ventilated area.
- Leak test must be repeated each time gas cylinder is replaced or after storage.

Materials needed include clean paint brush and 50/50 soap and water solution. Use mild soap and water. ▲ **Do not use household cleaning agents.** Damage to components can result.

1. Be sure **control knob** on regulator is in "OFF" position.
2. Brush soapy solution onto **connection** between gas cylinder and regulator at **(A)**.

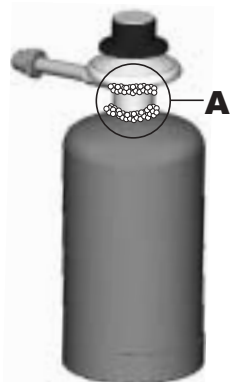


▲ If growing bubbles appear, there is a leak. Retighten connection and repeat steps 1 and 2

If you cannot stop a leak, remove gas cylinder from regulator and check for damaged threads, dirt and debris on regulator and gas cylinder. Also check to see if anything is obstructing flow of gas at regulator and gas cylinder openings. Remove any obstruction that may be found and repeat leak test. **If threads are damaged on either regulator or gas cylinder, replace.** Order new parts by giving the serial, model number and name of items needed to the Grill Service Center at 1-800-435-5194 U.S. or 1-800-387-6057 CAN.

### Propane Cylinder Use (20 lb. Refillable)

#### The 20 lb. LP tank used with your grill must meet the following requirements:

- Purchase LP tanks only with these required measurements: 12" (30.5cm) (diameter) x 18" (45.7 cm) (tall) with 20 lb. (9 kg.) capacity maximum.
- Tank must be constructed and marked in accordance with specifications for LP tank of the U.S. Department of Transportation (DOT) or for Canada, CAN/CSA B-339, cylinders, spheres, and tubes for transportation of dangerous goods, Transport Canada (TC). See LP tank collar for marking.
- LP tank valve must have:
  - Type 1 outlet compatible with adapter hose.
  - Safety relief valve.
  - UL listed Overfill Protection Device (OPD).  
This OPD safety feature is identified by a unique triangular hand wheel. **Use only tanks equipped with this type of valve.**  
**Tank must be upright in use.**
- Supply system must be arranged for vapor withdrawal and include collar to protect LP tank valve.

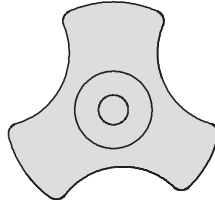

OPD Hand Wheel

### LP Tank Filling (20 lb. Refillable)

- Use only licensed and experienced dealers.
- LP tank **must be purged** before filling.
- Dealer should **NEVER** fill LP tank more than 80% of LP tank volume.
- A frosty regulator indicates gas overfill. Immediately close LP tank valve and call local LP gas dealer for assistance.
- Do not release liquid propane (LP) gas into the atmosphere. This is a hazardous practice.
- To remove gas from LP tank, contact an LP dealer or call a local fire department for assistance. Check the telephone directory under "Gas companies" for nearest certified LP dealers.
- **LP Tank Exchange:** You may choose to replace your empty LP tank through an exchange service. Use only those reputable exchange companies that inspect, precision fill, test and certify their cylinders. **Exchange for OPD safety feature equipped tank as described in LP Tank.**
- Always keep LP tank in upright position during use, transit or storage.
- **Leak test LP tank BEFORE connecting to grill.**
- Do not store a spare LP gas cylinder under or near this appliance.
- Never fill the cylinder beyond 80 percent full; and
- If the instructions above are not followed exactly, a fire causing death or serious injury may occur.

## Leak Testing (20 lb. Refillable) **IMPORTANT!**


### For your safety

- Leak test must be repeated each time LP tank is exchanged or refilled.
- Do not smoke during leak test.
- Do not use an open flame to check for gas leaks.
- Grill must be leak checked outdoors in well-ventilated area, away from ignition sources such as gas fired or electrical appliances. During leak test, keep grill away from open flames or sparks.

Use a clean paint brush and 50/50 soap and water solution. **Use mild soap and water.**

▲ **Do not use household cleaning agents.** Damage to gas train components can result.

Brush soapy solution onto the shaded areas shown below (A).

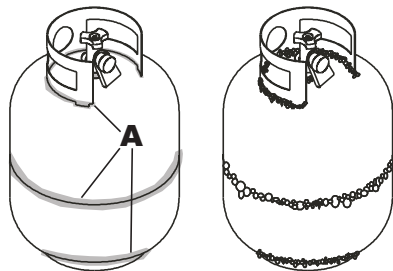


	<b>CAUTION</b>	
<p>If “growing” bubbles appear do not use or move the LP tank. Contact an LP gas supplier or your fire department.</p>		


### Connecting The Adapter Hose (sold separately) To The LP Tank

1. Use only adapter hose approved by safety testing organizations (CSA, UL, etc).
2. Turn all control knobs to the OFF position.
3. Turn LP tank OFF by turning hand-wheel clockwise to a **full stop**.
4. Remove the protective cap from LP tank valve. Always use cap and strap supplied with valve.

(This section continued on next page.)

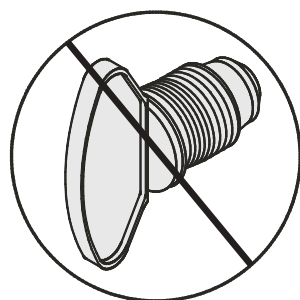


Use of this POL transport plug (plastic part with external threads) will defeat safety feature of valve.

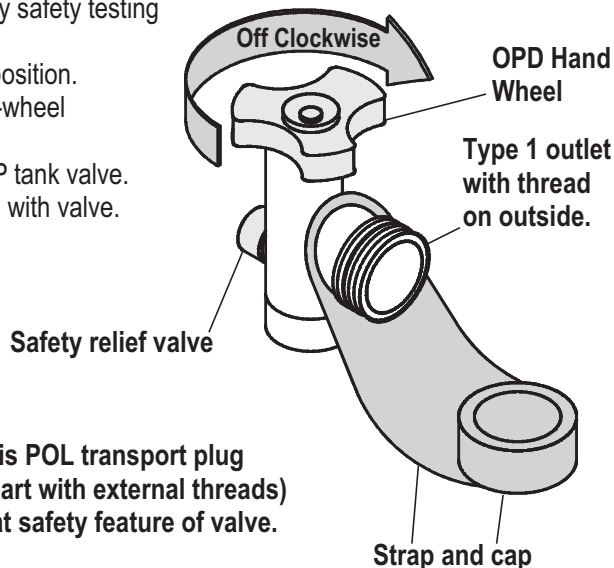

#### Connecting The Adapter Hose To The LP Tank (continued)

5. Hold hose end, insert nipple (A) into LP tank valve. Hand tighten coupling nut, **holding connector in a straight line (B) with LP tank valve** so as not to cross thread the connection.

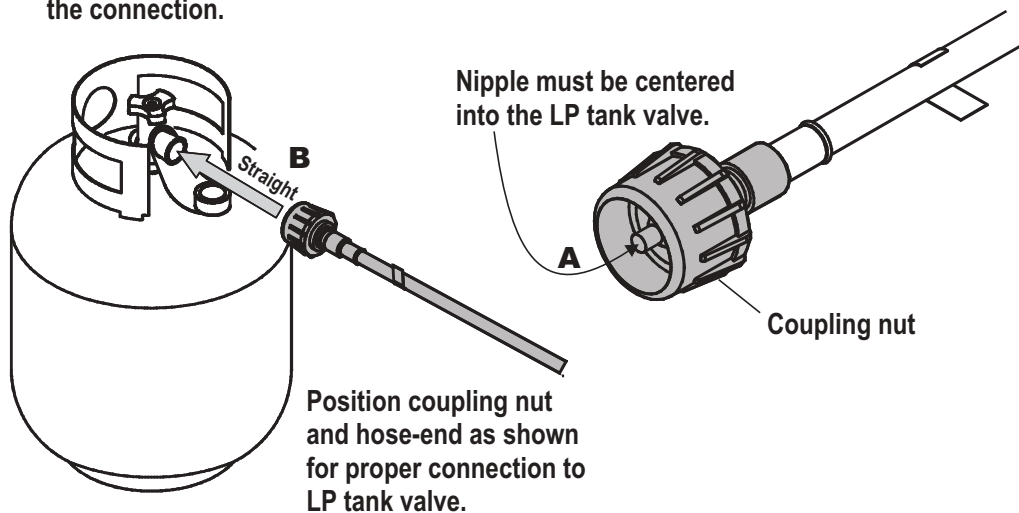

6. Turn the coupling nut clockwise to tighten to a full solid stop. The hose-end will seal on the back-check feature in the LP tank valve, resulting in some resistance. **An additional one-half to three quarters turn is required to complete connection. Tighten by hand only - do not use tools.**

**NOTE:** If you cannot complete connection, disconnect hose-end and repeat steps 5 and 6. If you are still unable to complete the connection, **do not use this connector!**

#### Hose Check

Before each use, check to see if hose is cut or worn. Replace damaged hose before using grill. Use only hose specified by manufacturer.

	<h2>WARNING</h2>	
<ul style="list-style-type: none"><li>• Do not insert any foreign objects into the valve outlet. You may damage the valve and cause a leak. Leaking propane may result in explosion, fire, severe personal injury, or death.</li><li>• Never attempt to attach this grill to the self-contained LP gas system of a camper trailer or motor home.</li></ul>		




# WARNING



- Do not use grill until leak checked.
- If leak is detected at any time, **STOP** and call the Fire Department.
- If you cannot stop a gas leak, *immediately* close LP tank valve and call LP gas supplier or your fire department!

## Leak Testing Valves, Hoses and Regulator

1. Turn grill control knob to off.
2. Be sure connector is tightly connected to LP tank.
3. Completely open LP tank valve by turning hand wheel counter clockwise. If you hear a *rushing sound*, turn gas off immediately. There is a major leak at the connection. **Correct before proceeding.**
4. Brush soapy solution onto following connections:

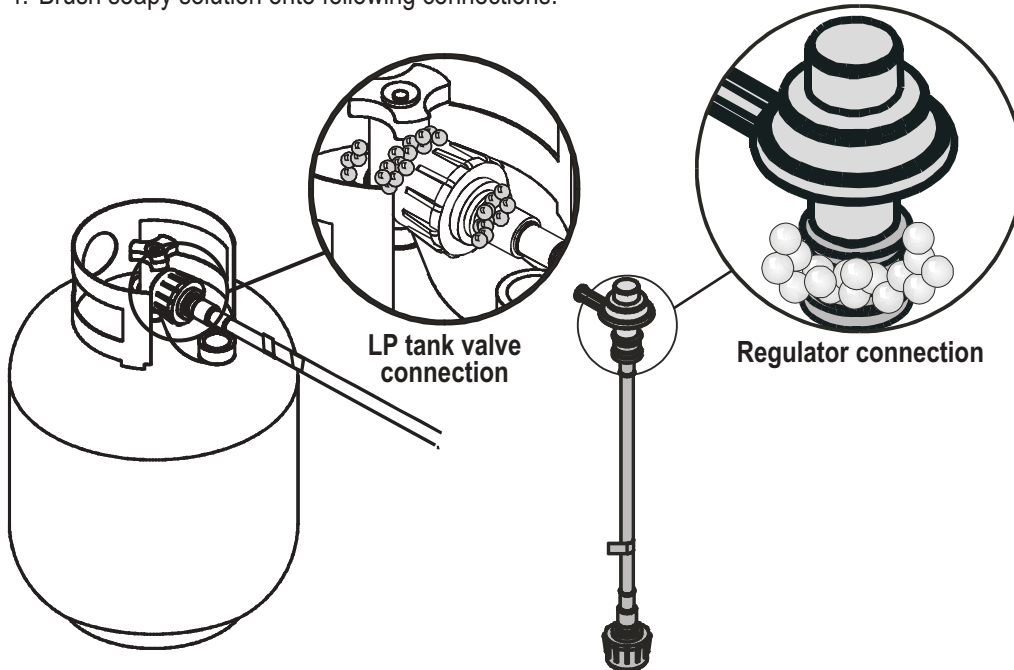

5. **"If growing"** bubbles appear, there is a leak. Close LP tank valve immediately and retighten connections. **If leaks cannot be stopped "do not try to repair".** Call for replacement parts. Order new parts by giving the serial, model number and name of items needed to the Grill Service Center at 1-800-435-5194 U.S. or 1-800-387-6057 CAN.
6. Always close LP tank valve after performing leak test by turning hand wheel clockwise.







# WARNING



## For Safe Use Of Your Grill:

- Do not leave the appliance unattended. Keep children and pets away from the appliance at all times.
- Never use regulator from this grill with any other LP appliance.
- When cooking, the appliance must be on a level surface in an area clear of combustible material.
- Do not block holes in bottom or back of grill.
- Check burner flames regularly.
- Use grill only in well-ventilated space. NEVER use in enclosed space such as carport, garage, porch, covered patio, or under a surface that can catch fire.
- Use grill at least 3 ft. from any wall or surface. Maintain 10 ft. clearance to objects that can catch fire or sources of ignition such as pilot lights on water heaters, live electrical appliances, etc.
- Do not use charcoal in a gas grill.
- This appliance is not intended for and should never be used as a heater.
- **Operate grill with 1 lb. cylinder in correct position as shown in A.**
- **Always remove 1 lb. cylinder from grill when transporting.**
- **Operate grill with 20 lb. cylinder in correct position as shown in B.**
- **Always remove 20 lb. cylinder from grill when transporting.**

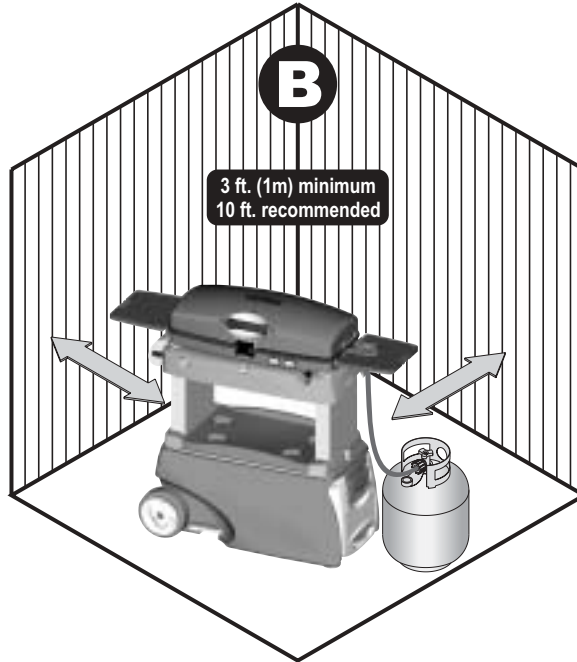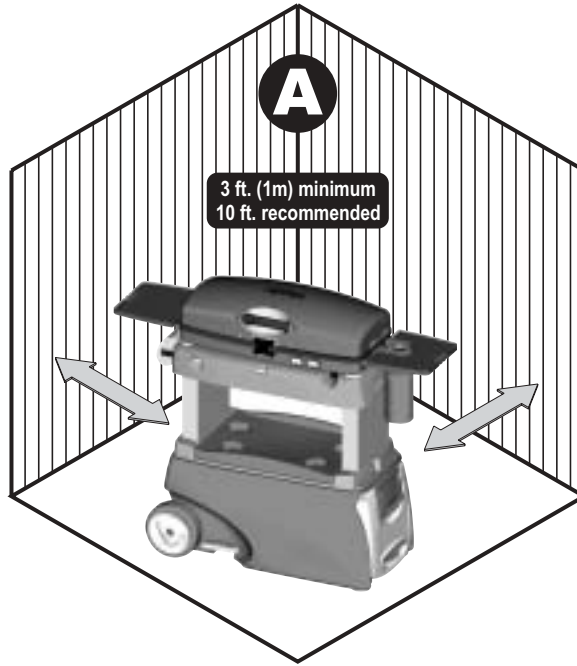

## Safety Tips


- ▲ The use of alcohol, prescription or nonprescription drugs may impair the consumer's ability to properly assemble or safely operate the appliance.
- ▲ When grill is not in use, disconnect 1 lb. cylinder or turn off 20 lb. cylinder.
- ▲ Never move grill while in operation or still hot. Allow the appliance to cool before moving or storing.
- ▲ Use only tools supplied or plastic tools.
- ▲ Maximum load for side shelf is 10 lbs.
- ▲ The regulator may make a humming or whistling noise during operation. This will not affect safety or use of grill.
- ▲ If you have a grill problem see the Troubleshooting Section.
- ▲ Light burners, check to make sure they are lit, close the lid and warm up grill on high for 10 minutes. Curing of paint and parts will produce an odor only on first lighting.

## Ignitor Check

**Regulator/Valve must be in "Off" position.** Remove cooking grid. Press ignitor button rapidly. "Click" should be heard and spark seen each time between burner and electrode. Replace cooking grid. See Troubleshooting if no click or spark.


## Ignitor Lighting

1. Push regulator/valve counterclockwise to "PUSH TO TURN ON" (A), push in, then turn to "LIGHTING POSITION" (B).
2. Push ignitor button rapidly to light. Use viewing glass (C) to be sure burner lights and stays lit.
3. If ignitor does not work, follow match lighting instructions.

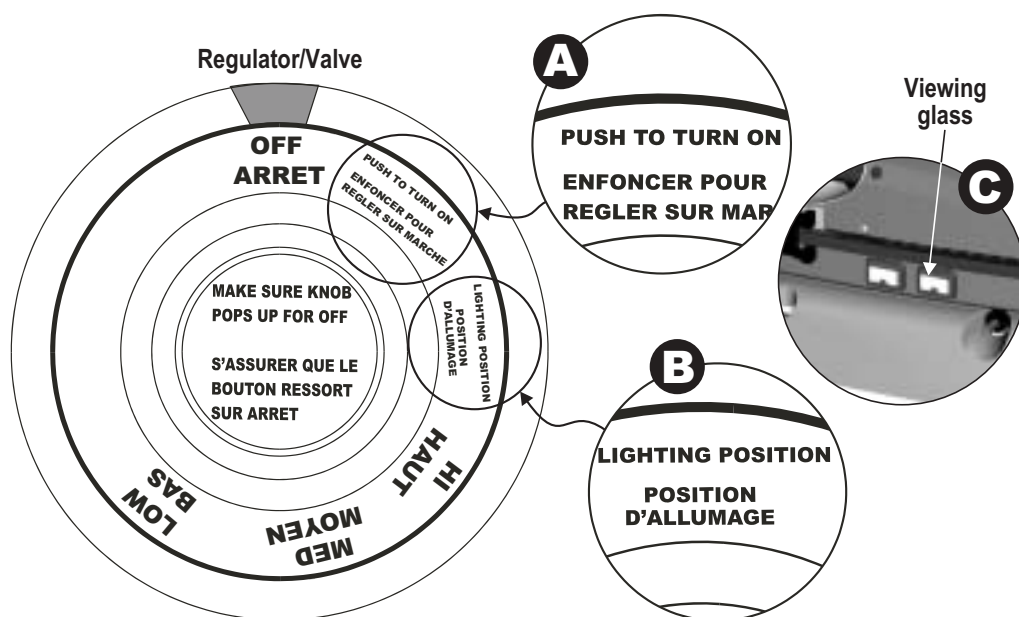

### Match Lighting


1. Push Regulator/Valve in and turn counterclockwise to LIGHTING POSITION.
2. Attach match to match lighting stick, light match.
3. Insert match lighting stick into vent hole at rear of grill.

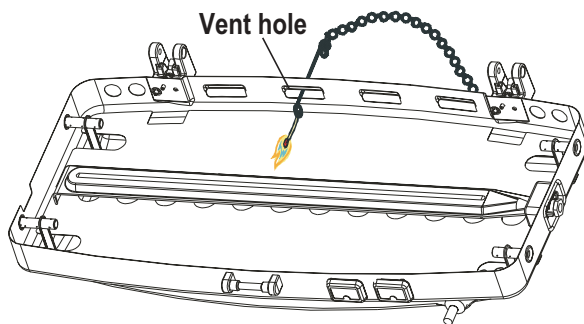

	<b>WARNING</b>	
If burner does not light within 5 seconds, turn knob to OFF, wait 5 minutes, try again.		

### Burner Flame Check

Light burner. Look through viewing glass on front of grill and make sure burner stays lit while rotating the regulator knob from HIGH to LOW. Always check flame prior to each use.

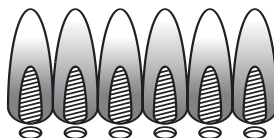


### Before Your First Cookout.

**Leak test your grill.** Light burners, check to make sure they are lit, close the lid and warm up grill on HIGH for 10 minutes. Curing of paint and parts will produce an odor only on first lighting.

### Turning Grill Off




- Turn knob to OFF position. Make sure regulator/valve pops up. If it does not, discontinue use and order new part.
- Disconnect 1 lb. cylinder or turn off valve on 20 lb. cylinder.
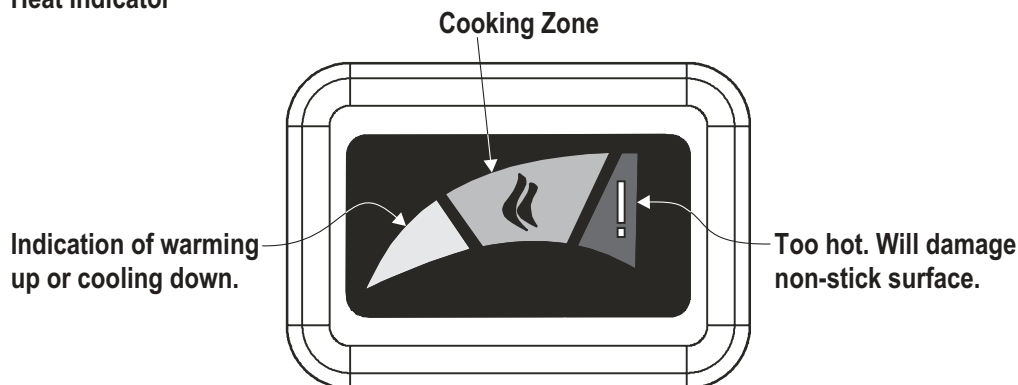
### Heat Indicator



### General Grill Cleaning

- Do not mistake brown or black accumulation of grease and smoke for paint. Interiors of gas grills are not painted at the factory (and should never be painted). Apply a strong solution of detergent and water or use a grill cleaner with scrub brush on insides of grill lid and bottom. Rinse and allow to completely air dry. **Do not apply a caustic grill/oven cleaner to painted surfaces.**
- **Plastic Side Shelves:** Wash with warm soapy water and wipe dry. ▲ Do not use citrisol, abrasive cleaners, degreasers or a concentrated grill cleaner on plastic side shelves. Damage to and failure of shelf can result.
- **Non-Stick Cooking Surface:** Turn grill off before cleaning. While still warm, pour a cup of water over cooking surface to loosen grease and food particles and to speed cool-down. Use supplied cleaning comb to scrape off excess grease and food particles. Wipe cooking surface with a paper towel or sponge. Once completely cool, cooking surface can be removed and washed with warm soapy water or placed in dishwasher.
- **Grease Bottle:** After each use, remove bottle and rinse with hot soapy water.
- **Cooler:** Wash with warm soapy water and wipe dry.

	<h2 style="text-align: center;">CAUTION</h2>	
<p>Clean burner prior to use after storing, at the beginning of grilling season or after a period of one month not being used. Spiders and insects like to build nests in burner tubes (especially during colder months). These nests can cause fires in burner tubes or under grill.</p>		
		
<p style="text-align: center;"><b>Typical spider webs inside burner.</b></p>		
<p><b>See following pages for specific cleaning instructions.</b></p>		

### Cleaning the Burner Assembly.

1. Turn gas off at control knob and LP tank.
2. Remove cooking surface.
3. Remove regulator/valve from grill.
4. Clean outside of burner with soap and water. Open clogged holes with a thin wire. Examine holes. Due to normal wear and corrosion some holes may become enlarged. If any large cracks or holes are found, replace burner. Burner can be cleaned either installed or removed.
5. If grill is to be stored, coat burner lightly with cooking oil. Wrap in protective cover to keep insects out.
6. Replace cooking surface.

**VERY IMPORTANT:** Before cooking again on grill, follow *Burner Flame Check* and warnings on pages 2 and 24.

### **Non-Stick Cooking Surface Use and Care.**

- Use only plastic tools.
- Do not cut food on surface.
- Do not put pots or pans on surface.
- Do not leave lid down for more than 10 minutes without food on the grill.

Non-stick surface may be damaged.

### **Food Safety**

Food safety is an important part of enjoying the outdoor cooking experience. To keep food safe from harmful bacteria, follow these four basic steps:

**Clean:** Wash hands, utensils, and surfaces with hot soapy water before and after handling raw meat and poultry.

**Separate:** Separate raw meats from ready-to-eat foods to avoid cross contamination. Use a clean platter and utensils when removing cooked foods.

**Cook:** Cook meat and poultry thoroughly to kill bacteria. Use a thermometer to ensure proper internal food temperatures.

**Chill:** Refrigerate prepared foods and leftovers promptly.

### **How to Tell if Meat is Grilled Thoroughly**

- Meat and poultry cooked on a grill often browns very fast on the outside. Use a meat thermometer to be sure food has reached a safe internal temperature and cut into food to check for visual signs of doneness. NOTE: Do not cut into food while it is on the grill's cooking surface. This may damage the cooking surface. Move food to a plate to check, then return it to the cooking surface if necessary.
- Poultry should reach 180° F; breasts, 170° F. Juices should run clear and flesh should not be pink.
- Hamburgers made of any ground meat or poultry should reach 160° F, and be brown in the middle with no pink juices. Beef, veal, lamb, steaks, roasts and chops can be cooked to 145° F. All cuts of pork should reach 160° F.
- NEVER partially grill meat or poultry and finish cooking later. Cook food completely to destroy harmful bacteria.
- When reheating takeout foods or fully cooked meats like hot dogs, grill to 165° F, or until steaming hot.

### **Storing Your Grill and Cooler**

- Clean cooking surface and grease container.
- When LP tank is connected to grill, store outdoors in well-ventilated space and out of reach of children.
- Cover grill if stored outdoors.
- Store grill indoors ONLY if LP tank is turned off and disconnected, removed from grill and stored outdoors in well-ventilated space and out of reach of children.
- Leak test the grill after removing from storage and follow Cleaning Burner Assembly instructions before starting grill.

## Troubleshooting

Problem	Possible Cause	Prevention/Cure
<b>Burner will not light using ignitor.</b>	Electrode and burner are wet.	Wipe dry with cloth.
	Electrode cracked or broken, "sparks at crack".	Replace electrode.
	Wire is loose or disconnected.	Reconnect or replace ignitor wire.
	Wire is shorting (sparking) between ignitor and electrode.	Reconnect or replace ignitor wire.
	Bad ignitor.	Replace ignitor.
<b>Burner will not match light.</b>	No gas flow.	Check to see if LP tank is empty.
	Obstruction of gas flow.	Clear burner.
	Does regulator/valve cap stay down.	Replace with Thermos parts.
	Disengagement of burner to valve.	Check steps in assembly instructions.
<b>Flames blow out.</b>	High or gusting winds.	Turn front of grill to face wind or increase flame height.
	Low on LP gas.	Refill LP tank. Replace 1 lb. bottle.
<b>Flashback</b> (fire in burner tube)	Burner is blocked.	Clean burner.



## WARNING



Combustion by-products produced when using this product contain chemicals known to the State of California to cause cancer, birth defects, and other reproductive harm.

## Recreational Vehicles

THERMOS GRILLS has approved use of the Fire & Ice with specific recreational vehicles subject to the following provisions:

- The Fire & Ice is to be directly connected to an additional 20 lb. or 30 lb. DOT/TC LP tank mounted on the RV. The Fire & Ice cannot be attached to any part of the gas system of the RV except directly to the tank itself.
- The additional 20 lb. or 30 lb. tank is available from your RV dealer and must be mounted on the RV complying with approved RV standards.
- The connection from the tank to the grill must be with a minimum 15' approved hose available from your RV dealer.
- The Fire & Ice must always be operated at least 10' from the body of the RV.
- Never use the Fire & Ice in an enclosed space or under a surface such as an awning or a screen room or fire could result.





# THERMOS®

**A Division of W.C. Bradley Company**

P.O. Box 1240  
Columbus, GA 31902-1240

Certified Grill Parts And Accessories®, Char-Broil and Design®, Char-Broil (Gas Grill Briquettes)®, Char-Diamonds®, Cooking Zone and Design®, Diamond Flame®, Executive Chef®, Faststart®, Flare Fighter®, FlavorMaster®, Gas Grill Silhouette and Design®, H2O Smoker®, Lava Flame®, MasterFlame®, MasterFlame Precision Cooking System®, PowerSpark®, Quantum®, VIP®, PrecisionFlame and Design®, Sierra®, and TruFlame® are registered Trademarks of the W.C. Bradley Company. Thermos® is a registered trademark of the Thermos Company and its affiliates.

Artisan Collection by Char-Broil™, C3 and Design™, Char-Broil and Design™, Flame Design™, FlavorTents™, Grill 2 Go™, Grillin' Stick™, Keeper of the Flame™, Keepers of the Flame™, Natural Grip™, Outdoor Cooking Collection and Design™, Patio Bistro™, PrecisionFlame™, Pro-Check™, QuickSet Grills and Design™, SmokerTents™, The Big Easy™, The Minute Grill™, The Edge™, The Tuscan Collection™, and The Urban Grill™ are Trademarks of the W.C. Bradley Company. Universal Grill Parts and Design™ is a trademark of the Thermos Company and its affiliates.

Protected under one or more of the following U.S. Patents: 4,598,692; 4,624,240; 4,747,391; 4,747,391; 4,817,583; 4,924,846; 4,989,579; 5,003,960; 5,076,256; 5,076,257; 5,090,398; 5,109,834; 5,224,676; 5,277,106; 5,421,319; 5,441,226; 5,452,707; 5,458,309; 5,566,606; 5,566,606; 5,579,755; 5,582,094; 5,613,486; 5,649,475; 5,706,797; 5,711,663; 5,765,543; 5,931,149; 5,996,573; 6,095,132; 6,135,104; 6,173,644B1; 6,279,566; 6,397,731; 6,418,923; 6,439,222; 6,523,461; D282,619; D339,714; D341,292; D343,337; D358,059; D361,466; D364,535; D372,637; D373,701; D377,735; D383,035; D397,910; D405,643; D405,643; D406,005; D406,009; D413,043; D413,229; D413,229; D414,982; D415,388; D416,164; D416,441; D416,441; D417,587; D422,516; D423,274; D423,876; D428,303; D435,396; D436,004; D438,059; D438,060; D438,427; D439,110; D442,505; D443,179; D443,354; D447,384; D447,385; D447,909; D448,610; D448,614; D448,615; D448,616; D448,975; D449,492; D451,759; D456,202S; D460,313 and D461,359. Canada: 87743; 87744; 92607; 92608 and 1,316,424.

Other Patents Pending.