

ELECTRIC & GAS DRYER SERVICE MANUAL

CAUTION

READ THIS MANUAL CAREFULLY TO DIAGNOSE TROUBLES CORRECTLY BEFORE OFFERING SERVICE.

MODEL: DLE5977W/DLG5988W

DLE5977B/DLG5988B

DLE3777W/DLG3788W

DLE5977WM/DLG5988WM

DLE5977SM/DLG5988SM

12-3-2. Drum & Motor Assembly: Gas type (F200) (K400) (K120) (K100) (K130) (K310) (K320) (K340) (K510) (K520) M240 M220 (M160) M171: Propane Gas orifice M170: Natural Gas orifice



Apr. 2004 PRINTED IN KOREA

P/No.:3828EL3005A

IMPORTANT SAFETY NOTICE

The information in this service guide is intended for use by individuals possessing adequate backgrounds of electrical, electronic, and mechanical experience. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or seller cannot be responsible for the interpretation of this information, nor can it assume any liability in connection with its use.

A WARNING!

To avoid personal injury, disconnect power before servicing this product. If electrical power is required for diagnosis or test purposes, disconnect the power immediately after performing the necessary checks.

RECONNECT ALL GROUNDING DEVICES

If grounding wires, screws, straps, clips, nuts, or washers used to complete a path to ground are removed for service, they must be returned to their original position and properly fastened.

WHAT TO DO IF YOU SMELL GAS:

- Do not try to light a match, or cigarette, or turn on any gas or electrical appliance.
- Do not touch any electrical switches. Do not use any phone in your building.
- Clear the room, building or area of all occupants.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions carefully.
- If you cannot reach your gas supplier, call the fire department.

IMPORTANT

Electrostatic Discharge (ESD) Sensitive Electronics

ESD problems are present everywhere. ESD may damage or weaken the electronic control assembly. The new control assembly may appear to work well after repair is finished, but failure may occur at a later date due to ESD stress.

■ Use an anti-static wrist strap. Connect wrist strap to green ground connection point or unpainted metal in the appliance.

- OR -


Touch your finger repeatedly to a green ground connection point or unpainted metal in the appliance.

- Before removing the part from its package, touch the anti-static bag to a green ground connection point or unpainted metal in the appliance.
- Avoid touching electronic parts or terminal contacts; handle electronic control assembly by edges only.
- When repackaging failed electronic control assembly in anti-static bag, observe above instructions.

CONTENTS

1. SPECIFICATION	ONS	4
2. FEATURES A	ND BENEFITS	6
3. INSTALLATIC	ON INSTRUCTIONS	6
4. DRYER CYCL	_E PPO CESS	13
5. COMPONE	NT TESTING INFORMATION	14
6. MOTORDIA	GRAM AND SCHEMATIC	17
7. CONTROLL	AY - OUT	18
	AGPAM	
9. DIAGNOSTI	C TEST	20
9-1. TEST 1	120VAC ELECTRICAL SUPPLY	21
9-2. TEST 2	THERMISTOR TEST MEASURE WITH POWER OFF	22
9-3. TEST 3	MOTOR TEST	23
9-4. TEST 4	MOISTURE SENSOR	24
9-5. TEST 5	DOOR SWITCH TEST	25
9-6. TEST 6	HEATER SWITCH TEST - ELECTRIC TYPE	26
9-7. TEST 7	GAS VALVE TEST - GAS TYPE	27
10. CHANGE	GAS SETTING (NATURALGAS, PROPANEGAS)	28
11. DISASSEMI	BLY INSTRUCTIONS	30
12. EXPLODED	VIEW	37
12-1. CON	TROL PANEL & PLATE ASSEMBLY	37
12-2. CABI	NET & DOOR ASSEMBLY	38
12-3-1. DR	UM & MOTORASSEMBLY: ELECTRIC TYPE	39
12-3-2. DR	UM & MOTOR ASSEMBLY : GAS TYPE	40
13. REPLACEM	ENT PARTS LIST	41

SPECIFICATIONS

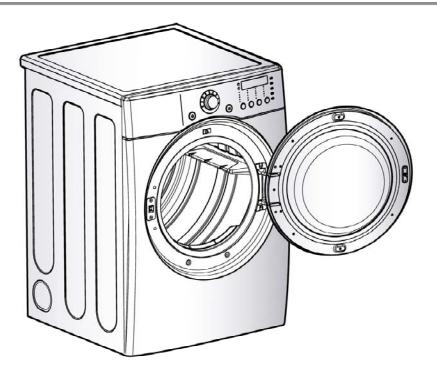

■ Name : Electric and Gas Dryer

■ Power supply : Please refer to the rating label regarding detailed

information.


■ Size : 68.6X98.3X76.1 (cm)

■ Dryer capacity : IEC 7.3cu.ft.

■ Weight : 126 (lbs)

Specifications are subject to change by manufacturer.



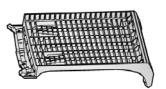


Dryer rack (1 each)

Stacking kit (1 each)

Purchased Separately

See page 6 for how to use. See page 7 for how to use.

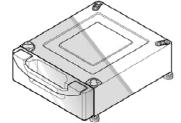

Pedestal (1 each)

Purchased Separately

See page 8 for how to use.


ITEM		DLE5977WM DLE5988WM DLE5977W DLG5988W		DLE5977S DLG5988S DLE5977SM DLG5988SM	DLE3777W DLG3788W	REMARK	
		Color	Blue White	Black	Titanium	Blue White	
Material & Finishes	Т	op Plate		Porcelain		Painted	
	D	oor Trim	Chron	nate + STS	Deco	Blue White	
POWER	SUP	PLY		120V /	240V 60Hz	(26A)	
ELECTRICIT		MOTOR		250)W (4.5A)		AC 120V
ELECTRICIT CONSUMPT		HEATER		5400V	V (22.5A)		AC 240V (ELECTRIC TYPE)
		LAMP		15 W	(125mA)		AC 120V
		GAS VALVE		13 W (1	10mA) x 2		AC 120V(GAS TYPE)
CONTR	ROL T	YPE		Elec	tronic		
DRUM (CAPA	CITY		7.3	cu.ft.		
Weight (lb	s) : N	let / Gross		124	4 / 144		
No. of	Progr	ams	9 7		7		
No. of [Ory O	ptions	5			5	
No. of Tempe	eratur	e Controls	5			5	
No. of [Dry Le	evels		5		5	
Sound	d leve	els		High /			
Canaan	N	Noisture		Ava	Electrode sensor		
Sensor	Ter	mperature		Ava	aiable		Termistor
Revers	sible [Door		Ava			
D	rum			Stainl			
Drye	Dryer Rack			Ava			
Chil	d Loc	:k		Avaiable			
Interior Light			Ava				
Product (WxHxD)			27'				
Packing		· · · · · · · · · · · · · · · · · · ·		29 ¹			
				5		-	

FEATURES AND BENEFITS

DLE5977W/ DLG5988W/ DLE5977B/ DLG5988B/ DLE5977WM/ DLG5988WM/ DLE5977SM/ DLG5988SM



DLE3777W/ DLG3788W

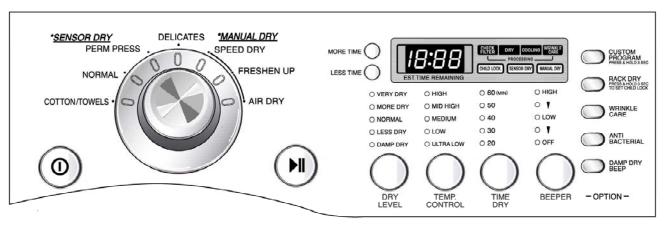



INSTALLATION INSTRUCTIONS

Dryer Rack Installation Instructions

Open the door. Hold the dryer rack with both hands.

Put the dryer rack into the drum

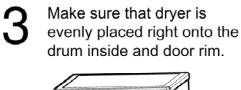

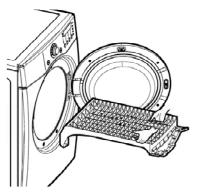





Stacking Kit Installation Instructions


To ensure safe and secure installation, please observe the instructions below.

WARNING

Do not attempt installation with one person.

Incorrect installation procedure can cause serious accidents and physical Injuries.

The weight of the dryer and the height of installation makes the stacking procedure too risky for one person. This procedure should be performed by 2 or more experienced service personnel.

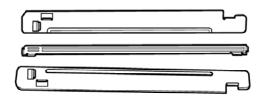


Stacking kit


- Place washer firmly on a stable, even and solid floor as product installation instructions describes in owner's manual.
- Peel protective paper off the tape from the stacking kit side bracket.




Fit the stacking kit side bracket firmly to the side of top plate by attaching the double-faced tape to top plate as picture shows.

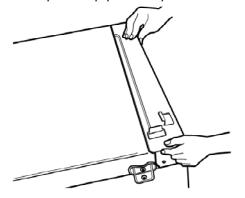

Secure stacking kit side bracket to the washer with a screw on the back of bracket. Repeat Steps 2, 3, 4 for the other side.

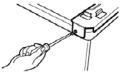


Place the dryer on top of the washer by fitting legs as shown in the picture. Avoid finger injuries - be careful not to pinch fingers between the washer and dryer. Slide washer slowly backwards to the stopper of kit.

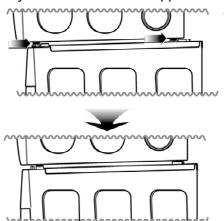

Insert the front stacking kit. Push the front stacking kit back to the stoppers of side stacking kit. \(\)




Screw both sides of the front kit.

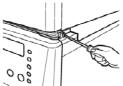


 Do not use stacking kit with a gas dryer in potentially unstable conditions like a mobile home.

Pedestal Installation Instructions

* For washer, dryer, and combo LG 27

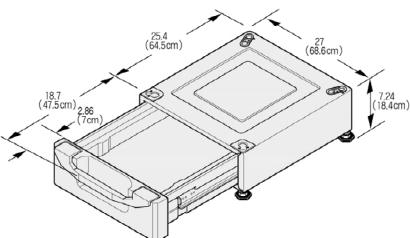


- Remove pedestal, installation hardware, and instructions from the shipping carton.
- **?** Position dryer on top of the pedestal.

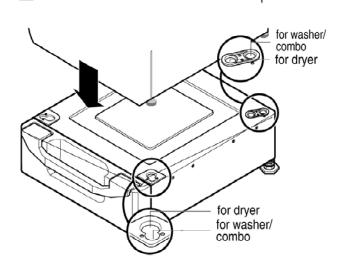


3 Remove the paper from the bracket.

4 Attach the double-faced tape of the bracket to the dryer as shown so the bent parts of the brackets align with the edge and can be attached to the pedestal with screws.


NOTE: Attach the lower side first.

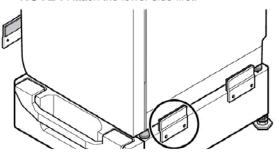

5 Be sure to press the adhesive parts of the brackets firmly to the appliance.

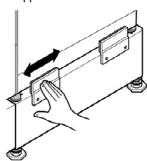

6 Install the eight (8) screws(supplied) to attach the brackets to the pedestal.

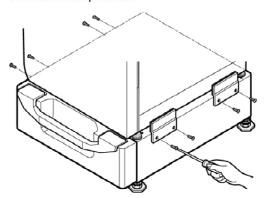

7 Move the dryer to the desired place.
NOTE: The appliance and pedestal assembly must be placed on a solid and level floor for proper operation. Adjust the legs of the appliance and pedestal by turning with a wrench. Then, adjust the lock unt toward the pedestal while holding the pedestal leg using a wrench.

Review the following options to determine the appropriate electrical connection for your home:




4-wire receptacle (NEMA type14-30R)

Use the instructions at this section if your home has a 4-wire receptacle (NEMA type 14-30R) and you will be using a UL listed, 120/240 volt minimum, 30 amp, dryer power supply cord.




3-wire receptacle (NEMA type10-30R)

Use the instructions at this section if your home has a 3-wire receptacle (NEMA type 10-30R) and you will be using a UL listed, 120/240 volt minimum, 30 amp, dryer power supply cord.

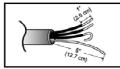

4-wire direct

If this type is available at your home, you will be connecting to a fused disconnect or circuit breaker box

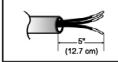

3-wire direct


If this type is available at your home, you will be connecting to a fused disconnect or circuit breaker box

4-wire connection: Direct wire

Important: use 4-wire connection in the places such as mobile homes and areas where 3-wire connections is not available.

Prepare minimum 5ft(1.52m) of length in order for dryer to be replaced.


First, peel 5 inch (12.7cm) of covering material from end. Make a 5 inch of ground wire bared. After cutting 1½ inch (3.8cm) from 3 other wires. peel insulation back 1inch (2.5cm). Make ends of 3 wires a hook shape.

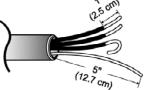

Then, put the hooked shape end of the wire under the screw of the terminal block(hooked end facing rightward) and pinch the hook together and screw tightly.



- 1. Connect neutral wire(white) of power cord to center terminal block screw.
- 2. Connect red and black wire to the left and right terminal block screws.
- Connect ground wire(green) of power cord to external ground screw and move neutral ground wire of appliance and connect it to center screw.
- 4. Make sure that the strain relief screw is tightened. and be sure that all terminal block nuts are on tight and power cord is in right position.

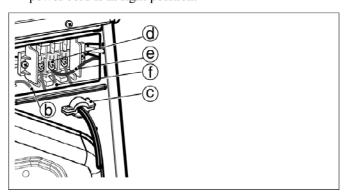


3-wire connection: Direct wire

Important: use 3-wire connection in the places such as mobile homes and areas where 3-wire connections is not available.


Prepare minimum 5ft(1.52m) of length in order for dryer to be replaced.

First, peel 3 ½ inch (8.9cm) of covering material from end and bare 1 inch from the ends.

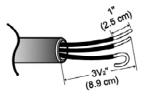


Then, put the hooked shape end of the wire under the screw of the terminal block(hooked end facing rightward) and pinch the hook together and screw tightly.


- Connect neutral wire(white) of power cord to center terminal block screw.
- 2. Connect red and black wire to the left and right terminal block screws.
- 3. Make sure that the strain relief screw is tightened and be sure that all terminal block nuts are on tight and power cord is in right position.

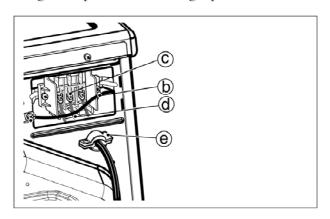



Option 1: 4-wire connection with a Power supply cord.

 If your local codes or ordinances do not allow the use of a 3 wire connection, or you are installing your dryer in a mobile home, you must use a 4wire connection.

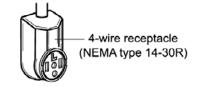

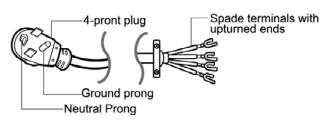

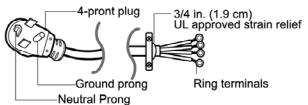


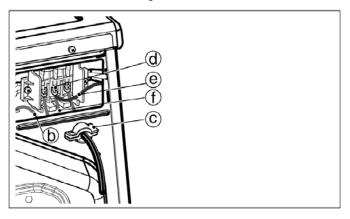



- 1. Connect neutral wire(white) of power cord to center terminal block screw.
- Connect red and black wire to the left and right terminal block screws.
- Connect ground wire(green) of power cord to external ground screw and move neutral ground wire of appliance and connect it to center screw.
- 4. Make sure that the strain relief screw is tightened. and be sure that all terminal block nuts are on tight and power cord is in right position.


Option 2: 3-Wire Connection with a Power Supply Cord

If your local codes or ordinances permit the connection of a frame-grounding conductor to the neutral wire, use these instructions. If your local codes or ordinances do not allow the connection of a frame-grounding conductor to the neutral wire, use the instructions under **Section 3: Optional 3-wire connection.**

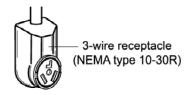

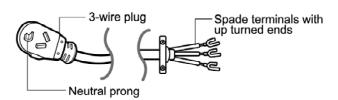


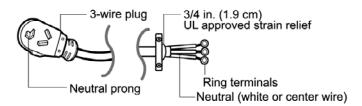


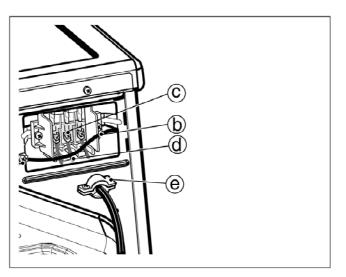

Option 3: Optional 3-wire connection.

 If your local codes or ordinances do not allow the connection of a frame-grounding conductor to the neutral wire, use the instructions under this section.

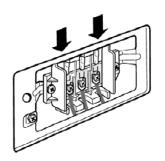

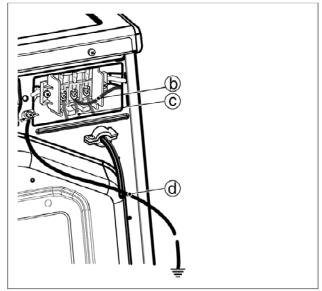


- Connect neutral wire(white) of power cord to center terminal block screw.
- Connect ground wire of appliance and neutral wire of power cord to center terminal block screw.
- Connect red and black wire to the left and right terminal block screws.
- 4. Make sure that the strain relief screw is tightened. and be sure that all terminal block nuts are on tight and power cord is in right position.
- 5. Connect a independent ground wire from external ground connector to proper ground.

3-2. Connect Gas Supply Pipe (Gas Dryer ONLY)

For further assistance, refer to section on Gas Requirements.

- Make certain your dryer is equipped for use with the type of gas in your laundry room. Dryer is equipped at the factory for Natural Gas with a 3/8" N.P.T. gas connection.
- 2. Remove the shipping cap from the gas connection at the rear of the dryer. Make sure you do not damage the pipe thread when removing the cap.
- 3. Connect to gas supply pipe using a new flexible stainless steel connector.
- Tighten all connections securely. Turn on gas and check all pipe connections (internal & external) for gas leaks with a non-corrosive leak detection fluid.
- 5. For L.P. (Liquefied Petroleum) gas connection, refer to section on Gas Requirements.

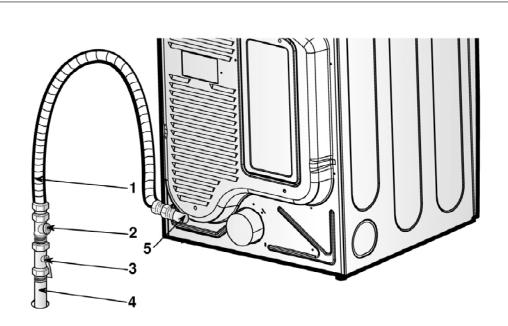

- 1 New Stainless Steel Flexible Connector Use only if allowed by local codes (Use Design A.G.A. Certified Connector)
- 2 1/8" N.P.T. Ape Aug (for checking inlet gas pressure)
- 3 Equipment Shut-Off Valve-Installed within 6' (1.8 m) of dryer
- 4 Black Iron Fipe Shorter than 20' (6.1 m) - Use 3/8" pipe Longer than 20' (6.1 m) - Use 1/2" pipe
- 5 3/8" N.P.T. Gas Connection

4

DRYER CYCLE PROCESS

Default					Conditions of operation and termination				
Cycle		То жи	Dry	Diamları	Dryi	ng	Coo	ling	Wrinkle care
		Temp- erature	Level	Dry Display Level time		Temp- Control	Default time	Temp- Control*	Time
	HEAVY DUTY	HIGH	(Normal)	54min	Saturation	68±4°C	(5min)	47±5°C	
	COTTON/ TOWELS	MID HIGH	(Normal)	55min	Saturation	66±4°C	(5min)	47±5°C	
Sensor	NORMAL	MEDIUM	(Normal)	41min	Saturation	60±4°C	(5min)	47±5°C	01.15
Dry *	PERM PRESS	LOW	(Normal)	36min	Saturation	52±3°C	(5min)	47±5°C	3Hr
	DELICATES	LOW	(Normal)	32min	Saturation	52±3°C	(5min)	38±5°C	
	ULTRA DELICATE	ULTRA LOW	(Normal)	34min	Saturation	45±3°C	(5min)	38±5°C	
	SPEED DRY	(HIGH)	_	25min	Saturation	(70±5°C)	(5min)	(47±5°C)	
Manual Dry **	FRESHEN UP	(MID HIGH)	-	20min	Saturation	(66±5°C)	(5min)	(47±5°C)	3Hr
	AIR DRY	_	-	30min	Saturation	No heater	N/A	N/A	
			Mo	tor					Off Time: 6min
			WIO	101					On Time: 10sec
		Load	Нег	nter	Temperati	ure Contr	ol for eac	ch cycle	

^{*} Sensor dry: "Dry Level" is set by users.

Default settings can be adjusted by users.

^{**} Manual dry: "Temperature control" is set by users.

5

COMPONENT TESTING INFORMATION

▲ CAUTION

When checking the Component, be sure to turn the power off, and do voltage discharge sufficiently.

Component	Test Procedure	Check result	Remark
Component	lest Procedure	Check result	кетагк
1. Thermal cut off	Measure resistance of terminal to terminal	If thermal fuse is open must be replaced	 Heater case- Safety
	① Open at 266 ± 12°F (130 ± 7°C)	① Resistance value ≒ ∞	Electric type
Check Top Marking: N130	② Auto reset -31°F (-35°C) Same shape as Outlet Thermostat.	② Continuity (250°F \downarrow) < 1 Ω	
2. Hi limit Thermostat (Auto reset)	Measure resistance of terminal to terminal		Heater case - Hi limit
	① Open at 257 ± 9°F (125 ± 5°C)	① Resistance value ≒ ∞	Electric type
	② Close at 221 ± 9°F (105 ± 5°C)	② Resistance value < 5Ω	
3. Outlet Thermostat (Auto reset)	Measure resistance of terminal to terminal		Blow housing - Safety
	① Open at 185 ± 9°F (85 ± 5°C)	① Resistance value ≒ ∞	Electric type
• Check Top Marking :	② Close at 149 ± 9°F (65 ± 5°C)	② Resistance value < 5Ω	
N85	Same shape as Thermal cut off.		
4. Lamp holder	Measure resistance of terminal to terminal	Resistance value : $80\Omega \sim 100\Omega$	
5. Door switch	Measure resistance of the following terminal		The state that Knob is
	1) Door switch knob : open ① Terminal : "COM" - "NC" (1-3) ② Terminal : "COM" - "NO" (1-2) 2) Door switch push : push ① Terminal : "COM" - "NC" (1-3)		pressed is opposite to Open condition.
	② Terminal : "COM" - "NO" (1-2)	$\begin{array}{c} \square \text{ Resistance value } = \infty \\ \hline \text{② Resistance value } < 1\Omega \\ \\ \end{array}$	
6. Idler switch	Measure resistance of the following terminal: "COM - NC"	 lever open ① Resistance value < 1Ω Lever push (close) ② Resistance value ≒ ∞ 	

Component	Test Procedure	Check result	Remark
7. Heater	Measure resistance of the following terminal		Electric type
	① Terminal : 1 (COM) - 2	① Resistance value : 10Ω	
	② Terminal : 1 (COM) - 3 ③ Terminal : 2 - 3	② Resistance value : 10Ω③ Resistance value : 20Ω	
2 3	W Terriman . 2 - 0	Tiesistance value : 2032	
8. Thermistor	Measure resistance of terminal to terminal	Resistance value : 10Ω	Heater case - Hi limit
	Temperature condition : 58°F ~ (10~40°C) 58°F ~ 104F (10~40°C)		Electric type
9. Motor			• See Page 13
10. Gas valve valve 1	Measure resistance of the following terminal		Gas type
	① Valve 1 terminal	① Resistance value : > 1.5kg ~	
valve 2	② Valve 2 terminal	② Resistance value : > 1.5~2.5kg	
11. Igniter	Measure resistance of terminal to terminal	Resistance value : 100~800Ω	Gas type
12. Frame Detect	Measure resistance of terminal to terminal		Gas type
PRESSUR-G-DOCK OF STATE OF STA	① Open at 370°F ((Maximum) ② Close at 320°F	 Resistance value ≒ ∞ Resistance value < 1Ω 	

Component	Test Procedure	Check result	Remark
13. Outlet Thermostat (Auto reset)	Measure resistance of terminal to terminal ① Open at 203 ± 7°F (95 ± 5°C) ② Close at 158 ± 9°F (70 ± 5°C)	 Resistance value ≒ ∞ Continuity < 1Ω 	Gas type Gas funnel
Check Top Marking: N95			
13. Outlet Thermostat (Manual reset)	Measure resistance of terminal to terminal ① Open at 212 ± 12°F (100 ± 7°C) ② Manual reset	If thermal fuse is open must be replaced ① Resistance value $\Rightarrow \infty$ ② Continuity < 1Ω	Gas type Gas funnel
Check Top Marking: N100		-	


MOTOR DIAGRAM AND SCHEMATIC


NOTE

When checking Component, be sure to turn Power off, then do voltage discharge sufficiently.


■ Contact On / Off by Centrifugal Switch

Termi	Terminal No							ъ.
Mode	Resistance	1	2	3	4	5	6	Remark
	2 ~ 3Ω				•	•		Motor
Motor STOP	÷ ∞	•						Heater (Electric Models)
	÷ ∞			•			•	Gas Valve (Gas Models)
	3 ~ 5Ω				•	•		Motor
Motor RUN	< 1Ω	•	•					Heater (Electric Models)
	< 1Ω			•			•	Gas Valve (Gas Models)

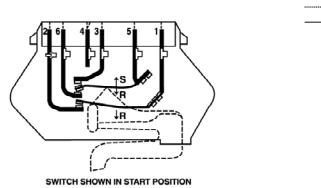


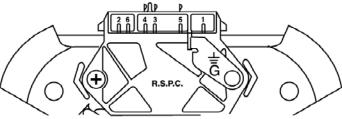

■ STOP MODE (When Motor does not operate)

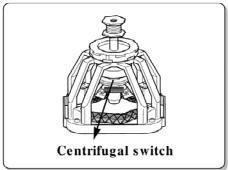


■ RUN MODE (Motor operates)

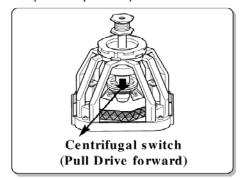

OpenClose

CONTROL LAY-OUT


PWB ASSEMBLY DISPLAY LAY-OUT

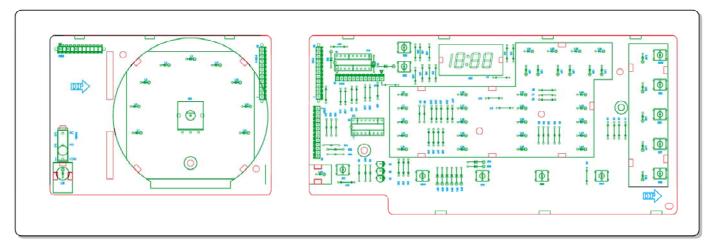

**** MODEL DISPLAY AS DIAGNOSTIC TEST**

MODEL		(OPTIO	LED	P/No				
WOBEL	OP 1	OP 2	OP 3	OP 4	OP 5	OP 6	DISPLAY	1/110	
DLE5977WM/SM, DLE5977W/B	Χ	Х	Х	0	Х	Х	18:FO	6871EC1115A	
DLG5988WM/SM, DLG5988W/B	Х	Х	0	0	Х	Х	19:FO	6871EC1115B	
DLE3777W	Χ	Х	Х	Х	Х	Х	18:F1	6871EC1115C	
DLG3788W	×	×	0	×	×	×	19:F1	6871EC1115D	

PWB ASSEMBLY LAY-OUT

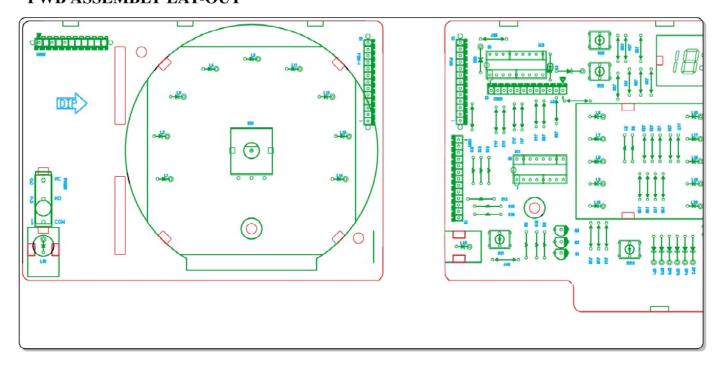

WIRING DIAGRAM


ELECTRIC DRYER WIRING DIAGRAM


RLM ELECTRIC DRYER WIRING DIAGRAM


ELECTRONIC CONTROL

NAME AND THE STATES AND THE SHARES TAT HILLINGTON TO SON TO

GAS DRYER WIRING DIAGRAM

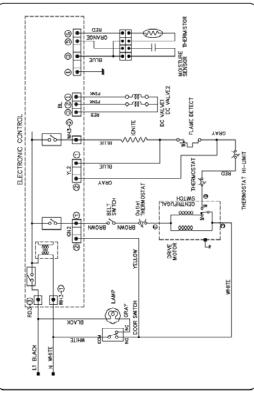

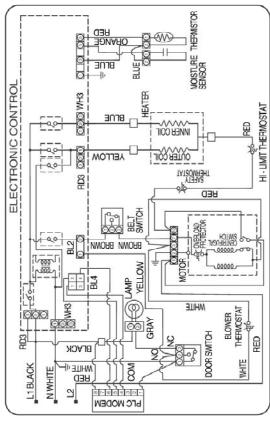

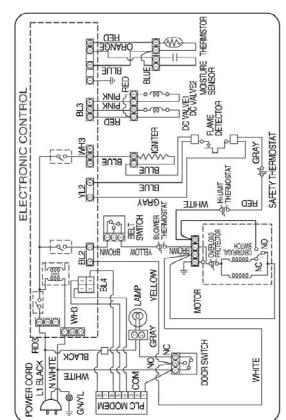

RLM GAS DRYER WIRING DIAGRAM

9

DIAGNOSTIC TEST


- 1. This TEST should be used for Factory test /Service test. Do not use this DIAGNOSTIC TEST other than specified.
- 2. Activating the Heater manually with the Door open may trip the Thermostat attached to the Heater, therefore do not activate it manually. (Do not press the door switch to operate the heater while the door is open)

■ ACTIVATING THE DIAGNOSTIC TEST MODE

- 1. Unit must be in Standby (unit plugged in, display off)
- 2. Press "POWER" while pressing "MORE TIME", and "LESS TIME" simultaneously.

Pressing the "START/PAUSE" button	CHECKING ACTION	DISPLAY CHECKING POINT		REMARK
	Electric control	(B:FC	Won't power up Defective LED	See test 1 Display : See page
None	& Temperature	上层	Thermistor open	See test 2
	sensor	<u> </u>	Thermistor close	See test 2
			Motor runs	See test 3
Once	Motor	70 ~ 239 Measured Moisture Value.	Displays Moisture Sensor Operation: If moisture sensor is contacted with damp cloth. The display number is below 180, in normal condition.	See test 4
Twice	■ ELECTRIC TYPE Motor + Heater 1 (2700W) ■ GAS TYPE Motor + Valve	Current Temp.	■ ELECTRIC TYPE : Heater runs ■ GAS TYPE : GAS Valve runs (Display the Temperature of Inside drum.)	Gas valve See test 7
3 times	■ ELECTRIC TYPE Motor + Heater 1 +Heater 2 (5400W) ■ GAS TYPE Motor Type	Current Temp. (5 ~ 70)		
4 times	Control Off		Auto Off	
During check,	Motor & Heater Off + Lamp On +	dЕ	Door switch	See test 6
If the door is open.	Buzzer beeps seven times	UL.	Lamp	
During check, If the door is closed.	Motor on & Heater Off + Lamp Off	70 ~ 239	 Press Start button 1 time and then open the door. Proceed again with the step 1(by pressing start 1 time), step 2(by pressing start 2 times), step 3(by pressing start 3 times) and step 4(by pressing start 4 times) in sequence. Press Start 2 times and then open the door. Proceed again from the step 1 all the way to the step 4. Press Start 3 times and then open the door Proceed with the step 1 and skip the step 2 and press step 3 twice and finish with step 4 by making sure the all the electric devices shut off in the end. 	

■ Test 1 120VAC Electrical supply

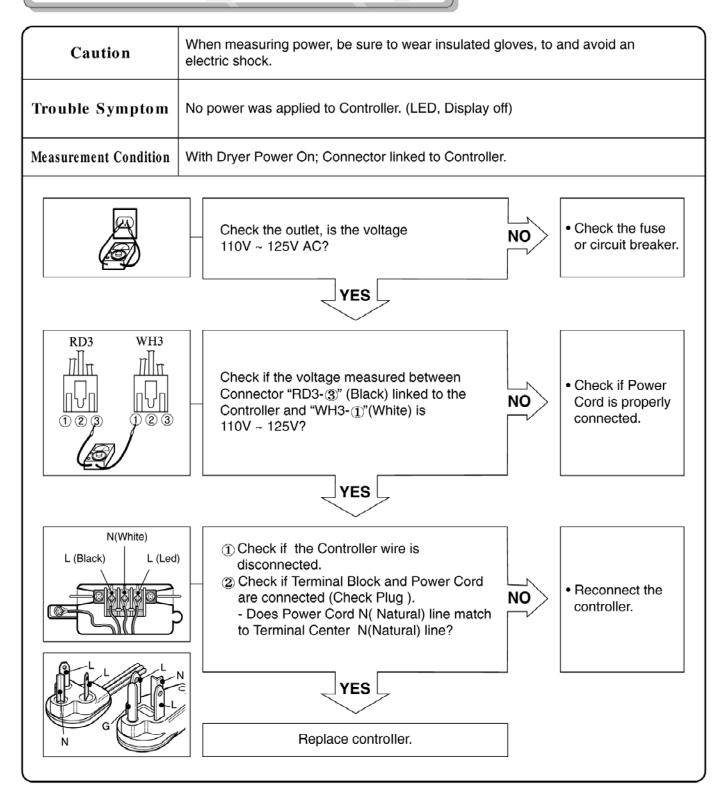

■ **Test 2** Thermistor Test --- Measure with Power Off

Caution	Before measuring resistance, be sure to turn Power off, and do voltage discharge. (When discharging, contact the metal plug of Power cord with the Ground.)						
Trouble Symptom	 During Diagnostic Test, tE1 and tE2 Error occur. During operation, Heater would not turn off, or remains on. Difference between actual and sensed temperature is significant. 						
Measurement Condition	After turning Power off, measure the resistance.						
Take 6pin Connector from the Controller.	Check if resistance is in the range of Table 1 when measuring 6pin connector Pin ③ (Blue wire) and Pin ⑥ (Red wire) connected to Controller. • Check if Control and 6Pin connector is properly connected. • Replace Controller.						
	Check if resistance is in the range of Table 1 when measuring resistance between terminals after separating Harness From Thermistor assembly Connector. YES Check Harness linking connector.						
	Check Harness-linking connector.						

■ Table 1. Resistance for Thermistor Temperature.

Air TEMP.[°F (°C)]	RES. $[k\Omega]$	Air TEMP.[°F (°C)]	RES. $[k\Omega]$	Air TEMP.[°F (°C)]	RES. $[k\Omega]$
50°F (10°C)	18.0	90°F (32°C)	7.7	130°F (54°C)	2.9
60°F (16°C)	14.2	100°F (38°C)	6.2	140°F (60°C)	3.0
70°F (21°C)	11.7	110°F (43°C)	5.2	150°F (66°C)	2.5
80°F (27°C)	9.3	120°F (49°C)	4.3	160°F (71°C)	2.2

■ Test 3 Motor test

Caution	Before measuring resistance, be sure to turn Power off, and of (When discharging, contact the metal plug of Power cord with	
Trouble Symptom	Drum will not rotate; No fan will function; No Heater will work.	
Measurement Condition	Turn the Dryer's Power Off, then measure resistance.	
WH3 BL2	Is resistance below 3Ω between Connector "WH3-①" (White wire) and "BL2-②" (Brown wire)? ** Measure while door is closed.	Replace Control. (Relay check) Check Controller connector. Check if Door flame
BL2	Is resistance below 3Ω between Connector "WH3-①" (White wire) and "BL2-①" (Yellow wire)? ** Measure while door is closed. YES YES	presses door switch knob. • Check Door Switch. • Check Harness connection.
	Is resistance below 3Ω between Connector "BL2-①" (Yellow wire) and "BL2-②" (Brown wire)?	Replace Control. (Relay check) Check Controller connector.
	Is resistance below 1Ω between terminals of Outlet Thermostat attached to blower housing?	Replace Outlet Thermostat. (Refer to 'Component')
	Does Idle Switch attached to Motor Bracket operate Level by drum belt? (Not operating Lever is normal.)	Check Idler Assembly. Drum Belt cuts off Drum Belt takes off from Motor Pulley.
Idler Switch Lever Idler Switch	Is resistance below 1Ω between Idler Switch terminals?	Replace Idler Switch.
	Check Motor.(Refer to 'Motor Diagram & Check') Check if Control Connector is contacted.	

■ Test 4 Moisture sensor

Caution	Before measuring resistance, be sure to turn Power off, and do voltage discharge. (When discharging, contact the metal plug of Power cord with earth line.)					
Trouble Symptom	Degree of dryness does not match with Dry Level.					
Measurement Condition	Turn the Dryer's Power Off, then measure resistance.					
Take 6pin Connector from the Controller. 1 4 2 5 Metal or Wir	Short with metal to 6pin connector's Pin ③ (BLUE wire) and Pin ⑤ (ORANGE wire) to Controller. When measuring resistance in Electric load, is resistance below 1Ω? YES OCHECK Electro Load and Harness Connector. Check Harness-linking connector.					
Damping cloth	When contacting cloth to Electro load: 1. Is the measurement within the range of Table 2 during Diagnostic Test? 2. Is the measurement within the range of Table 2 when measuring the voltage in 6pin connector's Pin ③ (BLUE wire) and Pin ⑤ (ORANGE wire)? YES					
	7155					
	Normal Condition					

■ Table 2. IMC Ratio and Display Value / Voltage (IMC : Initial Moisture Content)

IMC	Display Value	Voltage(DC) (between 6 Pin terminal ③,⑤)	Remark
70% ~ 40%	50 ~ 130	2.5V	Weight after removing from Washing Machine
40% ~ 20%	100 ~ 20	2.0V ~ 4.0V	Damp Dry
10% ~ Dried clothes	205 ~ 240	Over 4.0V	Completely-dried clothes


■ Test 5 Door switch test

Caution	Before measuring resistance, be sure to turn Power off, and do voltage discharge. (When discharging, contact the metal plug of Power cord with earth line.)					
Trouble Symptom	Door Opening is not sensed.(During operation, when opening Door, Drum motor and Heater run continuously; Door Close is not sensed. (Drum motor will not operate. Display will flash at 0.5 second intervals.)					
Measurement Condition	After turning Dryer Power Off, measure resistance.					
RD3 WH3	Measure while Door is closed. Check if resistance is below 250Ω between "WH3-①" (White wire) and "RD3-②"(Black wire) Connector WH3, RD3 after taking WH3, RD3 out from Controller.	YES	Door switch Check (Refer to Component testing.) Check Lamp.			
	Measure while Door is open. Check if resistance is 300~60Ω between "WH3-①" (White wire) and "RD3-②" (Black wire) Connector WH3, RD3 after taking WH3, RD3 out from Controller.	NO	(When opening Lamp, replace then measure again.) • Door switch Check(Refer to Component testing.)			
WH3 BL2 T	taking Connector WH3, BL2 out from Controller.	YES	Door switch Check (Refer to Component testing.)			
	NO					
	Measure while Door is closed. Check if resistance is below 1Ω between "BL2-①" (Yellow wire) and "WH3-①" (White wire) after taking Connector WH3, BL2 out from Controller.	NO	Door switch Check (Refer to Component testing.)			
	YES					
	Check Controller. Check Harness-linking connector.					

■ **Test 6** Heater switch test - Electric Type

Caution	Before measuring resistance, be sure to turn Power off, and do voltage discharge. (When discharging, contact the metal plug of Power cord with earth line.)						
Trouble Symptom	While operating, Heating will not work. Drying time takes longer.						
Measurement Condition	After turning Power off, measure the resistance.						
	1. Is resistance between Heater terminal ① and ② below 18 ~ 22Ω? 2. Is resistance between Heater terminal ② and ③ below 18 ~ 22Ω? 3. Is resistance between Heater terminal ② and ③ below 9 ~ 11Ω?						
	YES						
TH3 TH2	Check if the value of measured resistance is below 1Ω between terminal TH2 (Safety Thermostat). YES YES						
	Check if the value of measured resistance is below 1Ω between terminal TH3 (HI-Limit Thermostat).						
YES							
	Check Motor. Check if the value of measured resistance is below 1Ω between terminal 1 and 10 at RUN condition.						
	YES						
	Check Controller. Check Harness-linking Connector.						

■ Test 7 GAS Valve test - Gas Type

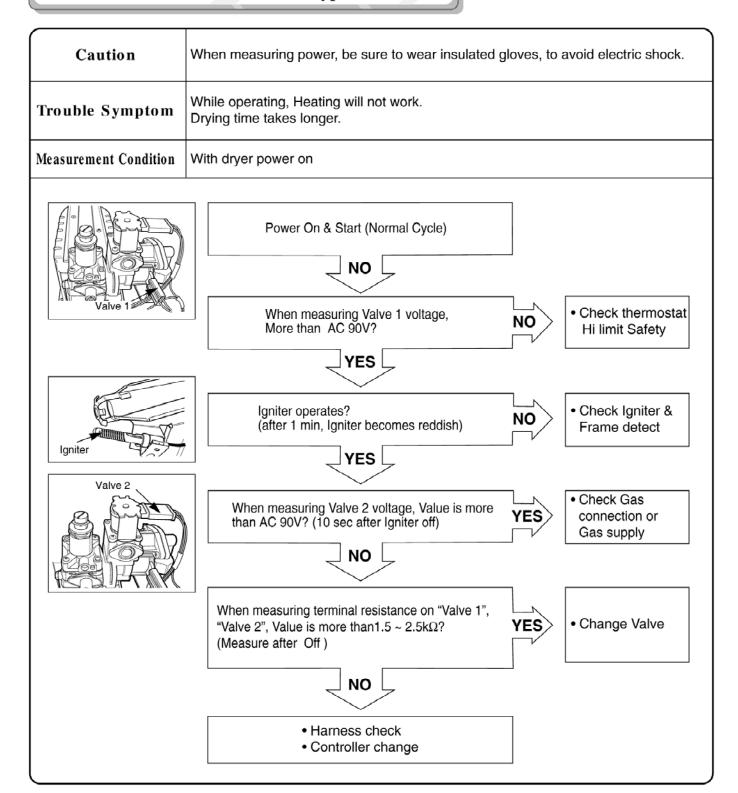


CHANGE GAS SETTING (NATURAL GAS, PROPANE GAS)


A Warning

After Natural Gas Setting, applying Propane Gas Orifice or wrong use of Natural Gas Orifice will result in fire. Conversion must be made by a qualified technician.


Initially, Natural Gas mode is set. Propane Gas Orifice is on sale as a Service Part to authorized servicers only.

STEP 1: VALVE SETTING

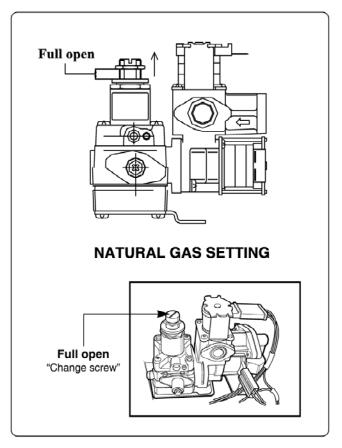

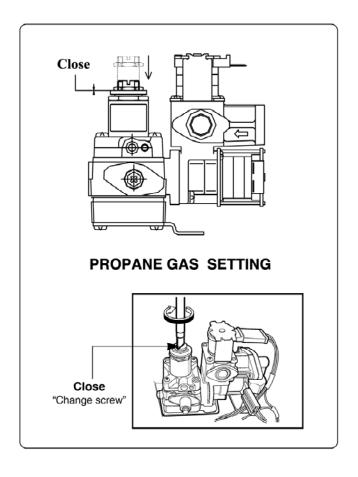

STEP 2: ORIFICE CHANGE

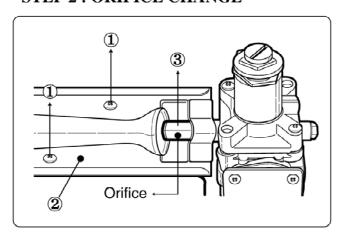


- (i) Remove 2 screws.
- 2 Disassemble the pipe assembly.
- 3 Replace Natural Gas orifice with Propane Gas orifice.

Gas type	Orifice P/No	Marking	Shape
Natural Gas	4948EL4001B	NCU	
Propane Gas	4948EL4002B	PCU	


※ Kit contents: Orifice (Dia. = 1.613mm, for Propane Gas)

: Replace Label : Instruction sheet


■ GAS VALVE FLOW

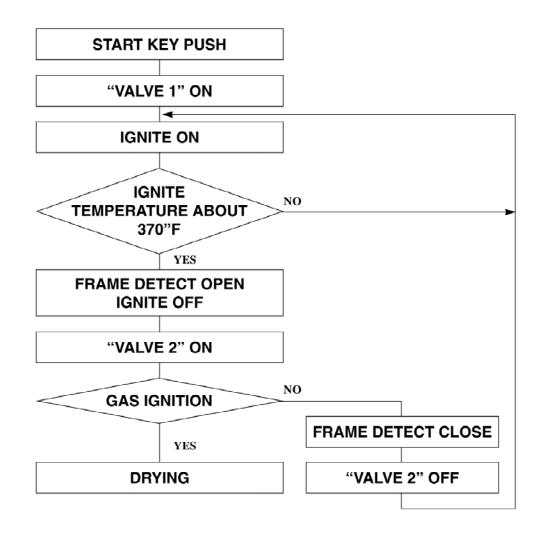

GAS IGNITION

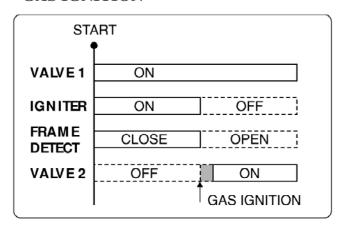

GAS VALVE STRUCTURE

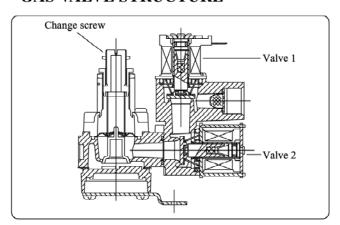





DISASSEMBLY INSTRUCTIONS

* Disassemble and repair the unit only after pulling out power plug from the outlet.




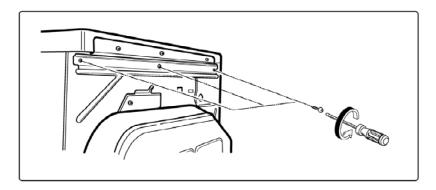

1. Remove 3 screws on the upper plate.

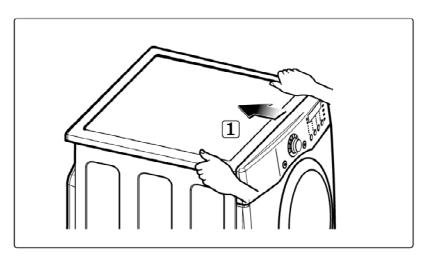


2. Push the top plate back ward.

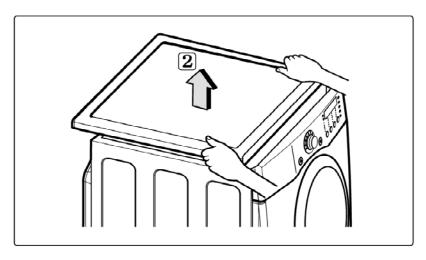


3. Lift the top plate


CONTROL PANEL ASSEMBLY

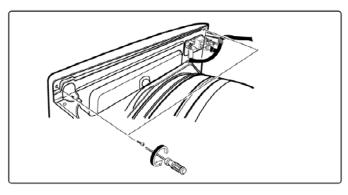


1. Remove 2 screws on the control panel frame.

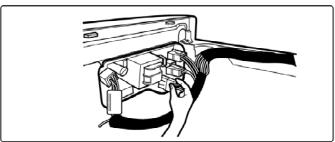

2. Disconnect the connectors.

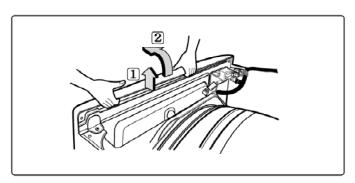


3. Pull the control panel assembly upward and then forward.

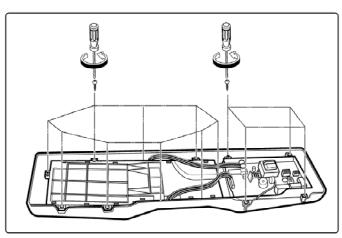


- **4.** Remove 9 screws on the PWB(PCB) assembly, display.
- **5.** Remove 4 screws on the PWB(PCB) assembly, main.
- 6. Disassemble the control panel assembly.

COVER CABINET

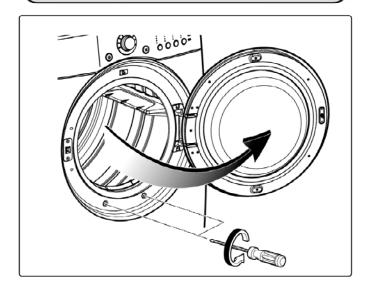


- 1. Disassemble the top plate.
- 2. Disassemble the control panel assembly.
- 3. Disassemble the door assembly.
- 4. Remove 2 screws.

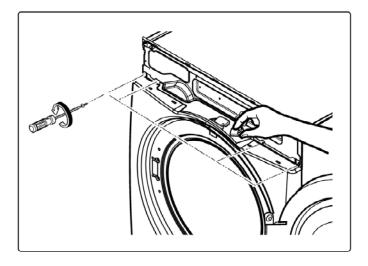


- **5.** Remove 4 screws from the top of cabinet cover.
- **6.** Disconnect the harness of door switch.

TUB DRUM [FRONT]

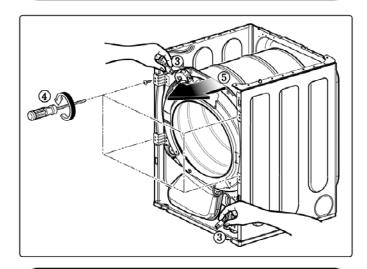


- 1. Disassemble the top plate.
- 2. Remove Cover Cabinet.
- Disconnect the door lamp and electrode sensor connector.
- 4. Remove 4 screws.
- 5. Disassemble the Tub Drum [Front].

DRUM ASSEMBLY

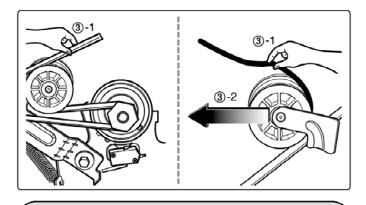


- 1. Disassemble the top plate.
- **2.** Remove the Cabinet Cover and Tub drum [front].
- 3. Loosen belt from motor and idler pulleys.
- 4. Carefully remove Drum out.

CHANGING THE DRUM LAMP

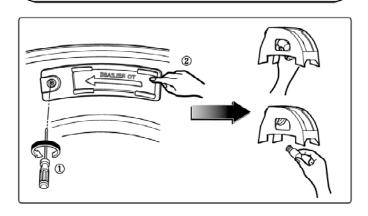


- 1. Disassemble the door.
- **2.** Remove a screw by holding the drum lamp shield in place.
- 3. Slide the shield up and remove.
- **4.** Remove the bulb and replace with a 15 watt, 120 volt candelabra-base bulb.
- 5. Replace the lamp shield and screw.

DRYER EXHAUST CHANGE

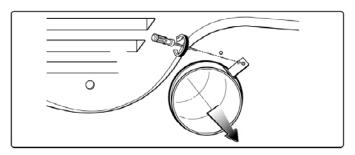


1. Remove a screw and exhaust duct.

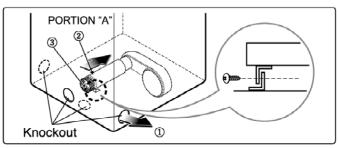


2-1. Detach and remove a knockout at the botton, left or right side as desired. (Right Side Vent not available on Gas dryer)


1), 2), 3) the order of work.

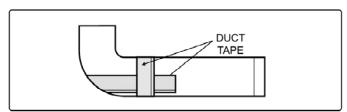

2-2. Reconnect the another duct[11 in(28cm)] to the blower housing, and attach the duct to the base. (Duct is a SVC part)

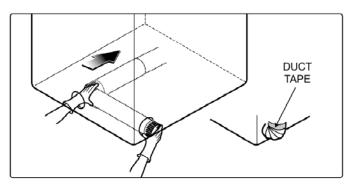


3-1. Pre-assemble 4" elbow with 4" duct. Wrap duct tape around joint.

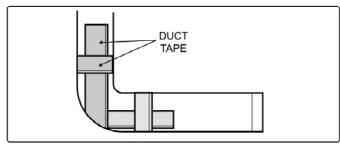


3-2. Insert elbow duct assembly first through the side opening and connect the elbow to the internal duct.

FILTER ASSEMBLY

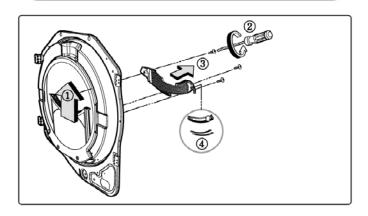


- 1. Remove the filter.
- 2. Remove 3 screws.
- 3. Remove Cover Gride.
- 4. Disconnect electrode sensor.

BLOWER HOUSING

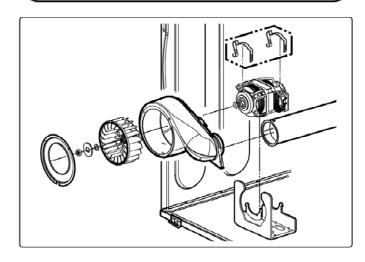


- **1.** Disassembly the top plate.
- 2. Remove the Cabinet Cover and Tub Drum [Front].
- 3. Remove the Drum assembly.
- 4. Remove 2 screws and cover(Air guide).
- 5. Remove the bolt and washer.
- 6. Remove the fan.
- 7. Disconnect the motor clamp and motor.

BACK COVER

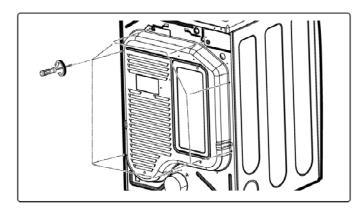


- **1.** Disassemble the top plate.
- 2. Remove the Cabinet Cover and Tub Drum [Front].
- 3. Remove the Drum assembly.
- 4. Remove 7 screws.
- 5. Remove the Tub Drum [Rear] towards the front.

AIR DUCT

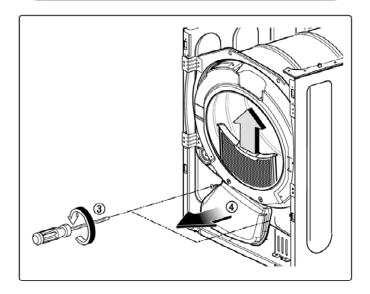

- **1.** Disassemble the top plate.
- 2. Remove the Cover Cabinet.
- 3. Remove filter and 2 screws.
- **4.** Remove the air duct.

ROLLERS

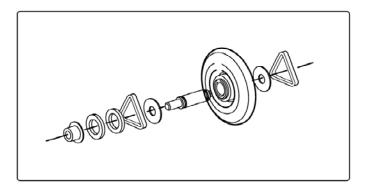


- 1. Disassemble the top plate.
- 2. Remove the Cover Cabinet and Tub Drum [Front].
- 3. Remove the Drum assembly and Tub Drum [Rear].
- 4. Disconnect Air duct from the Tub Drum [Front].
- **5.** Remove the roller from the Tub Drum [Front] and Tub Drum [Rear].


12

EXPLODED VIEW


12-1. Control Panel & Plate Assembly

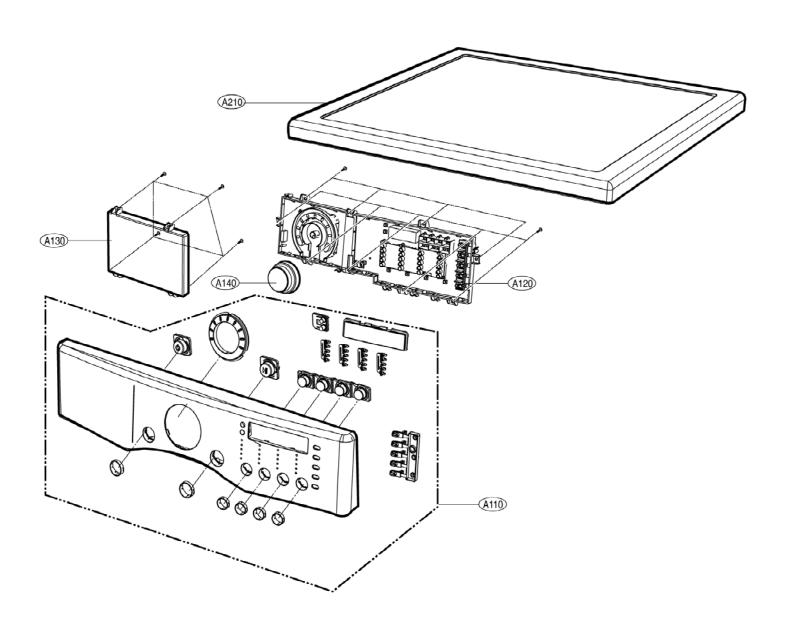

12-2. Cabinet & Door Assembly

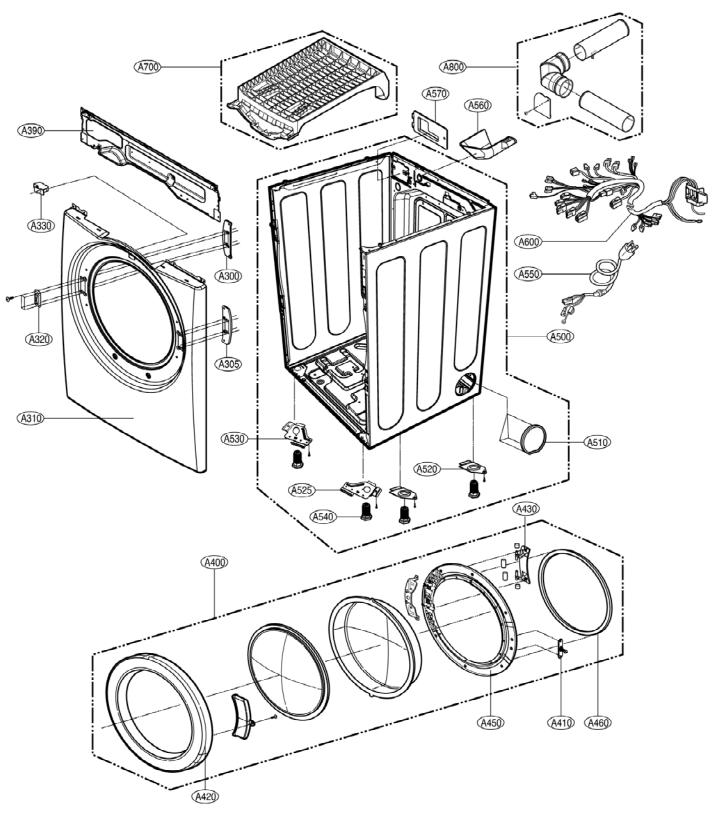

12-3-1. Drum & Motor Assembly: Electric Type

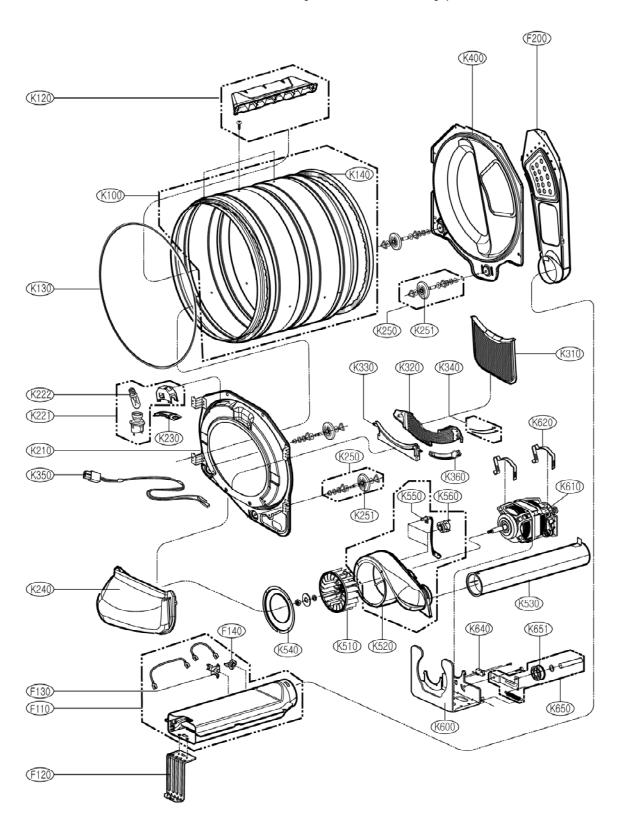

12-3-2. Drum & Motor Assembly: Gas type (F200) (K400) (K120) (K100) (K130) (K310) (K320) (K340) (K510) (K520) M240 M220 (M160) M171: Propane Gas orifice M170: Natural Gas orifice