

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



Kenmore 40441 Owner's Manual

[Shop genuine replacement parts for Kenmore 40441](#)



[Find Your Kenmore Washer Parts - Select From 132 Models](#)

----- Manual continues below -----



<http://www.managemyhome.com>

WASHING MACHINE SERVICE MANUAL

▲ CAUTION

READ THIS MANUAL CAREFULLY TO DIAGNOSE
PROBLEMS CORRECTLY BEFORE SERVICING THE UNIT.

MODEL : 796.4044#9##



P/No.: MFL30599145

CONTENTS

| | |
|---|----|
| 1. SPECIFICATIONS | 3 |
| 2. FEATURES & TECHNICAL EXPLANATION | 4 |
| 3. PARTS IDENTIFICATION | 7 |
| 4. INSTALLATION AND TEST | 8 |
| 5. OPERATION | 11 |
| 5-1. CONTROL PANEL FEATURES | 11 |
| 5-2. CYCLE GUIDE | 14 |
| 5-3. SPECIAL FUNCTIONS | 15 |
| 5-4. EXPLANATION OF EACH PROCESS | 16 |
| 6. PROGRAM CHART | 18 |
| 7. TEST MODE | 19 |
| 7-1. SAFETY CAUTION | 19 |
| 7-2. LOAD TEST MODE | 19 |
| 7-3. HOW TO CHECK THE WATER LEVEL FREQUENCY | 19 |
| 8. TROUBLESHOOTING | 20 |
| 8-1. SAFETY CAUTION | 20 |
| 8-2. ERROR MODE SUMMARY | 20 |
| 8-3. TROUBLESHOOTING SUMMARY | 22 |
| 8-4. TROUBLESHOOTING WITH ERROR | 24 |
| 8-5. TROUBLESHOOTING ELSE | 31 |
| 9. COMPONENT TESTING INFORMATION | 36 |
| 9-1. FILTER ASSEMBLY (LINE FILTER) | 36 |
| 9-2. DOOR LOCK SWITCH ASSEMBLY | 37 |
| 9-3. STATOR ASSEMBLY | 39 |
| 9-4. PUMP MOTOR ASSEMBLY | 42 |
| 9-5. INLET VALVE ASSEMBLY | 43 |
| 9-6. HEATER ASSEMBLY | 44 |
| 9-7. THERMISTOR ASSEMBLY | 45 |
| 10. DISASSEMBLY INSTRUCTIONS | 48 |
| 11. EXPLODED VIEW | 57 |
| 11-1. CABINET AND CONTROL PANEL ASSEMBLY | 57 |
| 11-2. DRUM AND TUB ASSEMBLY | 58 |
| 11-3. DISPENSER ASSEMBLY | 59 |

1. SPECIFICATIONS

| ITEM | | 4044#9## |
|----------------------------|-------------|---|
| COLOR | | WHITE, PATINA BEIGE |
| POWER SUPPLY | | AC 120 V, 60 Hz |
| PRODUCT WEIGHT | | 190.7 lbs (86.5kg) |
| ELECTRIC POWER CONSUMPTION | WASHING | 280 W |
| | DRAIN MOTOR | 50 W |
| | WASH HEATER | 1000W |
| REVOLUTION SPEED | WASH | 46 rpm |
| | SPIN | 0-1150 rpm |
| CYCLE | | 10 |
| WASH/RINSE TEMPERATURES | | 5 |
| SPIN SPEEDS | | 5 |
| OPTIONS | | STAIN TREAT, 2 nd RINSE, ADD STEAM DELAY START, CLEAN WASHER, CONTROL LOCK |
| OPERATIONAL WATER PRESSURE | | 14.5-116 psi (100-800 kPa) |
| CONTROL TYPE | | Electronic |
| WASH CAPACITY [cu.ft] | | 3.63 (4.2 IEC) |
| DIMENSIONS | | 27"(W) X 29 ^{3/4} "(D) X 38 ^{11/16} "(H), 51 ^{1/16} " (D, door open) |
| DELAY START | | up to 19 hours |
| DOOR SWITCH TYPE | | PTC + Solenoid |
| WATER LEVEL | | 10 steps (by sensor) |
| LAUNDRY LOAD SENSING | | Incorporated |
| ERROR DIAGNOSIS | | Incorporated |
| AUTO POWER OFF | | Incorporated |
| CONTROL LOCK | | Incorporated |

2. FEATURES & TECHNICAL EXPLANATION

2-1. FEATURES




■ Ultra Capacity

The Larger drum enables not just higher head drop and stronger centrifugal force, but also less tangling and wrinkling of the laundry. Heavier loads, such as king size comforters, blankets, and curtains, can be washed.




■ Direct Drive System

The advanced Brushless DC motor directly drives the drum without belt and pulley.

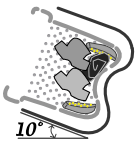


■ Tilted Drum and Extra Large Door Opening

Tilted drum and extra large opening make it possible to load and unload clothing more easily.

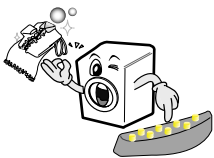

■ RollerJets

Washing ball enhances the wash performance and reduces damage to the clothing. The jets spray and help tumble clothes to enhance washing performance while maintaining fabric care.



■ Automatic Wash Load Detection

Automatically detects the load and optimizes the washing time.



■ Built-in Heater

Internal heater helps to maintain water temperature at its optimum level for selected cycles.




■ Control Lock

The Control lock prevents children from pressing any button to change the settings during operation.

2-2. NEURO FUZZY WASHING TIME OPTIMIZATION

To get the best washing performance, optimal time is determined by the water temperature, the selected washing temperature, and the size of the load.

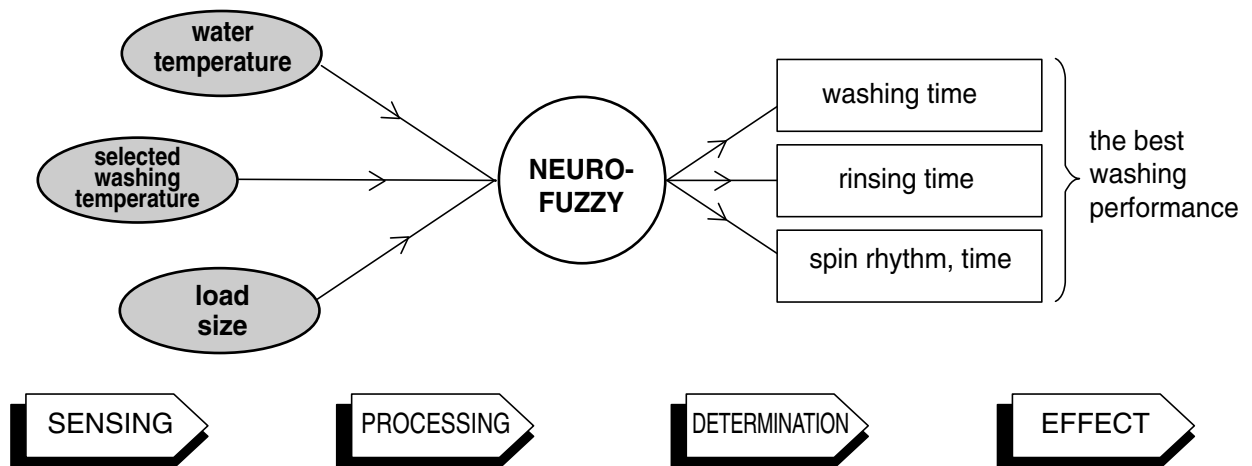

2-3. WATER LEVEL CONTROL

- This model incorporates a pressure sensor which can sense the water level in the tub.
- The water supply is stopped when the water level reaches the preset level, the washing program then proceeds.
- Spinning does not proceed until the water in the tub drains to a certain level.

2-4. DOOR CONTROL

- The door can be opened by pulling the door handle whenever washer is not in operation.
- When the cycle is completed, the DOOR LOCKED light will turn off.
- If a power failure has occurred while in operation, the door will unlock after 5 minutes.
- Clicking sounds can be heard when the door is locked/unlocked.


2-5. THE DOOR CAN NOT BE OPENED

- While program is operating.
- When a power failed and power plug is taken out in operation
- While Door Lock lights turn on.
- While the motor is in the process of inertial rotating, through the operation is paused.


2-6. CONTROL LOCK

- Use this option to prevent unwanted use of the washer. Press and hold Control Lock button for 5 seconds to lock/unlock control.
- When CONTROL LOCK is set, CONTROL LOCK lights and all buttons are disabled.
You can lock the controls of the washer while washing.


3. PARTS IDENTIFICATION

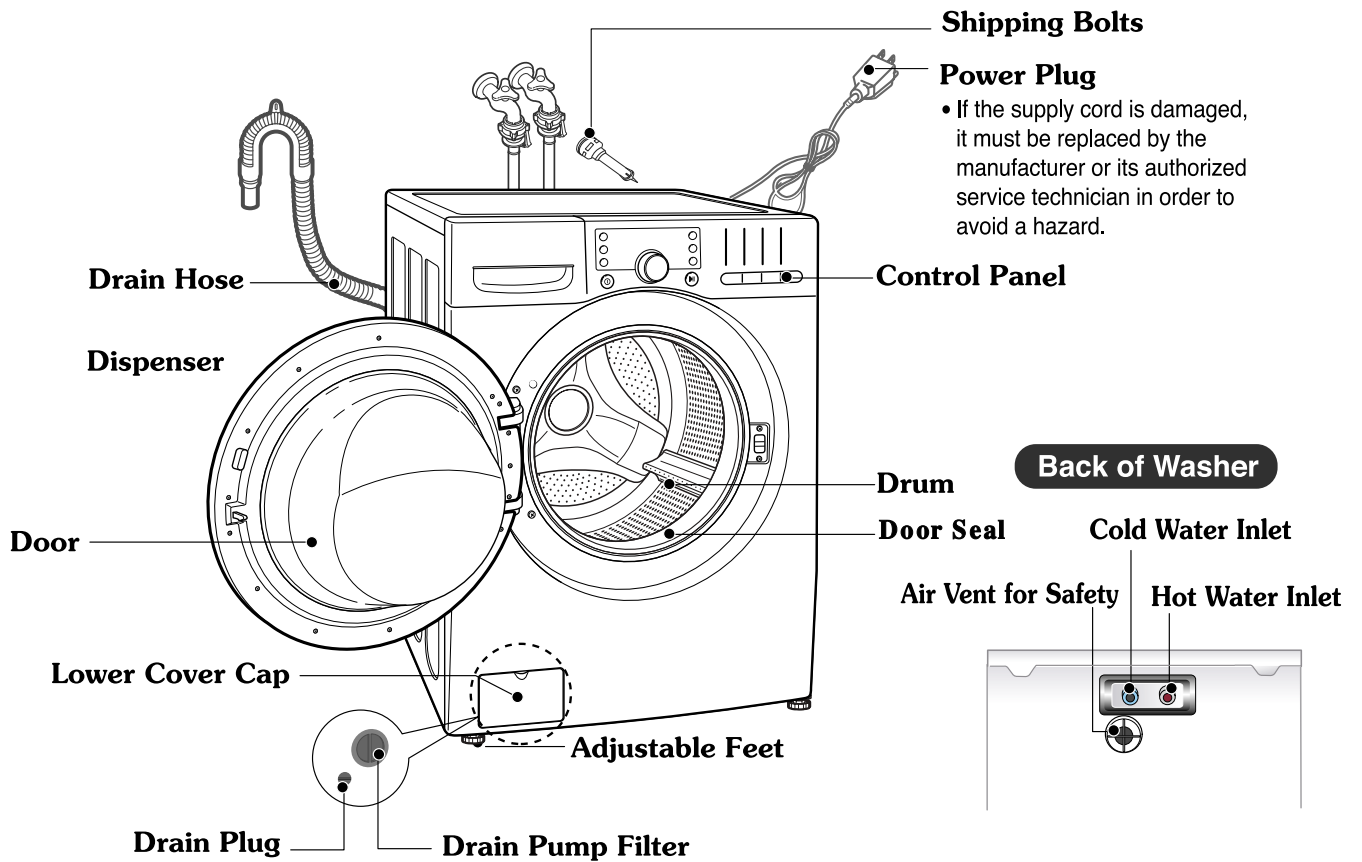


■ ACCESSORIES

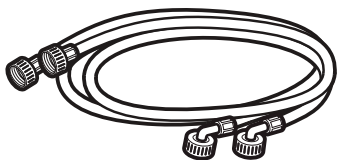


Hot/Cold (1 each)
Hose




Wrench

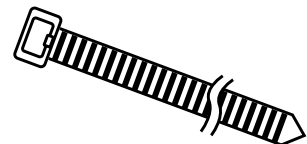


Tie strap (Option)
to secure drain hose to standpipe,
inlet hose, or laundry tub

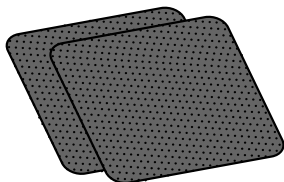

Non-skid pads

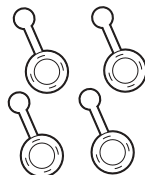

Caps(4)
(for covering shipping
bolt holes)

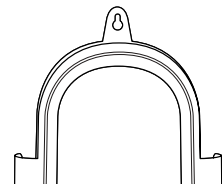




Elbow Bracket
(for securing drain hose)

4. INSTALLATION & TEST

- 1 Before servicing, ask the customer what the trouble is.
- 2 Check the setup (power supply is 120V, remove the transit bolts, level the washer...)
- 3 Check with the troubleshooting guide.
- 4 Plan your service method by referring to the disassembly instructions.
- 5 Service the unit.
- 6 After servicing, operate the appliance to see whether it functions correctly.


■ STANDARD INSTALLATION

The appliance should be installed as follows:

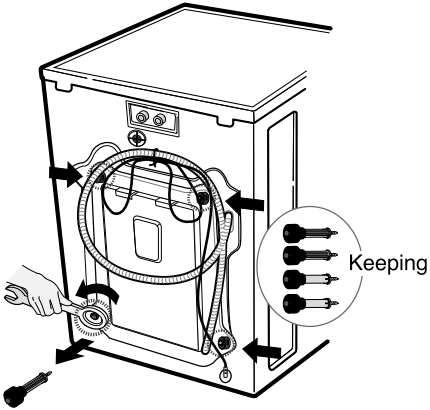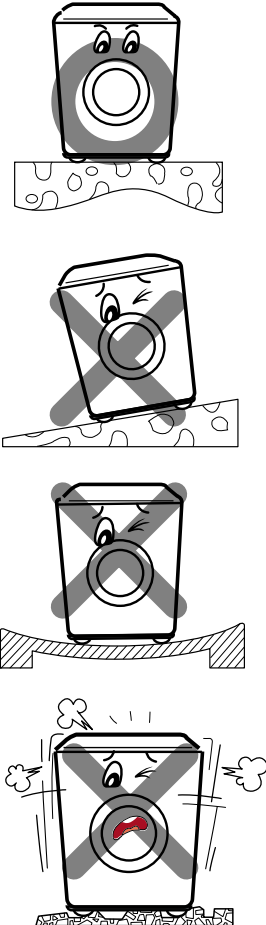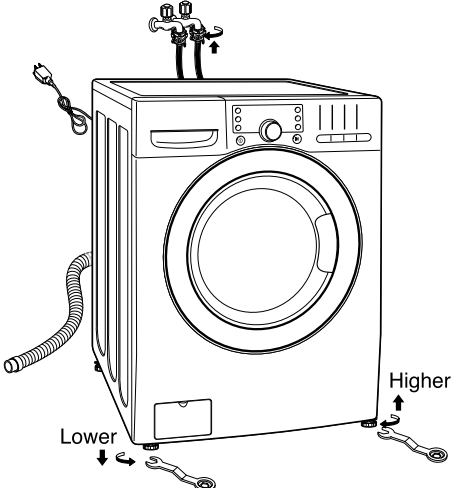
| REMOVE THE SHIPPING BOLTS | INSTALL THE APPLIANCE ON A FLAT AND FIRM SURFACE | ADJUST THE LEVELING |
|--|--|--|
| <ul style="list-style-type: none"> • Remove the 4 shipping bolts with the supplied wrench. ※ Do first lower side to remove easily. • Keep the shipping bolts and spanner for future use. • Insert the 4 caps (provided) into the hole.  |  | <ul style="list-style-type: none"> • Turn the leveling feet to adjust the appliance.  <ul style="list-style-type: none"> • Turn clockwise to raise; counterclockwise to lower. |

■ HOW TO CONNECT THE INLET HOSE


- Verify that the rubber washer is inside of the valve connector.
- Tighten the inlet hose securely to prevent leaks.

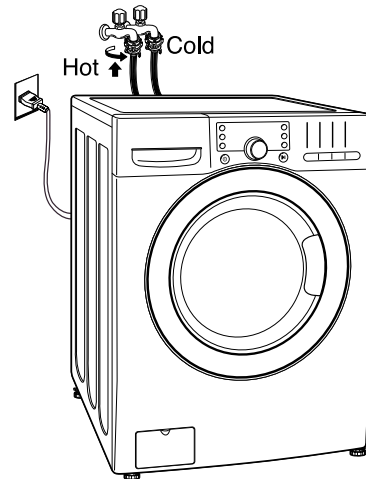

■ CONNECT THE DRAIN HOSE

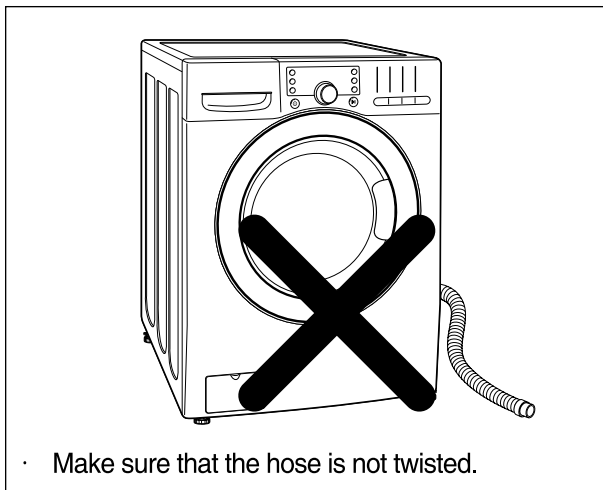


- Make sure that the hose is not twisted.

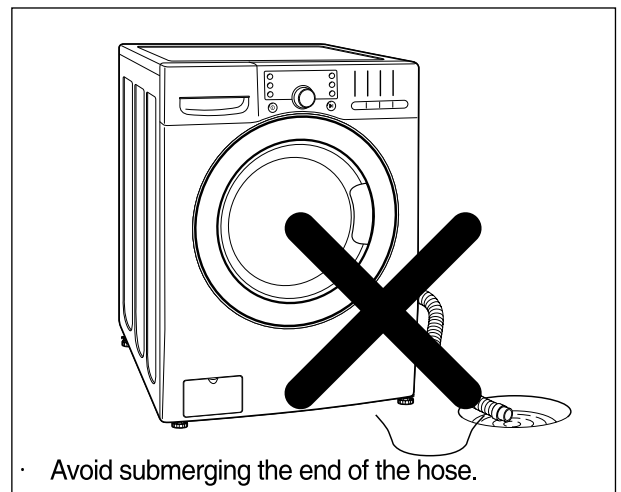


- Avoid submerging the end of the hose.

※ The end of the drain hose should be placed less than 96" from the floor.

■ CONNECT POWER PLUG

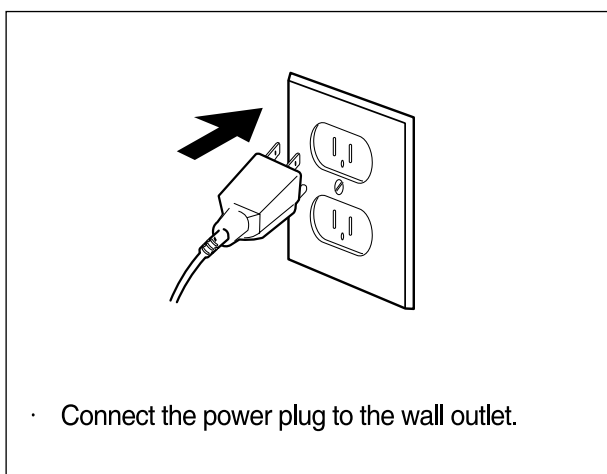


- Connect the power plug to the wall outlet.

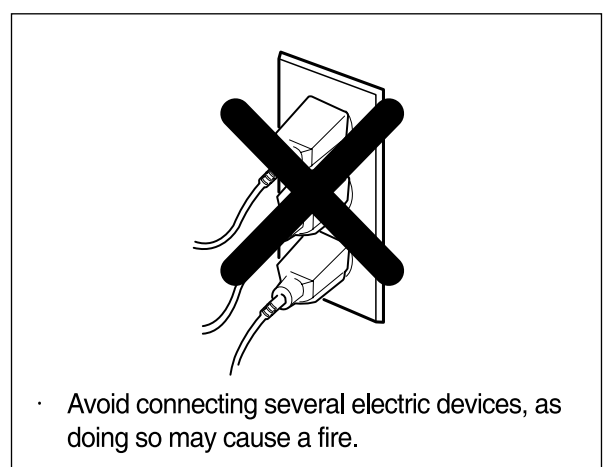

- Avoid connecting several electric devices, as doing so may cause a fire.


7 TEST OPERATION

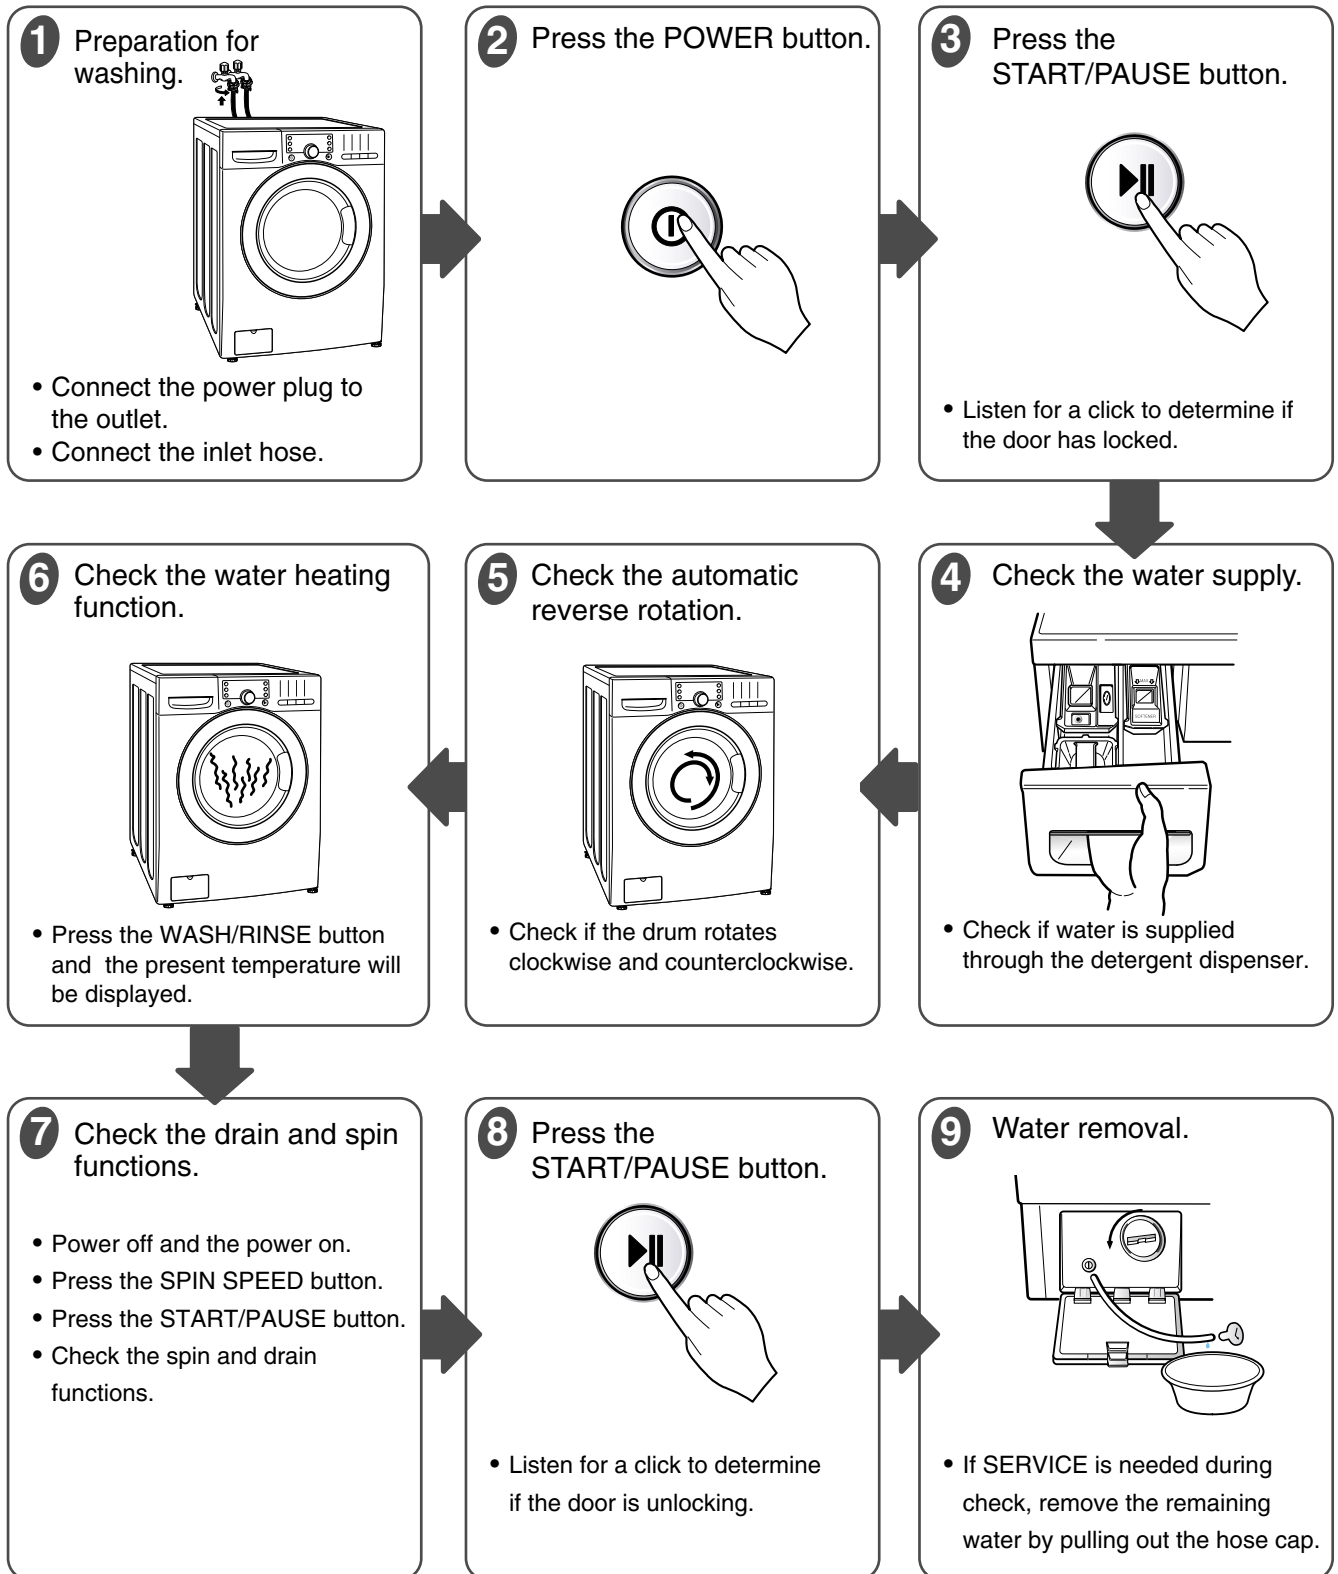

5. OPERATION

5-1. CONTROL PANEL FEATURES

■ 796.4044#9##

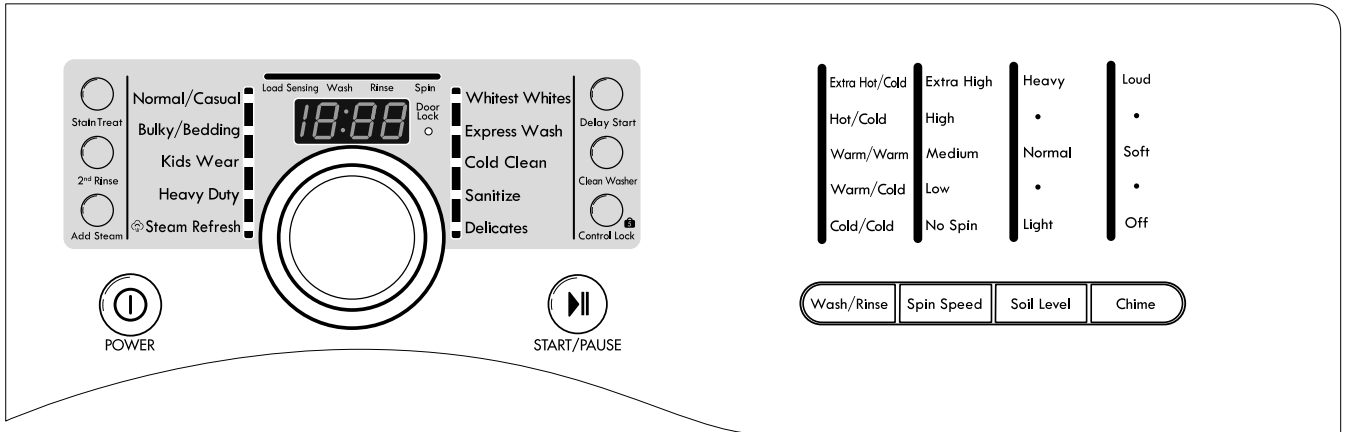


POWER BUTTON

- Use this button to turn the **POWER ON/OFF**.

STATUS INDICATOR

- It shows elapsed time of the cycle the washer is operating.

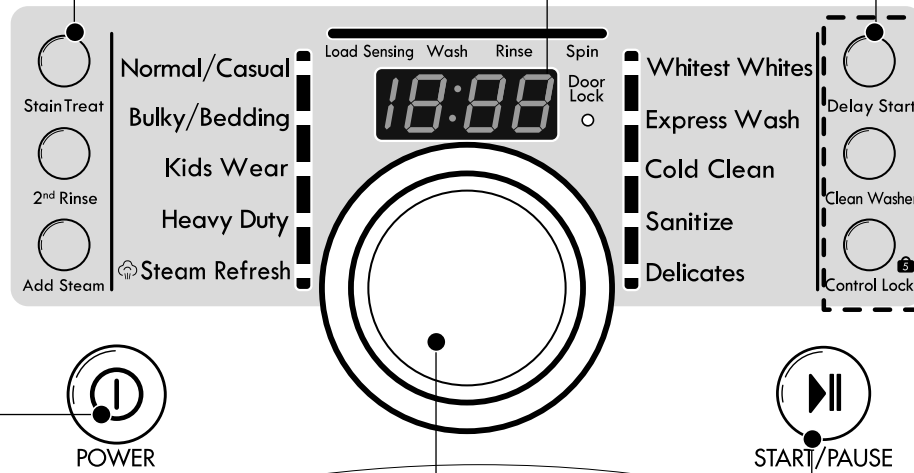

CYCLE SELECTOR KNOB

- Rotate the **CYCLE SELECTOR KNOB** to select the cycle designed for different types of fabric and soil levels.


START/PAUSE

- Use this button to **START/STOP** the washer.

OPTION BUTTON

- **STAIN TREAT:** Use this option for heavily soiled loads that need improved stain treatment.
- **2nd RINSE:** Use this option to add an extra rinse to the selected cycle.
- **ADD STEAM:** Use this option to remove stains on fabrics without the energy usage or potential damage to fabrics.
- **DELAY START:** Use this option to delay the start of the wash cycle. Each press of the button increases the delay time by one hour, for up to 19 hours.
- **CLEAN WASH:** Use this option to lead to a mildew or musty smell on the washer.
- **CONTROL LOCK:** Use this option to prevent children from changing cycles or operating the machine.

| | | | |
|----------------|------------|--------|------|
| Extra Hot/Cold | Extra High | Heavy | Loud |
| Hot/Cold | High | • | • |
| Warm/Warm | Medium | Normal | Soft |
| Warm/Cold | Low | • | • |
| Cold/Cold | No Spin | Light | Off |



WASH/RINSE, SPIN SPEED, SOIL LEVEL, CHIME

- Select a water temperature based on the type of load you are washing.
- To change the spin speed, press the Spin Speed button repeatedly to cycle through available options.
- To change the soil level, press the Soil Level button repeatedly until the desired setting is on.
- Press repeatedly to adjust the volume of the Chime

5-2. CYCLE GUIDE

The cycle guide below shows the default settings, available options and recommended fabric types for each cycle. Allowable modifier adjustments are shown below the default setting for each cycle. ● = Available option

■ 796.4044#9##

■ = Default setting

| Cycle | | | | Modifiers | | | Options | | |
|-----------------------|--|---------------------|-------------|-------------------------------------|--|-----------------|-----------|-----------|-------------|
| Cycle | Fabric or Load Type | Display Time (Min.) | Wash Motion | Wash/Rinse Temperature | Spin Speed | Soil Level | ADD STEAM | 2nd RINSE | STAIN TREAT |
| Steam Refresh | Dress shirts, Blouses (Load up to 5 garments) | 20 | | | | | ● | | |
| Normal/Casual | Cotton, linen, towels, shirts, sheets, jeans, mixed loads | 50-59 | ○ | Warm/Cold | High | Normal | ● | ● | ● |
| | | | | Warm/Warm Hot/Cold Cold/Cold | Extra High No Spin Low Medium | Heavy Light | | | |
| Bulky/Bedding | Large items such as blankets and comforters | 59 | | Warm/Cold | Low | Normal | ● | ● | ● |
| | | | | Warm/Warm Hot/Cold Cold/Cold | Medium No Spin | Heavy Light | | | |
| Kids wear | Kids Wear | 91-97 | ○ | Hot/Cold | High | Heavy | ● | ● | ● |
| | | | | Cold/Cold Warm/Cold Warm/Warm | Extra High No Spin Low Medium | Light Normal | | | |
| | | | | Warm/Cold | Extra High | Heavy | | | |
| Heavy Duty | Heavy soiled Cotton Fabrics | 74-80 | ○ | Warm/Warm Hot/Cold Cold/Cold | No Spin Low Medium High | Light Normal | ● | ● | ● |
| | | | | Hot/Cold | High | Normal | | | |
| | | | | Cold/Cold Warm/Cold Warm/Warm | Extra High No Spin Low Medium | Heavy Light | | | |
| Whitest Whites | White Fabrics | 69-75 | ○ | Hot/Cold | High | Normal | ● | ● | ● |
| | | | | Cold/Cold Warm/Cold Warm/Warm | Extra High No Spin Low Medium | Heavy Light | | | |
| Express Wash | Lightly soiled clothing and small loads | 20 | | Hot/Cold | Extra High | Light | | ● | |
| | | | | Cold/Cold Warm/Cold Warm/Warm | No Spin Low Medium High | Normal Heavy | | | |
| | | | | Cold/Cold | High | Normal | | | |
| Cold Clean | Small loads of cotton, linen, towels, shirts, sheets, jeans, mixed loads | 57-63 | ○ | | Extra High No Spin Low Medium | Light | | ● | |
| | | | | Extra Hot/Cold | High | Normal | | | |
| Sanitize | Heavily soiled items, such as work clothes, diapers, etc. | 101-107 | | | Extra High No Spin Low Medium | Heavy Light | | ● | ● |
| | | | | Extra Hot/Cold | High | Normal | | | |
| Delicates | Dress shirts/blouses nylons, sheer or lacy garments | 42 | | Cold/Cold | Medium | Normal | | ● | |
| | | | | Warm/Cold Warm/Warm | No Spin Low | Heavy Light | | | |

NOTE: To protect your garments, not every wash/rinse temperature, spin speed, soil level, or option is available with every cycle.

○ **NOTE:** These cycles use various wash motions to enhance cleaning and/or fabric care performance. These wash motions may sound different at different stages of the wash cycle. This is normal.

5-3. SPECIAL FUNCTIONS

STAIN TREAT



Use this option for heavily soiled loads that need improved stain treatment. When STAIN TREAT is selected, the water temperature for the selected cycle will begin as warm water to help prevent the setting of certain types of stains. Then as the cycle progresses, the water will be heated to higher temperatures to help remove stains that require treatment at higher temperatures. This option is designed for optimum stain removal.

NOTE: If STAIN TREAT is selected with the SANITIZE cycle, the cycle will begin with very hot water since that is default for that cycle and cannot be changed.

2nd RINSE



This option will add an extra rinse to the selected cycle. Use this option to help ensure the removal of detergent or bleach residue from fabrics.

ADD STEAM Option



STEAM cycles include the Steam Refresh, Normal/Casual, Bulky/Bedding, Kids Wear, Heavy Duty and Whitest Whites. Adding steam to these cycles provides superior cleaning performance while reducing energy and water consumption. By using a hot steam spray from above and cooler water below, fabrics get the cleaning benefits of a super hot wash, without the energy usage or potential damage to fabrics.

To ADD STEAM to a cycle:

- 1 Turn on the washer and turn the cycle selector knob to select a cycle that allows the steam option.
- 2 Press the ADD STEAM button. The washer will automatically adjust the cycle settings.
- 3 Set any other desired options.
- 4 Press the START/PAUSE button to start the cycle.

CAUTION:

The door may become quite warm during steam cycles. This is normal.

Do not attempt to override the door lock mechanism or reach into the washer during a steam cycle. Steam can cause severe burns.

IMPORTANT NOTES ABOUT STEAM CYCLES:

- Steam may not be visible during the steam cycles. This is normal.
- Do not use steam with delicate fabrics such as wool, silk, or easily discolored fabrics.

DELAY START



Once you have selected the cycle and other settings, press this button to delay the start of the wash cycle. Each press of the button increases the delay time by one hour, for up to 19 hours. Once the desired delay time is set, press the START/PAUSE button to start the delay time. If the START/PAUSE button is not pressed within 4 minutes, the control will shut off and the settings will be lost.

CLEAN WASHER




A buildup of detergent residue can occur in the wash tub over time and can lead to a mildewy or musty smell. The CLEAN WASHER cycle is specially designed to remove this buildup using bleach or other cleaner designed specifically for cleaning front load washers. The CLEAN WASHER cycle should be run once a month, or more often under heavy use conditions or if odor is present.

- 1 Turn on the washer and press the CLEAN WASHER button. Selecting any other cycle after CLEAN WASHER has been selected will cause the CLEAN WASHER cycle to be cancelled.
- 2 Fill the bleach dispenser to the MAX line with liquid chlorine bleach. Do not overfill the bleach dispenser. Overfilling will cause the bleach to be dispensed immediately.
- 3 Press the START/PAUSE to start the cycle.
- 4 After the cycle has ended, open the door and allow the drum interior to dry completely.

NOTE: Do NOT use this cycle with clothes, and do NOT add detergent or fabric softener.

* For powdered tub cleaners, add the cleaner to the main wash compartment of the dispenser drawer. Place tablet cleaners directly into the tub. Always follow the cleaner manufacturers instructions and recommendations

CONTROL LOCK

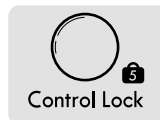

Use this option to disable the controls. The washer can be locked during a cycle. This feature allows you to prevent children from changing cycles or operating the machine. Once set, the CONTROL LOCK must be turned off before the controls can be used. Once the washer has shut off, the power button will allow the machine to be turned on, but the controls will still be locked. When the controls are locked, "CL" will be displayed alternately with the estimated time remaining.

Press and hold the CONTROL LOCK button for 5 seconds to activate or deactivate the controls.

5-4. EXPLANATION OF EACH PROCESS

| No. | Process | Explanation |
|---------------|-----------------------------------|---|
| 1. | Stay | <ul style="list-style-type: none"> • Electrical power is supplied • Washer is ready to work and the micom is in the active mode. |
| 2. | Water supply | <ul style="list-style-type: none"> • After loading laundry and selecting a course and a cycle, water is supplied and drum rotates. • When a user selects Pre-wash course, water is supplied through pre wash valve. |
| 3. | Soaking & washing laundry | <ul style="list-style-type: none"> • To get laundry wet, drum rotates clockwise and counterclockwise. • If water amount is insufficient at this time, the Inlet valve will supply water again. |
| 4. | Heating & washing | <ul style="list-style-type: none"> • The heater heats the water in drum to the selected water temperature and drum rotates for washing. |
| 5. ~ 6. | Washing & heating / washing | <ul style="list-style-type: none"> • When the water temperature reaches to the selected temperature, the heating stops and only the drum rotates. • If water temperature becomes lower than selected because of re-supplied water, the heating starts again. |
| 7. | Washing | <ul style="list-style-type: none"> • Fuzzy Logic decides washing time according to the laundry load, water temperature, and other factors. |
| 8. | Drainage | <ul style="list-style-type: none"> • A pump motor drains the water from the drum. • After sensing drained water amount by water level frequency, spin starts. • When a heating course is selected, stay cooling process is performed to decrease the water temperature gradually to prevent laundry from being damaged and for safety reasons. |
| 9. | Untangling (Sensing eccentricity) | <ul style="list-style-type: none"> • It balances laundry load and senses the eccentricity of the load, to only allow spinning without vibration • If the eccentricity is worse than the allowed level, it repeats the disentangling process. When the repeated time is more than allowed level, it displays UE. • If the eccentricity is good, the intermittent spin starts. • During this process, the drain pump works for drainage intermittently. |

| No. | Process | Explanation |
|-----|--------------------|--|
| A. | Intermittent spin | <ul style="list-style-type: none"> To reach the correct set speed, the motor rotates clockwise and counterclockwise directions after spin process starts. If the water level frequency is lower than 23.0 kHz, a washer senses suds and starts suds removal process. |
| B. | Rinse spin | <ul style="list-style-type: none"> In this process, the remaining water during washing process is extracted and the selected speed is kept. Removing suds process is in active mode at this cycle. |
| C. | Remaining spin | <ul style="list-style-type: none"> After spin finishes, the drum rotates by remaining spin power until it stops. Motor power is off. This process is overlapped with next process. |
| D. | Rinse water supply | <ul style="list-style-type: none"> Water supply for rinse process |
| E. | Rinse | <ul style="list-style-type: none"> Rinsing process. |
| F. | Last drainage | <ul style="list-style-type: none"> After spin finishes and power is not supplied to motor, the drum rotates by remaining spin power If rinse hold is selected, the drainage is not proceeded after rinse finishes. |
| G. | Disentangling | <ul style="list-style-type: none"> The same as item 9. |
| H. | Intermittent spin | <ul style="list-style-type: none"> The same as item A. |
| I. | Main spin1 | <ul style="list-style-type: none"> The same as item B. |
| J. | Main spin2 | <ul style="list-style-type: none"> At the end of a main spin, the spin speed will reach the selected rpm. |
| K. | Remaining spin | <ul style="list-style-type: none"> The same with item C. |
| L. | Disentangling | <ul style="list-style-type: none"> After spin finishes, disentangling starts to remove unbalanced laundry. |
| M. | End | <ul style="list-style-type: none"> After 'end' signal is displayed, it stays for 8 seconds and power is automatically turned off. (Auto type door switch) After door switch is off, end signal is displayed in the case of manual type and it takes around 2 minute to turn off door switch. |



7. TEST MODE

7-1. SAFETY CAUTION

- There's built-in AC 110V and DC power in output terminal of PWB assembly in common. Be careful electric shock when disconnecting parts while trouble shooting. (Wear Electro Static Discharge gloves when working.)
- After cutting off the power when changing PWB assembly, disconnect or assemble.
- Be careful static when handling PWB assembly, and use Electro Static Discharge plastic pack when delivering or keeping it.

7-2. LOAD TEST MODE.

The washer must be empty and the controls must be in the off state.

1. Press the SPIN SPEED and SOIL LEVEL buttons simultaneously.
2. Press the POWER  button, while the above condition. Then buzzer will sound twice.
3. Press the START/PAUSE  button repeatedly to cycle through the test modes.


| Number of times the Start/Pause button is pressed | Check Point | Display Status |
|---|-------------------------------------|--------------------------------------|
| None | Turns on all lamps. | LOAD TEST MODE |
| 1 time | Locks the door. | LOAD TEST MODE |
| 2 times | Tumble clockwise. | rpm (42~50) |
| 3 times | Low speed Spin. | rpm (35~45) |
| 4 times | High speed Spin. | rpm (110~117) |
| 5 times | Inlet valve for prewash turns on. | Water level frequency (0~255) |
| 6 times | Inlet valve for main wash turns on. | Water level frequency (0~255) |
| 7 times | Inlet valve for Hot water turns on. | Water level frequency (0~255) |
| 8 times | Inlet valve for steam turns on. | Water level frequency (0~255) |
| 9 times | Inlet valve for bleach turns on. | Water level frequency (0~255) |
| 10 times | Tumble counterclockwise. | rpm (42~50) |
| 11 times | Heater turns on for 3 seconds. | Water temperature |
| 12 times | Circulation pump turns on. | Water level frequency (0~255) |
| 13 times | Drain pump turns on. | Water level frequency (0~255) |
| 14 times | Steam water level sensor operates. | AG tub water level frequency (0~255) |
| 15 times | Steam Heater turns on for 1.2sec. | Steam generator temperature |
| 16 times | off | |

NOTES:

- RPM < 220 : RPM = display / RPM > 200 : RPM = display X 10
- WATER LEVEL : o255 = empty / o248 = normal / o255 = tub clean

7-3. HOW TO CHECK THE WATER LEVEL FREQUENCY

* Press the WASH/RINSE and DELAY START button simultaneously.



● The digits indicate the water level frequency (x.1 kHz).

So, for example a display indicating 241: a Water level frequency of 241 x.1 kHz
= 24.1 kHz









8. TROUBLESHOOTING




8-1. SAFETY CAUTION

- There's built-in AC 120V and DC power in output terminal of PWB assembly in common. Be careful electric shock when disconnecting parts while trouble shooting. (Wear Electro Static Discharge gloves when working.)
- After cutting off the power when changing PWB assembly, disconnect or assemble.
- Be careful static when handling PWB assembly, and use Electro Static Discharge plastic pack when delivering or keeping it.

8-2. ERROR MODE SUMMERY


- If you press the START/PAUSE button when an error is displayed, any error except 『PE』 will disappear and the machine will go into the pause status.
- In case of 『PE』, 『LE』, 『dE』 if the error is not resolved within 20 sec., or the in case of other errors, if the error is not resolved within 4 min., power will be turned off automatically and the error code will blink. But in the case of 『FE』, power will not be turned off.

| | ERROR | SYMPTOM | CAUSE |
|---|-----------------------|---|---|
| 1 | WATER INLET ERROR |  | <ul style="list-style-type: none"> • Correct water level (246) is not reached within 8 minutes after water is supplied or it does not reach the preset water level within 25 minutes. |
| 2 | UNBALANCE ERROR |  | <ul style="list-style-type: none"> • The load is too small. • The appliance is tilted. • Laundry is gathered to one side. • Non distributable things are put into the drum. |
| 3 | DRAIN ERROR |  | <ul style="list-style-type: none"> • Not fully drained within 10 minutes. |
| 4 | OVER FLOW ERROR |  | <ul style="list-style-type: none"> • Water is overflowing (water level frequency is over 213). ※ If  is displayed, the drain pump will operate to drain the water automatically. |
| 5 | PRESSURE SENEOR ERROR |  | <ul style="list-style-type: none"> • The SENSOR SWITCH ASSEMBLY is out of order. |
| 6 | DOOR OPEN ERROR |  | <ul style="list-style-type: none"> • Door not all the way closed. • Loose electrical connections at Door switch and PWB Assembly. • The DOOR SWITCH ASSEMBLY is out of order. |
| 7 | HEATING ERROR |  | <ul style="list-style-type: none"> • The THERMISTOR is out order. |

| | ERROR | SYMPTOM | CAUSE |
|----|--------------------------|---|---|
| 8 | LOCKED MOTOR ERROR |  | <ul style="list-style-type: none"> • The connector (3-pin, male, white) in the MOTOR HARNESS is not connected to the connector (3-pin, female, white) of STATOR ASSEMBLY. • The electric contact between the connectors (3-pin, male, white) in the MOTOR HARNESS and 4-pin, female, white connector in the MAIN PWB ASSEMBLY is bad or unstable. • The MOTOR HARNESS between the STATOR ASSEMBLY and MAIN PWB ASSEMBLY is cut (open circuited). • The hall sensor is out of order/defective. |
| 9 | EEPROM ERROR |  | <ul style="list-style-type: none"> • EEPROM is out of order. ※ Displayed only when the START/PAUSE button is first pressed in the QC Test Mode. |
| 10 | POWER FAILURE |  | <ul style="list-style-type: none"> • The washer experienced a power failure. |

8-3. TROUBLESHOOTING SUMMARY

CIRCUIT DIAGRAM

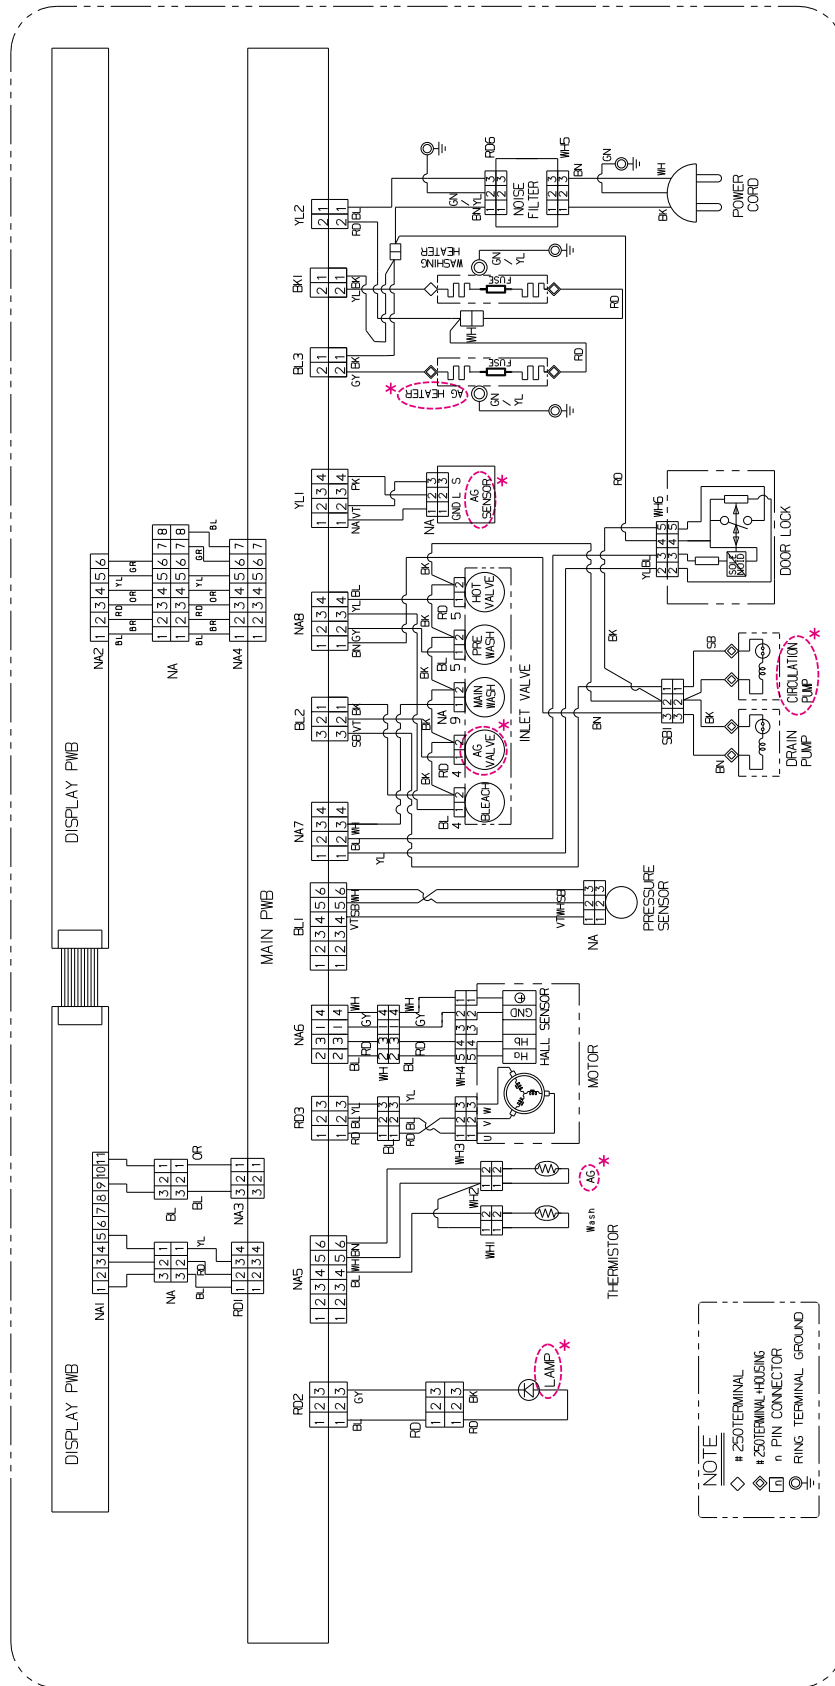

NOTE: * These are only on models with the steam feature.

| COLOR KEY | | | |
|------------------------------|-----------------|-----------------|------------|
| BK – Black | SB – Sky Blue | YL – Yellow | WH – White |
| BL – Blue | OR – Orange | GY – Gray | BN – Brown |
| RD – Red | GR – Green | NA – Natural | PK – Pink |
| VT – Violet | | | |
| NA2 DISPLAY PCB | | | |
| TEST POINTS | VALUE | | |
| NA2-3 RD | Ground | | |
| NA2-4 OR | 12Vdc | | |
| NA2-5 YL | 5Vdc | | |
| RD2 MAIN PCB - LAMP | | | |
| TEST POINTS | VALUE | | |
| RD2-1 BL | 16.5Vdc | | |
| NA5 MAIN PCB - THERMISTOR | | | |
| TEST POINTS | COMPONENT | | |
| NA5-4 BL | Wash Thermistor | | |
| NA5-6 BN | AG Thermistor | | |
| RD3 and NA6 MAIN PCB - MOTOR | | | |
| TEST POINTS | COMPONENT | | |
| RD3-1 RD | U | | |
| RD3-2 BL | V | | |
| RD3-3 YL | W | | |
| NA6-1 GY | + | | |
| NA6-2 BL | Hb | | |
| NA6-3 RD | Ha | | |
| NA6-4 WH | GND | | |
| NA6 MAIN PCB – MOTOR | | | |
| TEST POINTS | RESISTANCE | REMARKS | |
| NA6-1 GY to 2 RD | 8-12 Ω | | |
| NA6-1 GY to 3 BL | 8-12 Ω | | |
| NA6-1 GY to 4 GY | 10-15 Vdc | Voltage (input) | |
| NA6-2 BL to 4 GY | 10 Vdc | Pulsing Signal | |
| NA6-3 RD to 4 GY | 10 Vdc | Pulsing Signal | |
| NA7 MAIN PCB - DOOR SWITCH | | | |
| TEST POINTS | COMPONENT | | |
| NA7-1 YL | PTC | | |
| NA7-2 BL | PTC | | |


| NA7, BL2 and NA8 MAIN PCB – INLET VALVE | | | |
|---|---------------------------------|---|-------------------------------|
| TEST POINTS | COMPONENT | | |
| NA7-3 WH | Main Wash | | |
| BL2-1 BK | Common | | |
| BL2-2 VT | AG Valve | | |
| NA8-2 GY | Pre Valve | | |
| NA8-3 YL | Bleach | | |
| NA8-4 BL | Hot Valve | | |
| BL2, NA8 and SB1 MAIN PCB - PUMPS | | | |
| TEST POINTS | COMPONENT | CONDITION | |
| BL2-3 SB | Common | Pump running | |
| NA8-1 BN | Drain Pump | Pump stopped | |
| SB1-1 SB, 2 BK | Recirc Pump* | Drain pump disconnected | |
| YL1 MAIN PCB – AG SENSOR | | | |
| TEST POINTS | COMPONENT | | |
| YL1 -1 NA | Ground | | |
| YL1 -2 VT | S | | |
| YL1 -4 PK | L | | |
| BL3, BK1 and YL2 MAIN PCB - HEATER | | | |
| TEST POINTS | COMPONENT | RESISTANCE | |
| BL3-2 GY, BK1-2 YL | Vac (input) | 12 Ω - 18 Ω | |
| BL3-1 BK | Steam Generator/Heater (input) | | |
| BK1-2 YL | Wash Heater (input) | | |
| YL2-1 BL | Steam Generator/Heater (output) | | |
| YL2-2 RD | Vac (output) | | |
| WH1 MAIN PCB – TUB THERMISTORS | | | |
| TEST POINTS | COMPONENT | TEMPERATURE | RESISTANCE |
| WH1 -1 WH | Common | 86°F (30°C) 104°F (40°C) 140°F (60°C) | 39.5 kΩ 26.1 kΩ 12.1 kΩ |
| WH1 -1 WH, -2 BL | Tube Thermistor | 158°F (70°C) 203°F (95°C) 221°F (105°C) | 8.5 kΩ 3.8 kΩ 2.8 kΩ |

| WH2 MAIN PCB – STEAM THERMISTOR | | | |
|--------------------------------------|-------------------|---------------|------------|
| TEST POINTS | COMPONENT | TEMPERATURE | RESISTANCE |
| WH2 -2BN | Steam Thermistor* | 86°F (30°C) | 39.5 kΩ |
| | | 104°F (40°C) | 26.1 kΩ |
| | | 140°F (60°C) | 12.1 kΩ |
| | | 158°F (70°C) | 8.5 kΩ |
| | | 203°F (95°C) | 3.8 kΩ |
| | | 221°F (105°C) | 2.8 kΩ |
| | | 241°F (116°C) | 2.1 kΩ |
| | | 266°F (130°C) | 1.4 kΩ |
| 293°F (145°C) | 1.0 kΩ | | |
| 320°F (160°C) | 0.7 kΩ | | |
| 356°F (180°C) | 0.4 kΩ | | |
| WH3 MAIN PCB – MOTOR | | | |
| TEST POINTS | RESISTANCE | | |
| WH3 -1 BL to 2 RD | 5-15 Ω | | |
| WH3 -2 RD to 3 YL | 5-15 Ω | | |
| WH3 -3 YL to 1 BL | 5-15 Ω | | |
| NA9 INLET VALVE– MAIN WASH | | | |
| TEST POINTS | RESISTANCE | | |
| NA9 -1 WH to 2 BK | 0 Ω-15 kΩ | | |
| RD6 and WH5 POWER CORD– NOISE FILTER | | | |
| TEST POINTS | RESISTANCE | | |
| WH5-1 BK to RD6-3 BL | 0 Ω | | |
| WH5-3 BN to RD6-1 BN | 0 Ω | | |
| WH6 MAIN PCB – DOOR LOCK | | | |
| TEST POINTS | TEMPERATURE | RESISTANCE | |
| WH6-2 YL to 4 RD | 77°F (25°C) | 700-1500 Ω | |
| WH6-3 BL to 4 RD | 77°F (25°C) | 60-90 Ω | |
| WH6-4 RD to 5 BK | | Infinity | |
| WH6-2 YL to 4 RD | Voltage Input | 120 Vac | |

* Only on steam models

8-4. TROUBLESHOOTING WITH ERROR

INLET VALVE ERROR

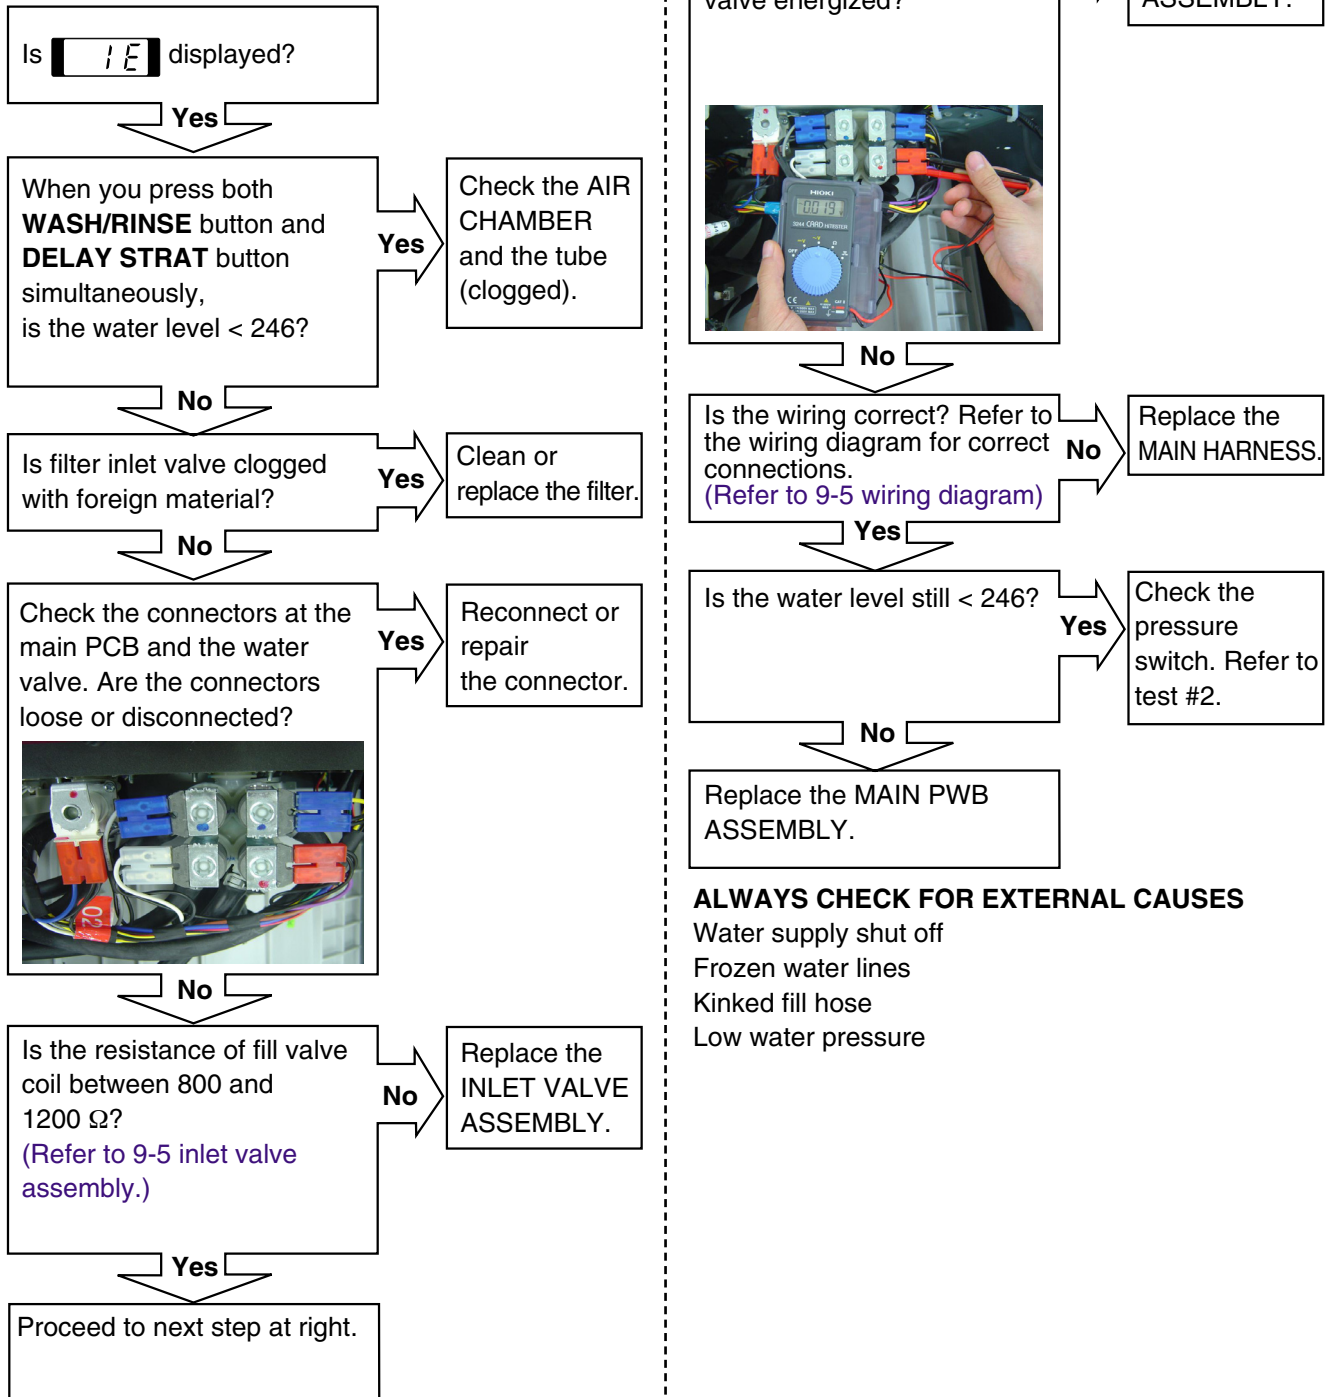

DRAIN ERROR

Is **DE** displayed?

Yes


Check the connectors at the main PCB and the drain pump. Are the connectors loose or disconnected?



Circulation pump



Drain pump

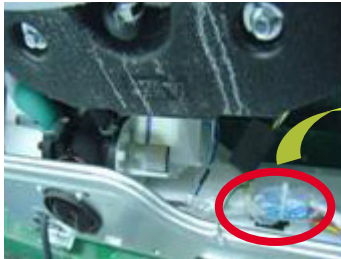

Connection connector

Yes

Reconnect or repair the connector.

No

When you press both **WASH/RINSE** button and **DELAY START** button simultaneously, is the water level <250?

Yes

Proceed to next step at right

No

Check the air dome and pressure hose for clogging. Check the pressure switch. See test #2.

Measure the resistance of the drain pump motor. Is the resistance between 10Ω and 20Ω ?
(Refer to 9-4 Pump motor assembly.)

Yes


Replace the DRAIN PUMP ASSEMBLY.

No

Check the voltage between the main PCB connectors NA4-1 BN and BL3-1 BK. Is the voltage 120 VAC ± 5%?

No

Replace the MAIN PWB ASSEMBLY.

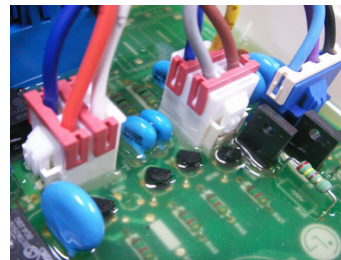



TO TURN ON THE DRAIN PUMP:

1. Turn on the washer
 2. Press the SPIN SPEED button to select LOW speed.
 3. Press the START/PAUSE button.
- The drain pump will be energized for several minutes at the beginning of the spin cycle.

ALWAYS CHECK FOR EXTERNAL CAUSES

- Kinked or clogged drain hose
- Frozen drain hose
- Foreign objects clogging the drain pump filter
- Foreign objects caught in pump impeller

HEATING ERROR

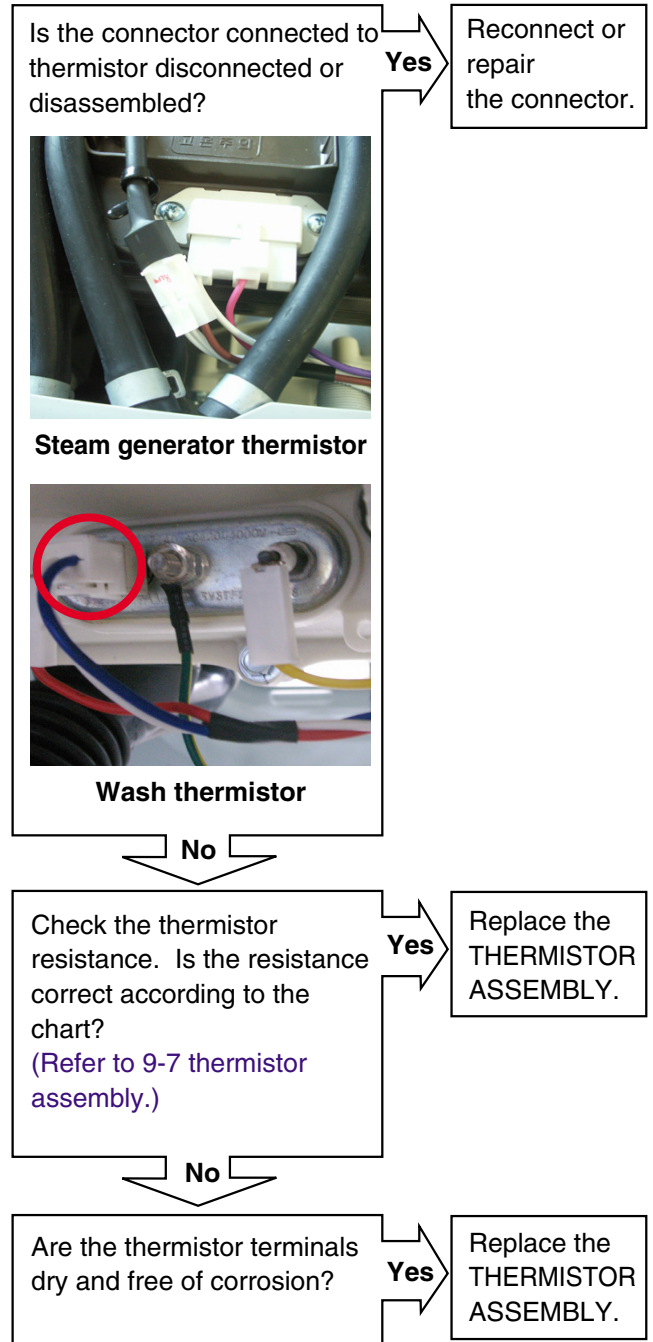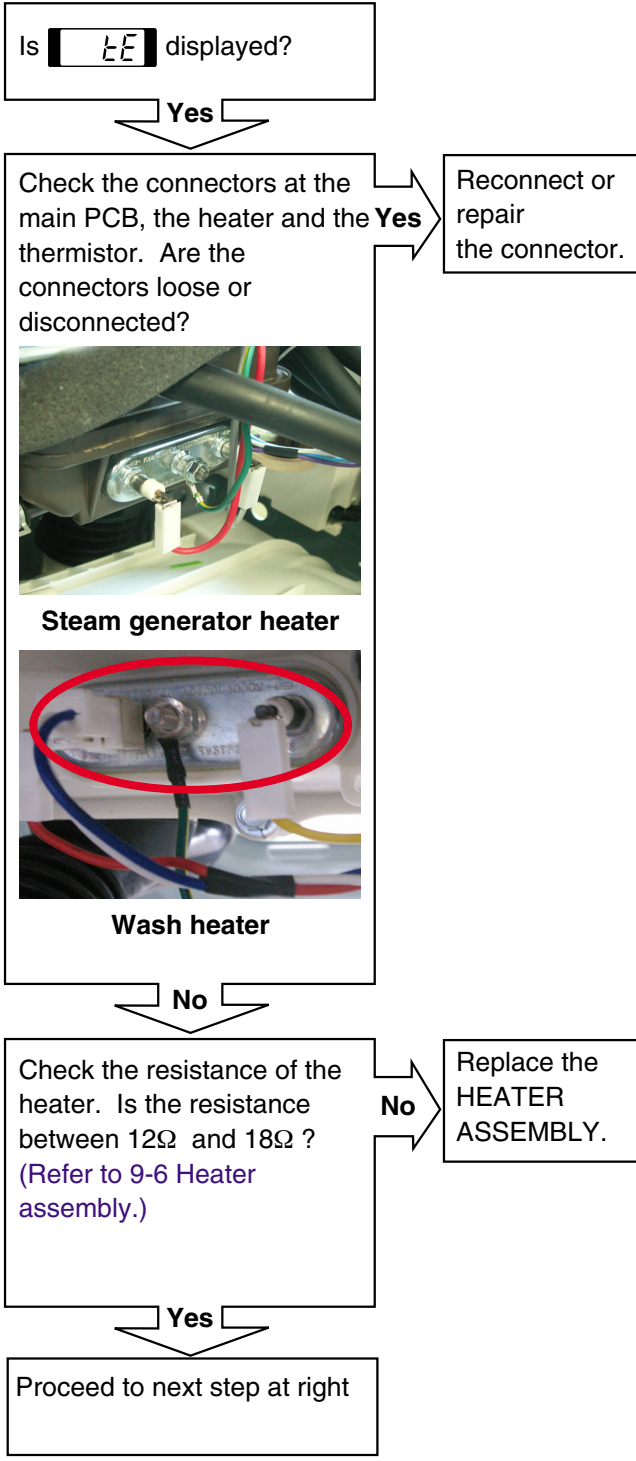


[Note]
 The temperature sensing circuits on the main PCB are very simple, consisting only of resistors and capacitors. Problems with wiring or connections in the thermistor circuit are the most likely cause for this error. Be sure to check ALL connections and wiring thoroughly. The main PCB should only be replaced as a last resort, as it is unlikely to be the cause.

LOCKED MOTOR ERROR


Is **LE** displayed?

Yes

Check the connectors at the main PCB and the main motor. Are the connectors loose or disconnected?
Main PCB connectors RD3 and NA4
Motor connectors to stator and hall sensor

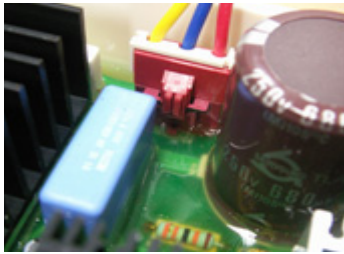

Motor Drive

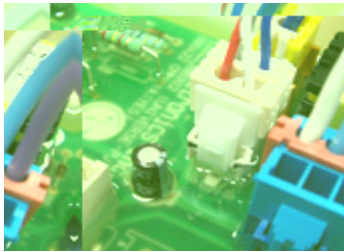

Hall sensor

- part of wire



Motor Drive Hall Sensor

Yes

Reconnect the connector. (connector / wire / motor)

- part of motor



Motor

Yes

Check the resistance of the stator winding from the main PCB connector RD3. Is the resistance between each pair or wires between 5 and 15 ? (Measure pins 1-2, 1-3 and 2-3.)

No

Replace the STATOR.



Yes

Is hall sensor out of order? (Refer to 9-3 Stator assembly/Hall sensor.)

Yes

Replace the Hall sensor.


No

Check the IPM in the controller.

No

Replace the MAIN PWB ASSEMBLY.

Is rotor magnet cracked?

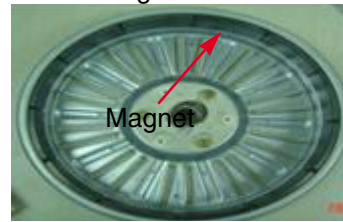

Magnet

Yes

Replace the ROTOR.

DOOR OPEN ERROR

Is  displayed?

Yes

Check the connectors at the main PCB and the door switch. Are the connectors loose or disconnected?



Yes

Reconnect or repair the connector

No

Is the door closing properly?
Is the gasket damaged and interfering with the door or latch?
Are there foreign objects caught in the door?
Is the hinge damaged?



No

Replace Door Assembly



Yes

Proceed to next step at right

Is the spring in the door latch hook on the door strong and tight?

No

Replace gasket or hinge.
Remove foreign objects.

Yes

Can you hear the door latch attempting to lock the door at the beginning of the cycle or diagnostic mode?

No

Replace the PCB ASSEMBLY.


Yes

If tested off the stator using the diagram above ohm check the resistors from pin 5 to pin 1 & pin 2. Does either test show an open (infinity) the hall sensor? (You should measure approximately 10,000 ohms from pin 5 to pin 1 and 10,000 ohms from pin 5 to pin 2)

No

Replace the DOOR SWITCH ASSEMBLY.


UNBALANCE ERROR

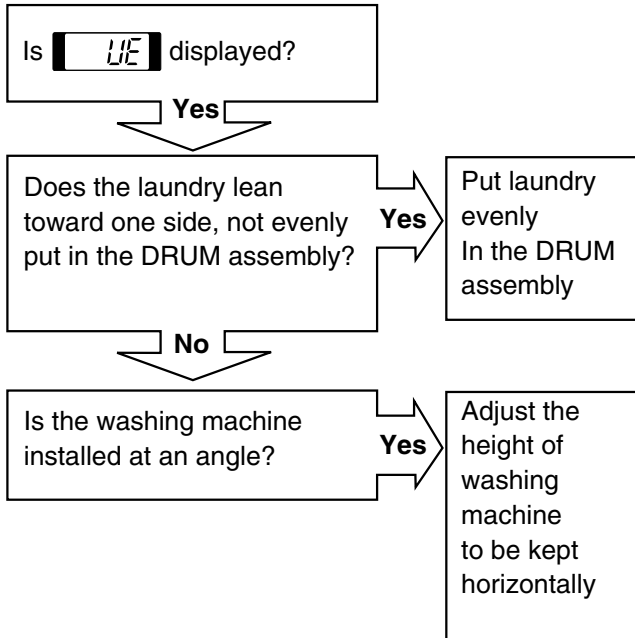

[Note] Environmental check list

- 1) Removal of transportation-based fixed bolt.
- 2) Confirmation on the material to see if it is capable of handling two different types of blanket materials.

OVER FLOW ERROR

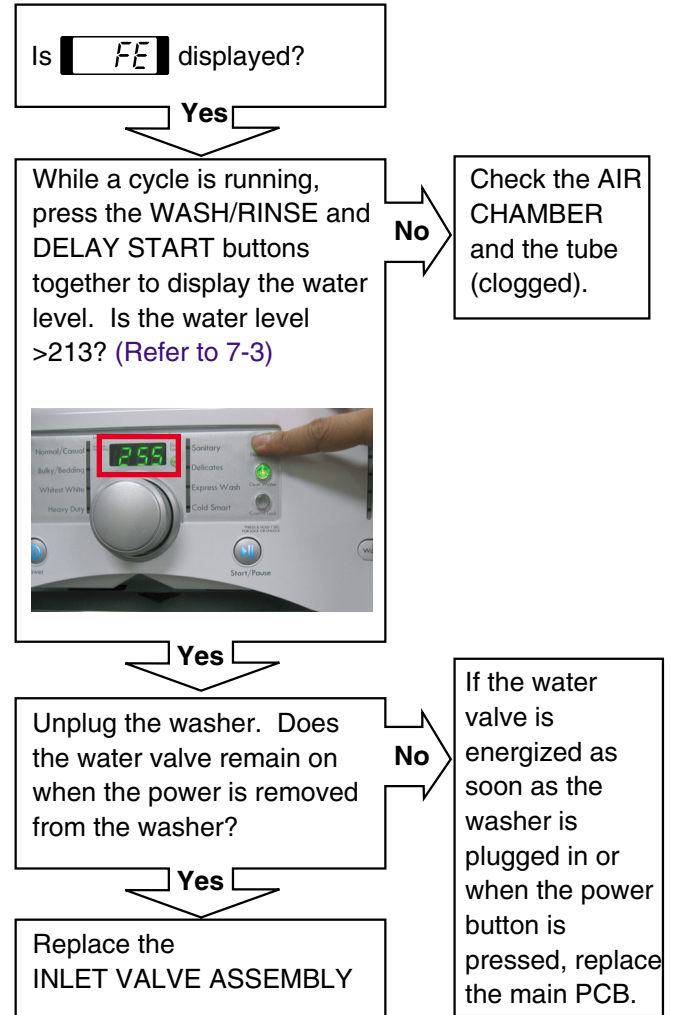

PRESSURE SENSOR ERROR

Is **PE** displayed?

Yes

Check the connectors at the main PCB and the pressure switch. Are the connectors loose or disconnected?



Yes

Reconnect or repair the connector

No

Measure the resistance between pins 1 and 3 of the pressure switch. Is the resistance between 21Ω and 23Ω ?



No

Replace the pressure switch

Yes

Is the AIR CHAMBER and the tube clogged?

Yes

Fix the air chamber and remove the foreign material.

No



Replace the MAIN PWB assembly.

8-5. TROUBLE SHOOTING ELSE

⚠ CAUTION



1. Be careful of electric shock if disconnecting parts while troubleshooting.
2. First of all, check the connection of each electrical terminal with the wiring diagram.
3. If you replace the MAIN PWB ASSEMBLY, reinsert the connectors correctly.

NO POWER

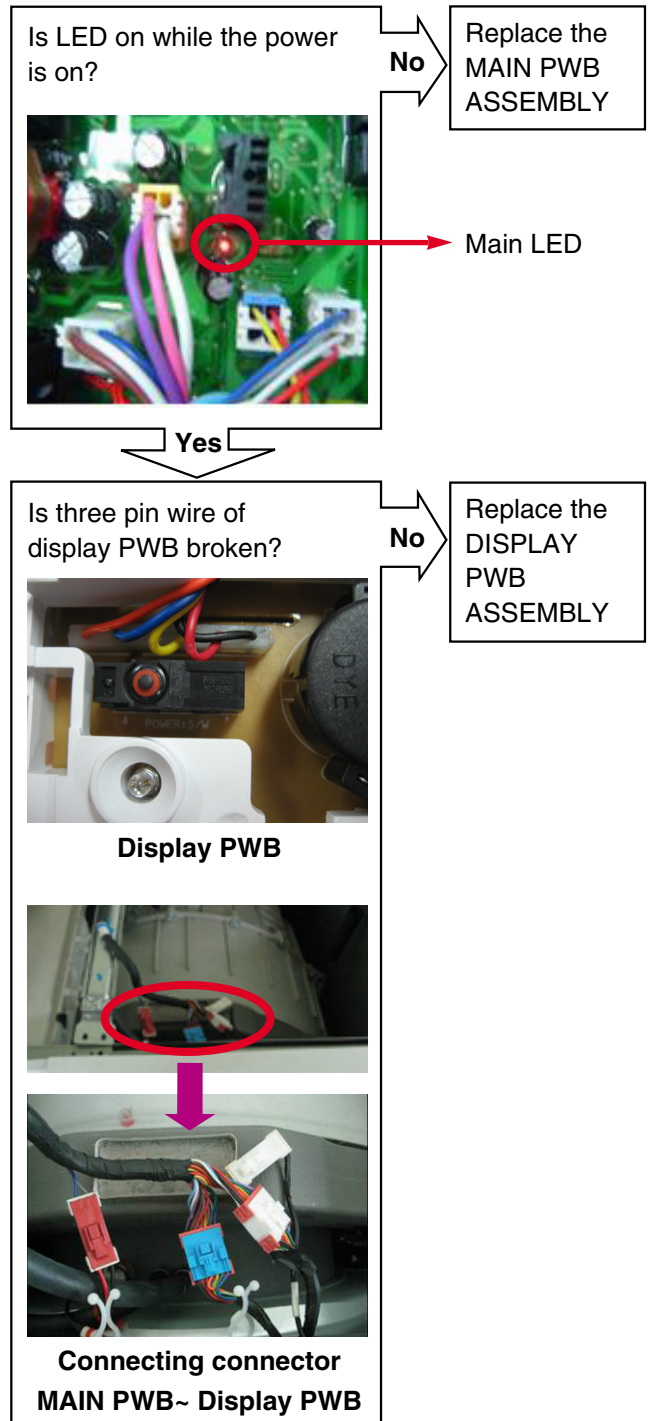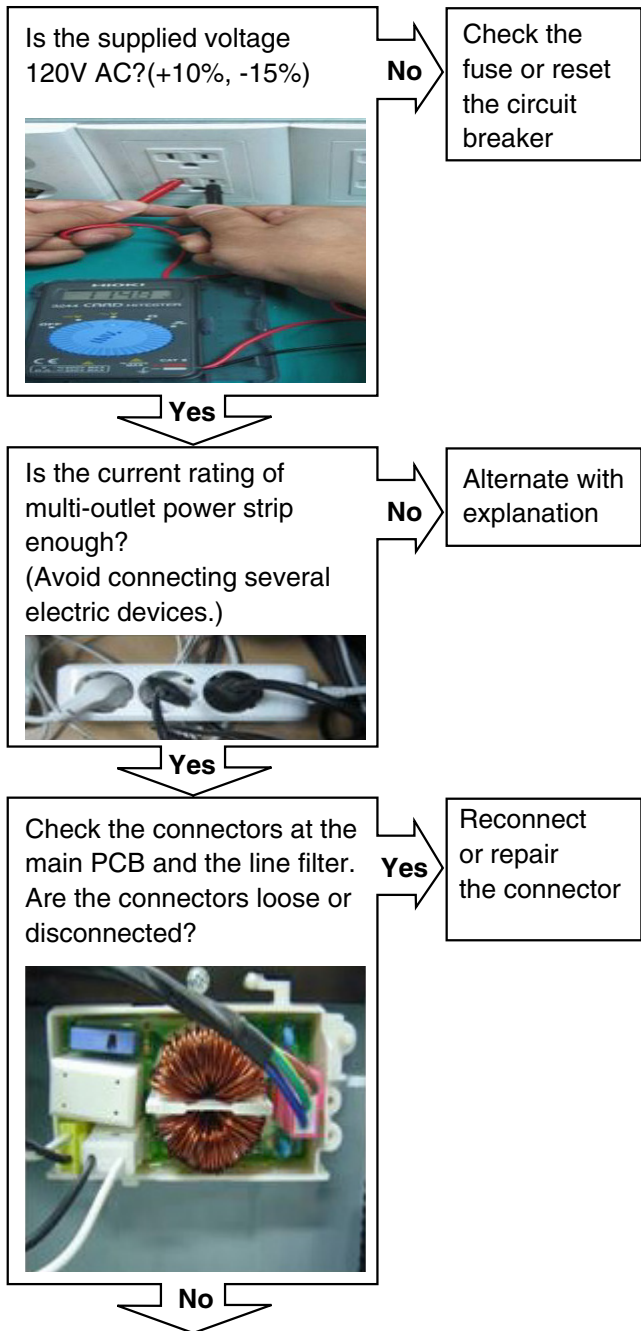

BUTTON DOESN'T WORK

Check the connectors at the main PCB and the line filter. Are the connectors loose or disconnected?

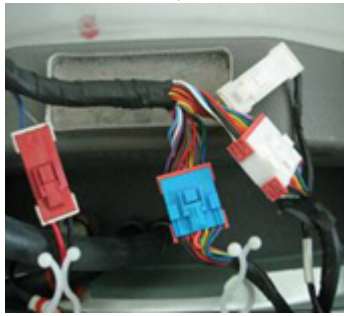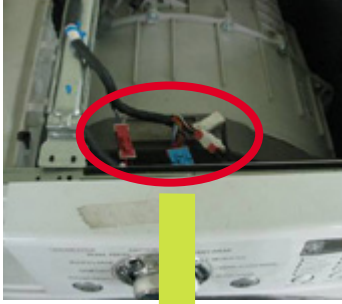


Yes

Reconnect or Repair the connector

No

Check the connectors between the main PCB and the display PCB. Are the connectors loose or disconnected?

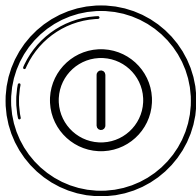

POWER

Yes


Replace the main PCB.

No

Replace the main PCB.

VIBRATION & NOISE IN SPIN

Have all the transit bolts and base packing been removed?

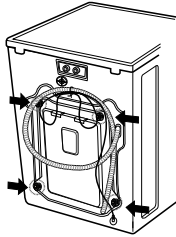

Base Packing

No

Remove the transit bolts and Base packing.

Is the washer installed on a solidly constructed floor?


Yes

No


Move the washer or reinforce the floor.

Check if the washer is perfectly level as follows:

Check the leveling of the washer with a level and check that the washer is stable.

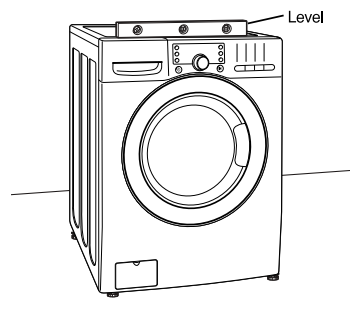

Put an unbalance part (rubber) inside of drum and start QC test mode and run in high spin. (Refer to section 7-2.) When the machine is spinning in high speed, verify that it is stable.

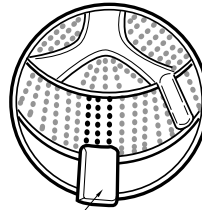


Unbalance Part

If you do not have the unbalance part, put 4.5 to 6.5 lbs (2 to 3 kg) of clothing. Once loaded, press power, Rinse+Spin and the start/pause button in sequence. When the machine is spinning in high speed, verify that it is stable.

Yes




If it is not stable, adjust feet accordingly. After the washer is level, tighten the lock nuts up against of the base of the washer. All lock nuts must be tightened.

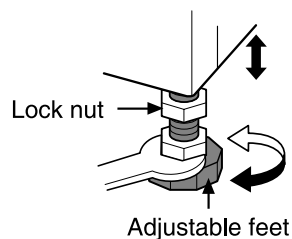


Yes

Check the vibration Sensor.

DETERGENT DOES NOT FLOW IN

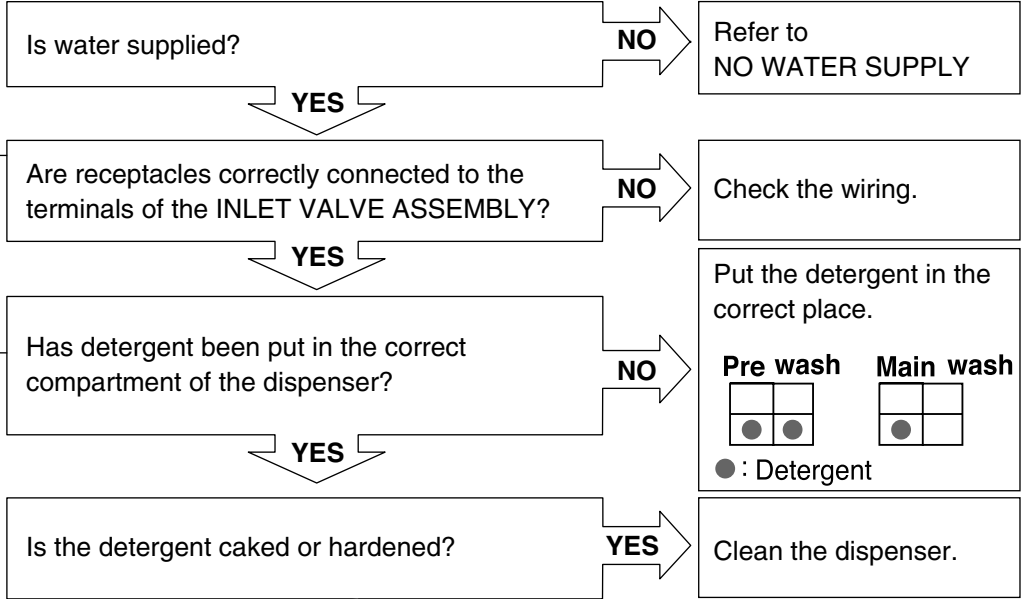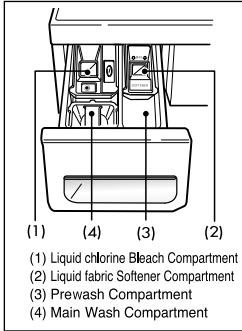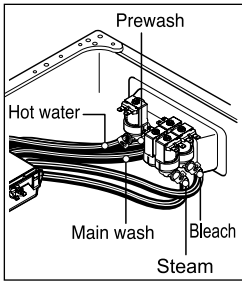

LIQUID DETERGENT/SOFTENER/BLEACH DOES NOT FLOW IN

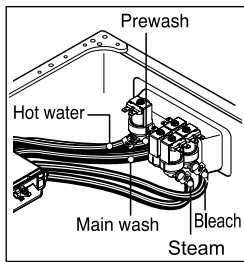

Is water supplied?

NO

Refer to
NO WATER SUPPLY

YES

Are the plugs correctly connected to the terminals of the INLET VALVE ASSEMBLY?

NO

Check the wiring on the dispenser.



YES

Is liquid detergent/softener/bleach put in the correct compartment of the drawer?

NO

Put it in the correct compartment.

YES

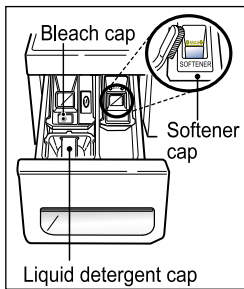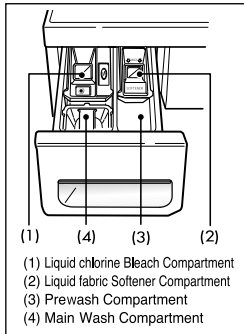


Is the liquid detergent/softener/bleach cap clogged?

YES

Clean the cap and Container.

ABNORMAL SOUND

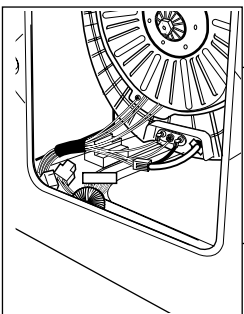

Is the motor bolt loosened?

YES

Secure the bolt.

NO

Is there friction noise coming from the motor?

YES

Check hall sensor.
Replace If defective.
Then check stator.
Replace if necessary.
Check rotor for broken magnets.
Replace rotor if necessary.

9. COMPONENT TESTING INFORMATION


⚠ WARNING When Resistance (Ohm) checking the Component, be sure to turn the power off, and do voltage discharge sufficiently.

9-1. FILTER ASSEMBLY (LINE FILTER)

| <p>Circuit diagram</p> | <p style="text-align: center;">Circuit in the MAIN PWB / Circuit diagram</p> | | | | | | |
|--------------------------------------|--|-------------|--------|------------------|-----|------------------|-----|
| <p>Test points and Result</p> | <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>Test Points</th> <th>Result</th> </tr> </thead> <tbody> <tr> <td>WH (1) to RD (3)</td> <td>0 Ω</td> </tr> <tr> <td>WH (3) to RD (1)</td> <td>0 Ω</td> </tr> </tbody> </table> | Test Points | Result | WH (1) to RD (3) | 0 Ω | WH (3) to RD (1) | 0 Ω |
| Test Points | Result | | | | | | |
| WH (1) to RD (3) | 0 Ω | | | | | | |
| WH (3) to RD (1) | 0 Ω | | | | | | |



9-2. DOOR LOCK SWITCH ASSEMBLY

| | |
|-------------------------------|--|
| <p>Circuit diagram</p> | <p style="text-align: center;">Circuit in the MAIN PWB / Circuit diagram</p> |
| <p>Function</p> | <p>The Door Lock Switch Assembly consists of a Heating PTC, a Bimetal, a Protection PTC, and a Solenoid. It locks the door during a wash cycle.</p> <ol style="list-style-type: none"> 1. Operation for door closing <ul style="list-style-type: none"> - After the system turns on, PTC heating starts up through terminal 2~4's authorizing the power on. - After PTC heating starts up and before solenoid operation is driven, force the system to the off position through CAM. ⇒ Door close - Authorizing one impulse through terminal 3~4 (PTC & solenoid) will make the door locked. - Door lock is detected when switches in terminal 4~5 are set closed. ⇒ CAM rotation will forcibly clear off the connection. <li style="padding-left: 20px;">The maximum, allowable number of impulse authorizations is 2 ⇒ Upon the third authorization of the impulse, the position of CAM goes back to the door-open position. - Authorizing the impulse occurs in 4.5 seconds upon input for max performance and two authorization processes are allowed at most. ⇒ Normal operation period of PTC heating: 1.5 - 5 seconds (Defects from the development process) 2. Operation for door opening <ul style="list-style-type: none"> - With a temporary stop, door automatically opens by CAM rotations after authorizing the impulse from the terminal 3 ~ 4 and the power turns off - maximum of 3 times of the authorizing period - Upon the fourth authorization of the impulse, the position of CAM goes back to the door-close position. |
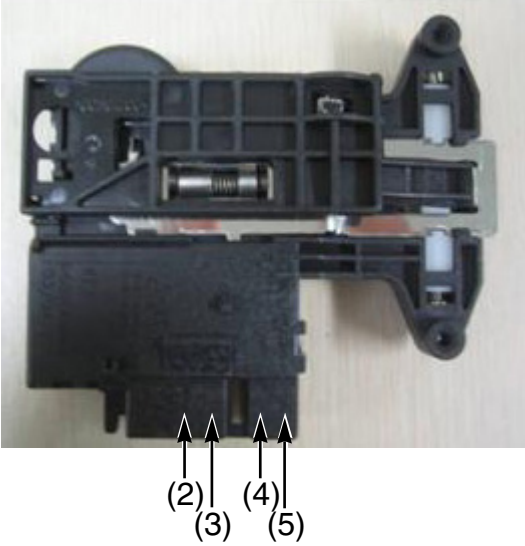
| <p>Test points</p> |  | | | | | | | | | | | | | | | |
|---------------------------|---|----------------|--------|---------|------------|-------------------|----------------|------------|----------------|----------------|------------|----------|--|------------|---------|---------------|
| <p>Result</p> | <table border="1"> <thead> <tr> <th>Test Points</th> <th>Result</th> <th>Remarks</th> </tr> </thead> <tbody> <tr> <td>(2) to (4)</td> <td>700-1500 Ω</td> <td>At 77°F (25°C)</td> </tr> <tr> <td>(3) to (4)</td> <td>60-90 Ω</td> <td>At 77°F (25°C)</td> </tr> <tr> <td>(4) to (5)</td> <td>Infinity</td> <td></td> </tr> <tr> <td>(2) to (4)</td> <td>120 Vac</td> <td>Voltage Input</td> </tr> </tbody> </table> | Test Points | Result | Remarks | (2) to (4) | 700-1500 Ω | At 77°F (25°C) | (3) to (4) | 60-90 Ω | At 77°F (25°C) | (4) to (5) | Infinity | | (2) to (4) | 120 Vac | Voltage Input |
| Test Points | Result | Remarks | | | | | | | | | | | | | | |
| (2) to (4) | 700-1500 Ω | At 77°F (25°C) | | | | | | | | | | | | | | |
| (3) to (4) | 60-90 Ω | At 77°F (25°C) | | | | | | | | | | | | | | |
| (4) to (5) | Infinity | | | | | | | | | | | | | | | |
| (2) to (4) | 120 Vac | Voltage Input | | | | | | | | | | | | | | |

9-3. STATOR ASSEMBLY


| <p>Circuit diagram</p> | <p style="text-align: center;">Circuit in the MAIN PWB / Circuit diagram</p> | | | | | | | | |
|--------------------------------------|--|-------------|--------|------------|--------|------------|--------|------------|--------|
| <p>Function</p> | <p>The DD motor can be driven from stopped to maximum speed in infinite steps in either direction. There are 36 poles on the stator; 12 permanent magnets spaced around the rotor. There are no brushes to wear out. Unlike a more traditional brushless motor, the rotor surrounds the stator rather than being attached to it.</p> | | | | | | | | |
| <p>Test points (Windings)</p> | | | | | | | | | |
| <p>Result (Windings)</p> | <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: center;">Test Points</th> <th style="text-align: center;">Result</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">(1) to (2)</td> <td style="text-align: center;">5-15 Ω</td> </tr> <tr> <td style="text-align: center;">(2) to (3)</td> <td style="text-align: center;">5-15 Ω</td> </tr> <tr> <td style="text-align: center;">(3) to (1)</td> <td style="text-align: center;">5-15 Ω</td> </tr> </tbody> </table> | Test Points | Result | (1) to (2) | 5-15 Ω | (2) to (3) | 5-15 Ω | (3) to (1) | 5-15 Ω |
| Test Points | Result | | | | | | | | |
| (1) to (2) | 5-15 Ω | | | | | | | | |
| (2) to (3) | 5-15 Ω | | | | | | | | |
| (3) to (1) | 5-15 Ω | | | | | | | | |
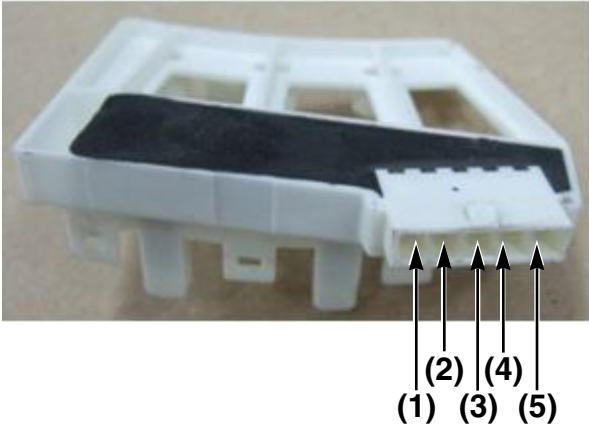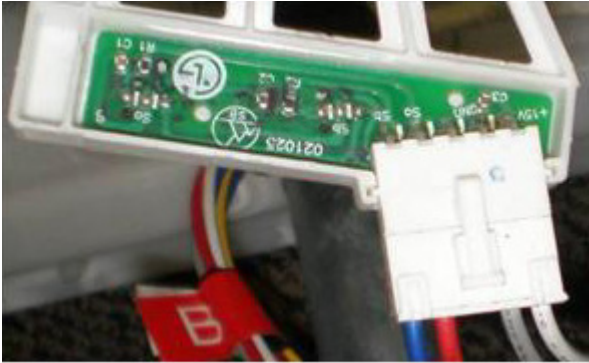
| | |
|--|--|
| | <p>The hall sensor determines the speed and direction of the motor. It also can read that the load is off balance when the drum speed fluctuates.</p> |
| <p>Test point and Result (Hall Sensor)</p> | <p>- Voltage Testing Hall Sensor at Stator</p> <div style="text-align: center;">  </div> <div style="text-align: center;">  </div> <p>If measuring voltage from the Main PCB Assembly to the Hall Sensor, use the following steps:</p> <ol style="list-style-type: none"> 1. Unplug power cord. 2. Remove rear washer panel. 3. Locate Hall sensor connector on the stator behind the rotor. 4. Place meter leads on terminals 5 to 4, white to gray. 5. Plug in power cord, close door, and press power button. DO NOT PRESS START! 6. You should measure 10 to 15 Vdc. If 10 to 15 Vdc is present, control board, white wire, and gray wire are OK! If not follow testing output voltages on control board in next section. |

7. To measure output signal voltage from the hall sensor, carefully move test leads to terminals 1 to 4, blue and gray. Slowly rotate motor rotor by hand. You should read a pulsing 10 Vdc. If 10 Vdc is measured from 1 to 4, move lead on blue wire to red wire, terminal 2. Repeat rotating motor rotor by hand. You should read a pulsing 10 Vdc from red to gray.
8. If pulsing 10 Vdc is measured from 1 to 4 and 2 to 4, hall sensor is OK! If either test netted only 9 to 10 Vdc without changing (no pulsing) the hall sensor is likely defective. Disconnect power by unplugging washer and ohm check hall sensor to verify failure of the hall sensor.

**Test Point
and
Result
(Hall
Sensor)**




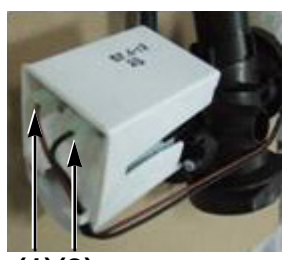
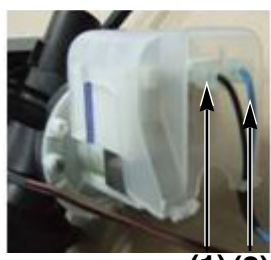
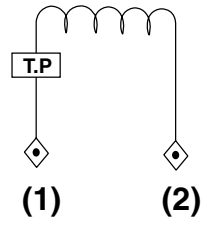
- Voltage Testing Hall Sensor from the Main PCB Assembly

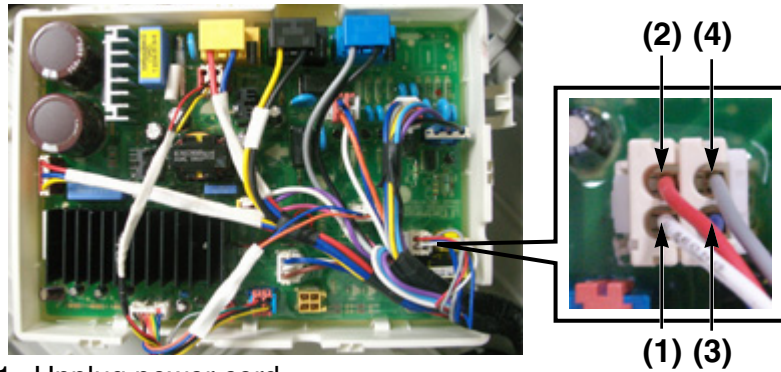




1. Unplug power cord.
2. Remove rear panel.
3. Remove Washer Top.
4. Remove Main PCB Assembly cover as shown in Figure below.
5. Locate the white Hall Sensor 4 wire connector using wiring diagram wire colors as your guide.
6. Plug in power cord, close door, and press power button. **DO NOT PRESS START!**
7. Place meter leads on White & Gray wires. You should read 10 to 15 Vdc output from the Main PCB Assembly to the Hall sensor. If no 10 to 15 Vdc is measured the control board is defective.
8. Place meters leads on Blue to Gray. Turn motor rotor slowly by hand. You should measure a pulsing 10 Vdc. Place meter leads on Red to Gray. Turn motor rotor slowly by hand. You should measure a pulsing 10 Vdc. If both tests measure a pulsing 10 Vdc, hall sensor and harness OK. If either or both tests measures 9 to 10 volts, but does not pulse or change, Hall sensor has failed and must be replaced. IF zero (0) voltage is measured on either test, check red & blue wires for continuity. Repair or replace harness as needed.

| Test Points | Result | Remarks |
|-------------|-----------|----------------|
| (1) to (2) | 8-12 kΩ | |
| (1) to (3) | 8-12 kΩ | |
| (1) to (4) | 10-15 Vdc | Voltage Input |
| (2) to (4) | 10 Vdc | Pulsing Signal |
| (3) to (4) | 10 Vdc | Pulsing Signal |





9-4. PUMP MOTOR ASSEMBLY
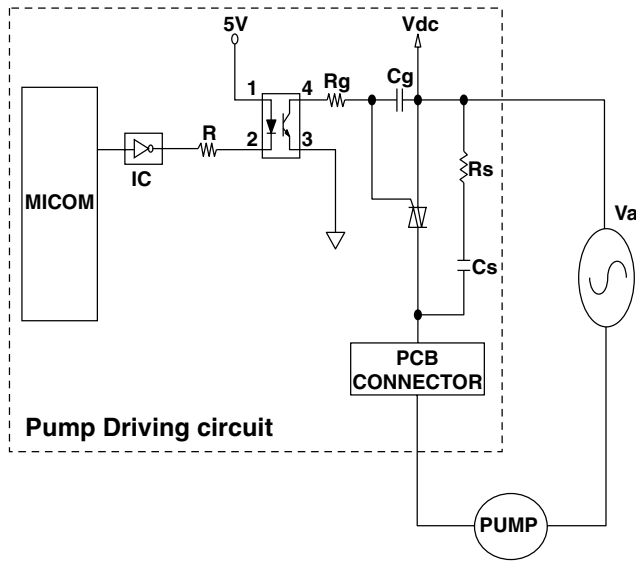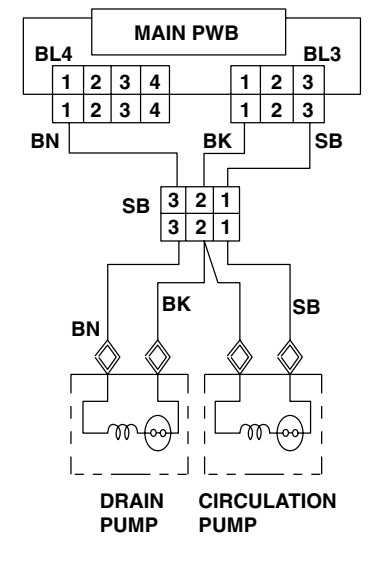
| | | | | | | | | | | |
|-------------------------------|---|--|--------|------------|---------|--|-------------|--------|------------|---------|
| <p>Circuit diagram</p> | <div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 5px; background-color: #e0e0e0; text-align: center;"> Circuit in the MAIN PWB </div> <div style="border: 1px solid black; padding: 5px; background-color: #e0e0e0; text-align: center;"> Circuit diagram </div> </div>   <p style="text-align: center;">* Each circuits of loads in wiring diagram are all same.</p> | | | | | | | | | |
| <p>Object</p> |  <p style="text-align: center;"> For Drain For Circulation </p> | | | | | | | | | |
| <p>Function</p> | <p>Two pump motors are used to drain the tub and to circulate the water / detergent solution.</p> | | | | | | | | | |
| <p>Test points</p> | <p style="text-align: center;">Drain Pump</p>  <p style="text-align: center;">(1)(2)</p> | <p style="text-align: center;">Circulation Pump</p>  <p style="text-align: center;">(1)(2)</p>  <p style="text-align: center;">(1) (2)</p> | | | | | | | | |
| <p>Result</p> | <p style="text-align: center;">Drain Pump</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 5px;">Test Points</td> <td style="padding: 5px;">Result</td> </tr> <tr> <td style="padding: 5px;">(1) to (2)</td> <td style="padding: 5px;">10-20 Ω</td> </tr> </table> | Test Points | Result | (1) to (2) | 10-20 Ω | <p style="text-align: center;">Circulation Pump</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 5px;">Test Points</td> <td style="padding: 5px;">Result</td> </tr> <tr> <td style="padding: 5px;">(1) to (2)</td> <td style="padding: 5px;">18-30 Ω</td> </tr> </table> | Test Points | Result | (1) to (2) | 18-30 Ω |
| Test Points | Result | | | | | | | | | |
| (1) to (2) | 10-20 Ω | | | | | | | | | |
| Test Points | Result | | | | | | | | | |
| (1) to (2) | 18-30 Ω | | | | | | | | | |

9-5. INLET VALVE ASSEMBLY
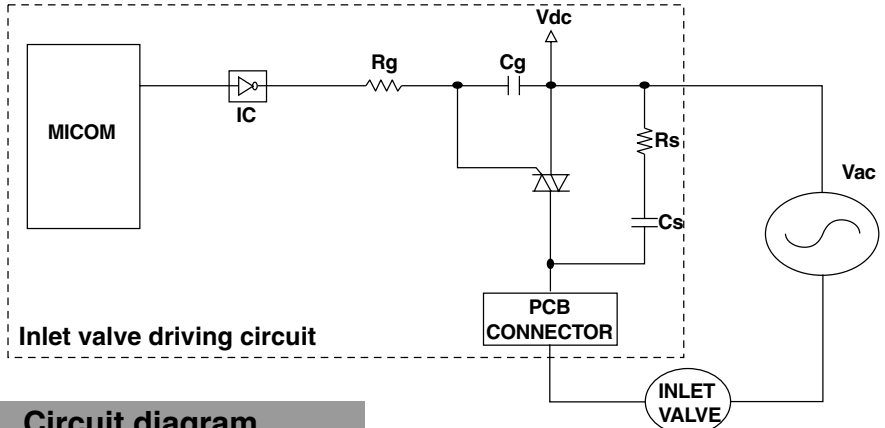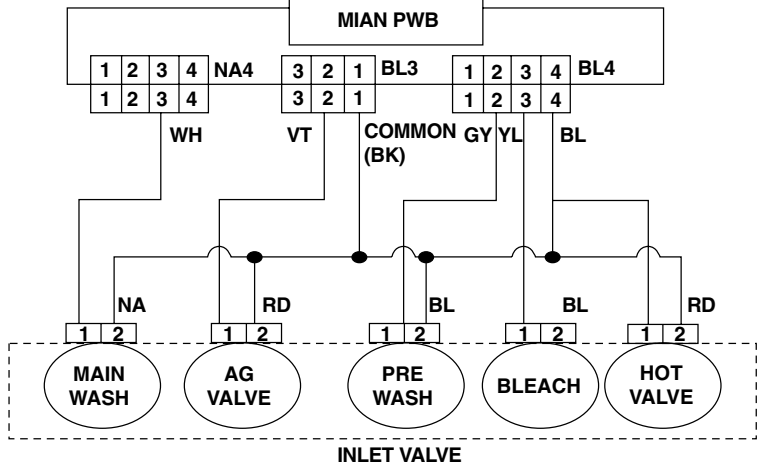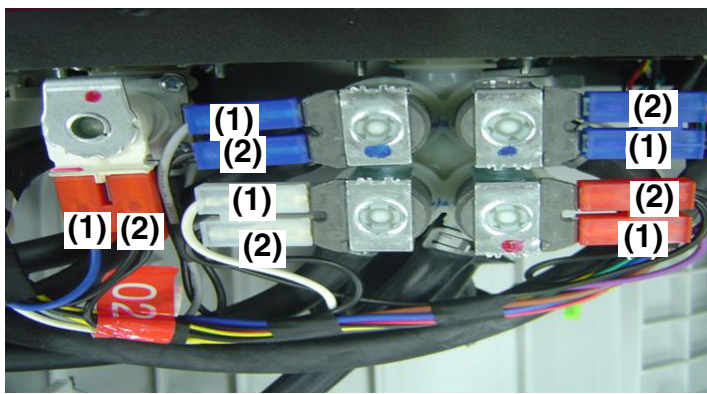
| | | | | | |
|--------------------------------------|---|-------------|---------|--------|------------|
| <p>Circuit diagram</p> | <div style="text-align: center; background-color: #cccccc; padding: 5px; margin-bottom: 10px;">Circuit in the MAIN PWB</div>  <div style="text-align: center; background-color: #cccccc; padding: 5px; margin-top: 10px;">Circuit diagram</div>  <p style="text-align: center;">* Each circuits of loads in wiring diagram are all same.</p> | | | | |
| <p>Function</p> | <p>Depending on the cycle and water temperature, the controller will energize the hot or cold water valve solenoids to meet the selected water temperature.</p> | | | | |
| <p>Test points and Result</p> | <p>After pull out the connector of defective valve, check the resistance.</p>  <table border="1" style="float: right; margin-top: 10px;"> <tr> <td>Test points</td> <td>(1)-(2)</td> </tr> <tr> <td>Result</td> <td>0.8-1.2 kΩ</td> </tr> </table> | Test points | (1)-(2) | Result | 0.8-1.2 kΩ |
| Test points | (1)-(2) | | | | |
| Result | 0.8-1.2 kΩ | | | | |


9-6. HEATER ASSEMBLY
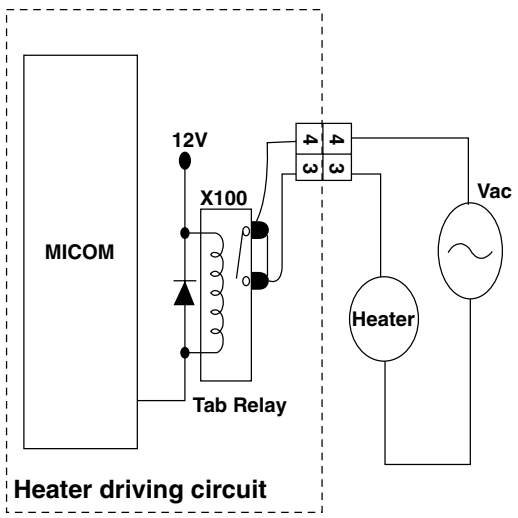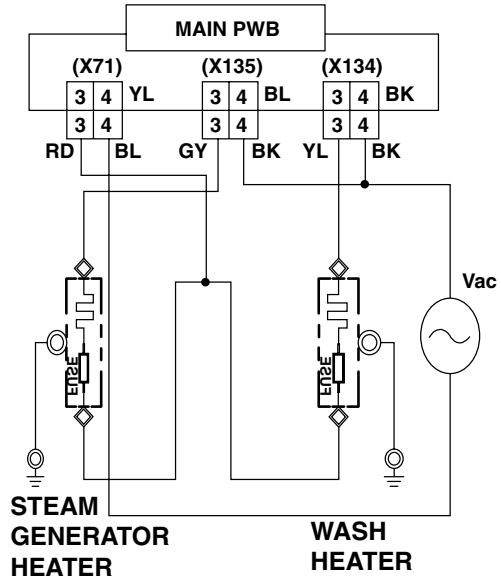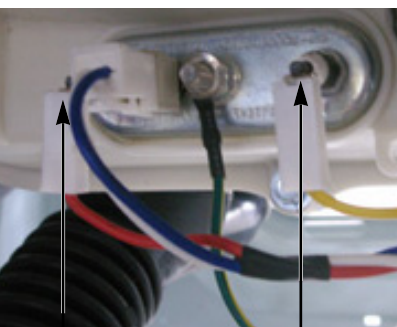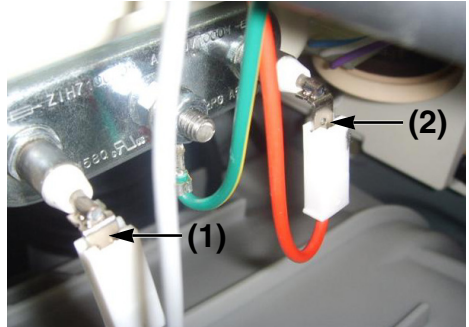
| <p>Circuit diagram</p> | <div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 5px; width: 45%;"> <p style="text-align: center;">Circuit in the MAIN PWB</p>  <p style="text-align: center;">Heater driving circuit</p> </div> <div style="border: 1px solid black; padding: 5px; width: 45%;"> <p style="text-align: center;">Circuit diagram</p>  <p style="text-align: center;">* Each circuits of loads in wiring diagram are all same.</p> </div> </div> | | | | | | | | | |
|-------------------------------|---|---|--------|------------|---------|--|-------------|--------|------------|---------|
| <p>Function</p> | <p>1. The Wash Heater is designed to raise the wash water to the desired temperature selection during certain wash cycles.</p> | | | | | | | | | |
| <p>Test points</p> |  <p style="text-align: center;">(1) (2)</p> <p style="text-align: center;">Wash Heater</p> |  <p style="text-align: center;">(1) (2)</p> <p style="text-align: center;">Steam Generator Heater</p> | | | | | | | | |
| <p>Result</p> | <p style="text-align: center;">Wash Heater</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Test Points</th> <th style="width: 50%;">Result</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">(1) to (2)</td> <td style="text-align: center;">12-18 Ω</td> </tr> </tbody> </table> | Test Points | Result | (1) to (2) | 12-18 Ω | <p style="text-align: center;">Steam Generator Heater</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">Test Points</th> <th style="width: 50%;">Result</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">(1) to (2)</td> <td style="text-align: center;">12-18 Ω</td> </tr> </tbody> </table> | Test Points | Result | (1) to (2) | 12-18 Ω |
| Test Points | Result | | | | | | | | | |
| (1) to (2) | 12-18 Ω | | | | | | | | | |
| Test Points | Result | | | | | | | | | |
| (1) to (2) | 12-18 Ω | | | | | | | | | |

9-7. THERMISTOR ASSEMBLY

| | |
|-------------------------------|--|
| <p>Circuit diagram</p> | <p style="text-align: center;">Circuit in the MAIN PWB / Circuit diagram</p> <p>The diagram illustrates the electrical circuit for the thermistors. On the left, two thermistors are shown: a WASH THERMISTOR and a STEAM GENERATOR THERMISTOR. Each has two terminals labeled 1 and 2. The WASH THERMISTOR terminals are connected to pins 1 and 2 of the NA3 connector. The STEAM GENERATOR THERMISTOR terminals are connected to pins 3 and 4 of the NA3 connector. The NA3 connector has six pins labeled 1 through 6, with corresponding labels BL, WH, and BN. The circuit includes a 5V power source connected to pin 1. A network of resistors (R) and capacitors (C) is connected between pins 2, 3, 4, and 5, leading to a MICOM component. Ground connections are shown at pins 5 and 6.</p> |
| <p>Function</p> | <p>The thermistor (temperature sensor) is used to monitor water temperature in the tub.</p> |
| <p>Test points</p> | <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Wash Thermistor</p> </div> <div style="text-align: center;"> <p>Steam generator Thermistor</p> </div> </div> |


| | | | |
|---------------|------------------------|--|------------------|
| Result | Wash Thermistor | | |
| | Test Points | Result (tolerance $\pm 5\%$) | Remarks |
| | (1) to (2) | 39.5 k Ω | At 86°F (30°C) |
| | | 26.1 k Ω | At 104°F (40°C) |
| | | 12.1 k Ω | At 140°F (60°C) |
| | | 8.5 k Ω | At 158°F (70°C) |
| | | 3.8 k Ω | At 203°F (95°C) |
| | | 2.8 k Ω | At 221°F (105°C) |
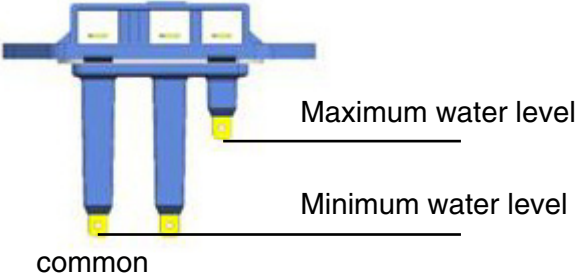
| | |
|------------------------|---|
| <p>Function</p> | <p>2) Operation mechanism of Steam generator After supplying some amount of water through inlet valve and water level sensor, Heater operates and steam generates. Generated steam is sprayed by nozzle. If the water in the steam generator is reduced by spraying steam, water level sensor decide to supply water or not.</p> <p>3) Operation method of Steam generator The Steam Generator Assembly is supplied as an assembly only; parts like the water level sensor, thermistor, or heater cannot be replaced individually. Diagnosis is limited to determining malfunction and replacing as an assembly. The steam generator does not have to be removed from the machine to be drained. Be sure to let the water cool to avoid a burn. Have a hose available to slip onto the connector or a large towel to catch the water so it doesn't run down into the machine cabinet. If you remove the steam generator before draining it, be sure to avoid tipping it and spilling the water.</p> |
| | <p>2. Water level sensor</p> <p>1) Structure of water level sensor</p>  <p>The diagram shows a blue water level sensor assembly with three vertical tubes. The top tube is labeled 'Maximum water level' and the bottom tube is labeled 'Minimum water level'. A horizontal line at the bottom of the tubes is labeled 'common'.</p> <p>2) Function of Water level sensor It is the part of sensing water level. It decides to supply water or not when the steam generate. (to protect heater)</p> |


10. DISASSEMBLY INSTRUCTIONS

* Be sure to unplug the machine before disassembling and repairing the parts.


CONTROL PANEL ASSEMBLY

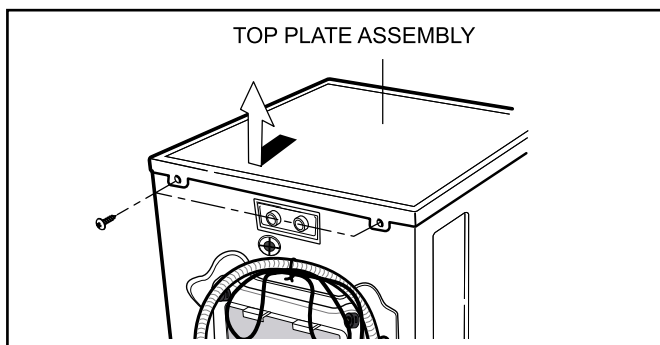


- ① Unscrew 2 screws on the back of the top plate.
- ② Pull the top plate backward and upward as shown.

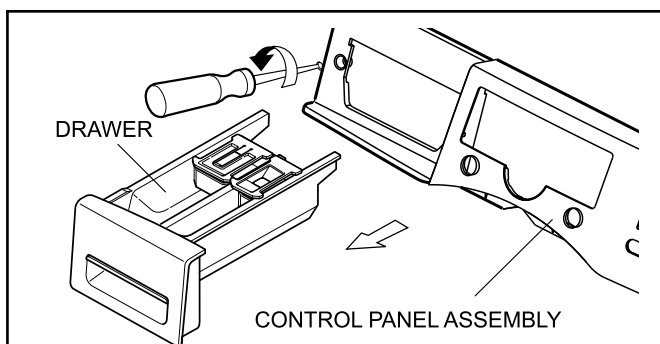

- ③ Disconnect the Display PWB assembly connector from trans cable.
- ④ Pull out the drawer and unscrew 2 screws.

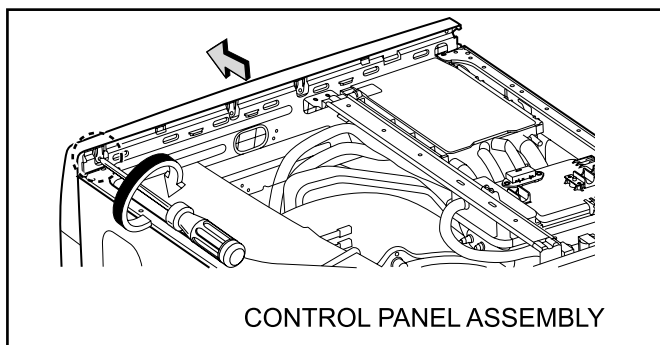


- ⑤ Remove one screw.
- ⑥ Lift the side the control panel assembly and pull it out

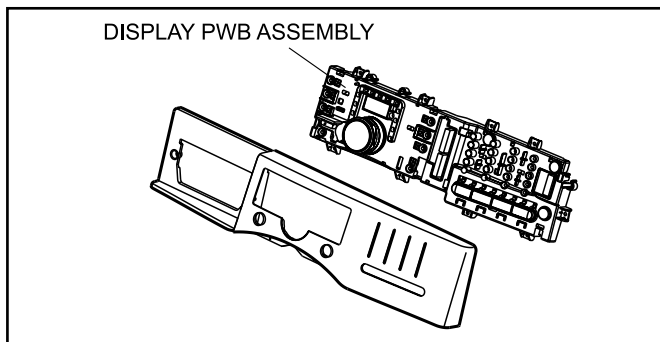


- ⑦ Unscrew the 9 screws(M4), 1 screw(M3) from the control panel assembly.
- ⑧ Disassemble the Display PWB Assembly.


MAIN PWB ASSEMBLY

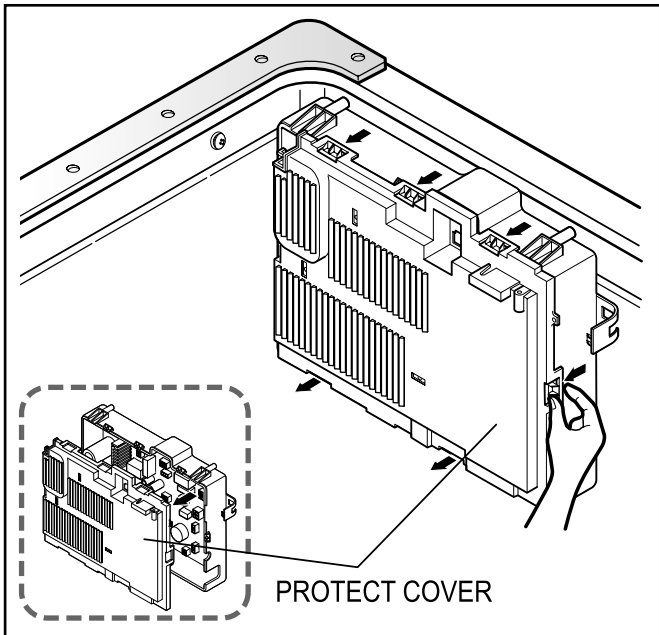

- ① Disconnect the POWER connector and SENSOR SWITCH ASSEMBLY.
- ② Remove the Protective cover.

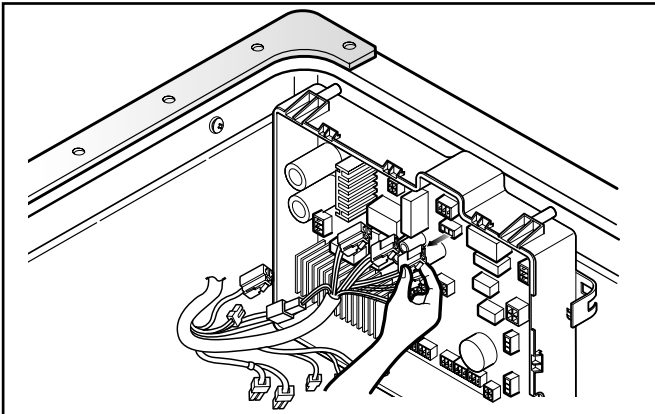


- ③ Disconnect the connectors.

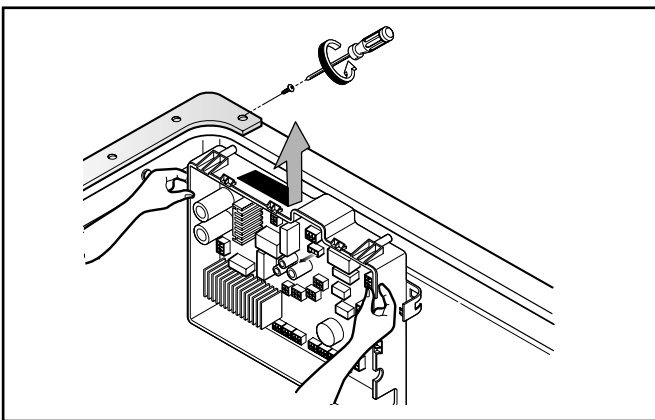


- ④ Unscrew 1 screw on the back.
- ⑤ Remove the Main PWB.


DISPENSER ASSEMBLY

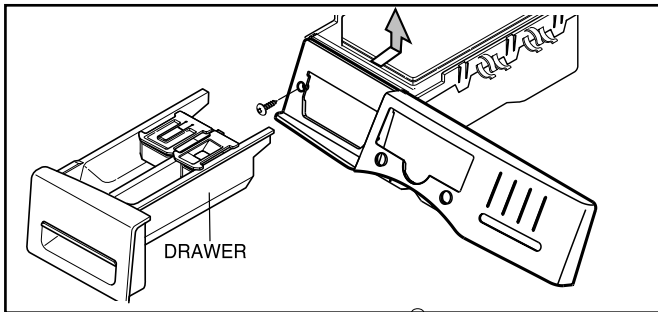

- ① Disassemble the top plate assembly.
- ② Pull out the drawer.
- ③ Push out the DISPENSER ASSEMBLY after unscrewing 2 screws.

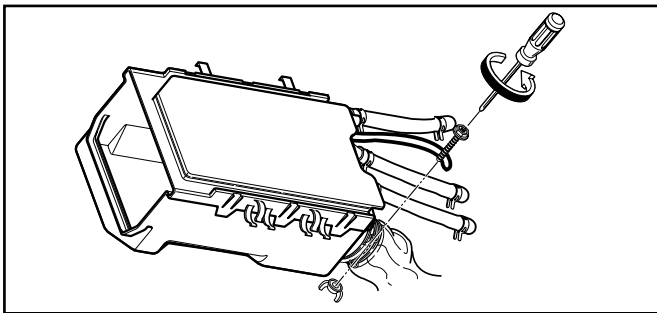

- ④ Unscrew the Clamp nut at the lower part of the dispenser.

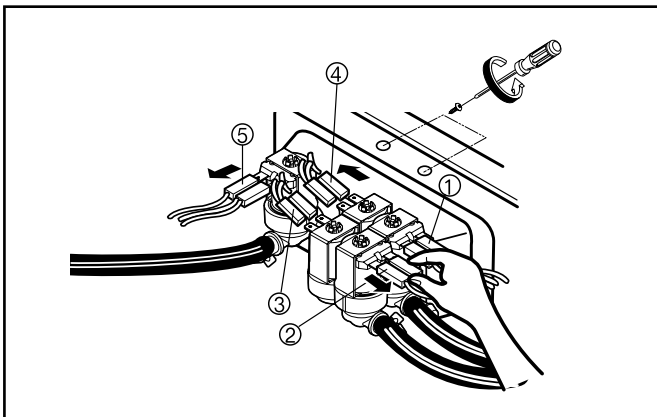


- ⑤ Disassemble the 4 connectors from the valves.

※ Wire Color

- ① Blue Housing (YL-BK)
- ② White Housing (BK-WH)
- ③ Blue Housing (BK-GY)
- ④ Red Housing (BK-Blue)


- ⑥ Unscrew 2 screws from the back of the cabinet.

NOISE FILTER

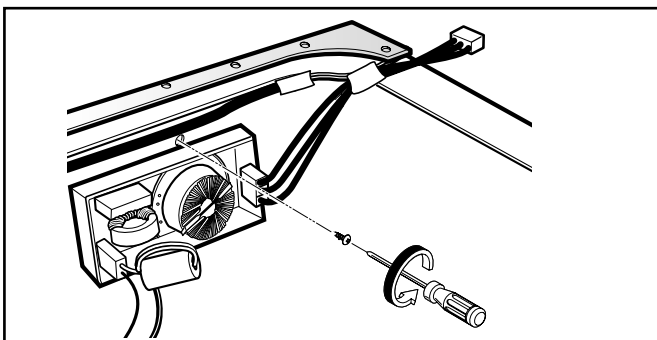


- ① Disassemble two (or three) connectors from the NOISE FILTER.
- ② Unscrew a screw from the TOP BRACKET.


CABINET COVER

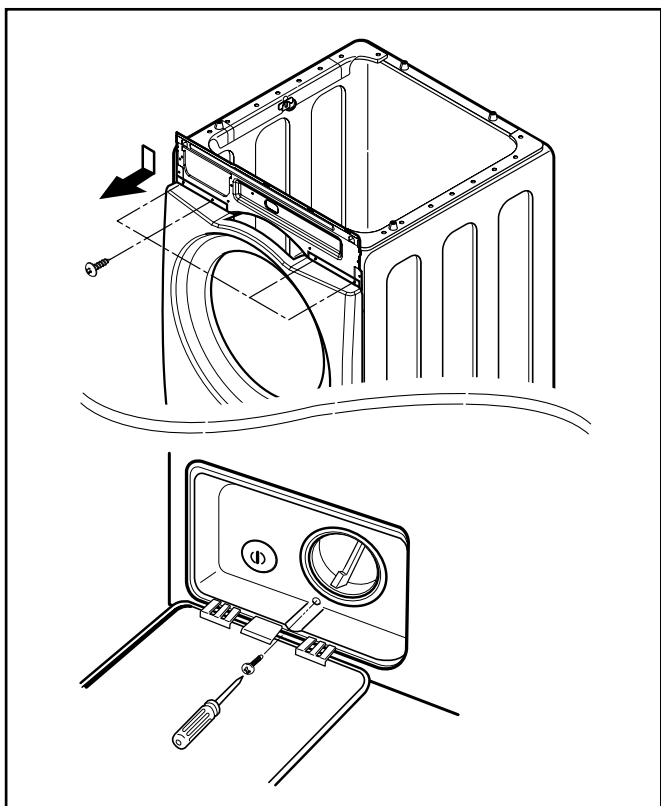


- ① Unscrew the 5 screws from upper of the cabinet cover.
- ② Unscrew the screw from filter cover.

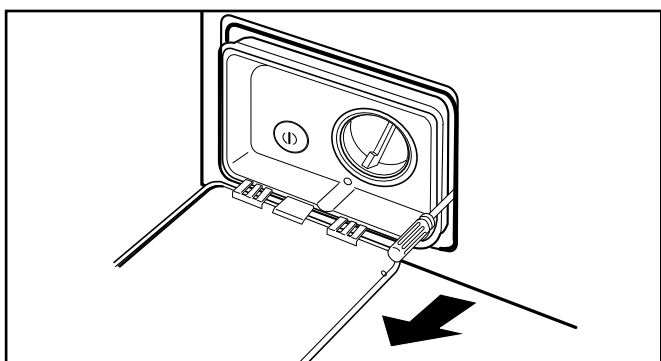

- ③ Put a flat (-) screwdriver or putty knife into the hinge slots at the bottom of the cover and pry it out.

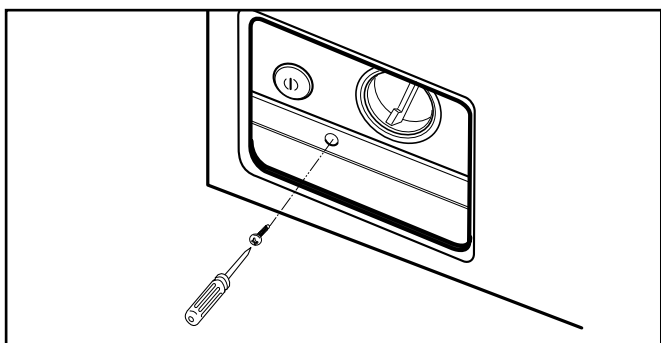


- ④ Unscrew the screw from the lower side of the cabinet cover.

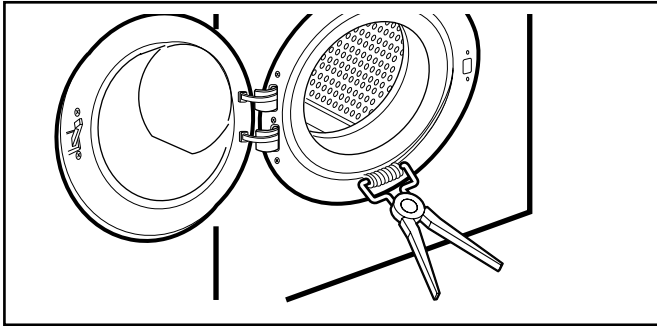

⑤ Open the door.


⑥ Disassemble the clamp assembly.

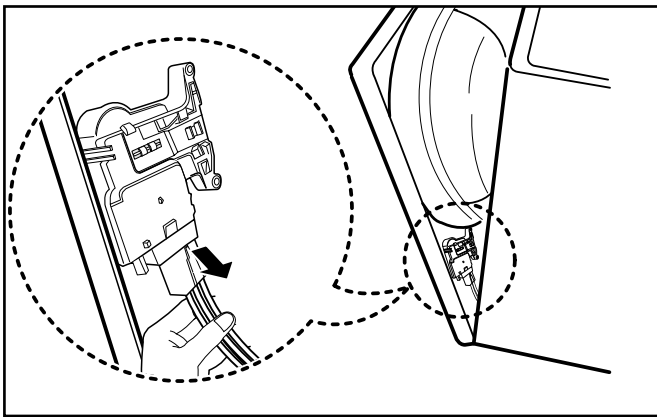


⑦ Tilt the cabinet cover.

⑧ Disconnect the door switch connector.

※ **NOTE:** When assembling the CABINET COVER, connect the door switch connector.

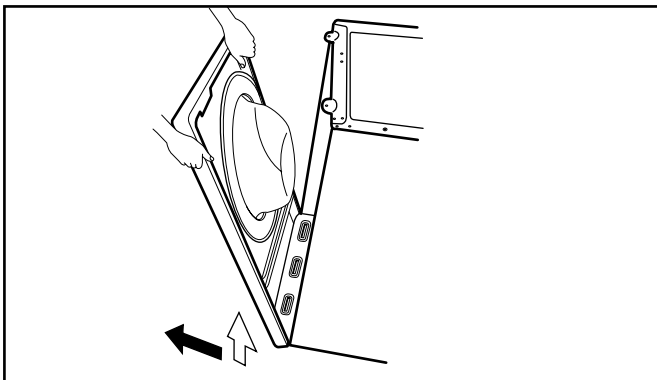


⑨ Lift and separate the cabinet cover.

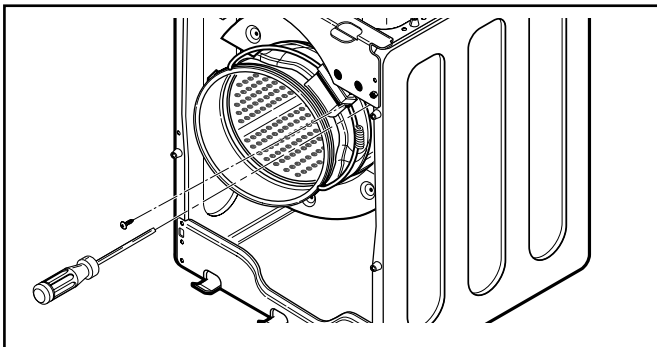


⑩ Disassemble the clamp assembly.

⑪ Disassemble the gasket.


DOOR

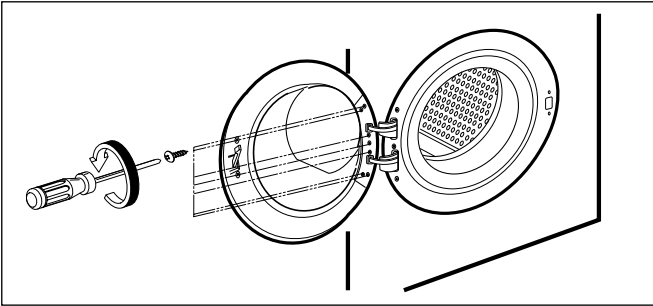

- ① Open the door.
- ② Unscrew the 7 screws from the HINGE COVER.

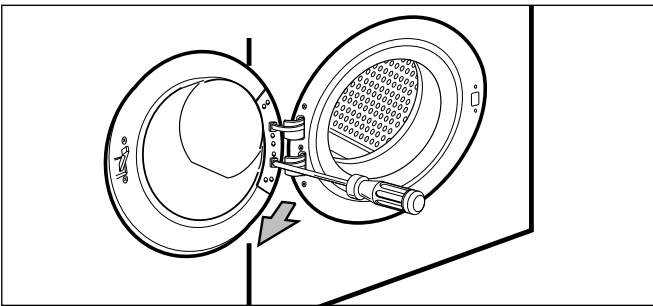


- ③ Put a flat (-) screwdriver into the opening of the hinge, and pull out the hinge cover.

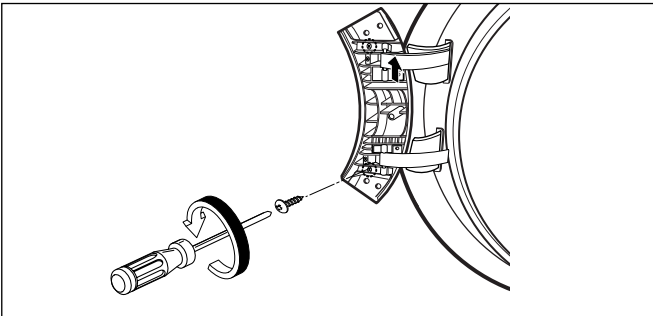

- ④ Unscrew a screw from the lower side of door.
- ⑤ Disassemble the door upward.

※ **Be careful!** The door is heavy.

DOOR LOCK SWITCH ASSEMBLY

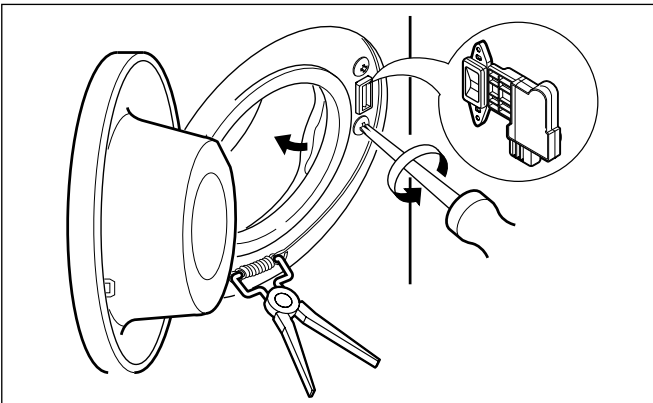


- ① Open the door and disassemble the CLAMP ASSEMBLY.
- ② Unscrew the 2 screws.

※ **NOTE**


- Reconnect the connector after replacing the DOOR SWITCH ASSEMBLY.

PUMP

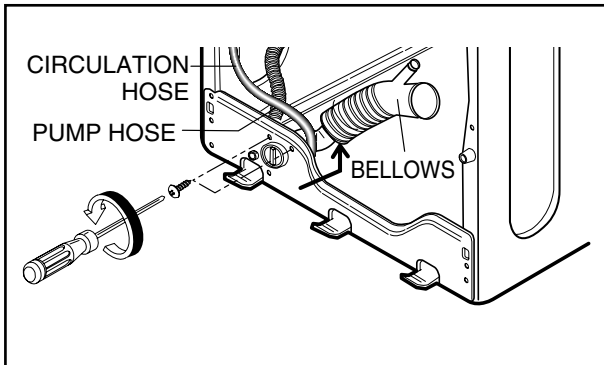

- ① Disassemble the cabinet cover.
- ② Separate the pump hose, the bellows and the circulation hose assembly from the pump assembly.
- ③ Disassemble the pump assembly in arrow direction.

HEATER

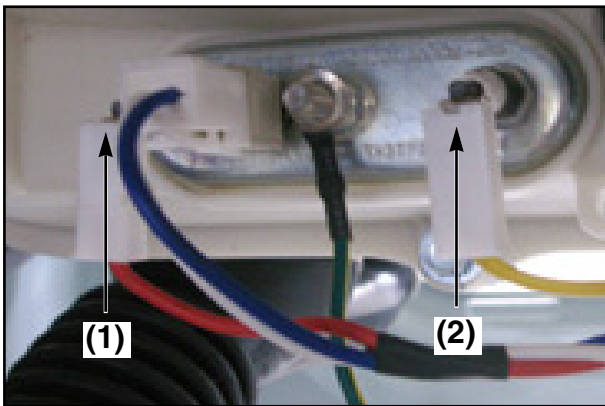


- ① Disassemble the cabinet cover.
- ② Separate 2 connectors from the heater.
- ③ Loosen the nut and pull out the heater.

※ CAUTION


- When assembling the heater, insert the heater into the heater clip on the bottom of the tub.
- Tighten the fastening nut so the heater is secure.

THERMISTOR

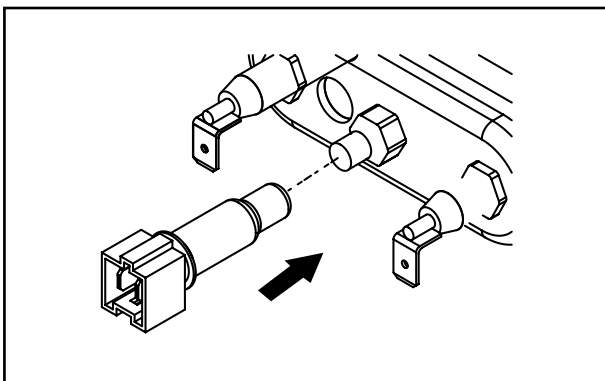


- ① Disassemble the cabinet cover.
- ② Unplug the white connector from the thermistor.
- ③ Pull it out by holding the bracket of the thermistor.

WHEN FOREIGN OBJECT IS STUCK BETWEEN DRUM AND TUB

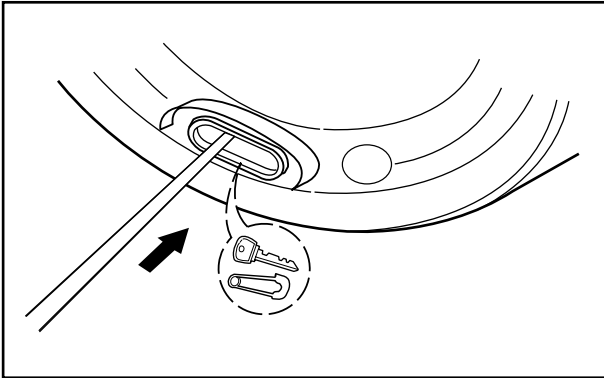


- ① Disassemble the cabinet cover.
- ② Separate the heater from the tub.
- ③ Remove any foreign objects (wire, coin, etc.) by inserting a long bar in the opening.


MOTOR/DAMPER

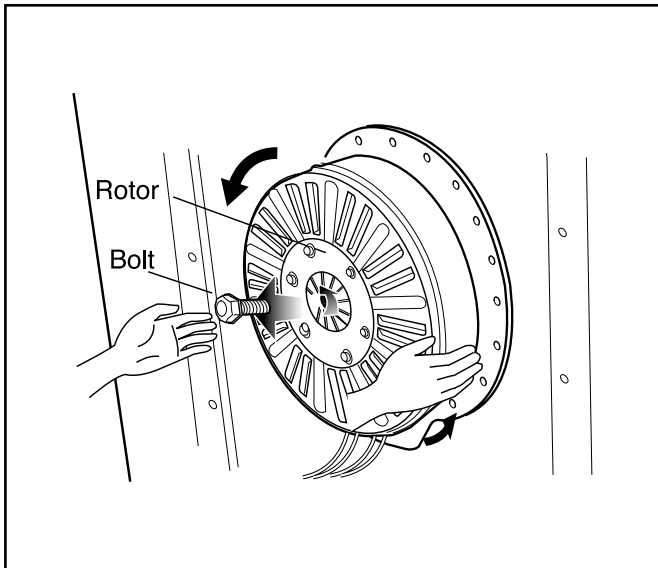

- ① Disassemble the back cover.
- ② Remove the bolt.
- ③ Pull out the Rotor.

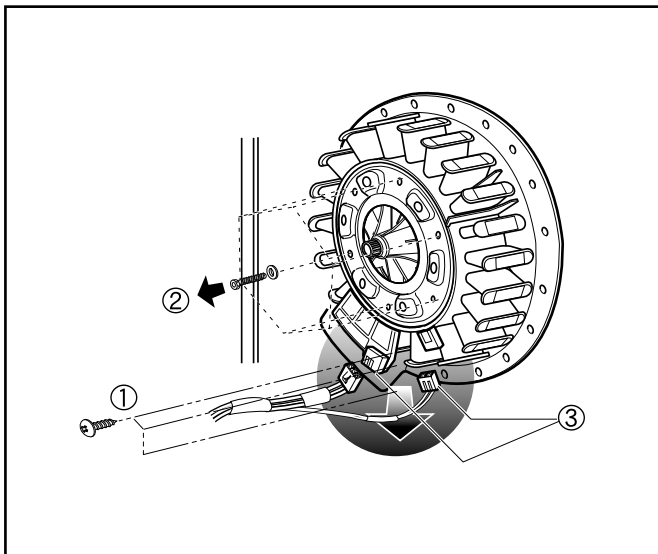

- ① Unscrew the 2 screws from the tub bracket.
- ② Remove the 6 bolts on the stator.
- ③ Unplug the 2 connectors from the stator.

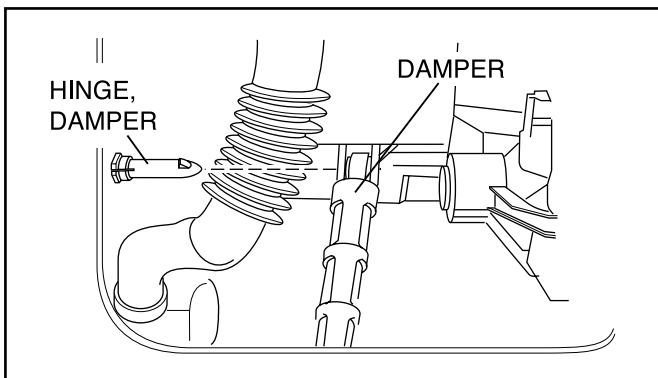

- ① Disassemble the damper hinges from the tub and base.

※ NOTE

If you pull the dampers apart, they must be replaced. If you do not separate them, they can be re-used.


11. EXPLODED VIEW

11-1. CABINET & CONTROL PANEL ASSEMBLY

"The following parts are not illustrated"

| Description | Loc. No. |
|---------------------|----------|
| *Owner's Manual | (G00) |
| *Energy Label | (G002) |
| *Tech Sheet | (G003) |
| *Service Manual | (G004) |
| *Quick Start Guides | (G005) |
| *Installation Sheet | (G007) |

Printed materials

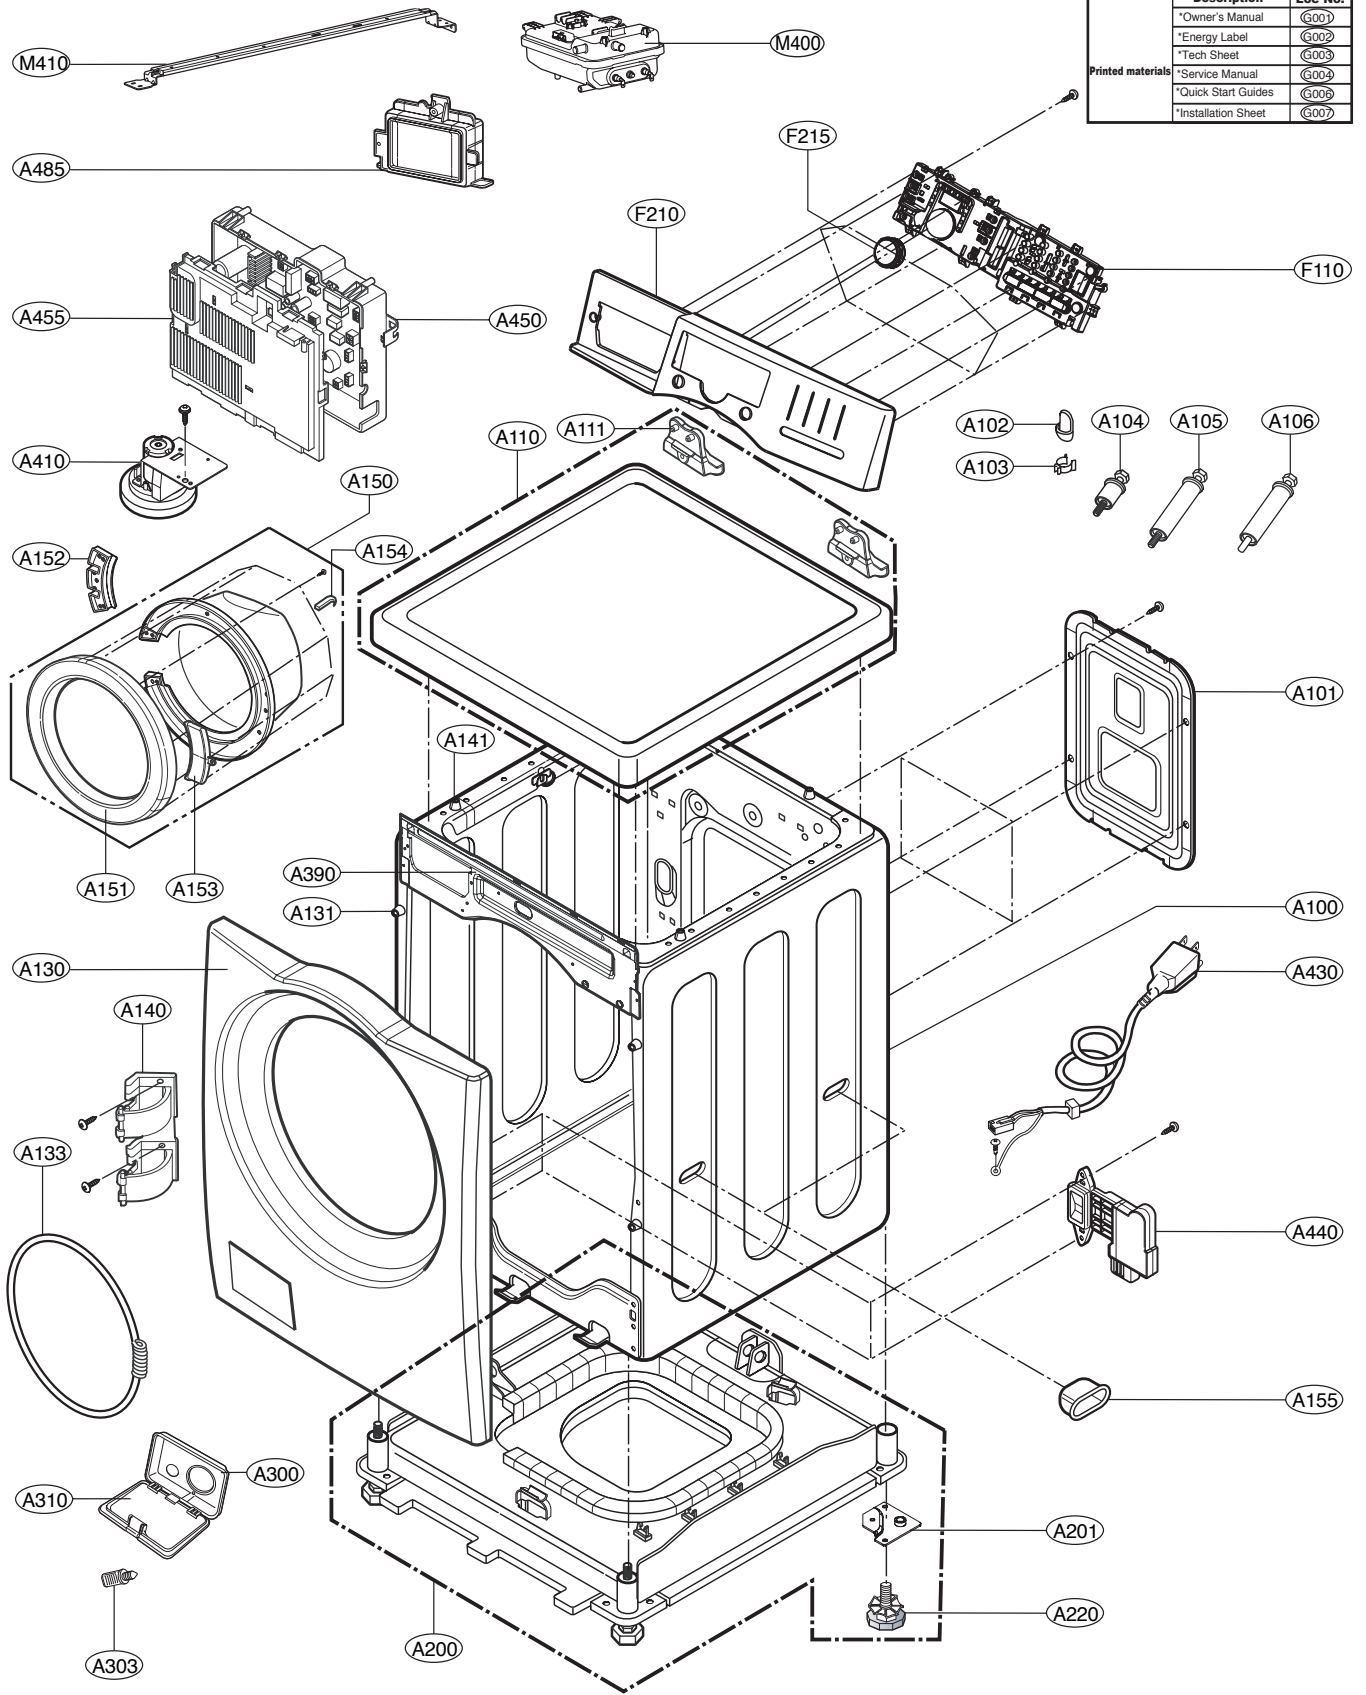

11-3. DISPENSER ASSEMBLY

