

ASKO
BUILT TO LAST LONGER

Spare Parts Catalogue


ASKO Dishwashers \ ASKO Encore Series
Type: DW70.4
Model: D5883 XXL FI US Titanium FI

Prod. No: 1075883151

April 24th 2012

ASKO Appliances Inc.


4001 E Plano Parkway #1004001 E Plano Parkway #100
Plano, Texas 75074

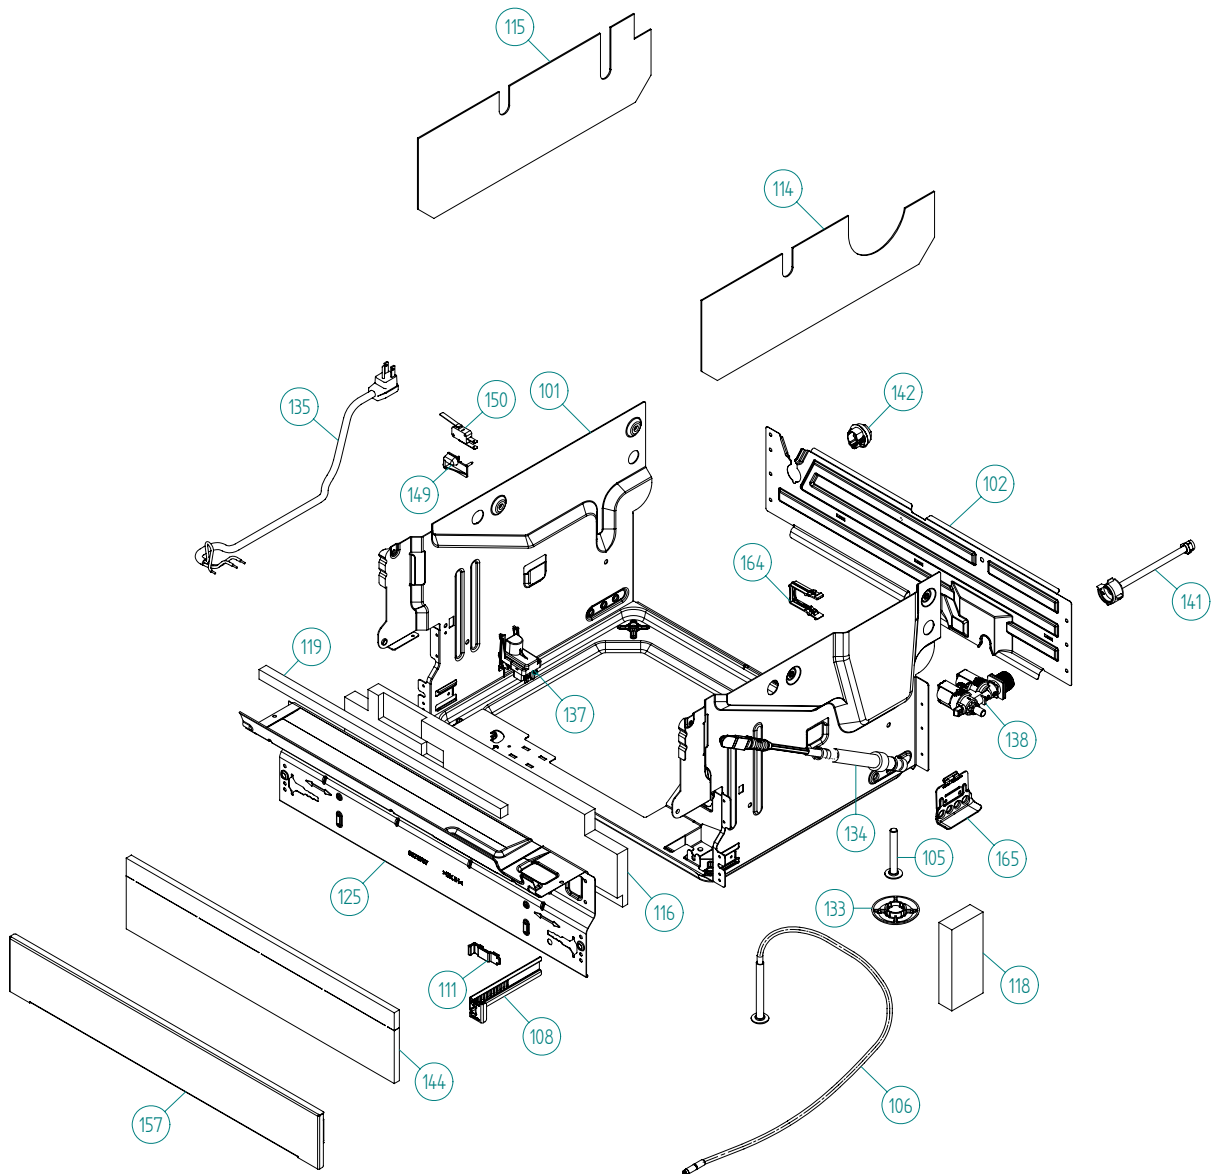

Base and related parts

ASKO, D5883 XXL FI US - Titanium FI (DW70.4)


| Pos | Spare part No. | Description | Qty | Comment |
|-------|----------------|----------------------------------|--------|---------|
| 101 | 8801387 | BOTTOM OUTER COMPL. | 1 Pc's | |
| 101-a | 8901104 | Screw 20 Torx Machine | 2 Pc's | |
| 101-b | 8901110 | Screw w/ORing DW 05/06 25T | 4 Pc's | |
| 102 | 8078006 | REAR PANEL | 1 Pc's | |
| 105 | 8074228 | Leveling Foot M10X75 T30 8.8 FZB | 2 Pc's | |
| 106 | 8082222 | FOOT ADJUSTABLE FROM FRONT CPL | 1 Pc's | |
| 108 | 8073480 | Toe Kick bracket Right & Left | 2 Pc's | |
| 111 | 8073481-49 | Toe Kick Bracket Clip L-Grey | 2 Pc's | |
| 114 | 8078109 | SOUND ABSORP. SELF AD. RIGHT | 1 Pc's | |
| 115 | 8078108 | SOUND ABSORP. SELF AD. LEFT | 1 Pc's | |
| 116 | 8078114 | SOUND ABSORBENT GUARD PLATE | 1 Pc's | |
| 118 | 8078112 | SOUND AB.BLOCK BOTTOM OUTER | 2 Pc's | |
| 119 | 8078122 | SOUND ABSORBTION PROFILE | 1 Pc's | |
| 125 | 8078007 | GUARD PLATE FLANGED | 1 Pc's | |
| 133 | 8051957 | Glide Foot | 3 Pc's | |
| 134 | 8079530 | Door Spring-DW70-Blue | 1 Pc's | |
| 134 | 8079529 | Door Spring-DW70-Red | 1 Pc's | |
| 135 | 8083262 | CORD SET 15A AMERICA | 1 Pc's | |
| 135 | 8079046 | CORD SET AMERICA | 1 Pc's | |
| 136-a | 8902131 | Screw | 1 Pc's | |
| 137 | 8083041 | Terminal Block w/RFI DW70 | 1 Pc's | |
| 137-a | 8901097 | Screw Terminal | 1 Pc's | |
| 138 | 8801374 | KIT INL.VALVE/LOCKARM SEC.120V | 1 Pc's | |
| 138-a | 8079597 | LOCK ARM INLET VALVE | 1 Pc's | |
| 141 | 8079522 | PEX Inlet hose DW | 1 Pc's | |
| 142 | 8006948 | Grommet | 1 Pc's | |
| 144 | 8074585 | Felt Kick Plate 05 | 1 Pc's | |
| 149 | 8054907 | BRACKET LAMP SWITCH | 1 Pc's | |
| 149-a | 8902087 | Screw Plastic Housing 20 Torx | 1 Pc's | |
| 150 | 8073834 | MICROSWITCH LIGHTING | 1 Pc's | |
| 157 | 8073566-81 | Toe Kick Mettalic | 1 Pc's | |
| 162 | 8079832 | CABLE HOLDER SRC-8-01 | 1 Pc's | |
| 163 | 8078113 | SOUND ABSORBTION REARPANEL | 1 Pc's | |
| 164 | 8079597 | LOCK ARM INLET VALVE | 1 Pc's | |
| 165 | 8078013 | DOOR SPRING HOLDER | 1 Pc's | |
| 165-a | 8902362 | SCREW RTK ST 4,2X9,5 FZB WAX. | 1 Pc's | |

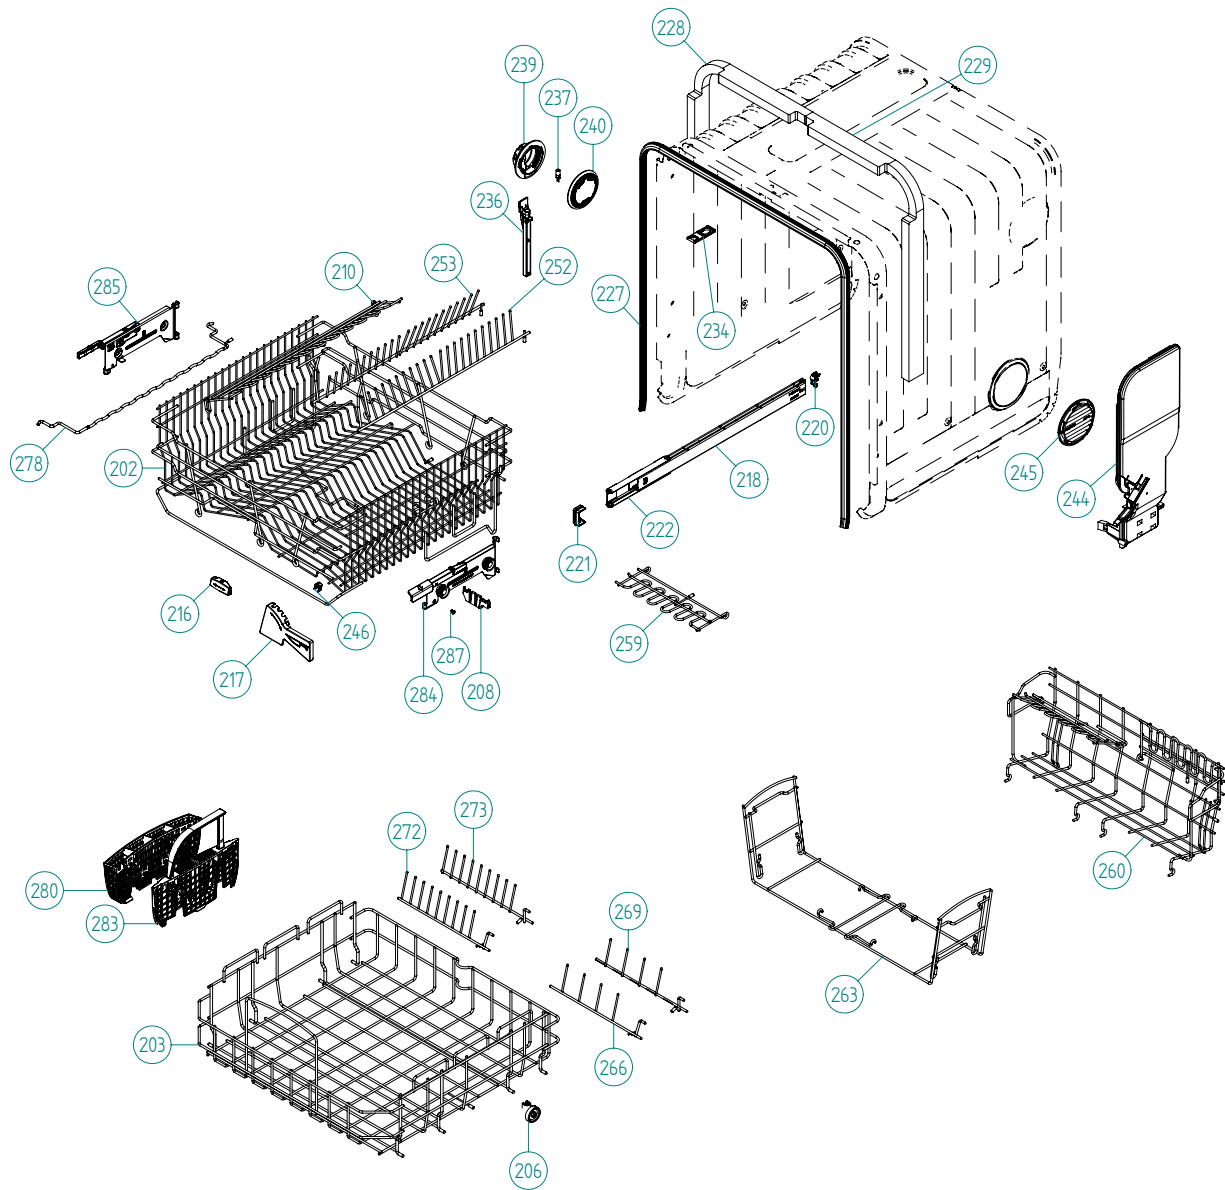

Baskets and related parts

ASKO, D5883 XXL FI US - Titanium FI (DW70.4)


| Pos | Spare part No. | Description | Qty | Comment |
|-------|----------------|--------------------------------|--------|--------------------|
| 201 | 8057056 | - | 1 Pc's | Not a spare part |
| 202 | 8801358-36 | UPPER BASKET EXCL. COMPL. H&L | 1 Pc's | |
| 203 | 8071683-36 | LOW. BASKET DETAL D-GREY DW95 | 1 Pc's | |
| 206 | 8078641-77 | Lower Basket Wheel | 8 Pc's | |
| 208 | 8071214-77 | Knife Holder 05/06 DW | 2 Pc's | |
| 210 | 8071337-36 | Cup Shelf Wine Glass 05/06 DW | 1 Pc's | |
| 216 | 8072553-77 | BRACKET PIN ROW UPPER BASKET | 1 Pc's | |
| 217 | 8072554-77 | KNIFE GUARD | 1 Pc's | |
| 218 | 8801350 | DW Upper Basket Guide Rail Kit | 2 Pc's | |
| 220 | 8057978-77 | DW Rail Stop - Back Grey | 2 Pc's | |
| 221 | 8088703-77 | BASKET STOP | 2 Pc's | |
| 222 | 8801349-77 | KIT BALL HOLDER INCL. BALLS | 1 Pc's | |
| 225 | 8057978-77 | DW Rail Stop - Back Grey | 2 Pc's | |
| 227 | 8057489-F | DOOR STRIP XXL DW70 | 1 Pc's | |
| 228 | 8078116 | SEALING STRIP CASING FOAM LEFT | 1 Pc's | |
| 229 | 8078117 | SEALING STRIP CASING FOAM RIGH | 1 Pc's | |
| 234 | 8070649 | Lock Hitch Int | 1 Pc's | |
| 234-a | 8070654 | Lock Washer Int | 1 Pc's | |
| 234-b | 8901104 | Screw 20 Torx Machine | 1 Pc's | |
| 236 | 8076590 | CABLE BAR LONG | 1 Pc's | |
| 237 | 8073830 | Halogen Lamp | 1 Pc's | |
| 239 | 8072426 | Lamp Guard | 1 Pc's | |
| 239-a | 8901765 | ORing det Comp 03/04 DW | 1 Pc's | |
| 240 | 8072425 | Lamp Chimney | 1 Pc's | |
| 244 | 8078300 | AIRBREAK STD. DW70 UL4 | 1 Pc's | |
| 245 | 8057536-77 | LOCKRING AIREBREAKER GREY | 1 Pc's | |
| 246 | 8075350 | Clip for Knife Guard | 1 Pc's | |
| 252 | 8072552-36 | PLATERACK RIGHT U-BASKET | 1 Pc's | |
| 253 | 8072551-36 | PLATERACK LEFT U-BASKET | 1 Pc's | |
| 259 | 8076619-36 | wine glass cup shelf divider | 2 Pc's | |
| 260 | 8076636-36 | INSERT GLASS DUO | 1 Pc's | |
| 263 | 8076635-36 | INSERT LOWER BASKET DFP CPL | 1 Pc's | |
| 266 | 8076626-36 | PIN ROW DIVISIBLE THIN RF | 1 Pc's | |
| 269 | 8076627-36 | PIN ROW DIVISIBLE THIN RR | 1 Pc's | |
| 272 | 8076622-36 | PIN ROW DIVISIBLE RF | 1 Pc's | Not for all models |
| 273 | 8076623-36 | PIN ROW DIVISIBLE RR | 1 Pc's | Not for all models |
| 278 | 8072764-36 | GLASS SUPPORT D-GREY | 1 Pc's | |
| 278 | 8079144-36 | GLASS SUPPORT D-GREY | 1 Pc's | |
| 280 | 8079589-77 | MINI BASKET | 2 Pc's | |
| 283 | 8079590-77 | HANDLE MINI BASKET | 1 Pc's | |
| 284 | 8079138 | Basket Adj Bracket Right | 1 Pc's | |
| 285 | 8079139 | Basket Adj Bracket Left | 1 Pc's | |
| 287 | 8083397 | LOCKING PLUG F ADJUST. DEVICE | 2 Pc's | |

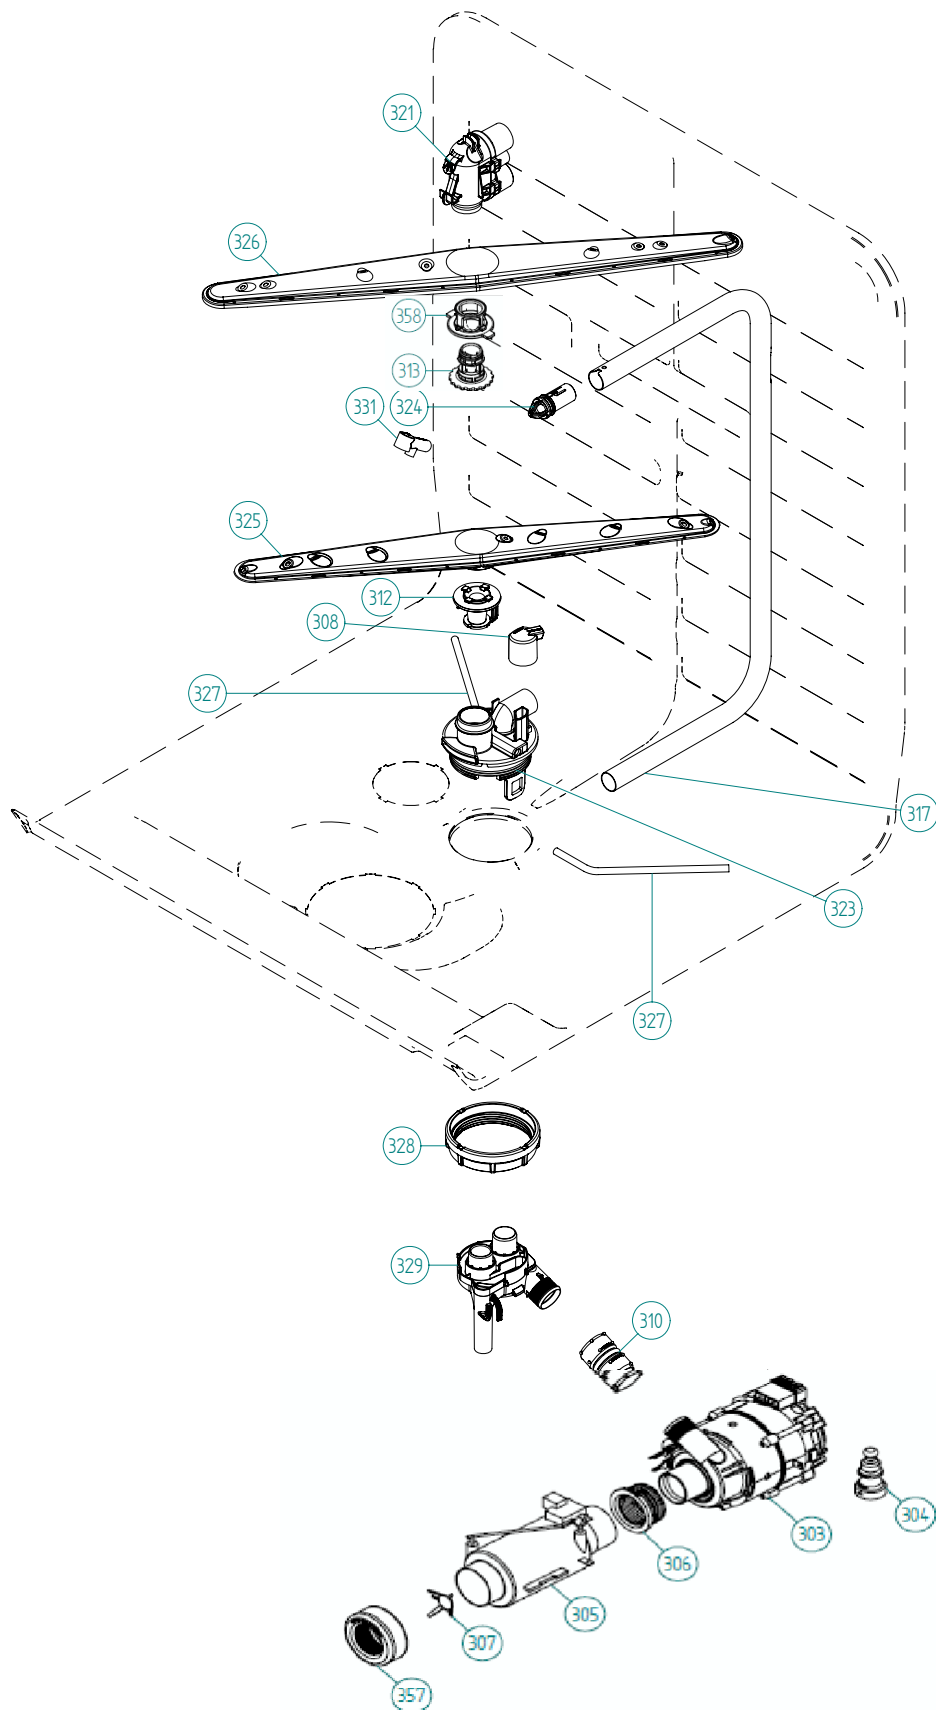

Wash System

ASKO, D5883 XXL FI US - Titanium FI (DW70.4)


| Pos | Spare part No. | Description | Qty | Comment |
|-------|----------------|--------------------------------|--------|--------------------------------------|
| 301 | 8078001 | - | 1 Pc's | Not a spare part |
| 303 | 8078082 | CIRC.PUMP 120V 60HZ | 1 Pc's | |
| 304 | 8075130 | Rubber Damper Circ Pump | 1 Pc's | |
| 305 | 8801463 | HEATER W.INSERT 1200W120V DW70 | 1 Pc's | |
| 306 | 8079531 | SEALING HEATER DW70 UL4 | 2 Pc's | Only 1 pc from 2009-06-11 |
| 307 | 8079575 | INSERT FOR HEATER | 1 Pc's | |
| 308 | 8073385-77 | Cup Drainage Gray | 1 Pc's | |
| 310 | 8801409 | Hose Circ Pump | 1 Pc's | |
| 310-a | 8056491 | HOSE CLIP 30.1-708 | 2 Pc's | |
| 312 | 8801270 | Spray Arm Bearing Kit | 1 Pc's | |
| 313 | 8079108-77 | SPRAYARM BEARING H&L U.BASKET | 1 Pc's | |
| 317 | 8079112-E | SPRAYTUBE ADJ.U-BASKET XXL | 1 Pc's | |
| 321 | 8801359 | SPRAYTOWER COMPL H&L BASKET | 1 Pc's | |
| 323 | 8081911-LL-77 | SPRAYTOWER L FOR 2 NOZZLE UL4 | 1 Pc's | |
| 324 | 8079113-77 | GUIDE SPRAYTUBE ADJ BASKET | 1 Pc's | |
| 325 | 8072891 | Spray Arm Lower Complete | 1 Pc's | |
| 326 | 8079111 | SPRAYARM CPL H&L BASKET | 1 Pc's | |
| 327 | 8079147 | POT RINSE TUBE | 1 Pc's | |
| 327 | 8073381 | Tube Pot Rinse | 1 Pc's | |
| 327-a | 8902085 | Screw 20T for Plastic | 2 Pc's | |
| 328 | 8071607 | Locking Spray Pipe Bearing | 1 Pc's | |
| 329 | 8078086 | INTERMEDIATE | 1 Pc's | |
| 331 | 8072543-77 | Spray Nozzle | 2 Pc's | |
| 357 | 8083603 | SEALING HEATER BOTTOM SUMP | 1 Pc's | For part no 8073381 and 8076902-L-77 |
| 358 | 8079261-77 | INSERT SPRAYARM BEAR.H&L BASK. | 1 Pc's | |

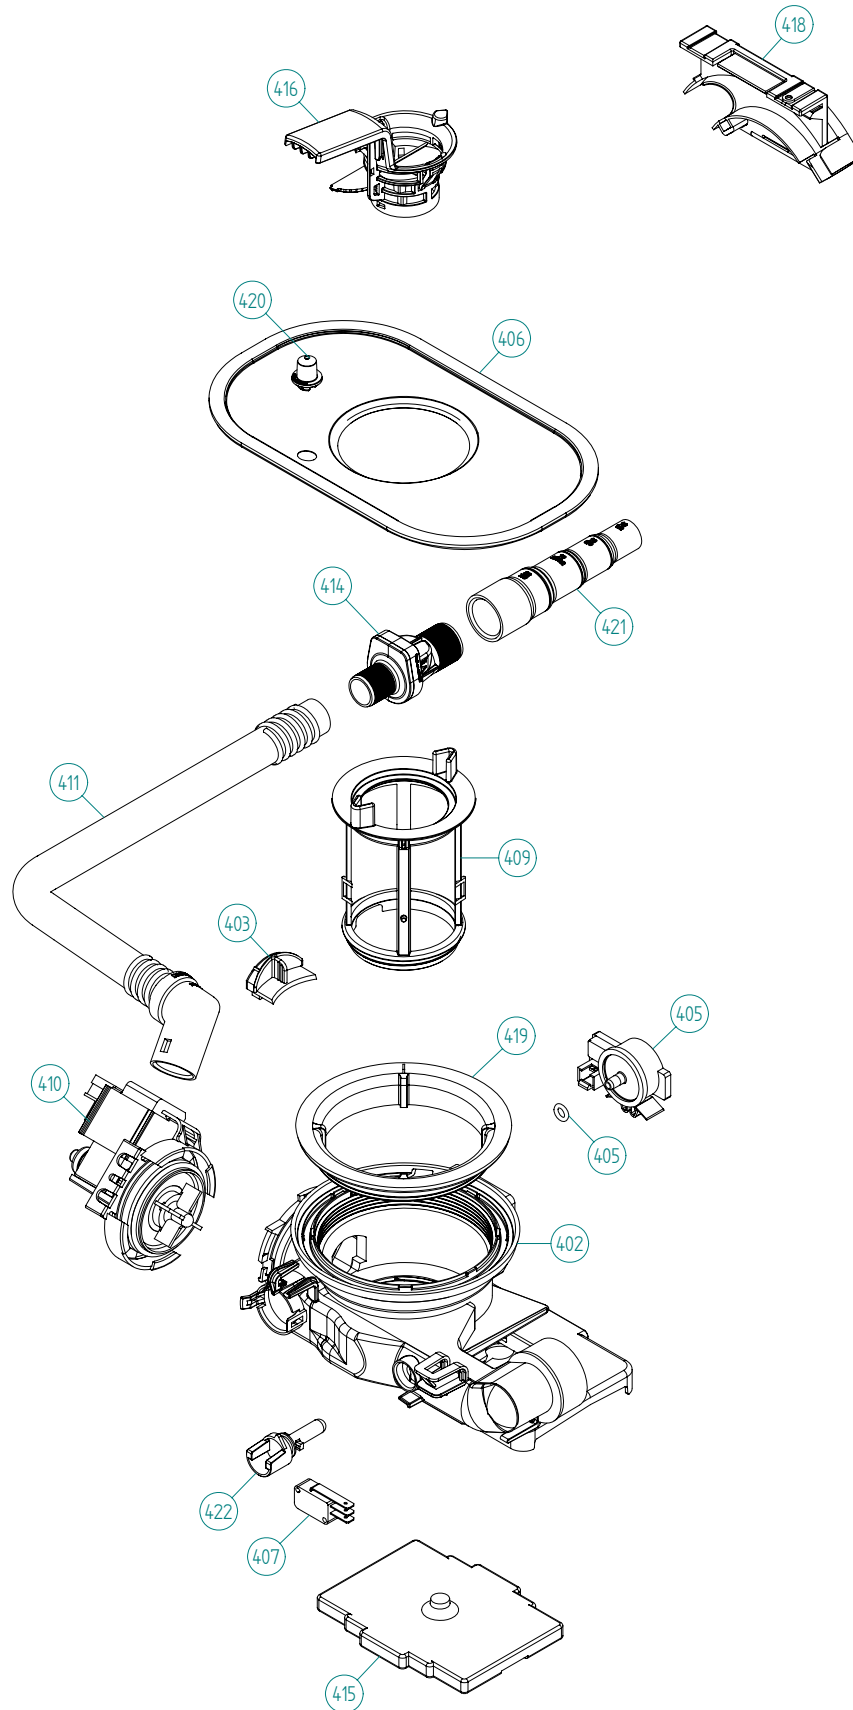

Bottom well and related parts

ASKO, D5883 XXL FI US - Titanium FI (DW70.4)


| Pos | Spare part No. | Description | Qty | Comment |
|------------|-----------------------|--------------------------------|------------|----------------|
| 402 | 8084691 | BOTTOM WELL PRESSURE SENS. UL4 | 1 Pc's | |
| 402 | 8801451 | KIT BOTTOM W.NO RET.VALVE 1SEN | 1 Pc's | |
| 402-a | 8073002 | ORing | 1 Pc's | |
| 403 | 8078033 | Rinse Cap Bottom Well - Yellow | 1 Pc's | |
| 405 | 8073839 | Pressure Sensor | 1 Pc's | |
| 405-a | 8074040 | O-Ring-Press Sensor | 1 Pc's | |
| 406 | 8074364 | Strainer DW20 | 1 Pc's | |
| 407 | 8073835 | Microswitch Float | 1 Pc's | |
| 409 | 8078038-77 | Pipe Filter DW70 | 1 Pc's | |
| 410 | 8078089 | Drain Pump 120V 60Hz | 1 Pc's | |
| 411 | 8079693 | Outlet Hose w/o Return Valve | 1 Pc's | |
| 411 | 8083478 | OUTLET HOSE HARD END CUFF US | 1 Pc's | |
| 411-a | 8901768 | O-RING 32,3X3 (BD) | 1 Pc's | |
| 414 | 8801248 | Check Valve Kit | 1 Pc's | |
| 414-a | 8052239 | Hose Clamp | 1 Pc's | |
| 414-b | 8053642 | Hose Clamp | 1 Pc's | |
| 415 | 8078025 | Float | 1 Pc's | |
| 416 | 8078039-77 | Strainer Basket Grey | 1 Pc's | |
| 418 | 8072528-77 | Holder Outlet Hose | 1 Pc's | |
| 418-a | 8053642 | Hose Clamp | 1 Pc's | |
| 418-b | 8052239 | Hose Clamp | 1 Pc's | |
| 418-c | 33700450 | Cable Strip | 1 Pc's | |
| 418-d | 8902072 | SCREW PT KB40X10 WN1442 GALV | 1 Pc's | |
| 419 | 8072848 | Lockring Bottom Well | 1 Pc's | |
| 420 | 8074760-77 | Ventilator | 1 Pc's | |
| 421 | 8075321 | End Cuff | 1 Pc's | |
| 422 | 8078096 | Thermistor | 1 Pc's | |
| 426 | 8078024 | SEALING NON RETURN VALVE | 1 Pc's | |
| 427 | 8901768 | O-RING 32,3X3 (BD) | 1 Pc's | |

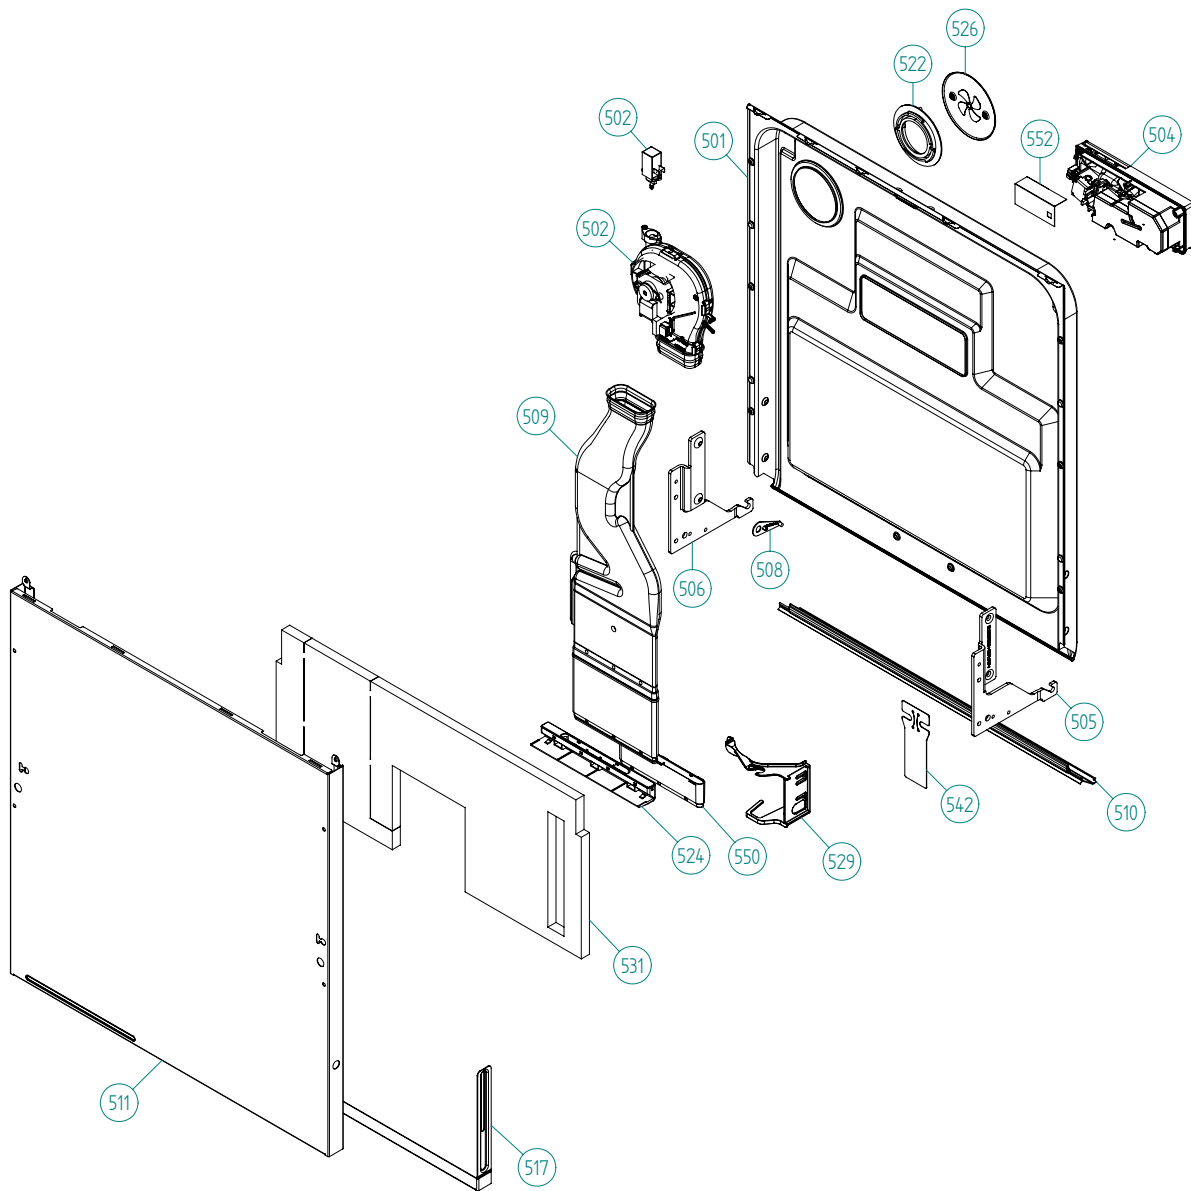

Inner door, panel and related parts

ASKO, D5883 XXL FI US - Titanium FI (DW70.4)

| Pos | Spare part No. | Description | Qty | Comment |
|-------|------------------------------|--------------------------------|--------|---------|
| 501 | 8801381 | Inner door w/fan DW70 | 1 Pc's | |
| 501-a | 8900646 | Screw 20 Torx SS | 6 Pc's | |
| 501-b | 8902121 | SCREW A2-MKFT 5X10 | 4 Pc's | |
| 502 | 8089580 | Fan Complete 120V | 1 Pc's | |
| 502-a | 8058501 | ORing Turbo Fan Dry 05/06 DW | 1 Pc's | |
| 502-b | 8801438 | KIT WITH NEW WAXMOTOR DW | 1 Pc's | |
| 504 | 8801343-77 | KIT Combi Dispenser 120V | 1 Pc's | |
| 504-a | 8071918 | Seal Det Comp Lid | 1 Pc's | |
| 504-b | 8071917 | CAP RINSE AGENT | 1 Pc's | |
| 504-c | 8071918 | Detergent Lid Complete | 1 Pc's | |
| 504-d | 8072288 | Sealing Strip Combi Disp. | 1 Pc's | |
| 504-f | 8902087 | Screw Plastic Housing 20 Torx | 6 Pc's | |
| 505 | 8801458 | HINGE RIGHT COMPL. DW70 | 1 Pc's | |
| 506 | 8801459 | HINGE LEFT COMPL. DW70 | 1 Pc's | |
| 507 | 8057530 | Screw hinge 05 | 2 Pc's | |
| 507-a | 33500262 | Nut Term Block | 2 Pc's | |
| 508 | Repl by 8801458 & 8801459 | Slide washer hinge bearing 05 | 2 Pc's | |
| 509 | 8078040 | Air Channel DW70 | 1 Pc's | |
| 510 | 8801294 | DOOR SEAL LOWER W.CORNER GUARD | 1 Pc's | |
| 511 | 8078017-PES | DOOR OUTER HIGH INT ADJUST XXL | 1 Pc's | |
| 511 | 8078017-PES-81 | Outer door-high Int adjust XXL | 1 Pc's | |
| 511-a | 8900646 | Screw 20 Torx SS | 6 Pc's | |
| 517 | 8074012-81 | Adj Frame Air Channel | 1 Pc's | |
| 517-a | 8902133 | Screw | 2 Pc's | |
| 522 | 8089401 | LOCKKING RING 2 FAN HOUSE UL4 | 1 Pc's | |
| 522-a | 8902085 | Screw 20T for Plastic | 2 Pc's | |
| 523 | 8079546 | INTERM.STAY XL FI EU | 1 Pc's | |
| 524 | 8083978-33 | NOZZLE AIR DUCT-FI Units | 1 Pc's | |
| 526 | 8058484 | SS Coverplate Turbo Fan DW | 1 Pc's | |
| 526-a | 8902085 | Screw 20T for Plastic | 2 Pc's | |
| 529 | 8074278 | Bracket for harness | 1 Pc's | |
| 531 | 8074258 | Sound Absorbtion Outer Door | 1 Pc's | |
| 542 | 8076966 | COVER, CABLES | 1 Pc's | |
| 550 | 8079558 | AIR CANNEL EXTENSION | 1 Pc's | |
| 552 | 8083021 | COVER COMBI DISPENSER | 1 Pc's | |

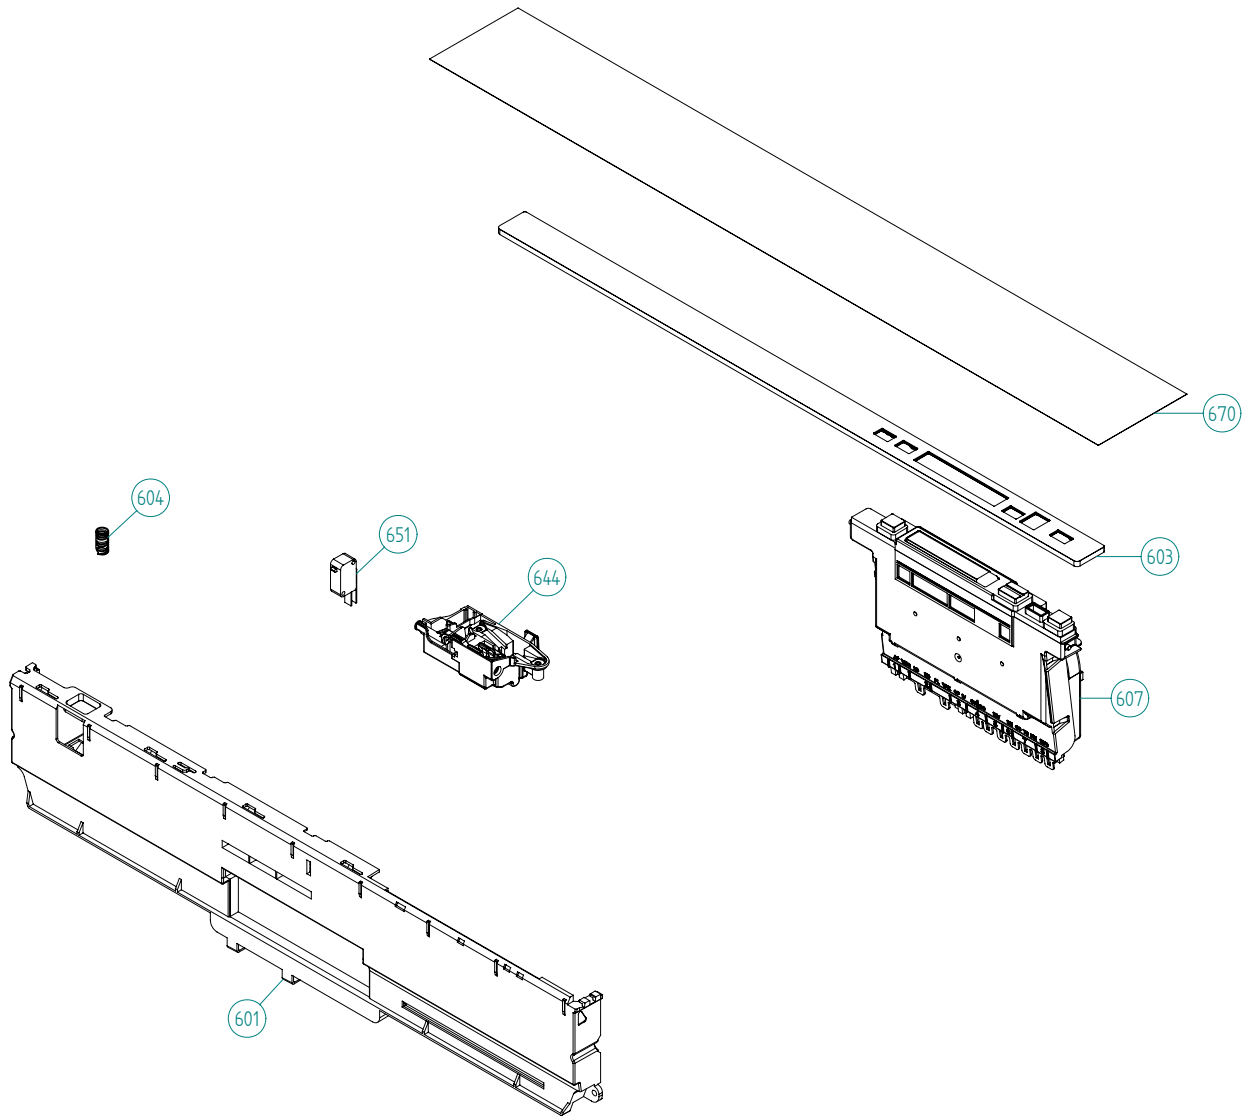

Control panel and related parts


ASKO, D5883 XXL FI US - Titanium FI (DW70.4)

| Pos | Spare part No. | Description | Qty | Comment |
|-----|----------------|--------------------------------|--------|---------|
| 601 | 8084001-UL | PANEL DW90 INTEGRATED LOCK UL4 | 1 Pc's | |
| 603 | 8082902 | LENS ASKO D5883 DW70.4 GRAPHIC | 1 Pc's | |
| 604 | 8074277 | SPRING MAIN SWITCH | 1 Pc's | |
| 607 | 8801368 | CONTROL.UNIT COMPL. DW70.4 USA | 1 Pc's | |
| 610 | 8079517 | CABLE SET THERMISTOR UL4 | 1 Pc's | |
| 614 | 8078068 | CABLE SET CI.PUMP IN.VALVE UL4 | 1 Pc's | |
| 616 | 8078067 | CABLE SET FLOW & PRESSURE UL4 | 1 Pc's | |
| 618 | 8079511 | CABLESET POWER TOUCH UL4 | 1 Pc's | |
| 620 | 8075730 | Cable Set Fan | 1 Pc's | |
| 622 | 8078063 | CABLE SET DRAIN UL4 | 1 Pc's | |
| 644 | 8073670 | Lock Complete Integrated | 1 Pc's | |
| 651 | 8073836 | MICROSWITCH DOOR | 0 Pc's | |
| 670 | 8089279 | Black Reflector Strip DW70.4 | 1 Pc's | |

- CD: COMBI DISPENSER
 - CP: CIRCULATION PUMP
 - DIV: WATER DIVERTER VALVE
 - DP: DRAIN PUMP
 - DR: DOOR
 - DS: DOOR SWITCH
 - F: FILTER
 - FM: FLOW METER
 - FN 1: FAN DOOR
 - FN 2: FAN BOTTOM
 - FS: FLOAT SWITCH
 - HE: HEATING ELEMENT
 - HE (PTC): HEATING ELEMENT PTC
 - HL: HALOGEN LAMP
 - HS: HUMIDITY SENSOR
 - IS: ILLUM. SWITCH
 - IV: INLET VALVE
 - I2C: I2C
 - MS: MAIN SWITCH
 - MV: MIX VALVE
 - PS: PRESSURE SENSOR
 - RAS: RINSE AID SENSOR
 - SL: STATUS LIGHT
 - SS: SALT SENSOR
 - SV: SALT VALVE
 - TH: THERMISTOR
 - TS: TURBIDITY SENSOR
 - UART: UART
 - VAX: VAX ACTUATOR
- WIRES IN ALL MACHINES
 - - - INTERNAL CONNECTION
 - · - WIRES IN SOME MACHINES

RESISTANCES AT ROOM TEMPERATURE (CA. 20°C/68°F)
VALUES WITH +/-10% ARE REGARDED AS NORMAL


| COMPONENT | RESISTANCE |
|---------------------------------------|------------|
| RADIO INTERFERENCE SUPPRESSION FILTER | 1 MOHM |
| HEATING ELEMENT 1200W 120V | 12 OHM |
| HEATING ELEMENT 1600W 230V | 32 OHM |
| HEATING ELEMENT 2040W 230V | 25 OHM |
| THERMISTOR | 25 KOHM |
| COMBINED DISPENSER 120V | 0.3 KOHM |
| COMBINED DISPENSER 230V | 1,6 KOHM |
| CIRCULATION PUMP 120V 60HZ | 32 OHM |
| CIRCULATION PUMP 230V 50HZ | 110 OHM |
| CIRCULATION PUMP 220V 60HZ | 56 OHM |
| DRAIN PUMP 120V 60HZ | 25 OHM |
| DRAIN PUMP 230V 50HZ | 150 OHM |
| DRAIN PUMP 230V 60HZ | 85 OHM |
| SPRAY ARM DIVIDER 120V 60HZ | 2.6 KOHM |
| SPRAY ARM DIVIDER 230V 50/60HZ | 8,5 KOHM |
| INLET VALVE SINGLE INCL. 120V | 0.95 KOHM |
| INLET VALVE SAFETY INCL. 120V | 0.5 KOHM |
| INLET VALVE SINGLE INCL. 230V | 3,9 KOHM |
| INLET VALVE SAFETY INCL. 230V | 2 KOHM |
| SALT VALVE 120V | 0,65 KOHM |
| MIX VALVE 120V | 0,65 KOHM |
| SALT VALVE 230V | 3 KOHM |
| MIX VALVE 230V | 2,3 KOHM |
| HALOGEN LAMP 5W 12V | <10 KOHM |
| WAX MOTOR | 1.1 KOHM |
| FAN MOTOR 120V | 0.18 KOHM |
| FAN MOTOR 230V | 0,85 KOHM |

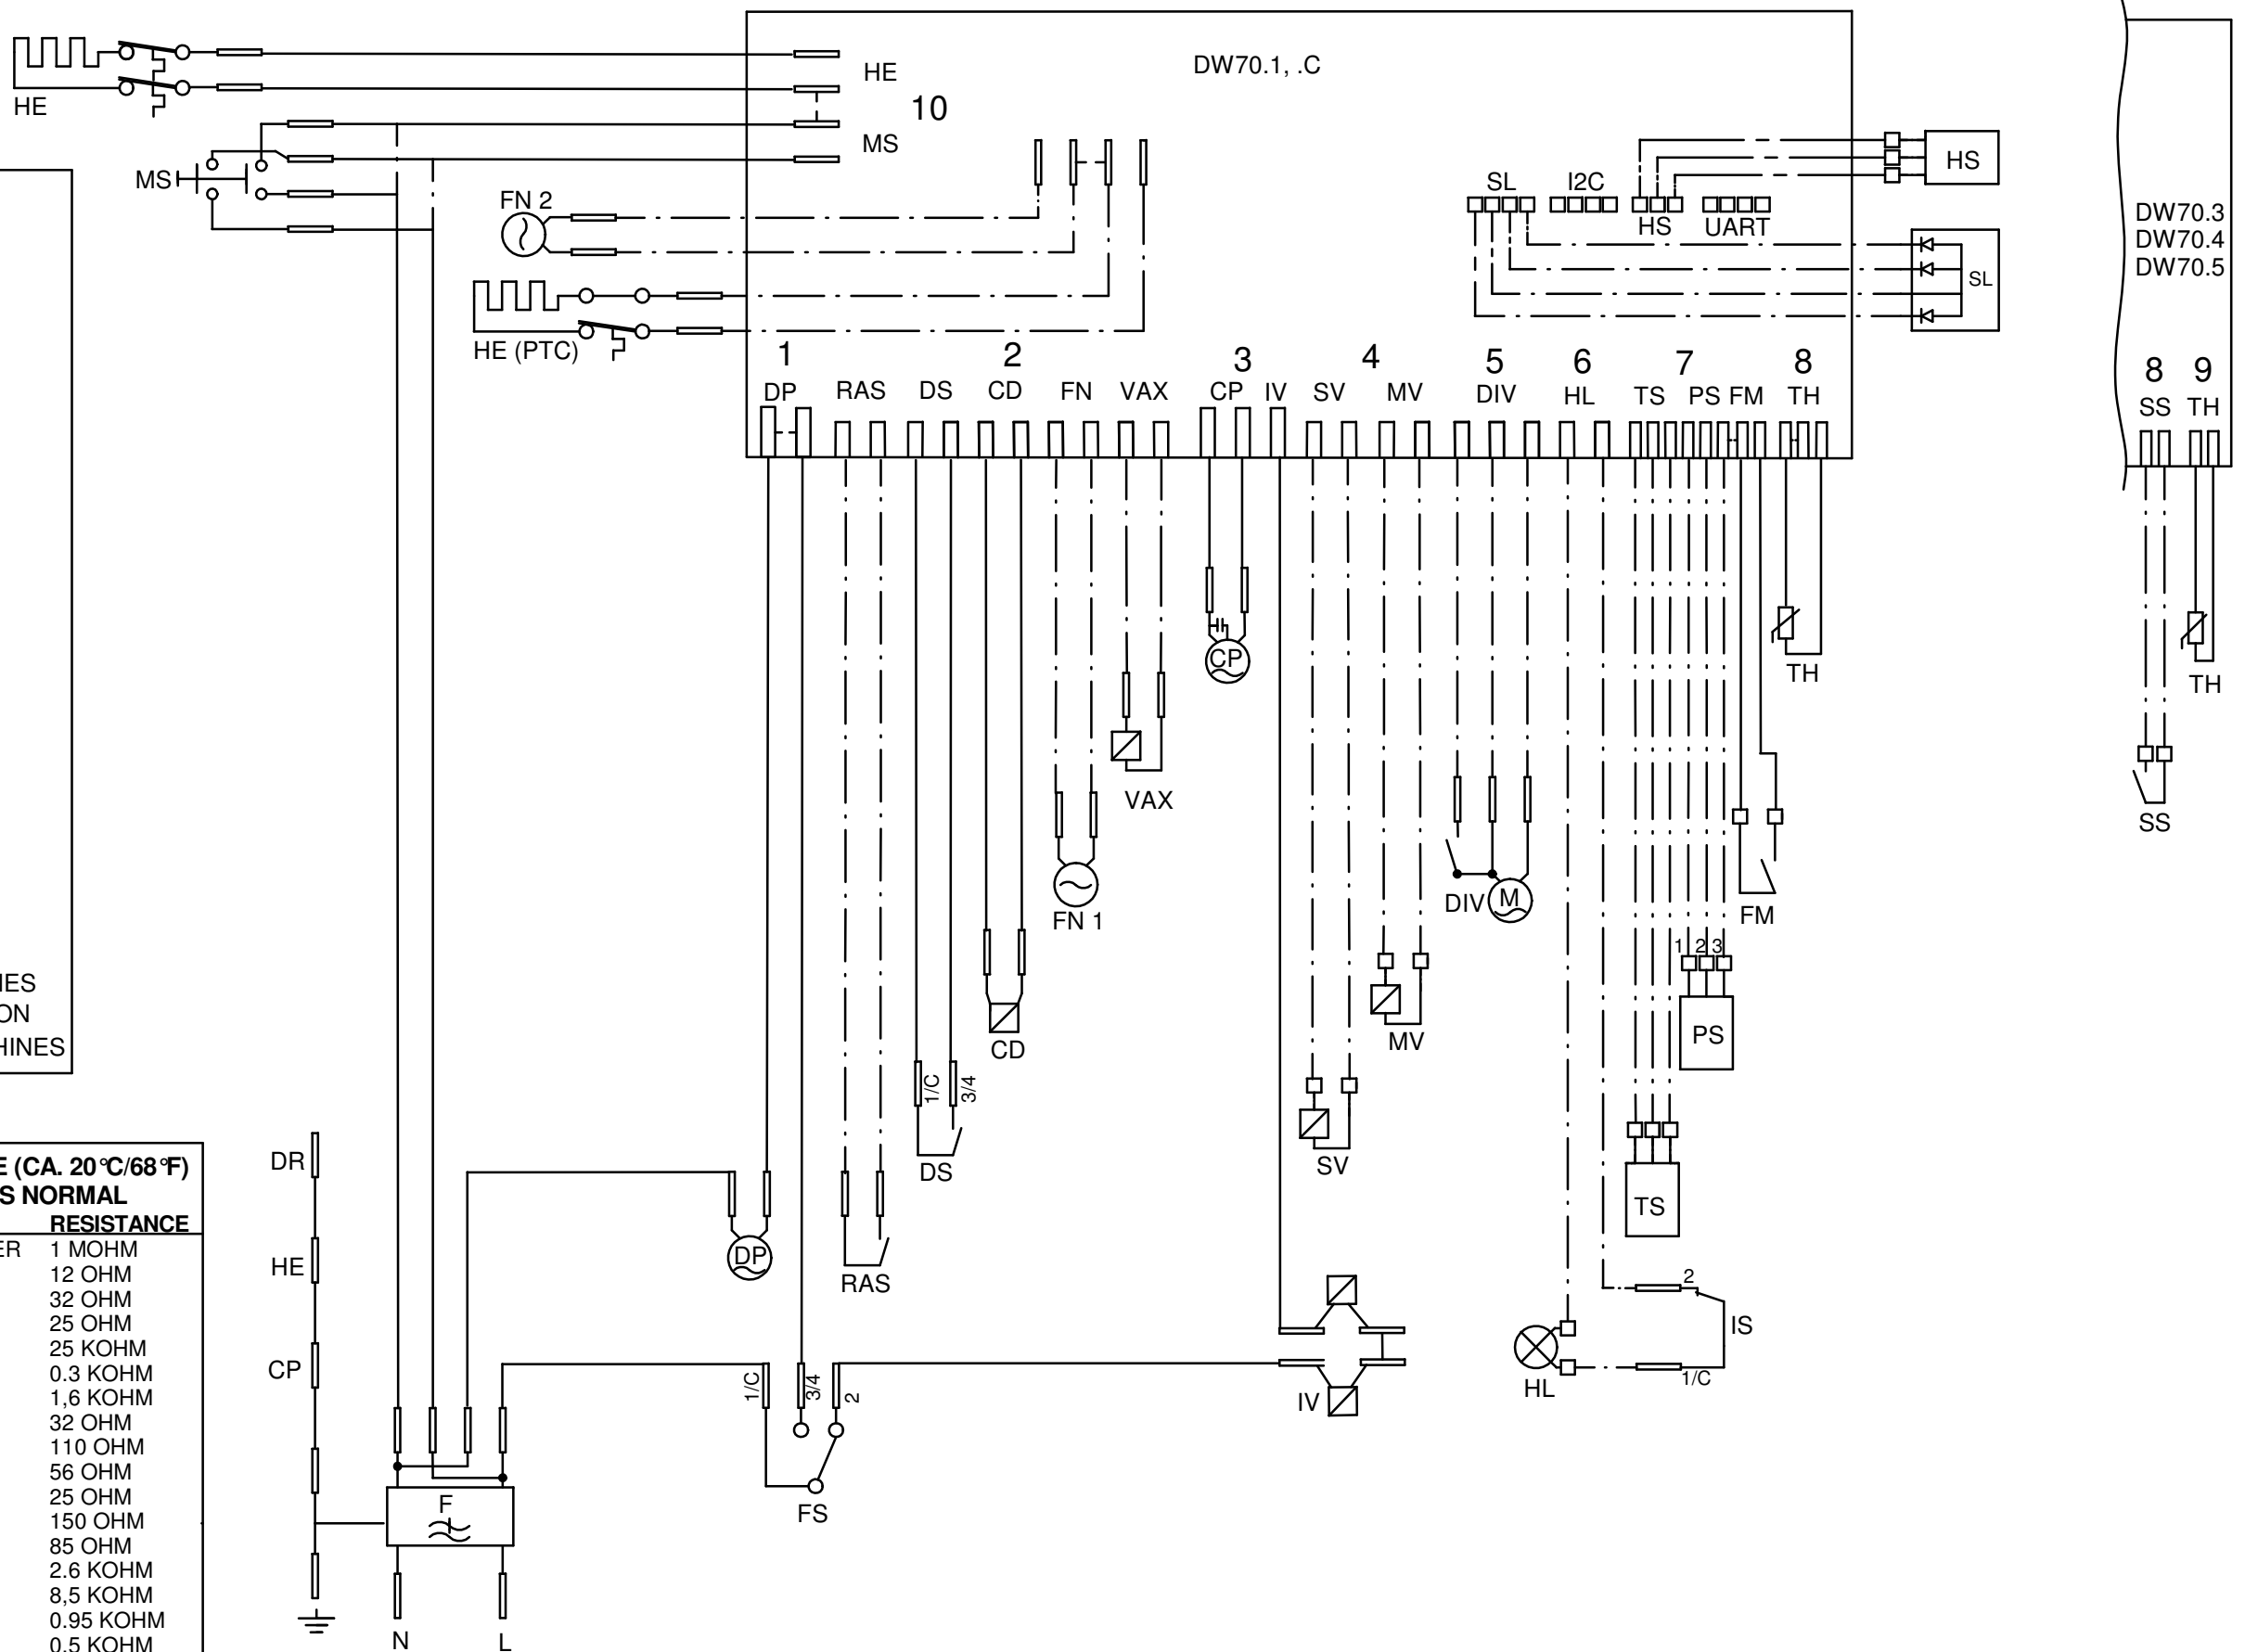

CIRCUIT DIAGRAM DW70.1, .3, .4, .5, .C
80 796 55 - 01

This document must not be copied without our written permission, and the contents thereof must not be imparted to a third party nor be used for any unauthorized purpose. Contravention will be prosecuted. Asko Appliances AB

Displays

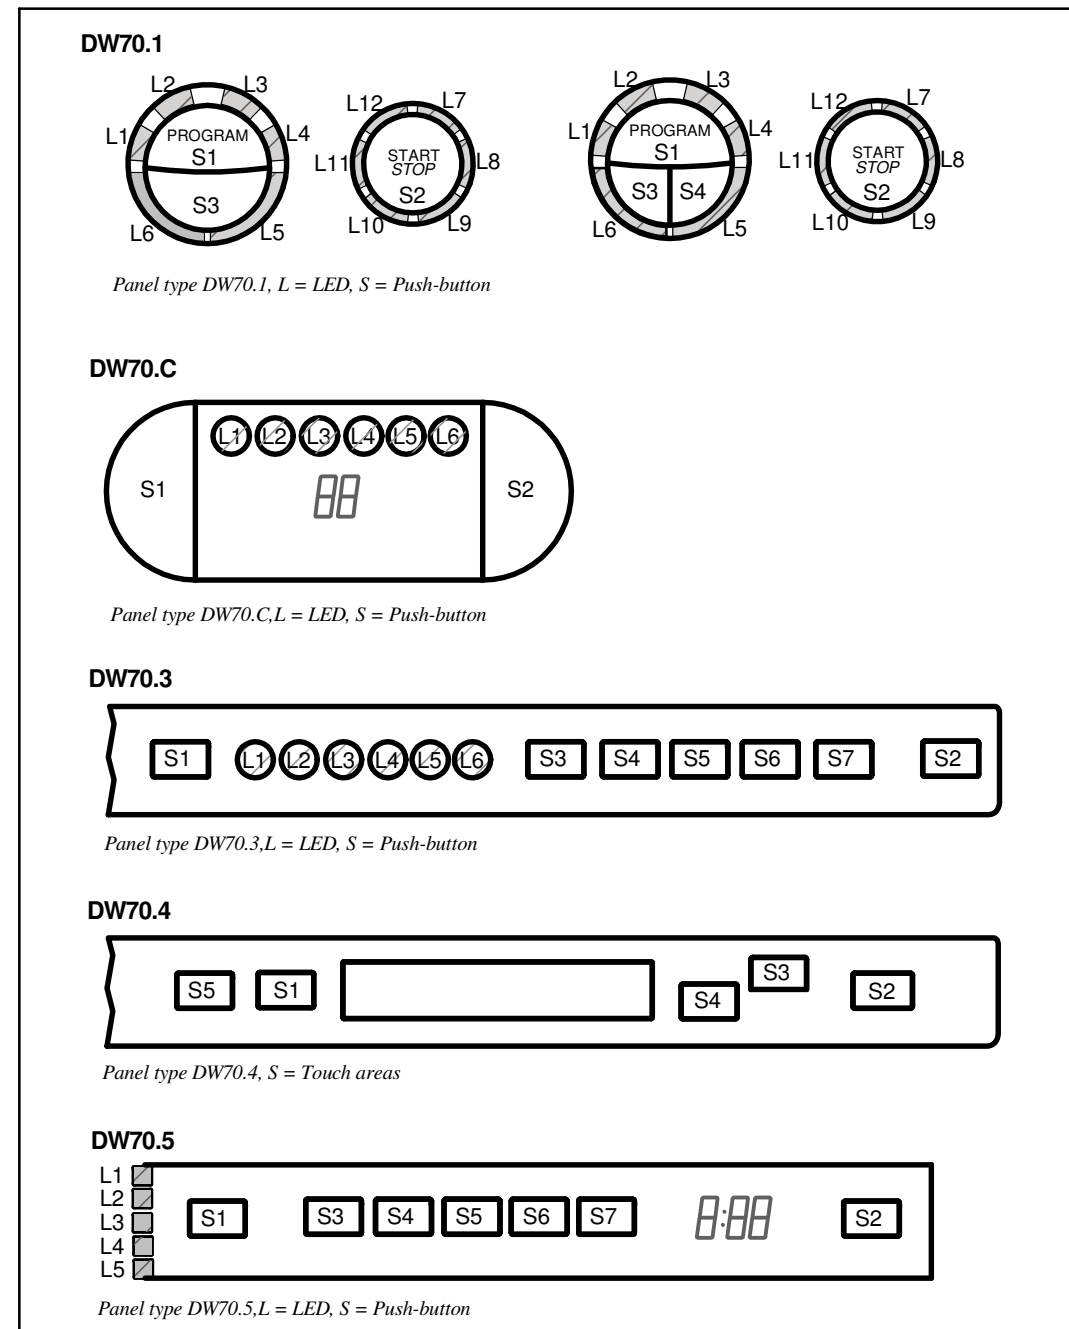

TOTAL RESET

TURN OFF MAIN SWITCH
 WAIT FOR AT LEAST 5 SECS
 HOLD PROGRAM BUTTON (S1), FOR DW70.4 HOLD PROGRAM BUTTON (S1)
 AND NAVIGATION BUTTON (S4).
 TURN ON MAIN SWITCH
 RELEASE PROGRAM BUTTON (S1), FOR DW70.4 RELEASE PROGRAM BUTTON (S1)
 AND NAVIGATION BUTTON (S4).

SERVICE MENU

TURN OFF MAIN SWITCH
 WAIT FOR AT LEAST 5 SECS
 HOLD PROGRAM AND START BUTTONS (S1 & S2)
 TURN ON MAIN SWITCH
 RELEASE PROGRAM AND START BUTTONS (S1 & S2)

VARIANT SETTING (NOT DW70.4)

HOLD PROGRAM AND START BUTTONS (S1 & S2)
 TURN ON MAIN SWITCH
 RELEASE PROGRAM AND START BUTTONS
 PRESS START (S2) 3 TIMES WITHIN 5 SECS
 SELECT VARIANT BY START BUTTON (S1) AND
 CONFIRM BY START BUTTON (S2)

COMPONENT TEST:

First enter Service menu.

DW70.1, DW70.3, DW70.5 and DW70.C

Component test:

Press the Program button (S1) and index through the following components:

1. Inlet valve and mix valve (only machines with water softener)
2. Inlet valve
3. Salt valve (only machines with water softener)
4. Detergent and surfactant dispenser
5. Circulation pump
6. Heating element and circulation pump (Max 75°C)
7. Fans
8. Drain pump

DW70.4

First enter service menu.

Go to service menu step 2, Diagnostics, by pressing S4

Press (S3) to activate the following components:

1. Valve (Inlet valve and mix valve (only machines with water softener), display flowsensor value)
2. Valve (Inlet valve, display flowsensor value)
3. Salt (Salt valve, only machines with water softener)
4. Disp (Detergent and surfactant dispenser)
5. Circ (Circulation pump, display shows turbidity in Volts)
6. Heat (Heating element and circulation pump (Max 75°C))
7. Fans (display shows humidity sensor value)
8. Drain (Drain pump, display shows pressure sensor reading; 0.5-3.5 VDC)


CIRCUIT DIAGRAM DW70.1, .3, .4, .5, .C

80 796 55 - 01

This document must not be copied without our written permission, and the contents thereof must not be imparted to a third party nor be used for any unauthorized purpose. Contravention will be prosecuted.
 Askö Appliances AB


Displayer

DW70.1

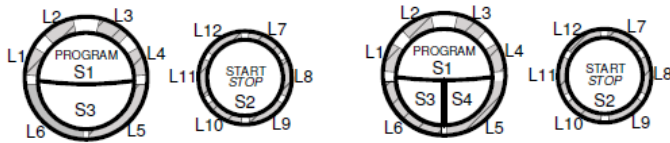

Paneltyp DW70.1, L=LED, S= Tryckknapp

DW70.C

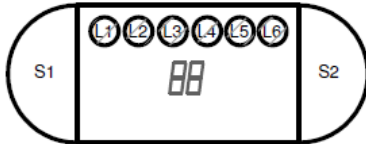


Paneltyp DW70.C, L=LED, S= Tryckknapp

DW70.3




Paneltyp DW70.3 L=LED, S= Tryckknapp

DW70.4



Paneltyp DW70.4, S = Tryckområde

DW70.5



Paneltyp DW70.5 L=LED, S= Tryckknapp

Återställning

- Stäng av huvudströmbrytaren.
- Vänta i åtminstone 5 sekunder.
- Håll nere programknappen (S1) (för DW70.4 håll nere programknappen (S1) och navigationsknappen (S4)).
- Slå på huvudströmbrytaren (S1).
- Släpp programknappen (S1) (för DW70.4, släpp programknappen (S1) och navigationsknappen (S4)).

Servicemeny

- Stäng av huvudströmbrytaren.
- Vänta i åtminstone 5 sekunder.
- Håll program- och startknappen (S1 & S2) intryckta.
- Slå på huvudströmbrytaren.
- Släpp program- och startknappen (S1 & S2).

Variantinställning (ej DW70.4)

- Håll program- och startknapp (S1 & S2) intryckta.
- Slå på huvudströmbrytaren
- Släpp program- och startknapparna (S1 & S2)
- Tryck på startknappen (S2) 3 gånger inom 5 sekunder.
- Välj variant genom att trycka på startknappen (S2) och bekräfta ditt val genom att trycka på programknappen (S1)

Komponenttest:

Gå först in i Servicemenyn.

DW70.1, DW70.3, DW70.5 och DW70.C

Komponenttest:

Tryck på knappen (S1) och stega igenom följande komponenter:

1. Inloppsventil och mixventil (endast maskiner med avhårdare)
2. Inloppsventil
3. Saltventil (endast maskiner med avhårdare)
4. Diskmedel och sköljmedelsdoserare
5. Cirkulationspump
6. Värmeelement och cirkulationspump (Max 75°C)
7. Fläktar
8. Avloppspump

DW70.4

Gå först in i servicemenyn.

Gå först till servicemenyn steg 2 genom att trycka på knappen (S4)

Tryck på knappen (S3) för att aktivera följande komponenter.

1. Ventil (Inloppsventil och mixventil (endast maskiner med avhårdare) display visar intagen vattenmängd i antal pulser; pulsmätare är placerad i luftavbrottet).
2. Ventil (Inloppsventil, visar trycksensorvärde)
3. Salt (Saltventil, endast maskiner med avhårdare)
4. Behållare (Disk- och vätmedelsdoserare)
5. Cirkulation (Cirkulationspump)
6. Värme (Värmeelement och cirkulationspump (Max 75 °C))
7. Fläktar (Displayen visar fuktensorvärde)
8. Avloppspump