

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



SLANT FIN GF210W Owner's Manual

[Shop genuine replacement parts for SLANT FIN
GF210W](#)



[Find Your SLANT FIN Humidifier Parts - Select From 13 Models](#)

----- Manual continues below -----

Slant/Fin[®]

In English	1-10
En Française	11-20
En Español	21-30

Portable Electric Warm Mist Humidifier (with fan)
Germ-Free™ Model GF-200, GF-200B, GF-210 and GF-210W



GF-200 Shown

Patented

- Instructions for Operation, Care and Cleaning
- Limited Warranty

READ AND SAVE THESE INSTRUCTIONS

Printed in CHINA 8/00
Imprimé aux CHINE 8/00
Impreso en CHINA 8/00

Publication GF-200/200B/210/210W-40EFS
Part Number 91-1001

READ ALL OF THE FOLLOWING INSTRUCTIONS BEFORE ATTEMPTING TO OPERATE YOUR HUMIDIFIER. FOLLOWING THESE SIMPLE GUIDELINES FOR USE AND CARE WILL HELP ENSURE YEARS OF DEPENDABLE AND EFFICIENT SERVICE.

IMPORTANT SAFEGUARDS


CAUTION: BECAUSE HIGH TEMPERATURE IS GENERATED IN THIS HUMIDIFIER, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED ESPECIALLY WHEN CHILDREN ARE PRESENT.

WHEN USING ELECTRICAL APPLIANCES, THESE BASIC SAFETY PRECAUTIONS MUST BE FOLLOWED:

1. **DO NOT** operate the humidifier without the water tank.
2. **ALWAYS** use clean, cool tap water to fill the water tank.
3. To avoid risk of fire or shock, **DO NOT** use an extension cord.
4. **DO NOT** handle the unit with wet hands.
5. **NEVER** tilt, move, or attempt to empty the unit while it is operating or plugged in. Shut off, unplug and remove water tank before moving unit.
6. **DO NOT** place the unit close to heated areas, such as near stoves, heaters or in direct sunlight.
7. **DO NOT** operate OUTDOORS. This humidifier is intended for indoor use only.
8. **DO NOT** let water get into the air inlets on the bottom of the enclosure or on the cord or plug.
9. **DO NOT** store or use gasoline or other flammable vapors and liquids near the humidifier.
10. **ALWAYS** make sure the water tank cap and gasket are firmly in place.
11. **DO NOT** touch hot surfaces.
12. **ALWAYS** turn the humidifier off when the water tank is empty or when the unit is not in use. If you turn your unit off for extended periods, **ALWAYS** disconnect the power cord and empty the water tank and base.
13. **ALWAYS** place the unit on a firm flat, level, water resistant surface and arrange the power cord so that the product is unlikely to be upset.
14. **DO NOT** clean the product or service the UV germicidal bulb without disconnecting the power cord.
15. Before connecting to electric power outlet, check your electrical power supply. It must be 120 volts A.C. (alternating current). The outlet may be 15 amp or 20 amp. The circuit must be of adequate size and must be protected by fuse or circuit breaker.

16. This item has a polarized plug. If the plug does not fit fully in the outlet, do not force it. If it does not fit, contact a qualified electrician.
17. **DO NOT** attempt to remove MIST NOZZLE within 15 minutes after the humidifier has been turned to the "OFF/RESET" position and unplugged. **DO NOT** place hands or face directly in front of the mist nozzle while the unit is in operation.
18. Place unit in an area where it is not likely to be disturbed.
19. Before using the unit, check the power cord and plug.
20. **DO NOT** allow the MIST NOZZLE to spray directly at face. Direct mist aimed at wall or ceiling may cause damage to wallpaper.
21. This humidifier requires daily maintenance.
22. Refer to CLEANING AND MAINTENANCE for details.
23. **NEVER** clean humidifier in any way other than specified by this manual.

SAVE THESE INSTRUCTIONS

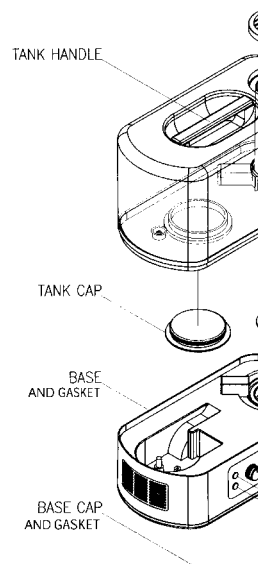

GF-200

WEEKLY CLEANING AND MAINTENANCE ADVISORY

At least weekly cleaning is recommended, when the unit has been in use. Regular cleaning prevents mineral scale buildup in the hot water reservoir. It also helps prevent buildup of bacteria, molds or other micro-organisms in the tank or system. This ensures that your humidifier will operate at maximum efficiency. (See page 6 for full cleaning instructions.)

HOW YOUR SLANT/FIN WARM MIST HUMIDIFIER WORKS

This model humidifier uses a two-step approach to eliminate potentially harmful microorganisms from the water before they are spread with the mist into the air. The first step uses a UV germicidal bulb, located inside the base of the humidifier, that shines on the water as it passes from the cold water reservoir to the hot water reservoir. The second step is the boiling action that takes place in the hot water reservoir just before the mist is distributed by fan to the air in the room. These two methods limit the likelihood of harmful microorganisms getting into the atmosphere and being breathed by you, your family and pets.

CONTROL PANEL ON-OFF SWITCH

When the switch is turned to the "ON" setting and the unit is plugged in, the power is on.

REPLACE UV BULB

If the "REPLACE UV BULB" signal light is illuminated during normal use, the bulb must be replaced with the same special 3.5W bulb. See the enclosed order form. The UV germicidal bulb will operate at maximum output for approximately 2,000 hours (typically 1 to 2 years of normal operation). The UV germicidal bulb may operate longer than 2,000 hours but at a reduced output. To keep your humidifier operating at maximum efficiency it is recommended that the UV germicidal bulb be replaced after 2,000 hours of use.

GF-200



GF-200

REFILL/RESET INDICATOR - When filling. See the section "Filling the Water Tank". If the indicator is lit when the unit is placed on base, see TROUBLESHOOTING.

RELATIVE HUMIDITY CONTROL - To operate humidity is desired, the control should be turned to "LO"; and if higher humidity is desired, clockwise.

NOTE: When you unpack your humidifier, you may notice condensation on some surfaces. This is normal as every humidifier has moisture on it. Carefully unpack humidifier and remove all condensation.

OPERATING INSTRUCTIONS

1. Fill the Water Tank according to the instructions on the humidifier base.
2. Plug the power cord firmly and completely into the wall outlet.
3. Turn the switch to the "ON" position. It will take 2 minutes to warm up and begin to operate.
4. When the water tank is empty, (after approximately 24 hours) the "REFILL/RESET WHEN LIT" lamp will illuminate. Refer to the "FILLING THE WATER TANK" section for instructions.
5. Whenever the water falls below the level, the heating element will shut off and stop heating the water.
6. Mist nozzle may be adjusted manually (GF-200 only) NEVER point at wall.
7. Mount humidifier on drip tray if using under a bed. The tray that could possibly be damaged by accumulation of condensation.

FILLING THE WATER TANK

1. Before filling the water tank, turn the ON-OFF switch to the "OFF" position and unplug unit.
2. Remove water tank from base, turn the cap by turning counterclockwise. Fill tank with water. Replace the tank cap by turning clockwise.
3. Carefully pick up tank, since it will be hot.
4. Place water tank on base. Make sure the tank is seated properly. Humidifier will not work correctly.

USING THE MEDICATION CUP/MIST

- In order to add a medicated vapor to the mist, follow these steps:
1. Turn the ON-OFF switch to the "OFF" position and unplug unit to cool.
 2. Lift the medication cup.
 3. Carefully add liquid medication; DO NOT add more than 1/2 cup.
 4. Carefully replace the medication cup.
 5. Turn the ON-OFF switch to the "ON" position.
 6. After use, remove the cup from the unit and wash with warm water.

WARNING:

DO NOT use any liquid medication other than those specifically recommended for use with a steam vaporizer or warm mist humidifier. DO NOT pour medication directly into the mist outlet grille openings nor add it to the water in the tank or tray.

MINERAL ABSORPTION PAD INSTRUCTIONS

Warm mist humidifiers do not spread fine mineral dust into the air that you breathe nor on your furniture, the way that other type humidifiers do. The mineral dust remains trapped in the humidifier hot water reservoir. Use of Mineral Absorption Pads will play a major role in capturing and removing minerals from hot water reservoir, and preventing a stubborn mineral buildup.

1. Before starting humidifier, place mineral absorption pad in the hot water reservoir. After the humidifier has been operating, the water will become HOT, and CAUTION should be exercised when handling mineral absorption pad. It is best to allow humidifier water to cool down, and to use tongs or long tweezers when handling pad.
2. The useful life of the mineral absorption pad will vary, depending on the mineral content of the water used. In areas of moderate mineral content water supply, the mineral absorption pad should be changed after approximately (3) weeks of continuous use. If the water is "Hard Water", the pad should be changed more frequently. The best way to tell when the pad should be changed is to examine it AFTER the water has cooled down, to see if it is still soft and pliable. When the pad is near the end of its life, it becomes stiff and hard and should be replaced with a new pad. Another sign to change pad is when scale begins to buildup on interior of hot water reservoir.

CLEANING AND MAINTENANCE

Water contains minerals and other particles. During operation most of these minerals will remain in the water reservoir. Gradual buildup of deposits will coat the hot water reservoir and reduce its efficiency. The importance of routine cleaning and care cannot be over-emphasized. Hard water contains more minerals and other particles.

CLEANING INSTRUCTIONS

Failure to perform the necessary cleaning steps will damage unit.

1. Before cleaning, set CONTROLS to "OFF" position and unplug unit.
2. Remove water tank from humidifier base, and drain water from tank.
3. Allow at least 15 minutes after shutting unit "OFF" before moving base, or removing mineral absorption pad. Remove mineral absorption pad from hot water reservoir using tweezers or tongs to prevent burns from hot water. When the cleaning procedure is completed, replace mineral absorption pad. To drain water from humidifier base, grasp with both hands and tilt to the side, draining water into the sink. BE CAREFUL NOT TO HAVE DRAINING

WATER FALL INTO CONTROLS OR in any manner other than indicated. With running faucet. Turn the base upside counterclockwise. Clean out any foreign matter from the fitting from which the cap was removed. Tighten cap tightly by hand. Pour a small amount of vinegar into the cap and check for leaks from this cap unit.

4. Pour about 1 cup of white vinegar into the cap and let sit for only 20 to 30 minutes.
5. Hold the base of the humidifier over the sink and pour the vinegar. Fill the cold and hot water reservoir with water. Remove all traces of the vinegar. Remove the cap from the hot water reservoir and from the two metal wires (using a small brush with stiff bristles) using a small brush (buildup is due to water hardness. This maintenance will be needed. Empty the cap and set it aside. DO NOT ALLOW WATER TO ENTER THE HOT WATER RESERVOIR, BASE OR ANY OTHER OPENINGS, OR TO GET ON THE HOT WATER RESERVOIR.
6. Disinfect the water tank using a solution of 1/2 cup of chlorine bleach in 1 gallon of water. Let stand for every few minutes to wet all surfaces. Rinse thoroughly until all of the bleach smell is gone. Drain the water and replace it onto the humidifier.
7. NEVER use any metal or hard object to clean the hot water reservoir. NEVER cause scratching of the plastic parts. NEVER use gasoline, kerosene, paint thinner or other household solvents to clean the hot water reservoir. NEVER use a metal part of the hot water reservoir. A metal part only. NEVER use gasoline, kerosene, paint thinner or other household solvents to clean the hot water reservoir.
8. Each day the reservoir and tank should be filled with fresh tap water.
9. To clean exterior surfaces, use a soft cloth wrung-out damp cloth. Rinse and wipe the exterior surfaces again. Finally, wipe with a dry cloth before plugging the electrical cord into the outlet.
10. Plug in the unit and resume normal use.

CHANGING THE UV GERMICIDAL BULB

1. If the "REPLACE UV BULB" indicator illuminates during normal use, it is time to change the UV germicidal bulb, which is a special 3.5W bulb.
2. Turn the ON-OFF switch to the "OFF" position, unplug it and allow it to cool.
3. Remove the water tank from the base of the humidifier.
4. Place the base of the humidifier over the sink and tilt the unit to remove any remaining water.
5. Carefully turn the base of the humidifier over and place it upside down on a flat level surface. You will see a door that is closed with a screw.
6. Using a Phillips head screwdriver, carefully turn the screw counterclockwise until the screw separates from the door.
7. Open the door. The UV germicidal light bulb will be visible.
8. Take a replacement 3.5W UV germicidal bulb that you purchased from Slant/Fin Corporation or another supplier and change the bulb. To prolong the life of the bulb, limit your direct contact with the glass of the bulb by using a cloth or tissue to screw it into place.
9. When the new bulb is in place, close the door and replace the screw by using your Phillips head screwdriver and rotating it clockwise until it is just tight. **DO NOT OVER TIGHTEN.**
10. Turn the unit upright, place the water tank on top of the base of the humidifier, plug the unit in, and turn the ON-OFF switch to the "ON" position. The "REPLACE UV BULB" indicator should no longer be lit.



IMPORTANT NOTE: Even though you will not receive maximum germicidal effects, you can still use your GF-200 and GF-210 humidifier until the replacement bulb arrives.

STORAGE TIPS

If you do not plan to use your humidifier as during the summer months, it is important to help prevent problems from developing.

1. Clean your humidifier as instructed in "Maintenance".
2. Make sure all water is emptied from reservoirs.
3. Dry your unit thoroughly.
4. Leave the tank cap off to expose the tank.
5. Pack your humidifier in its original case.

SERVICE

DO NOT attempt to repair this humidifier. If you have a problem with the unit during the warranty, contact Slant/Fin by telephone at 1-800-345-7273. Have other repairs professionally done.

GLOW

It is normal to see the humidifier glow when it is on. This glow results from the internal illumination of the UV bulb. However, no ultraviolet light, even at this distance, is emitted from the UV-proof cabinet into the room.

TROUBLESHOOTING

TROUBLE	POSSIBLE CAUSE
Unit does not mist	Unit is not plugged in Power failure Water tank empty Power switch not on Unit not reset after power failure
	Water tank not properly located on base Humidity level set too low
Water leaks from unit	Drain cap, drain tube, or tank cap or tank is missing or improperly positioned.
Moist air output low	Mineral buildup in reservoir.

LIMITED WARRANTY

IMPORTANT NOTICE

PLEASE CLEAN THIS GERM-FREE HUMIDIFIER AT LEAST ONCE A WEEK BY FOLLOWING THE CLEANING INSTRUCTIONS IN THE OWNER'S MANUAL. FAILURE TO REGULARLY CLEAN THIS GERM-FREE HUMIDIFIER WILL RESULT IN A BUILDUP OF MINERAL DEPOSITS WHICH WILL CAUSE THE UNIT TO CEASE TO OPERATE. IF THE UNIT FAILS TO FUNCTION BECAUSE IT HAS NOT BEEN CLEANED, THIS WILL VOID THE WARRANTY.

To the original purchaser or gift recipient of this humidifier.

1. If your Slant/Fin humidifier fails in normal use because of a manufacturing defect within 90 days from the date of original purchase, Slant/Fin will repair the humidifier at no charge for parts, labor or shipment back to you (see instructions for returning unit below).
2. After the first 90 days, if a component part fails because of a manufacturing defect, Slant/Fin will repair or replace that component part up to 3 years from purchase date. There will be no charge for the component part or shipment back to you, but Slant/Fin reserves the right to charge for installation labor.
3. This warranty does not cover any product which in Slant/Fin's judgment has been (1) damaged as a result of accident, misuse or abuse (2) used for a purpose for which it was not designed, or (3) repaired or altered in any way that adversely affected its performance or reliability. This warranty does not cover scratches and wear of surfaces.
4. UV bulb replacement is a normal maintenance procedure and is therefore not covered under this warranty unless the bulb is found to be defective.
5. For repairs, return humidifier to address shown below with dated sales receipt. The cost of shipment to Slant/Fin must be paid by the consumer. Return to: Consumer Service Dept., Slant/Fin Corporation, 40 Garvies Point Road, Glen Cove, NY 11542. In Canada: Slant/Fin LTD/LTEE, 6450 Northam Drive, Mississauga, Ontario L4V 1H9.
6. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.
7. Slant/Fin makes no express warranties other than the warranties contained herein. Slant/Fin's sole obligation in the event of a breach of any implied warranty (including, but not limited to, implied warranties of merchantability and fitness for a particular purpose) is limited to repair or replacement, and all such warranties are limited in duration to the time periods after the date of original purchase as stated above. The warranty does not cover claims for incidental or consequential damages resulting from a breach of any express or implied warranty or any other reason including damages due to accident, abuse, lack of responsible care, the affixing of any unauthorized attachment, loss of parts, or use at a voltage other than specified.

CUSTOMER SERVICE #: 1-800-775-4552

Slant/Fin[®]

Humidificateur électrique portable
à atomisation de brumes tièdes
Germ-Free^{MD} Modèle GF-200, C



GF-200

- Instructions sur le fonctionnement et le nettoyage
- Garantie limitée

LIRE ET CONSERVER