

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



HAMILTON BEACH 47214 Owner's Manual

[Shop genuine replacement parts for HAMILTON
BEACH 47214](#)



[Find Your HAMILTON BEACH Small Appliance Parts - Select From 252 Models](#)

----- Manual continues below -----

Hamilton Beach®

Coffeemaker

READ BEFORE USE


Cafetière

LIRE AVANT L'UTILISATION




Cafetera

LEA ANTES DE USAR

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

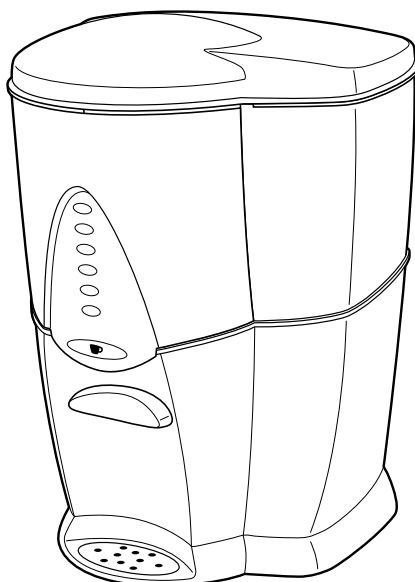

English.....	2
USA: 1.800.851.8900	
Visit hamiltonbeach.com for delicious recipes, tips, and to register your product online!	
Français.....	12
Canada : 1.800.267.2826	
Consulter hamiltonbeach.ca pour les recettes délicieuses, conseils pratiques, et pour enregistrer votre produit!	
Español.....	22
México: 01.800.71.16.100	
¡Visite hamiltonbeach.com.mx para recetas deliciosas, consejos, y para registrar su producto en línea!	

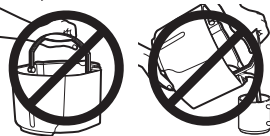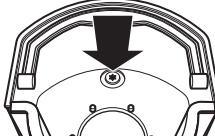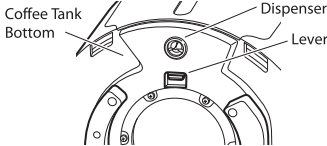IMPORTANT!		
<p>Never Use Coffee Tank to Pour Hot Coffee or Carry Hot Coffee.</p>  <p>Handle Coffee Tank when it holds only cold water.</p>	<p>Inspect Coffee Tank Seal Before Brewing, to Prevent Hot Coffee Leaks.</p>  <p>Seal must be flush with bottom of Coffee Tank to form secure seal. Test for leaking dispenser with cold water.</p>	<p>Clean Coffee Tank Monthly, to Prevent Hot Coffee Leaks.</p>  <p>Before brewing, Coffee Tank must be free of grounds and foreign material. To flush, turn it over, press lever and run water for 30 seconds through dispenser.</p>
Additional Information		
<ul style="list-style-type: none"> • If overflow occurs: let unit, coffee and grounds cool completely before attempting any clean-up. • Use only brand-name, high-quality filters. • Use only 3/4 tablespoon of ground coffee for each cup of water. • Use coffeemaker cleaner to prevent hard water deposits that affect coffeemaker performance. Clean monthly. • Do not clean Coffee Tank in dishwasher. • Read instructions before using. 		
<p>Call 800.851.8900 (US) or 800.267.2826 (CAN) with questions or to order seals/coffeemaker cleaner.</p>		

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. Care must be taken, as burns can occur from touching hot parts or from spilled, hot liquid.
3. To protect against electric shock, do not place cord, plug or BrewStation® in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when either the BrewStation® or clock is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. Scalding may occur if the lid is lifted during the brewing cycle. Do not open lid until coffeemaker has cooled completely.
7. BrewStation® must be operated on a flat surface away from the edge of counter to prevent accidental tipping.
8. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter or touch hot surfaces, including stove.
12. The coffee tank is designed for use with this BrewStation®. It must never be used on a range top or in a microwave oven.

13. Do not place BrewStation® on or near a hot gas or electric burner or in a heated oven.
14. To disconnect BrewStation®, turn controls to OFF, then remove plug from wall outlet.
15. **WARNING!** To reduce the risk of fire or electric shock, do not remove the bottom cover. No user serviceable parts are inside. Repair should be done by authorized service personnel only.
16. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS!

Other Consumer Safety Information




This appliance is intended for household use only.

WARNING! Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or using an adaptor. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.


The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the BrewStation®. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

To avoid an electrical circuit overload, do not use another high wattage appliance on the same circuit with your BrewStation®.

Parts and Features

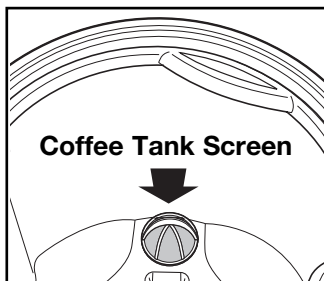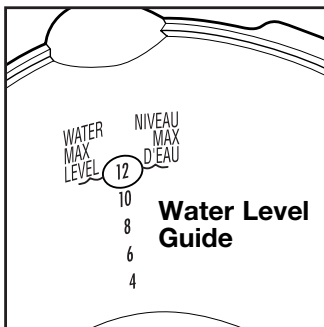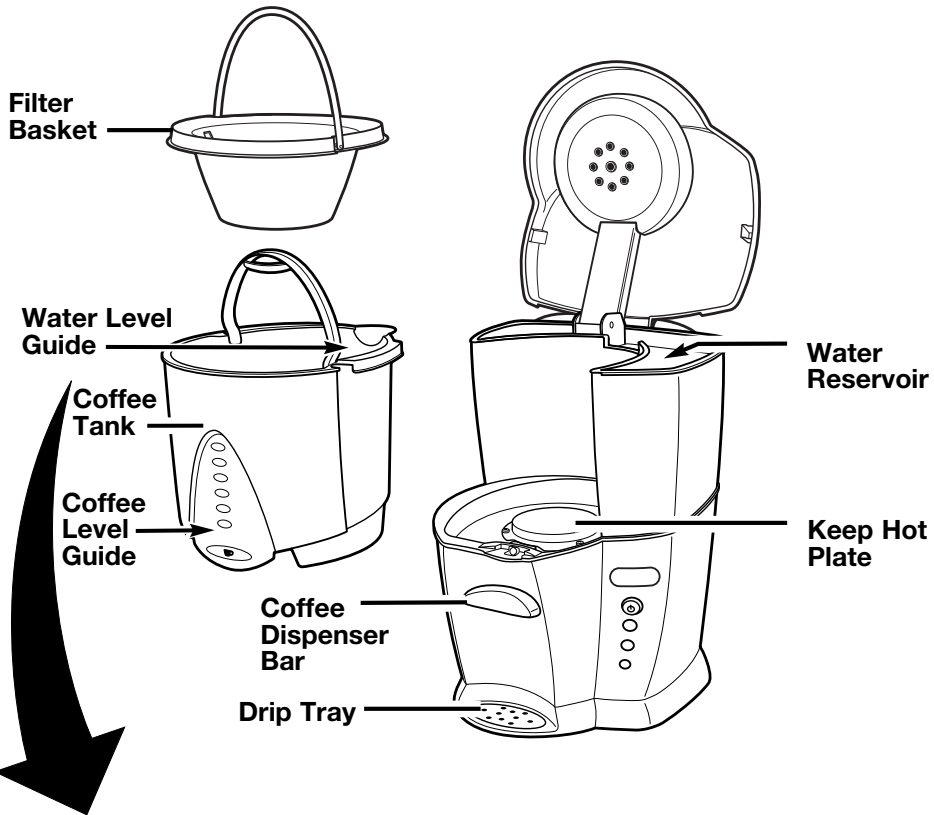


Optional Accessories

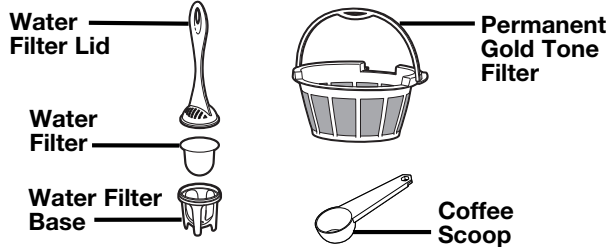

To Order Call:
 1.800.851.8900 (U.S.)
 1.800.267.2826 (Canada)
 01.800.71.16.100 (Mexico)
 or visit hamiltonbeach.com


How to Make Coffee

1. To ensure best possible taste, before

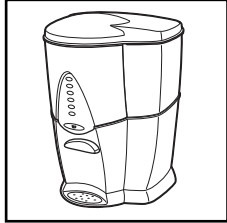


first use, clean the unit by brewing at least one complete cycle using water only (no coffee).

5. Place coffee tank on keep hot plate.

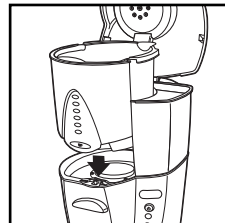


2. For optional features only:


- A.) If your model has a water filter, follow steps listed in "Optional Features." A water filter is not required to make coffee in the BrewStation®.

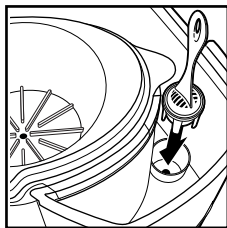


- B.) If your model has a clock, set clock before first use by pressing **H** and then **M**. Follow the instructions in "Optional Features."

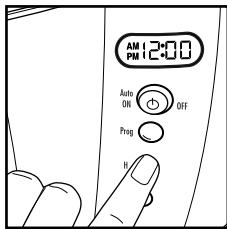


3. Fill coffee tank with desired amount of cold water. Holding coffee tank level, use **Water Level Guide** on coffee tank to ensure correct amount of water. **Do not** exceed the 12 cup level.

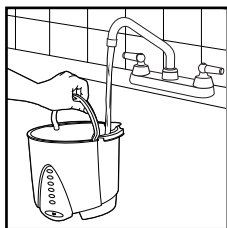

4. Pour water from coffee tank into water reservoir.

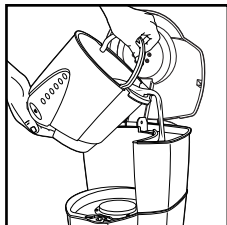

6. For each cup of coffee being made, neatly place 3/4

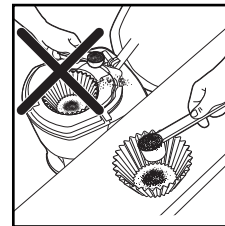


tablespoon of automatic drip ground coffee in a good quality cupcake (basket) style filter (8 to 12


cup size). A permanent filter may also be used. **Do not get any grounds inside the coffee tank.**

7. Close lid; make sure it is fully closed.

8. Clock model: press **Auto/ON/OFF** twice for coffee now and light will glow. When button is pressed only once, the light will blink slowly. Press button once more to brew. To brew later, see "To Program Automatic Brew" in "Optional Features."

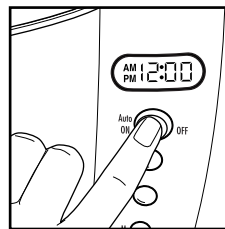

Non-clock model: press **ON/OFF** button once for coffee now and light will glow.

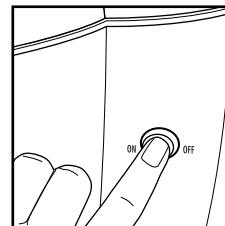


How to Make Coffee (cont.)

9. DO NOT open lid during and just after brewing to preserve the coffee's heat and flavor, and to avoid scalding from hot coffee and steam. Do not remove coffee tank while brewing light is on or coffee is hot.



10. To dispense coffee, press dispenser bar with a cup. Remove cup when desired amount has been dispensed. Coffee may be dispensed during and after brewing. If BrewStation® overflows, allow the unit, coffee and grounds to cool before cleaning the unit, coffee or grounds.

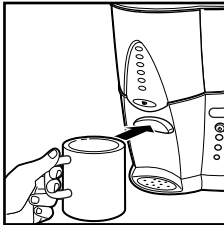


11. The BrewStation® features a two-hour automatic shutoff. To turn off sooner, press the **Auto/ON/OFF** button and indicator light will go out.
12. When finished, push **Auto/ON/OFF** button to turn off, then unplug BrewStation®. Do not open coffee maker until it has been turned off. Always allow to cool before cleaning. Never use coffee tank to pour or carry hot coffee. Handle coffee tank only when holding cold water for filling water reservoir and to clean tank after BrewStation® has been shut off and the coffee is cool.

NOTE: Care should be taken when handling the coffee tank after brewing.


Optional Features

To Set Clock:

1. Plug in BrewStation®. Numbers on the clock will flash until you set time of day or one minute elapses.
2. To set time of day, press **H** button to set current hour with AM or PM as indicated on left of the clock.

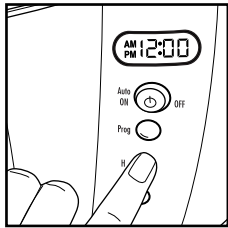


3. Press **M** button until you reach the current time.


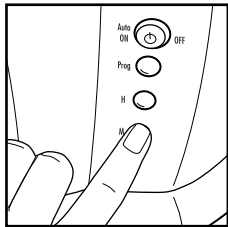


To Program Automatic Brew:


1. Make sure clock is set for correct time of day.
2. Press **Prog** button and digits will flash.

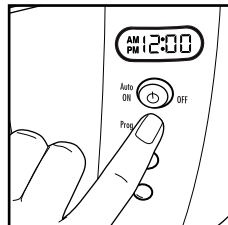

3. Press **H** and **M** buttons until desired brewing time is reached.

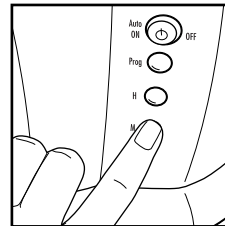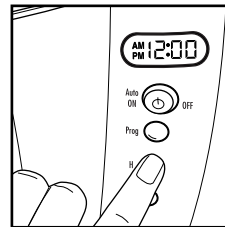

4. Press **Prog** button to confirm setting. Digits will stop flashing and return to set time of day.

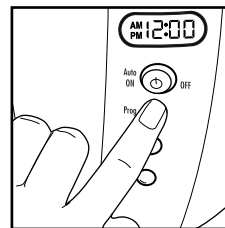

5. Press **Auto/ON/OFF** button once and "PRO" will be shown in display and the ON/OFF light will flash indicating the brew cycle will begin at the set time.


NOTE: If the **Auto/ON/OFF** button is pushed twice, the **ON/OFF** light will glow and brewing will begin immediately. Simply press the **Auto/ON/OFF** button once to turn off and once more to set programming mode.

6. Follow steps 3-12 in "How to Make Coffee."

Optional Accessories

Water Filter

1. Before first use, soak water filter in cold tap water for 15 minutes. Then rinse under cold running tap water for 15 seconds.

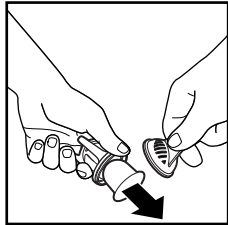

2. Insert filter in base. Snap lid onto base.
3. Place filter and filter base in reservoir.
4. Replace after 60 brew cycles of coffee. Set your replacement month by aligning the arrow with the month you expect will represent 60 brew cycles.
5. To replace, pull up on water filter lid while holding filter base, then turn filter base to allow filter to drop out.

Permanent Filter


The permanent filter takes the place of disposable paper filters. Simply place the permanent filter in the filter basket. Rinse the permanent filter in hot water before first use. Clean the permanent filter under hot running water and let dry. The permanent filter can be placed in top rack of dishwasher.

Cleaning Instructions


1. Remove optional water filter.
2. Pour 1 pint (2 cups/500 ml) vinegar into water reservoir.
3. Press ON. **Turn OFF after 20 seconds and wait 30 minutes.** Press ON. Turn OFF when finished.
4. When cool, dispense several cups before emptying and rinsing reservoir.
5. Run 2-3 more brew cycles with CLEAN WATER only. Allow to cool between cycles.

Cleaning Instructions (cont.)


To Clean Coffee Tank Filter:

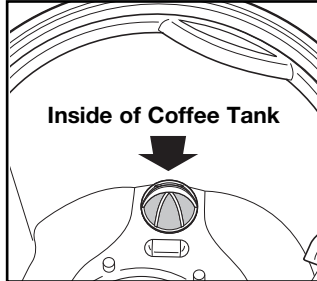

1. Lift up on screen to remove it from coffee tank.

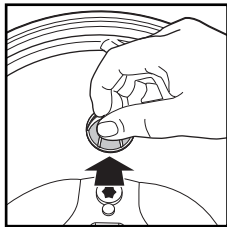

2. The screen snaps back into position over the seal in coffee tank.

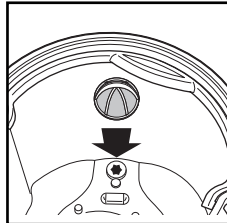

To order replacment screens:


1.800.851.8900 (U.S.)

1.800.267.2826 (Canada)

01.800.71.16.100 (Mexico)

or visit hamiltonbeach.com

To Clean Coffee Grounds or Foreign Matter from Coffee Tank:

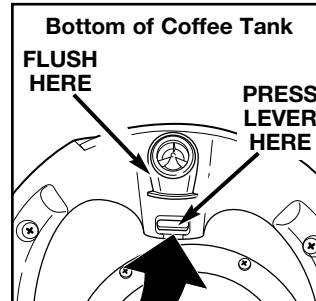

Over the sink, turn the coffee tank upside down then press lever and flush with water for 30 seconds to remove coffee grounds.

To Clean Coffee Tank, Drip Tray and Filter Basket:

Coffee tank, drip tray, and filter basket should be washed in hot, soapy water. Drip tray and filter basket may be washed on top rack of dishwasher. **Do not clean coffee tank in dishwasher.**

Troubleshooting

PROBLEM	PROBABLE CAUSE
Coffee leaks from dispenser.	<ul style="list-style-type: none"> • Coffee grounds trapped in coffee tank dispensing mechanism under ring in coffee tank. See “To Clean Coffee Grounds or Foreign Matter from Coffee Tank.”
Coffee tastes bad.	<ul style="list-style-type: none"> • Coffeemaker needs cleaning. See “Cleaning Instructions.” • Coffee ground other than automatic drip. See “How to Make Coffee.” • Coffee-to-water ratio unbalanced. See “How to Make Coffee.” Adjust for personal preference. • Poor water quality. Use filtered or bottled water to make coffee.
Coffee not brewing/ unit will not turn on.	<ul style="list-style-type: none"> • Clock model requires pressing Auto/ON/OFF button twice. Light should have a steady glow. • Mineral deposits have built up. Clean the coffeemaker. See “Cleaning Instructions.” • Water reservoir is empty. • Unit is unplugged. • Power outage. • Power surge. Unplug; then plug the unit back in. • Clock blinking in program mode. Press PROG once then press Auto/ON/OFF until indicator light glows. • Clock model requires reset after power outage.
Coffee brews slowly/ coffee stops brewing before brew cycle is completed.	<ul style="list-style-type: none"> • Coffeemaker needs cleaning. Clean the coffeemaker at least every 30 days to maintain proper performance. • Excessive amounts of coffee. • Coffee ground too coarsely or too finely. Set grinder to automatic drip grind. • More than one paper filter in basket. • Poor quality paper filter.

Questions?

You can call us toll free at
1-800-851-8900 in US
1-800-267-2826 in Canada

Limited Warranty

This warranty applies to products purchased in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use.

We exclude all claims for special, incidental and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the US or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.