

This Owner's Manual is provided and hosted by [Appliance Factory Parts](#).



# LG WD-1243RHD Owner's Manual

[Shop genuine replacement parts for LG WD-1243RHD](#)



[Find Your LG Washer Parts - Select From 393 Models](#)

----- Manual continues below -----



Website:<http://www.LGService.com>  
E-mail:<http://www.LGService.com/techsup.html>

# WASHING MACHINE SERVICE MANUAL

## CAUTION

READ THIS MANUAL CAREFULLY TO DIAGNOSE  
TROUBLECORRECTLY BEFORE OFFERING SERVICE.

**MODEL : WD-3243RHD  
WD-3245RHD**



JUL. 2001 PRINTED IN KOREA

P/No.:3828ER3008S

---

# CONTENTS

1. SPECIFICATION.....	3
2. FEATURES & TECHNICAL EXPLANATION .....	4
3. PARTS IDENTIFICATION .....	6
4. INSTALLATION.....	7
5. OPERATION.....	10
6. WIRING DIAGRAM / PROGRAM CHART .....	12
7. TROUBLESHOOTING.....	13
7-1.BEFORE PERFORMING SERVICE .....	13
7-2.QC TEST MODE.....	13
7-3.HOW TO KNOW THE WATER LEVEL FREQUENCY.....	13
7-4.ERROR DISPLAY .....	14
8. ERROR DIAGNOSIS AND CHECK LIST .....	16
8-1. DIAGNOSIS AND ANSWER FOR ABNORMAL OPERATION .....	16
8-2. FAULT DIAGNOSIS AND TROUBLESHOOTING .....	19
9. DISASSEMBLY INSTRUCTIONS .....	29
10. EXPLODED VIEW AND PARTS LIST .....	39
10-1. THE EXPLODED VIEW OF CABINET ASSEMBLY .....	39
10-2. THE EXPLODED VIEW OF CONTROL PANEL AND DISPENSER ASSEMBLY .....	40
10-3. THE EXPLODED VIEW OF DRUM AND TUB ASSEMBLY .....	41
10-4. THE EXPLODED VIEW OF DRYER .....	42
※ APPENDIX (Replacement parts list).....	43


# 1. SPECIFICATION

ITEM		WD-3243RHD/WD-3245RHD
POWER SUPPLY		120-127V~ 60Hz
PRODUCT WEIGHT		156 1/2 lbs. (71 kg)
ELECTRICITY CONSUMPTION	WASHING	140W
	SPIN	300W
	FAN MOTOR	25W
	DRAIN MOTOR	40W
	WASH HEATER	1000W
	DRY HEATER	1200W
REVOLUTION SPEED	WASH	45rpm
	SPIN	No spin/400/600/800/1000/1200 rpm
OPERATION WATER PRESSURE		4.5 ~ 145 PSI (30 ~ 1000 KPa)
CONTROL TYPE		Electronic
WASH CAPACITY		14 1/2 lbs. [6.5 kg]
DRY CAPACITY 3.0kg		6 5/8 lbs. [3.0 kg]
DIMENSION		600 × 600 × 850mm
WASH PROGRAM		Cotton, Permant Press, Quick, Delicate, Wool , Rinse+Spin
OPTION		Extra Wash, Rinse Pluse
DOOR SWITCH TYPE		Automatic type by pressing <b>Door Open</b> botton
WATER LEVEL		8 steps (by sensor)
RESERVATION		From 3 hours to 19 hours
SENSING OF THE LAUNDRY AMOUNT		Adapted
FUZZY LOGIC		Adapted
DISPLAY OF THE REMAINING TIME		Adapted
ERROR DIAGNOSIS		10 items
POWER AUTO OFF		Adapted
CHILD LOCK		Adapted
AUTO RESTART		Adapted
RAPID		Adapted

## 2. FEATURES & TECHNICAL EXPLANATION

---

### 2-1.FEATURES

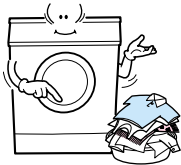


#### ■ Automatic process from washing to drying.

Automatic process from washing to drying can be selected easily.


Washing capacity : 14  $\frac{1}{2}$  lbs. [6.5 kg]

Drying capacity : 6  $\frac{5}{8}$  lbs. [3.0 kg]

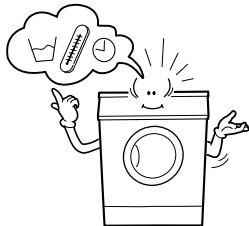


#### ■ More economical by Intelligent Wash System

Intelligent Wash System detects the amount of load and water temperature, and then determines the optimum water level and washing time to minimize energy and water consumption.

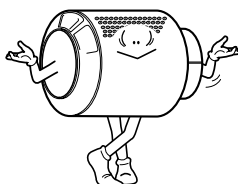


#### ■ Direct Drive system

The advanced Brushless DC motor rotates the Drum directly without belt and pulley.

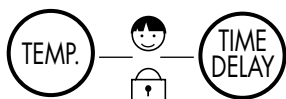

#### ■ Child-Lock

The Child-Lock system has been developed to prevent children from pressing any button to change the program during operation.

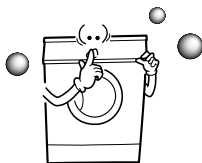

#### ■ Low noise speed control system

By sensing the amount of load and balance, automatically distributes load evenly to minimize the spinning noise level.




#### ■ Auto Restart

Although the washing machine is turned off by a power failure, it restarts automatically where it stopped when power is supplied again. And it will be the same if the machine unplugged and is plugged in again.

---

## 2-2.DETERMINE WASHING TIME BY FUZZY LOGIC

To get the best washing performance optimal time is determined by sensing of water temperature, selected washing temperature and laundry amount.

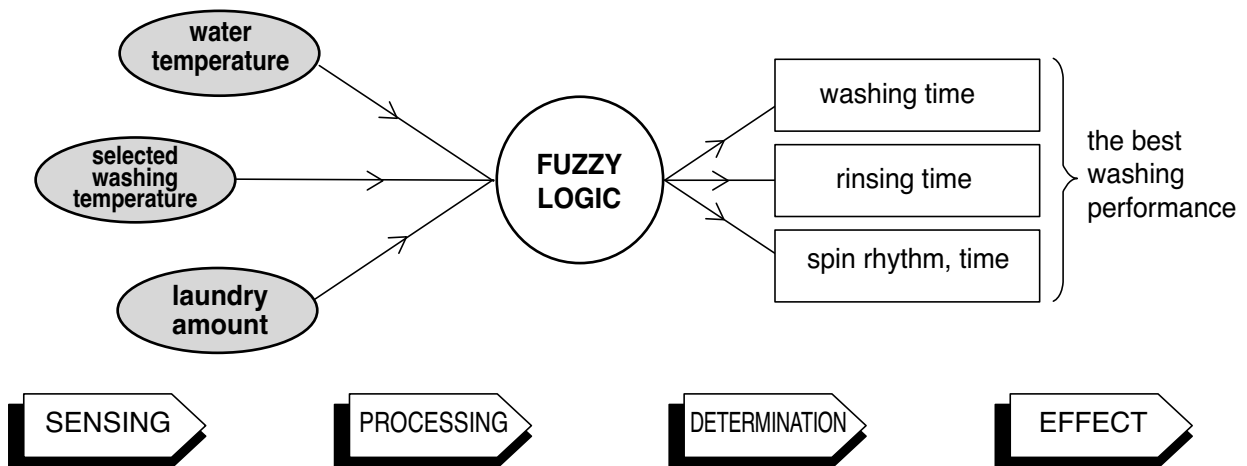


## 2-3.WATER LEVEL CONTROL

- This model adopts a pressure sensor which can sense the water level in the tub.
- Water supply is stopped when the water level to the preset level, then the washing program proceeds.
- Spinning does not proceed until the water in the tub reduces a certain level.


## 2-4.CONTROL OF DOOR OPEN

- The door can be opened by pressing **DOOR OPEN** button after finishing program.
- When the revolution of drum is stopped and in case water level is below level 2, door can be opened by pressing the **DOOR OPEN** button.
- If there is no power, the door can be opened by pulling the door strap.  
(If the water level is high, first drain the water by pulling out the hose cap)


# 3. PARTS IDENTIFICATION

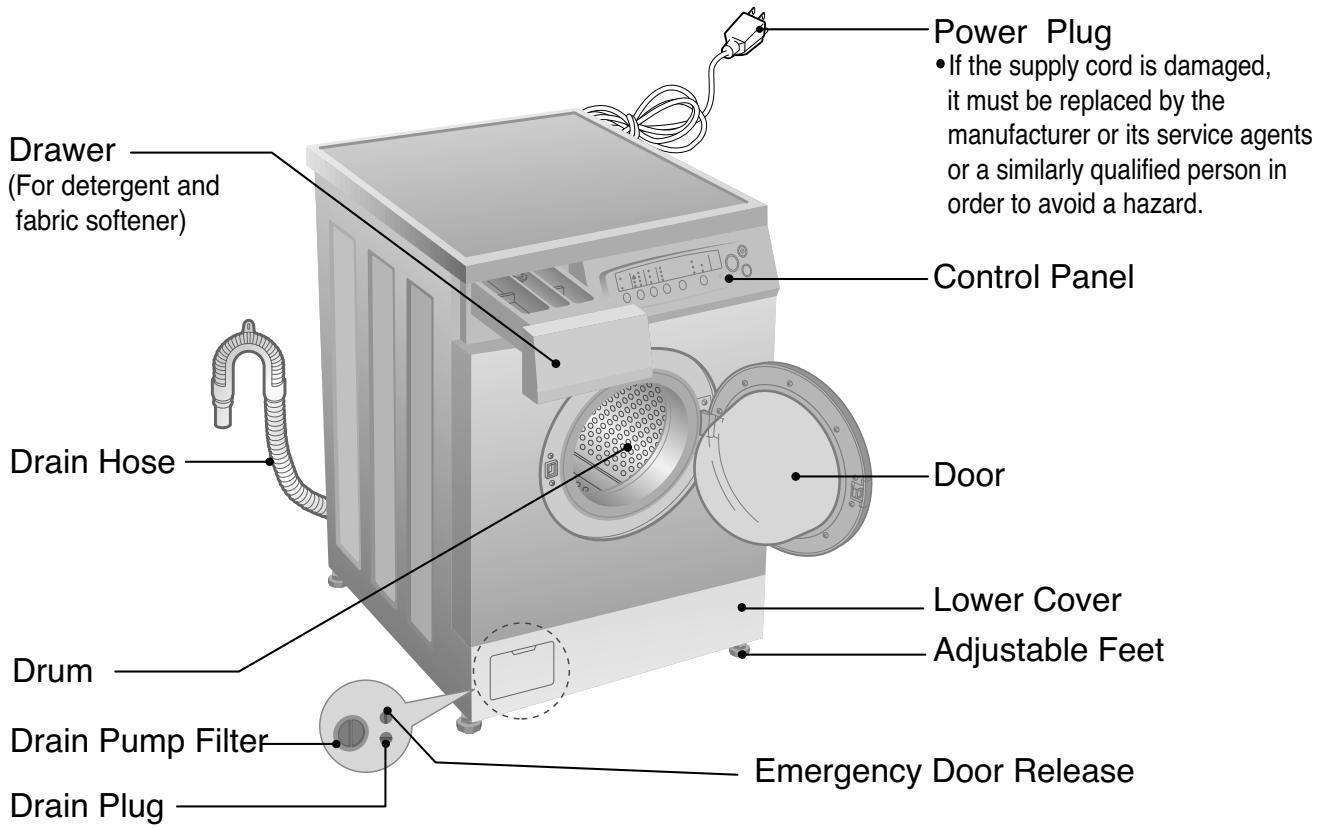

## ■ ACCESSORIES

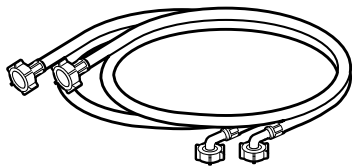

Inlet hose(1 each)

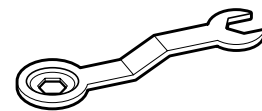




Wrench

# 4. INSTALLATION

- ① Before servicing ask trouble the customer, what the trouble is.
- ② Check the adjustment (power supply is 120-127V~ remove the transit bolts....)
- ③ Check the troubles referring to the troubleshooting.
- ④ Decide service steps referring to disassembly instructions.
- ⑤ Then, service and repair.
- ⑥ After servicing, operate the appliance to see whether it works O·K or NOT.


## ■ STANDARD INSTALLATION

The appliance should be installed as follows.

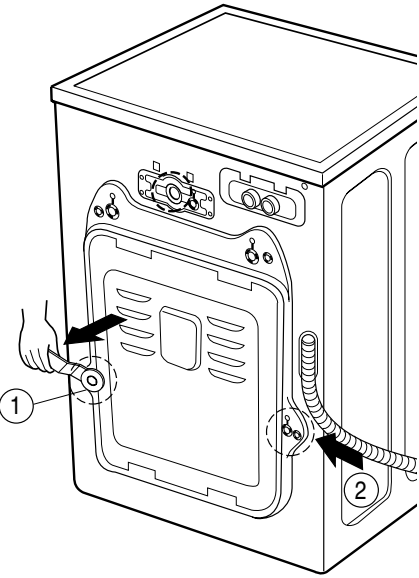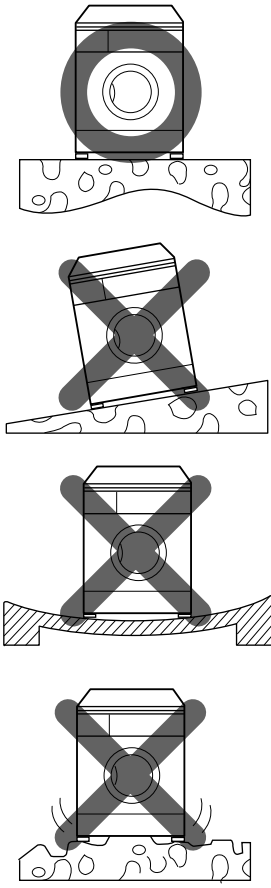
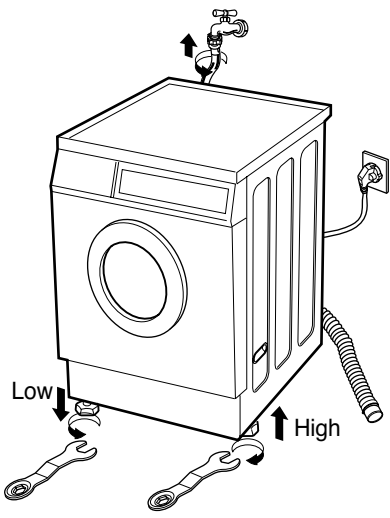
REMOVE THE TRANSIT BOLTS	INSTALL THE APPLIANCE ON FLAT AND FIRM SURFACE	ADJUST THE HORIZONTAL
<ul style="list-style-type: none"> <li>• Remove the transit bolts (3EA: ①) with supplied spanner.</li> <li>• Keep the transit bolts and spanner for future use.</li> <li>• Insert the 3 caps provided into the hole</li> </ul> 		<ul style="list-style-type: none"> <li>• Turn the leveling feet to set the appliance horizontally.</li> </ul>  <ul style="list-style-type: none"> <li>• The appliance goes up by rotating the feet clockwise.</li> <li>• The appliance come down by rotating the feet counterclockwise.</li> </ul>

## ■ HOW TO CONNECT INLET HOSE

- Check that the rubber washer is inside of the valve connector.
- Connect the inlet hose firmly to prevent leak.


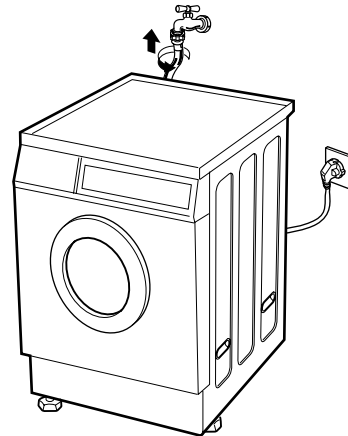


## ■ CONNECT DRAIN HOSE

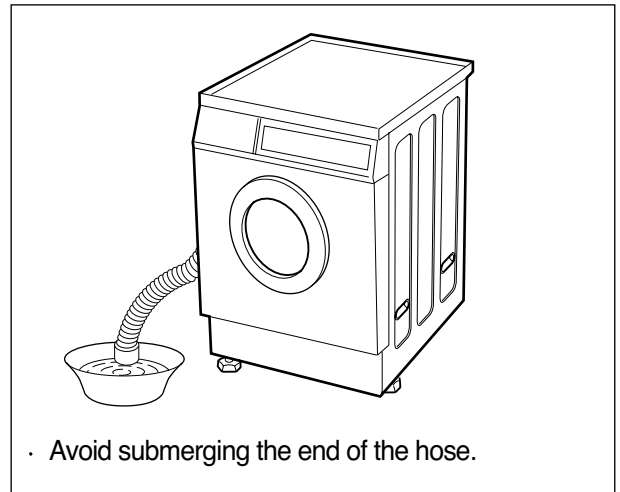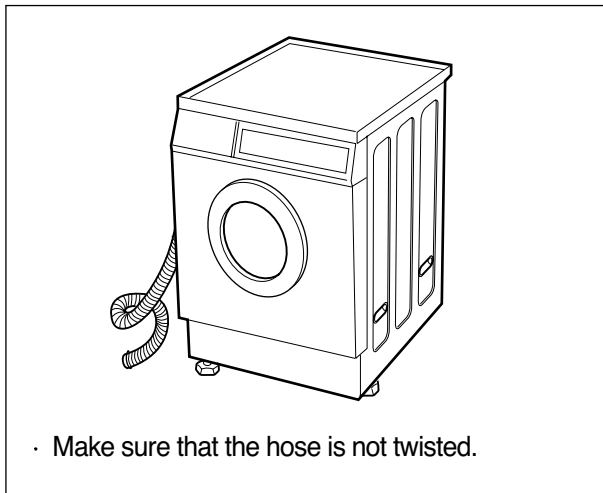


※ The drain hose should be placed under 100cm from the floor.

## ■ CONNECT POWER PLUG

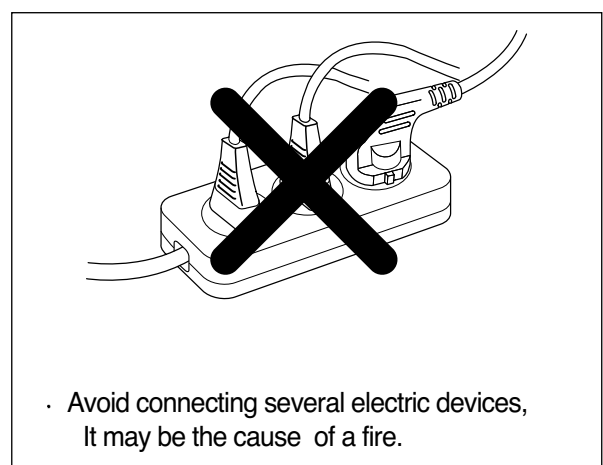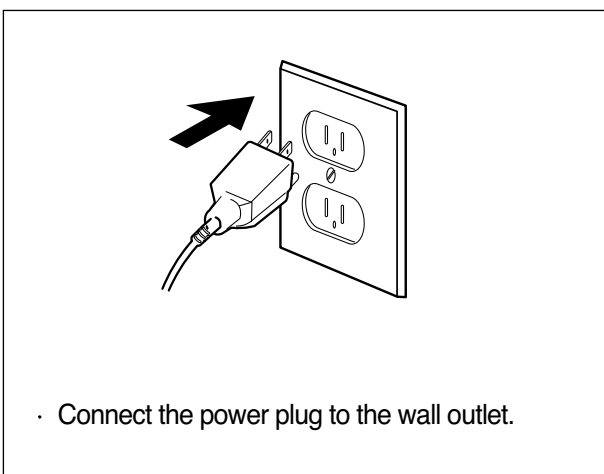

## 7 TEST OPERATION

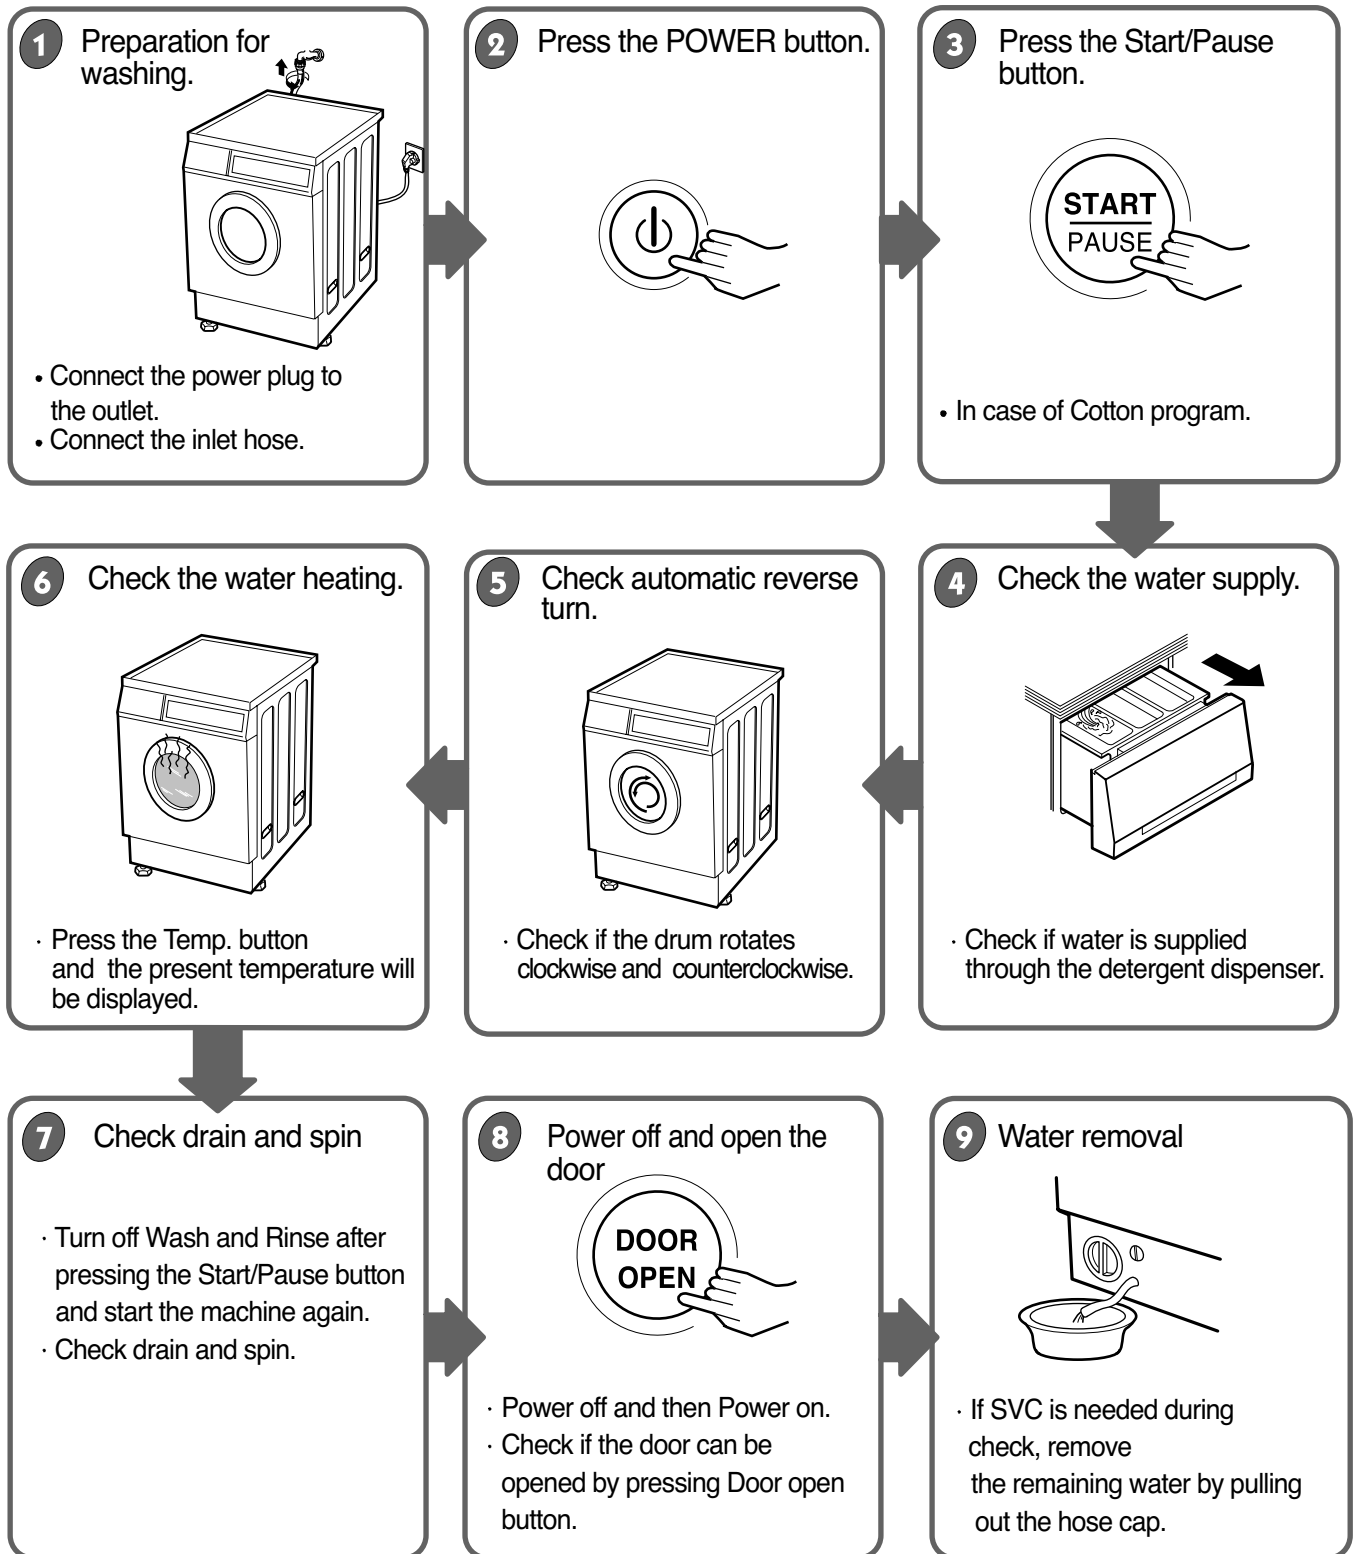

# 5. OPERATION

### Rinse Hold

- If you desire to leave fabrics in the machine without spinning after rinse to prevent wrinkling. You may select rinse hold by pressing the Rinse Hold Button. To drain and spin, press Rinse Hold Button or Start/Pause button to turn off the Rinse Hold lamp.

### LED display


- Display the remaining time (Hour : Minute) to finish.
- In case of abnormal operation, error indications are displayed. (FE, FE, SE, LE, EE, CE, SHE)
- See trouble shooting guide.

### Wash program s

- 6 programs can be selected type of the laundry.
- By pressing the button, [COTTON → PERM PRES WOOL → DELICATE → can be selected

### For manual option and spin

- Use these buttons to change washing method, rinse times, spinning speed.
- When lamp is off, no selection has been made.
- Extra wash is available for Cotton and Perm press program.

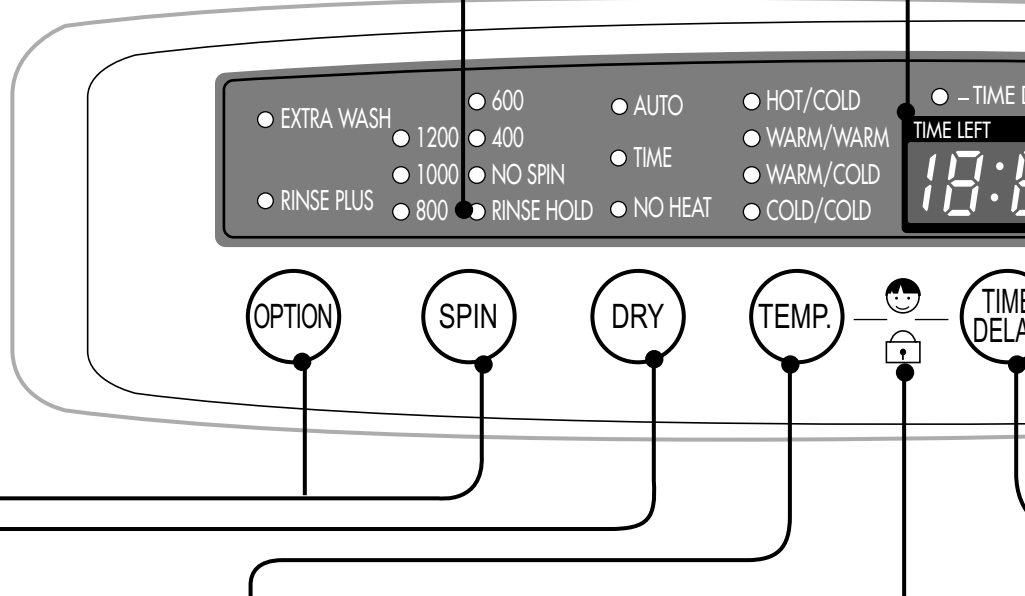

### Dry selector

- Dry programs can be selected by pressing the [DRY] button.
- By pressing the button, [Auto → No Heat → Time (30/60/90/120/150)] can be selected.

### Water temperature selector

- Press the button to select water temperature.
- The water temperature is selected [Warm/Cold → Warm/Warm → Hot/Cold → Cold/Cold] during normal program.
- Hot/Cold is selected only for cotton program.
- By pressing the button during operating the washer, the present temperature is displayed.


### Child lock

- Once Child-Lock is set, and canceled by pressing [Temp.] and [Time Delay] simultaneously once C set. Once Child Lock is set, all buttons are irope
- The Child-Lock system can be set at any time e Power-Off, on Pause and operation. It is automa when an operational error occurs .
- When power is off, the LED indicates [ ] on During operation, or when the programme is pau the LED will indicate [ ] and the remaining t

## Selector

depending on the

SS → QUICK →  
RINSE+SPIN ]

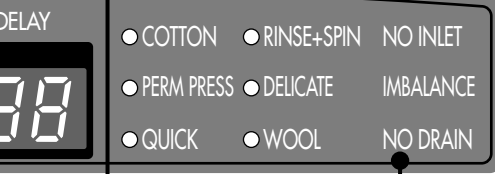

## Start/Pause button

- Use the button to start or pause wash cycle.
- The power turns off automatically in 4 minutes after the pause button is pressed.
- Press the button to change the program.

## Door open button

- Pressing the button open the door.
- Only operates when the power plug is connected to AC 120-127V outlet.

## ON/OFF button

- Press the button to turn power on and off.

## Door lock display

- It shows whether the door can be opened or not during the washing.
- If the lamp is on or blink, the door can not be opened.


## Delay finish

- Press the button when reservation washing is needed.
- When the button is pressed, [ 3 : 00 ] is displayed. A maximum delay of [ 15 : 00 ] hours can be set.
- Each press advances time delay by one hour.
- Use ON/OFF button to cancel [Time delay].

## Error display

- The display blinks if there is an error.
- NO INLET : Trouble with water supply
- IMBALANCE : The laundry is tilted to one side.
- NO DRAIN : If the drain pump filter is clogged.

# 6. WIRING DIAGRAM / PROGRAM CHART

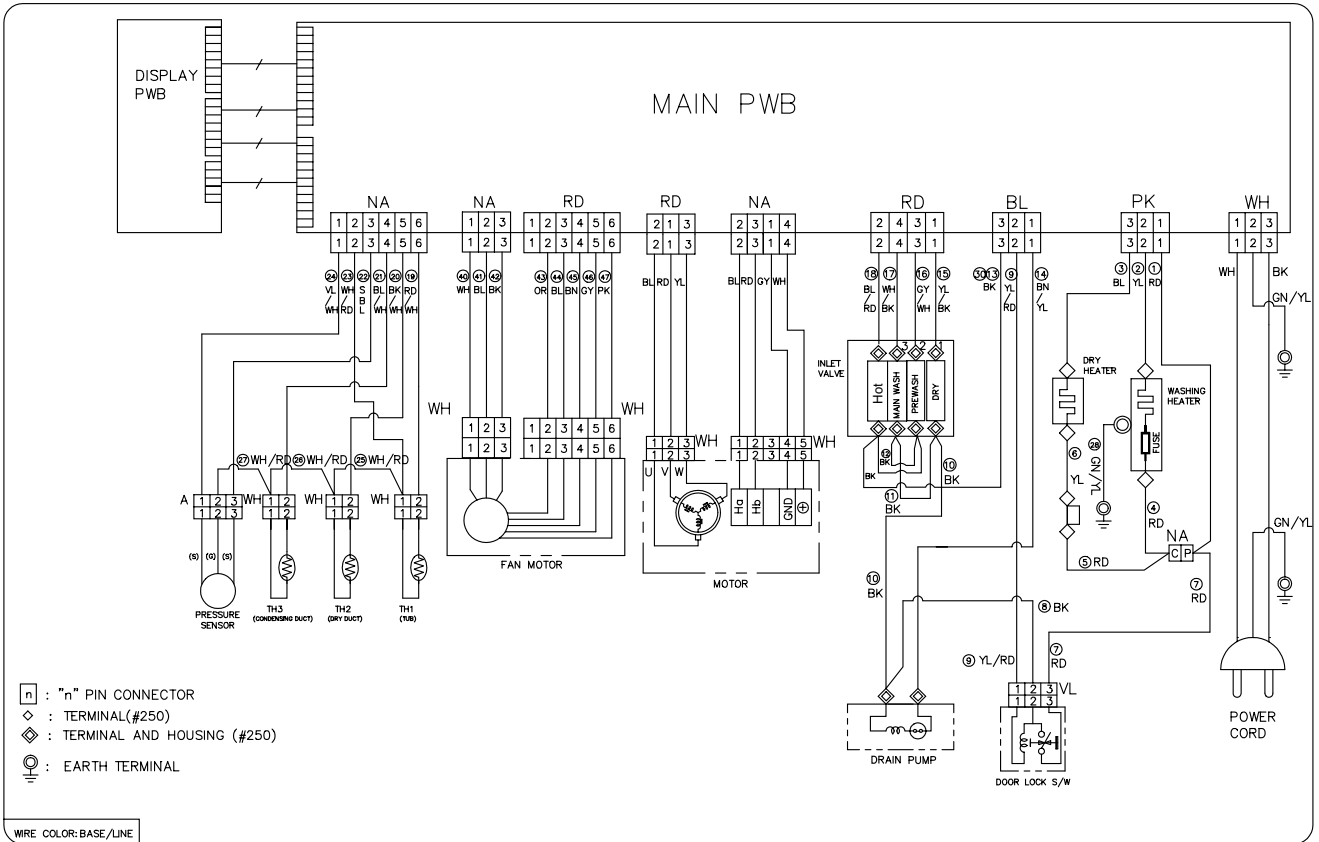

PRGRAM CHART (KGD-PJT)

\* Water Supply : W•S / Intermittent Spin : I•S / Distangle : D•T

CYCLE STEP COURSE TIME (sec)	Washing				Rinse												Spin			AUTO OFF DNDZ 20	Normal working Time								
	Pre		Main		Normal						Rinse+						DRY												
	W•S	washing	drain	I•S	washing		1		2		3		4		drain	spin		D•T											
					heating	washing	I•S	W•S	rinse	drain	I•S	W•S	rinse	drain			I•S		W•S			rinse							
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	20		
120	(min)	60	240	120	(min)	60	240	120	180	60	240	120	180	60	240	120	180	60	240	120	180	60	480	180	fill	20			
Cotton	8																												About 3:55
Perm Press	8																												About 3:35
Quick																													About 36
Wool																													About 56
Delicate																													About 56
Rinse+Spin	8																												About 32
Spin																													About 12

- \* **Basic Cycle**
- \* **Optional Cycle**
- \* Pre-Setting Time : Water Supply - 120 sec.  
Drain - 60 sec.
- \* Basic time is minute in washing chart
- \* The actual program time can be varied with the load amount.

# 7. TROUBLESHOOTING

## 7-1.BEFORE PERFORMING SERVICE

- Be careful of electric shock or disconnecting the parts while trouble shooting.
- Voltage of each terminal in 120-127V~ and DC while applying an electric current.

## 7-2.QC TEST MODE.


- ① Pressing SPIN, and DRY button simultaneously.
- ② Power supply ON with pressing upper two button. Then buzzer sound twice.
- ③ Press the **START/PAUSE** button as follows.

[Press the **START/PAUSE** button more 4 times until stop spinning]

Pressing number of [Start/Pause] button	Checking Point	Display Status
None	All lamps turn on	
1 time	Clockwise spin (right)	Drum rpm (About 40~52)
2 times	Low speed Spin	Drum rpm (About 70~90)
3 times	High speed Spin	Drum rpm (About 90~110)
4 times	Inlet valve for pre-wash operation	Water level frequency (25~65)
5 times	Inlet valve for main-wash operation	Water level frequency (25~65)
6 times	Inlet valve for dry operation	Water level frequency (25~65)
7 times	Counterclockwise spin (left)	Drum rpm (About 40~52)
8 times	Heater is in operation for 3 sec.	Water temperature
9 times	Draining pump operation	Water level frequency
10 times	Dry operation for 6 minutes	Auto off operation after 6 minutes

## 7-3.HOW TO KNOW THE WATER LEVEL FREQUENCY

- \* Press the SPIN and DRY button simultaneously.

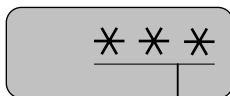

● The digits means water level frequency ( $10^{-1}$  kHz)








ex) 241 : Water level frequency =  $241 \times 10^{-1}$  kHz  
 $=24.1$  kHz




## 7-4.HOW TO KNOW TO TEMPERATURE OF EACH THERMISTOR AT OPERATING CONDITION.

- Thermistor in tub : Press the [WATER TEMP] button.
- Thermistor in dry duct : Press the [DRY] button.
- Thermistor in condensing duct : Press the [SPIN] and [DRY] button simultaneously.

## 7-5.ERROR DISPLAY.


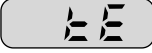



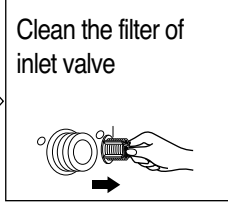
- If you press the START/PAUSE button when an error is displayed. any error except 『PE』 will disappear and the machine will change into pause status.
- In case of 『PE』, 『LE』, 『dE』 if the error is not resolved within 20 sec., in the case of other errors, if the error is not resolved within 4 min., power will be turned off automatically and the error code will blink. But in the case of 『FE』, power will not be turned off.





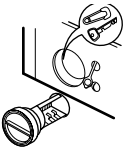
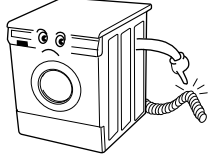
	ERROR	SYMPTOM	CAUSE
1	WATER INLET ERROR		<ul style="list-style-type: none"> <li>• Not reached to the water level (2 level) within 4 minutes after water supplied or not reached to the preset water level within 25 minutes.</li> </ul>
2	DRAIN ERROR		<ul style="list-style-type: none"> <li>• Not fully drained within 5 minutes.</li> </ul>
3	OVERFLOW ERROR		<ul style="list-style-type: none"> <li>• Water is over flowing (over 8 level).</li> <li>※ If 『FE』 is displayed, drain pump operates to drain water automatically.</li> </ul>
4	SENSOR PRESSURE S/W ERROR		<ul style="list-style-type: none"> <li>• The sensor pressure switch is out of order.</li> </ul>
5	DOOR OPEN ERROR		<ul style="list-style-type: none"> <li>• The door does not open in spite of pressing the [DOOR OPEN] button.</li> <li>• In case of operating the reservation function or the other function with door opened. Close the door, then the error display is resolved.</li> <li>• The door switch is out of order.</li> </ul>
6	IMBALANCE ERROR		<ul style="list-style-type: none"> <li>• The appliance is tilted.</li> <li>• Laundry is gathered to one side.</li> </ul>
7	HEATING ERROR		<ul style="list-style-type: none"> <li>• The THERMISTOR is out of order.</li> </ul>




	<b>ERROR</b>	<b>SYMPTOM</b>	<b>CAUSE</b>
<b>8</b>	CURRENT ERROR		<ul style="list-style-type: none"> <li>• MAIN PWB ASSEMBLY is out of order <ul style="list-style-type: none"> <li>☞ Replace the MAIN PWB ASSEMBLY</li> </ul> </li> <li>• Winding in the STATOR ASSEMBLY is short-circuited. <ul style="list-style-type: none"> <li>☞ Replace the STATOR ASSEMBLY</li> </ul> </li> <li>• CE is displayed during a high spin <ul style="list-style-type: none"> <li>☞ Replace the LEAD WIRE ASSEMBLY (MOTOR)</li> </ul> </li> </ul>
<b>9</b>	MOTOR ERROR		<ul style="list-style-type: none"> <li>• The connector in the LEAD WIRE ASSEMBLY is not connected to the connector of STATOR ASSEMBLY <ul style="list-style-type: none"> <li>☞ Reconnect or repair the connector</li> </ul> </li> <li>• The hall sensor is out of order/defective. <ul style="list-style-type: none"> <li>☞ Replace the STATOR ASSEMBLY</li> </ul> </li> </ul>
<b>10</b>	DRY HEATOR ERROR		<ul style="list-style-type: none"> <li>• The Dry Heater is out of order <ul style="list-style-type: none"> <li>☞ Replace the Dry Heater</li> </ul> </li> <li>• The Connector of the Dry Heater is not connected properly to the connector in the Main PWB ASSEMBLY <ul style="list-style-type: none"> <li>☞ Reconnect or repair the connector</li> </ul> </li> <li>• The Dry fan motor is out of order <ul style="list-style-type: none"> <li>☞ Replace the fan Motor.</li> </ul> </li> </ul>
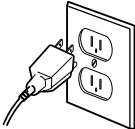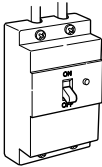
# 8. ERROR DIAGNOSIS AND CHECK LIST

## 8-1. DIAGNOSIS AND ANSWER FOR ABNORMAL OPERATION

SYMPTOM	GUIDE FOR SERVICE CALL	
NO POWER	<p>Is the power plug connected firmly to 120-127V~ outlet?</p> <p style="text-align: center;">↓ YES ↓</p> <p>Power failure? or Breaker opened? Is the outlet controlled by a switch?</p> <p style="text-align: center;">↓ NO ↓</p> <p style="text-align: center;">Visit to check</p>	 
<p>Water inlet trouble</p> <p style="text-align: center;">- NO INLET -</p>	<p>Is <b>NO INLET</b> displayed?</p> <p style="text-align: center;">↓ YES ↓</p> <p>Is the tap opened?</p> <p style="text-align: center;">↓ YES ↓</p> <p>Is the tap frozen?</p> <p style="text-align: center;">↓ NO ↓</p> <p>Is the water supply shut-off?</p> <p style="text-align: center;">↓ NO ↓</p> <p>Is filter in the inlet valve clogged with foreign material?</p> <p style="text-align: center;">↓ NO ↓</p> <p style="text-align: center;">Visit to check</p>	<p style="text-align: center;">- NO INLET -</p>    <p>Clean the filter of inlet valve</p> 

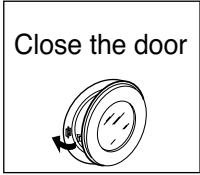SYMPTOM	GUIDE FOR SERVICE CALL
<ul style="list-style-type: none"> <li>• Door does not open</li> <li>• Error displayed on the program</li> </ul> 	<p>Started with door opened? <b>YES</b> → </p> <p><b>NO</b></p> <p>Close the door </p> <p>Didn't you press the [DOOR OPEN] button with water remained in the tub?</p> <p><b>NO</b></p> <p><b>YES</b> →</p> <ol style="list-style-type: none"> <li>1. Press the [START/PAUSE] button to stop the appliance.</li> <li>2. Drain water by selecting spin.</li> <li>3. Open door by pressing the [DOOR OPEN] button.</li> </ol> <p>Isn't door opened in spite of pressing the [DOOR OPEN] button</p> <p><b>NO</b></p> <p>Visit to check</p> <p>Check if the door switch is O·K.</p>
<ul style="list-style-type: none"> <li>• DRAIN TROUBLE</li> </ul> <p>- NO DRAIN -</p>	<p>Is  displayed?</p> <p><b>YES</b></p> <p>Is the debris filter clogged with foreign material such as pins, coins, etc? <b>YES</b> → Clean up the filter. </p> <p><b>NO</b></p> <p>Is the drain hose frozen with water, kinked, or crushed?</p> <p><b>NO</b></p> <p>Visit to check</p> 

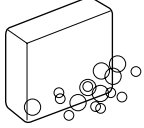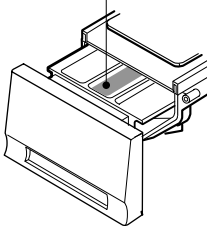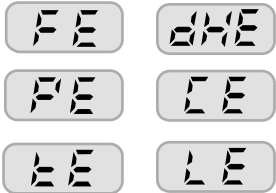
SYMPTOM	GUIDE FOR SERVICE CALL
<p>◦ Suds overflow from the appliance. (In this condition, wash and spin do not operate normally)</p>	<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="width: 60%;"> <p>Is low-sudsing detergent for the drum washing machine used?</p> <p style="text-align: center;"><b>YES</b></p> <p>Is the proper amount of detergent used as recommended?</p> <p style="text-align: center;"><b>YES</b></p> <p>Recommend to reduce the amount of detergent.</p> <p>* This appliance has the automatic suds sensing function which operates under much suds condition for good rinse and preventing overflow. * When much suds are sensed, the suds removing function such as drain, water input, pause will operate without rotating the drum.</p> </div> <div style="width: 35%; text-align: center;">  <p><b>LOW-SUDSING</b></p> </div> </div>
<p>◦ No effect of softener</p>	<div style="display: flex; justify-content: space-between; align-items: flex-start;"> <div style="width: 60%;"> <p>Is softener put in the correct compartment of the drawer?</p> <p style="text-align: center;"><b>YES</b></p> <p>Is the drawer closed during wash?</p> <p style="text-align: center;"><b>YES</b></p> <p>Is the softener cap clogged?</p> <p style="text-align: center;"><b>YES</b></p> <p>Explain how to use softener</p> <p><b>Clean the compartment for softener</b></p> </div> <div style="width: 35%; text-align: center;"> <p>Compartment for softener</p>  </div> </div>
	<p style="text-align: center;">Visit to check</p>

## 8-2.FAULT DIAGNOSIS AND TROUBLE SHOOTING


### CAUTION

1. Be careful of electric shock or disconnecting the parts while trouble shooting.
2. First of all, check the connection of each part terminal with wiring diagram.
3. If you replace the MAIN PWB ASSEMBLY, Put in the connectors correctly.


### NO POWER

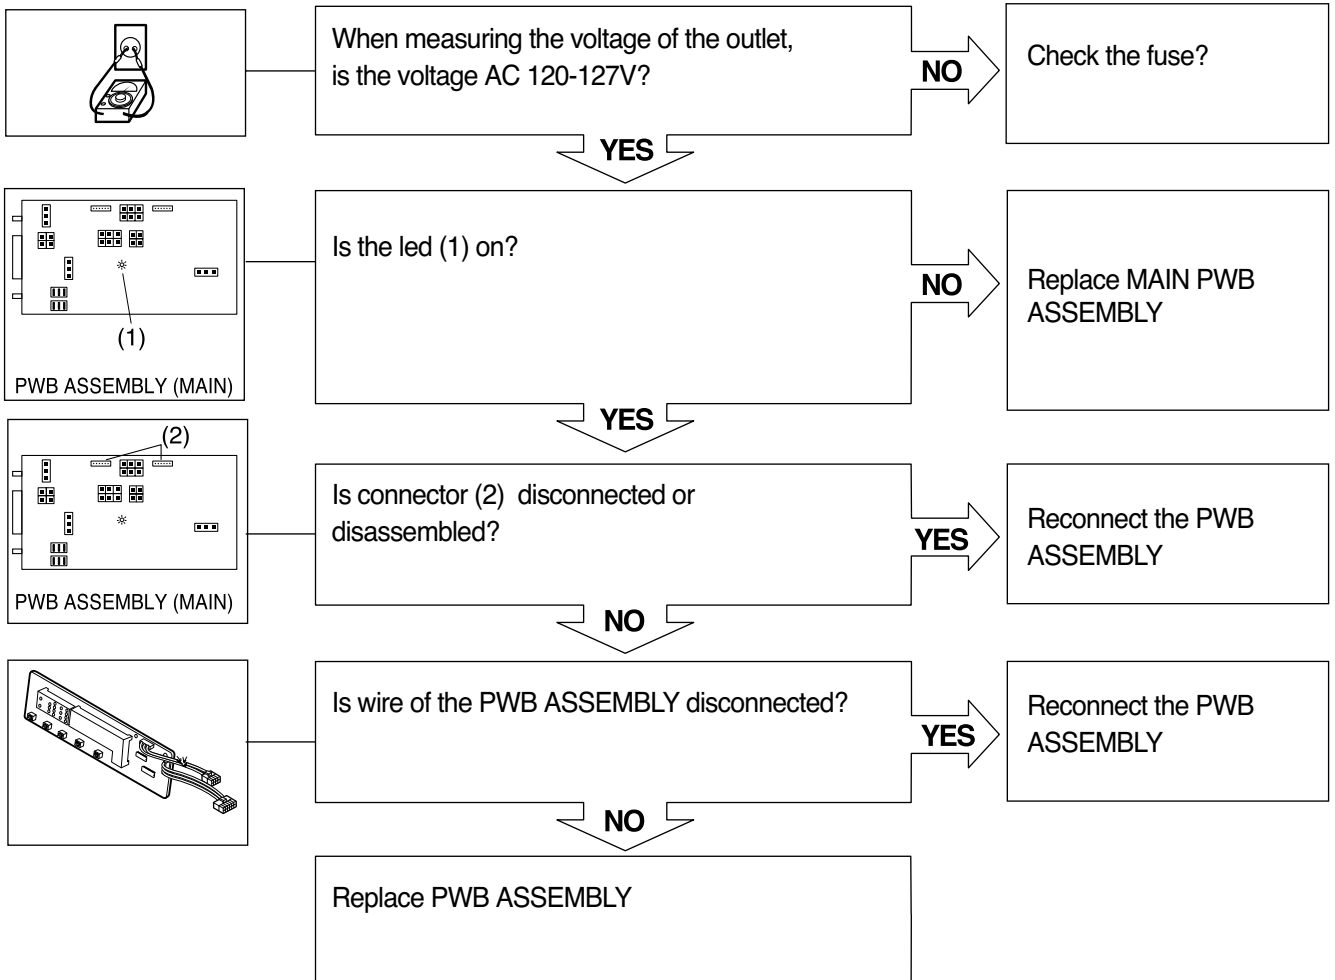


## NO WATER SUPPLY

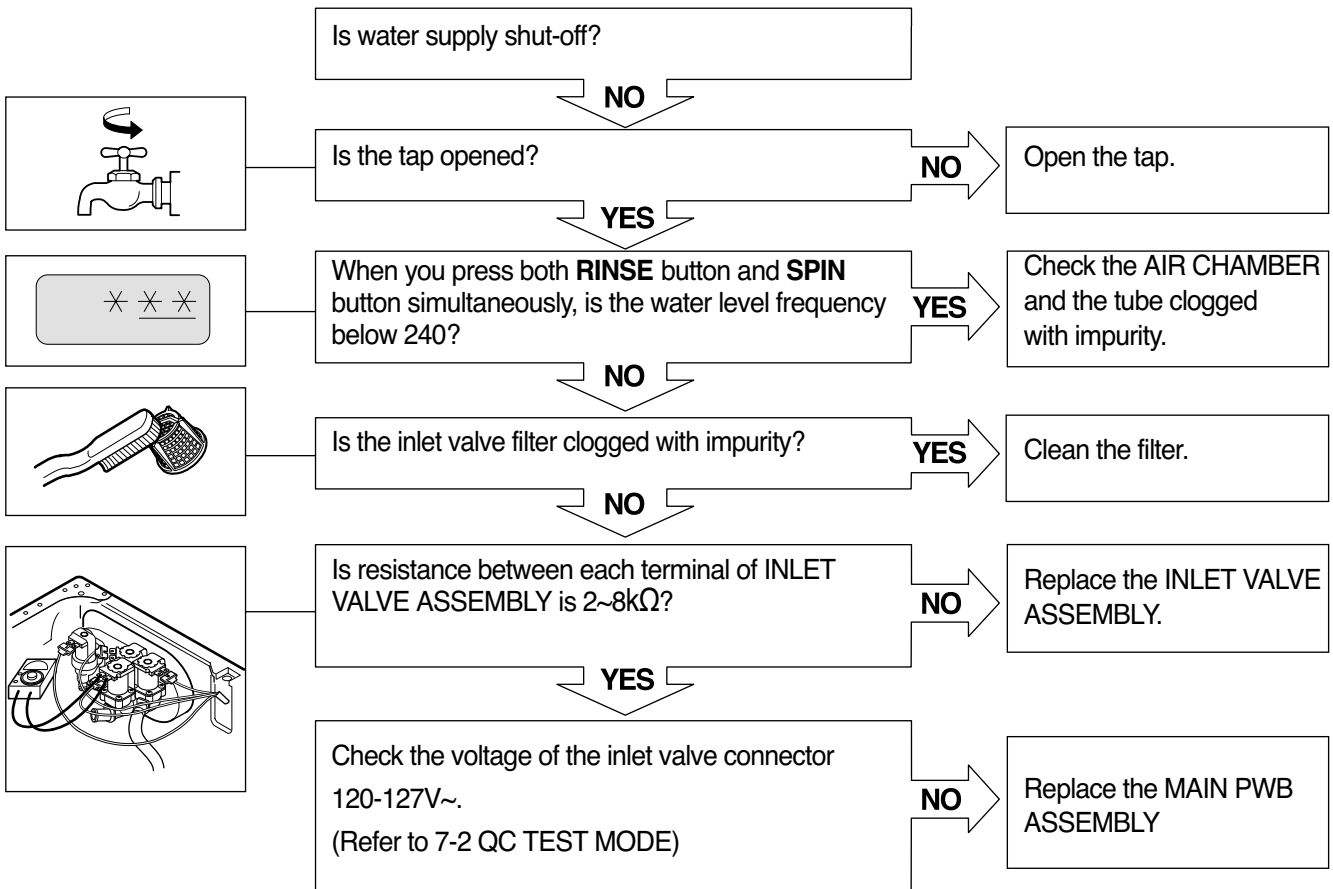


## DETERGENT DOES NOT FLOW IN

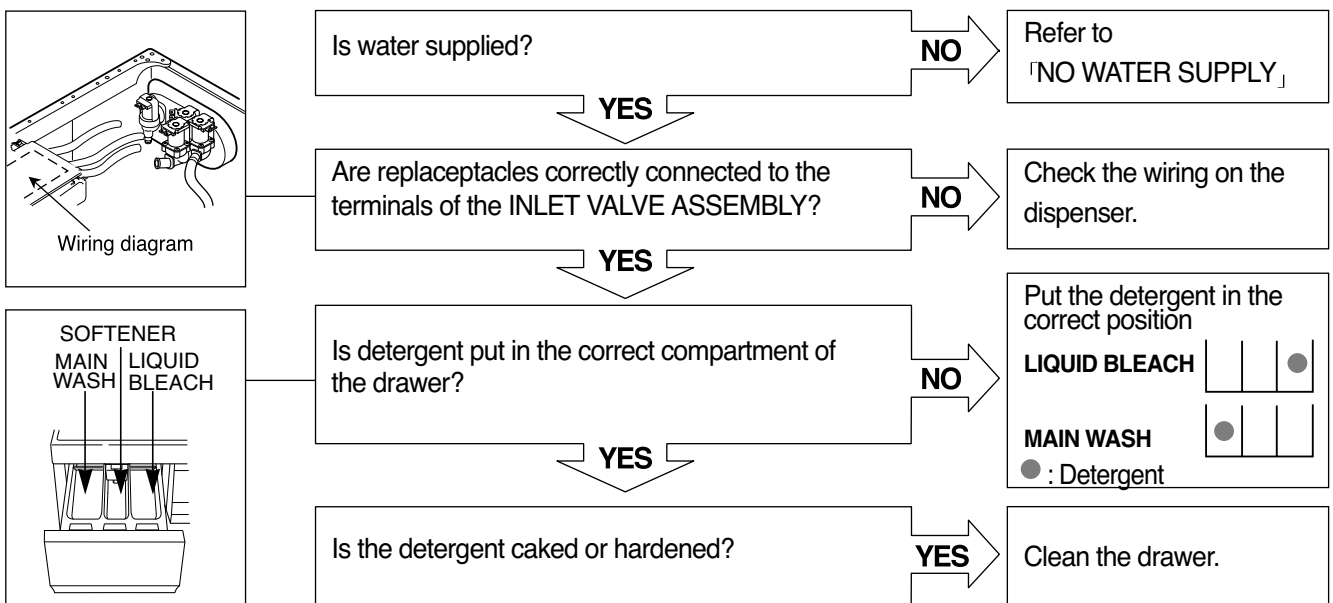


## SOFTENER DOES NOT FLOW IN

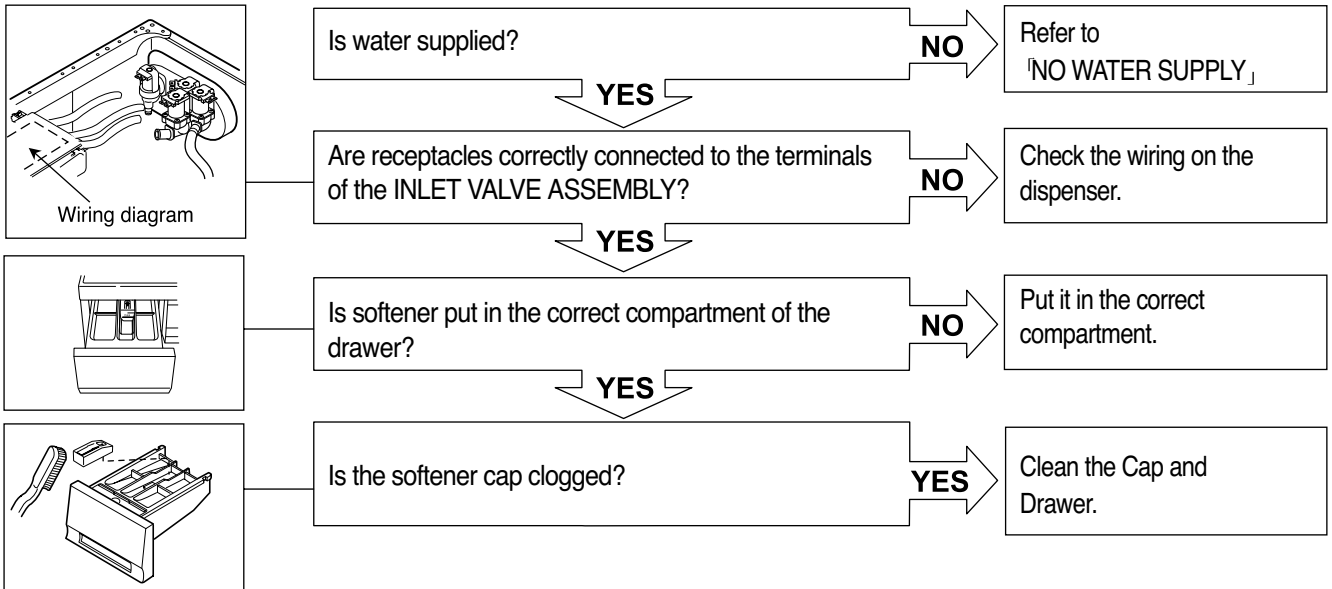


## ABNORMAL SOUND

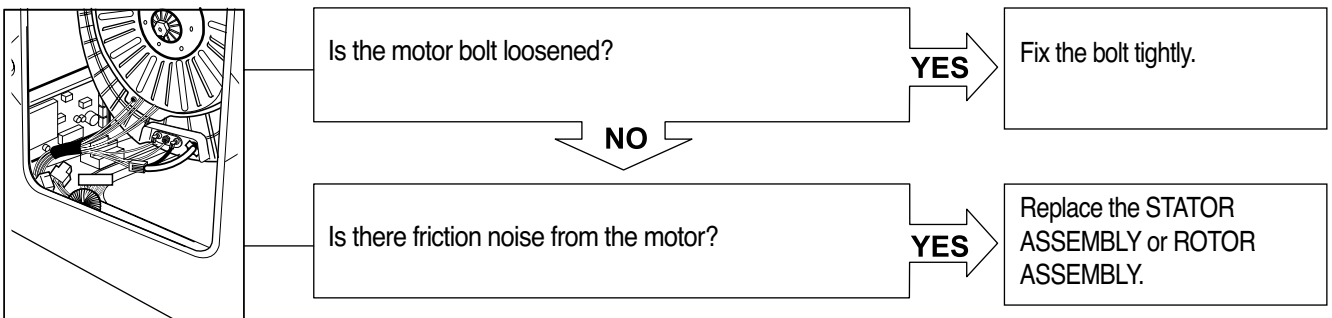


## HEATING WITHOUT WATER

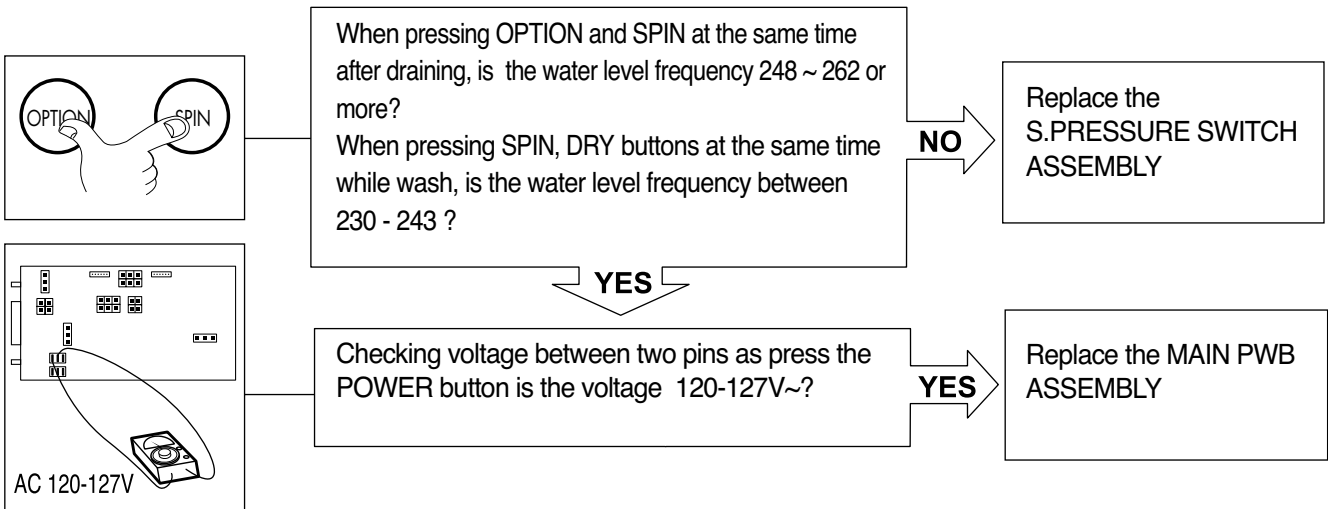


## DRAIN MALFUNCTIONING

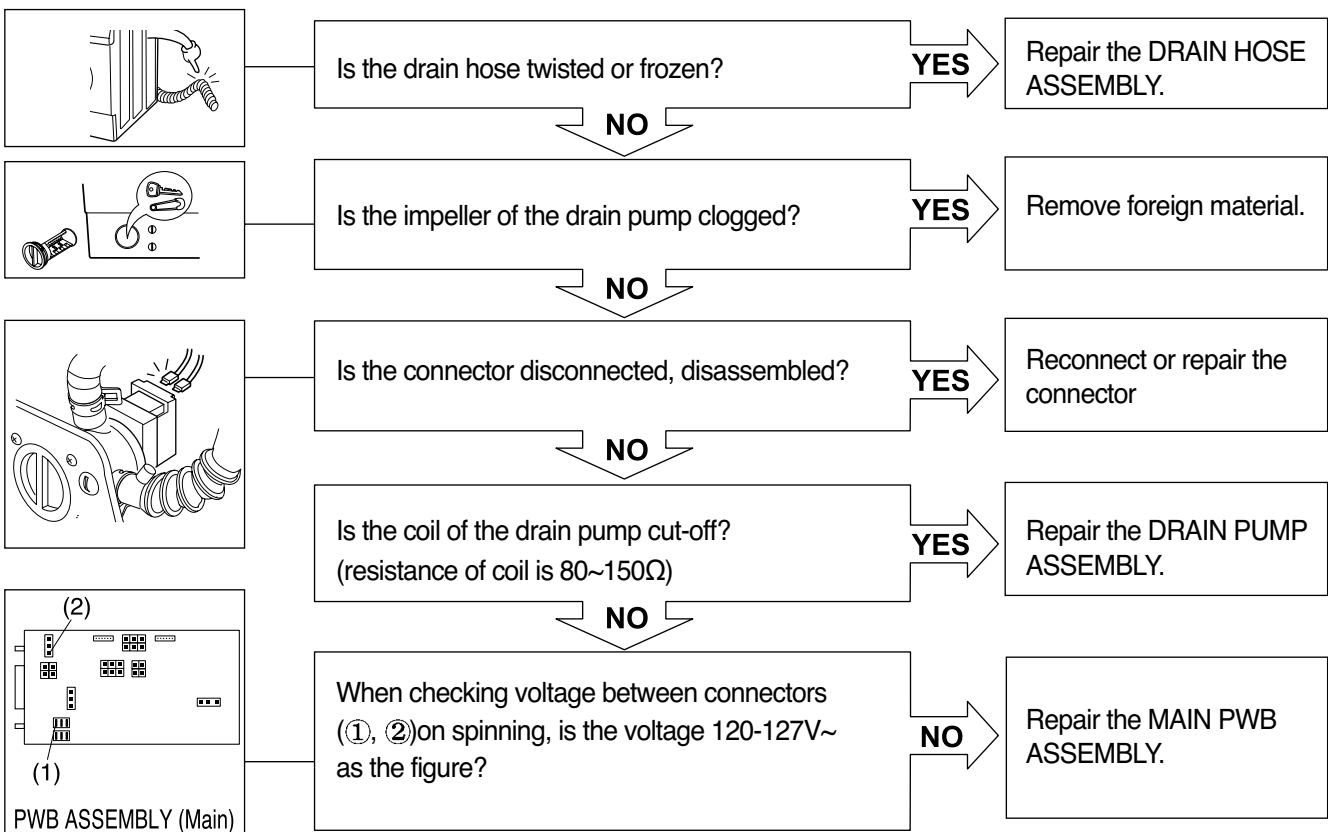


## WASH HEATER TROUBLE

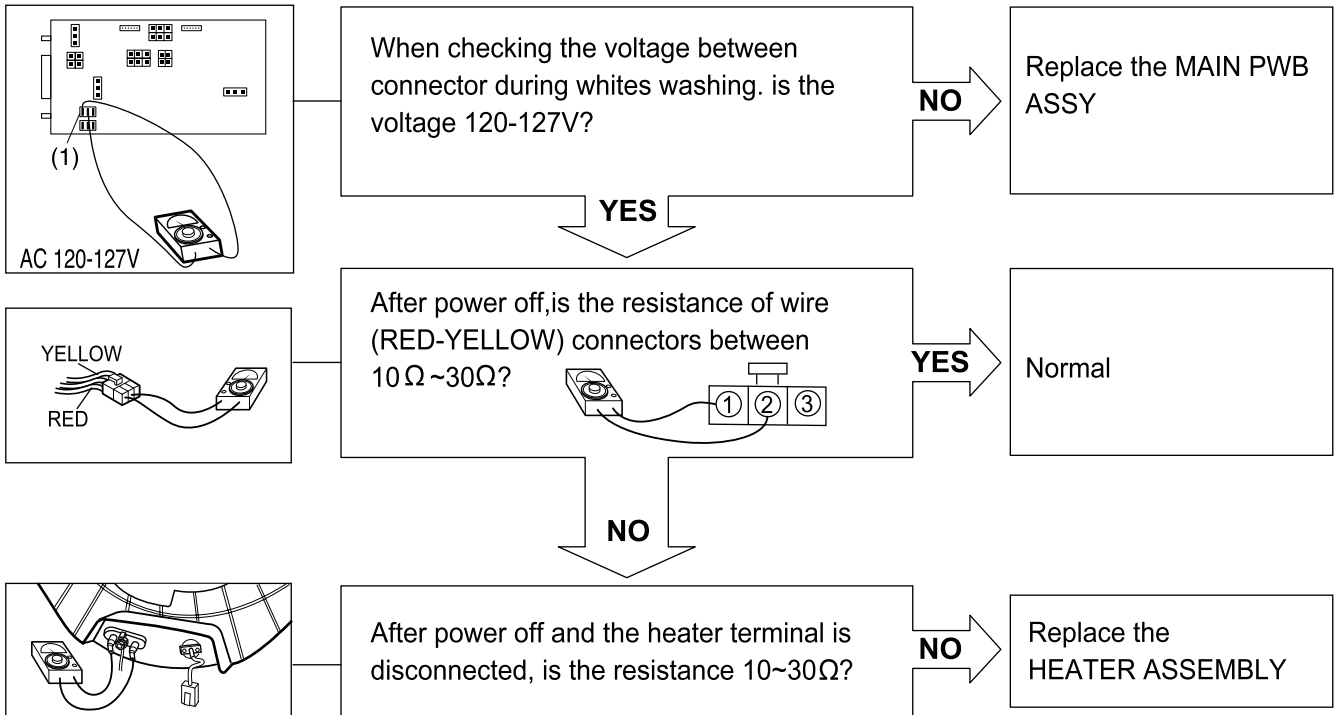


## HEATING CONTINUOUSLY ABOVE THE SETTING WATER TEMPERATURE

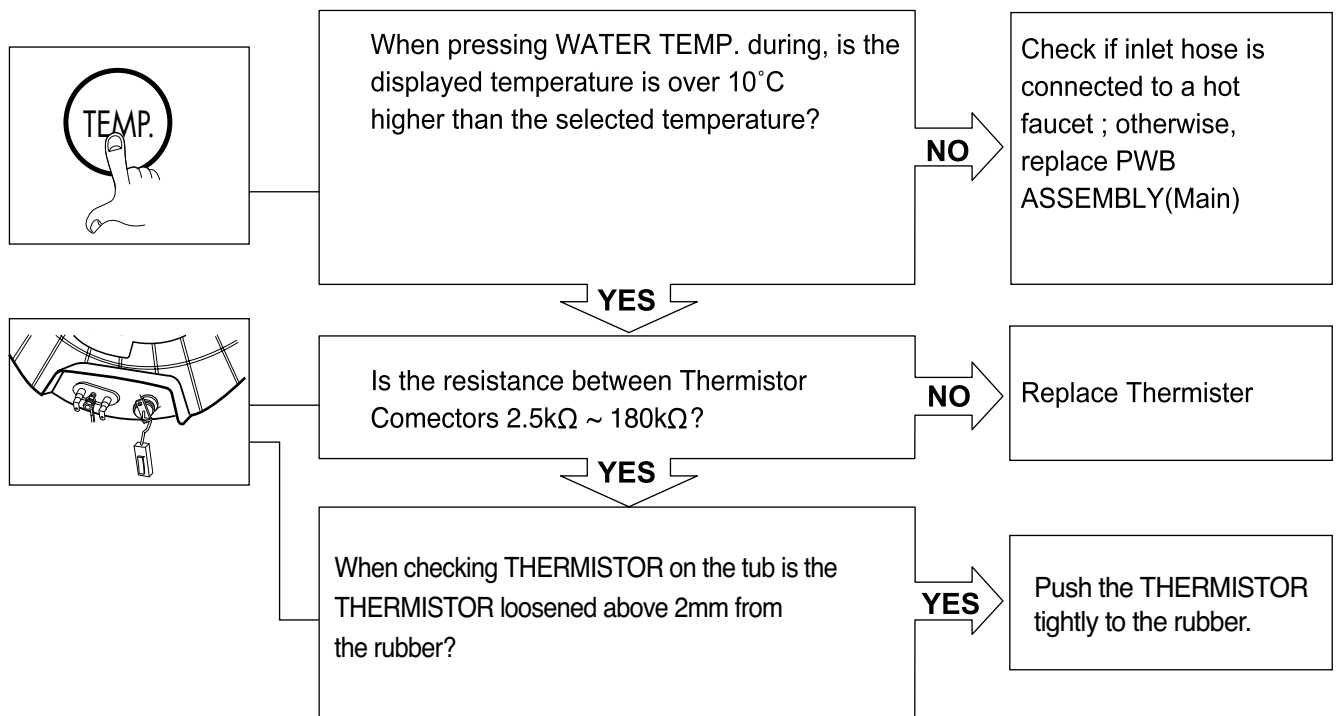


## SPIN TROUBLE

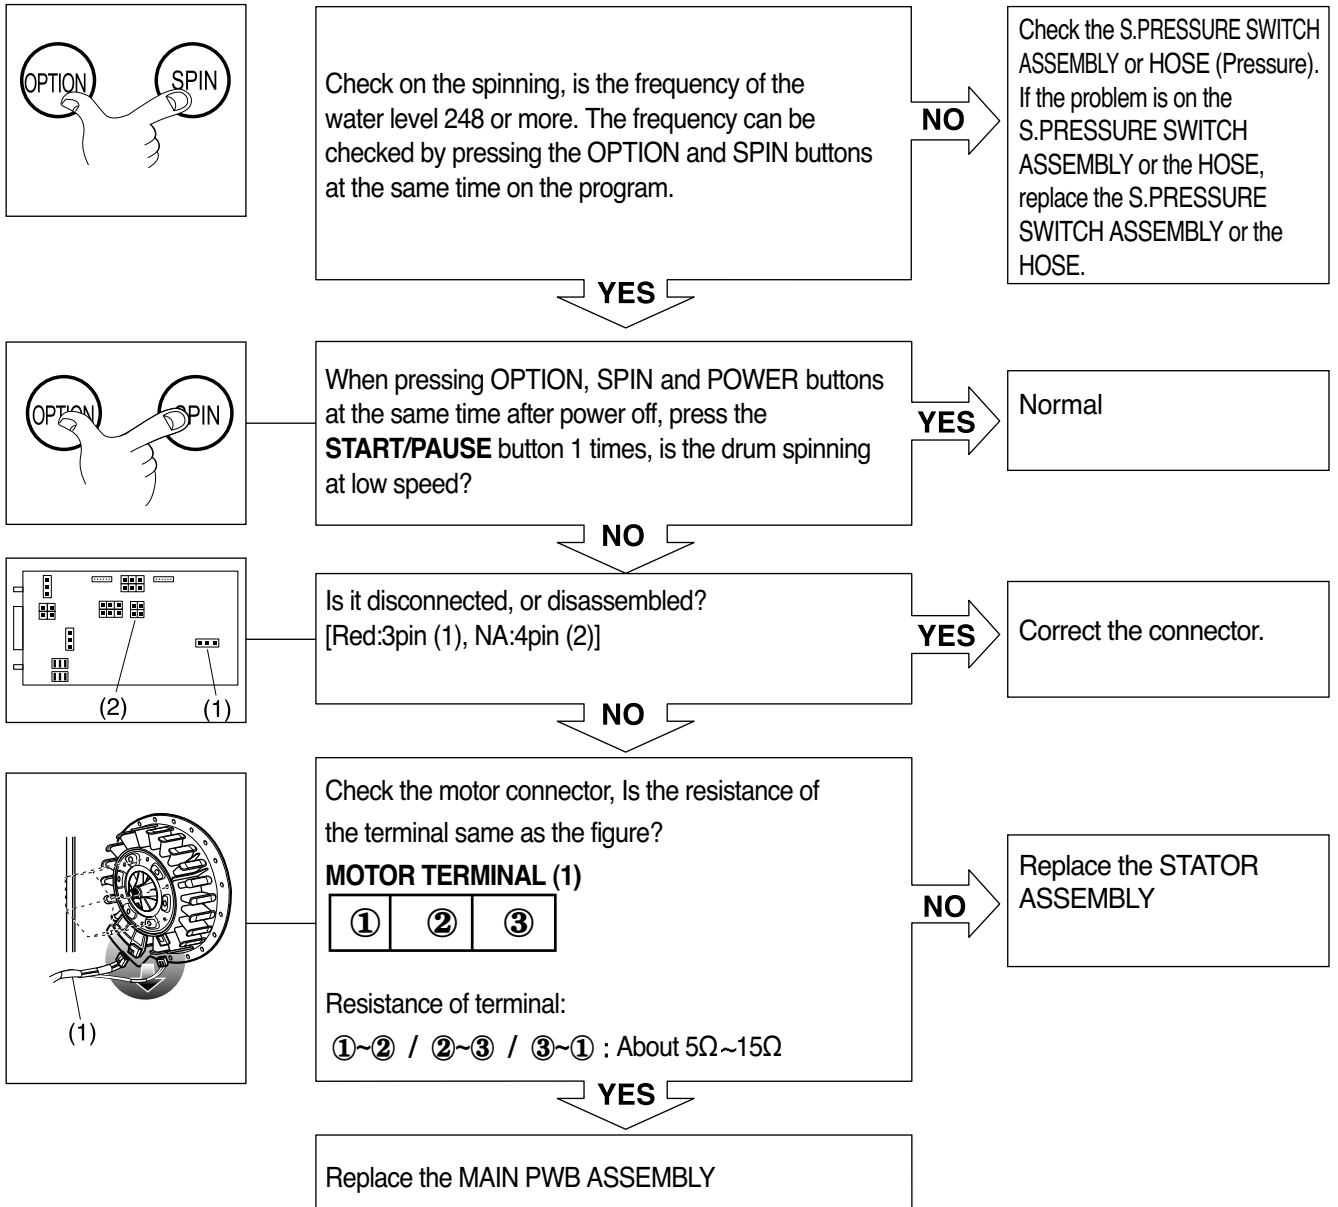

## Door does not open

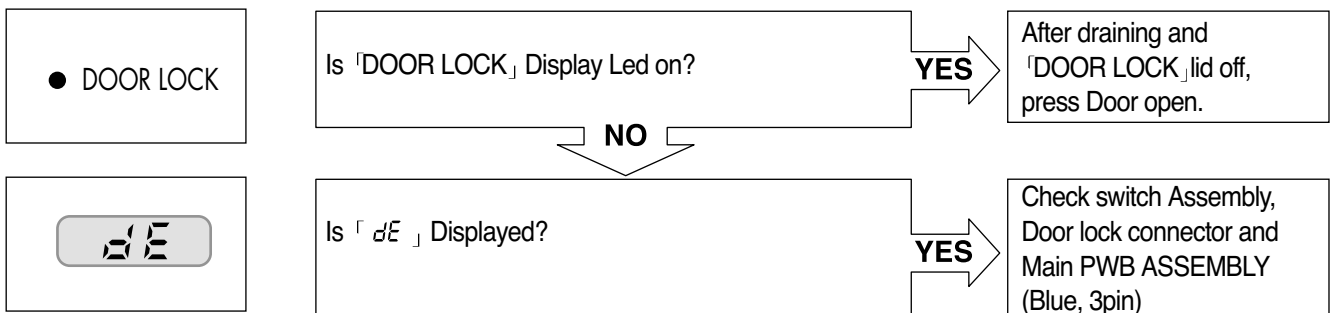

## [dHE] ERROR DISPLAY

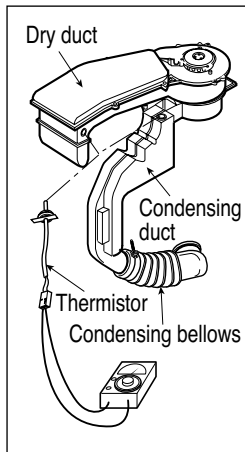


Is the resistance of 2 thermistors on condensing duct and dry duct  $2.5k\Omega \sim 180k\Omega$  (at  $105^{\circ}\text{C} \sim 0^{\circ}\text{C}$ )

**NO**


Replace the thermistor. (6322FR2046A)

**YES**

## CHECK FOR DRY HEATER TROUBLE

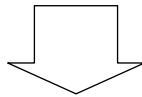

## CHECK FOR DRY FAN MOTOR TROUBLE

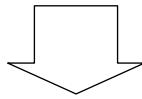


Disassemble the cabinet cover and condensing bellows. Is there any foreign object in condensing bellows.

**YES**


Clean the bellows

**NO**

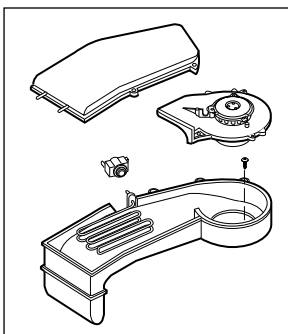

Disassemble the dry fan assy and dry duct upper, and clean foreign object in duct and fan.

## DRY HEATER TROUBLE

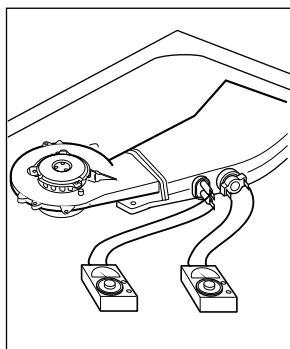

After power off, is the resistance of dry heater 10 ~ 40Ω?

**NO**

Replace the dry heater.


**YES**

Is thermostat closed?

**NO**

Replace the thermostat.

**YES**

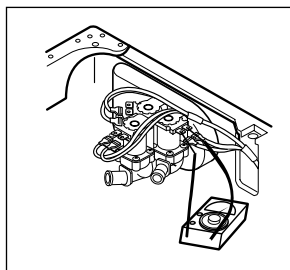


When checking voltage between connectors (①, ②) on drying, is the voltage AC 120-127V as the figure?  
(Wire color : ① - Red, ② - Blue)

**NO**

Replace the PWB assy (Main)

## DRY FAN MOTOR TROUBLE

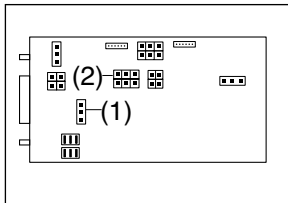


Is it disconnected, or disassembled?  
**【(1) - Nature , 3pin (2) - Red 6pin】**

**YES**

Reconnect or repair connector.

**NO**

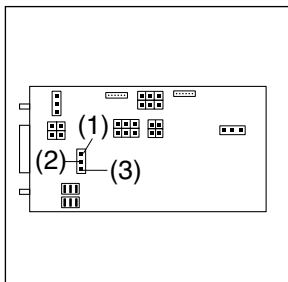


When checking voltage between connectors  
**【(1)~ (2), (2) ~ (3)】** on drying, is the  
 voltage DC 9~15V as the figure?  
**【Wire color : (1) - White, (2) - Blue  
 (3) - Black】**

**NO**

Replace the  
 PWB ASSEMBLY(Main)

**YES**

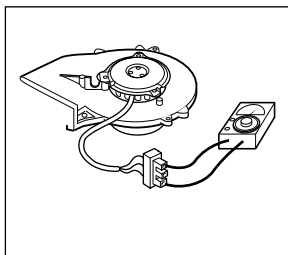


Check the motor connector, is the resistance  
 of terminal same as the figure?  
 Resistance of terminal : ① - ③ : 2~5Ω  
 ② - ③ : 2~5Ω

**NO**

Replace the  
 DRY FAN ASSEMBLY.


## LOT OF VAPOR IN DRAWER WHEN DRYING

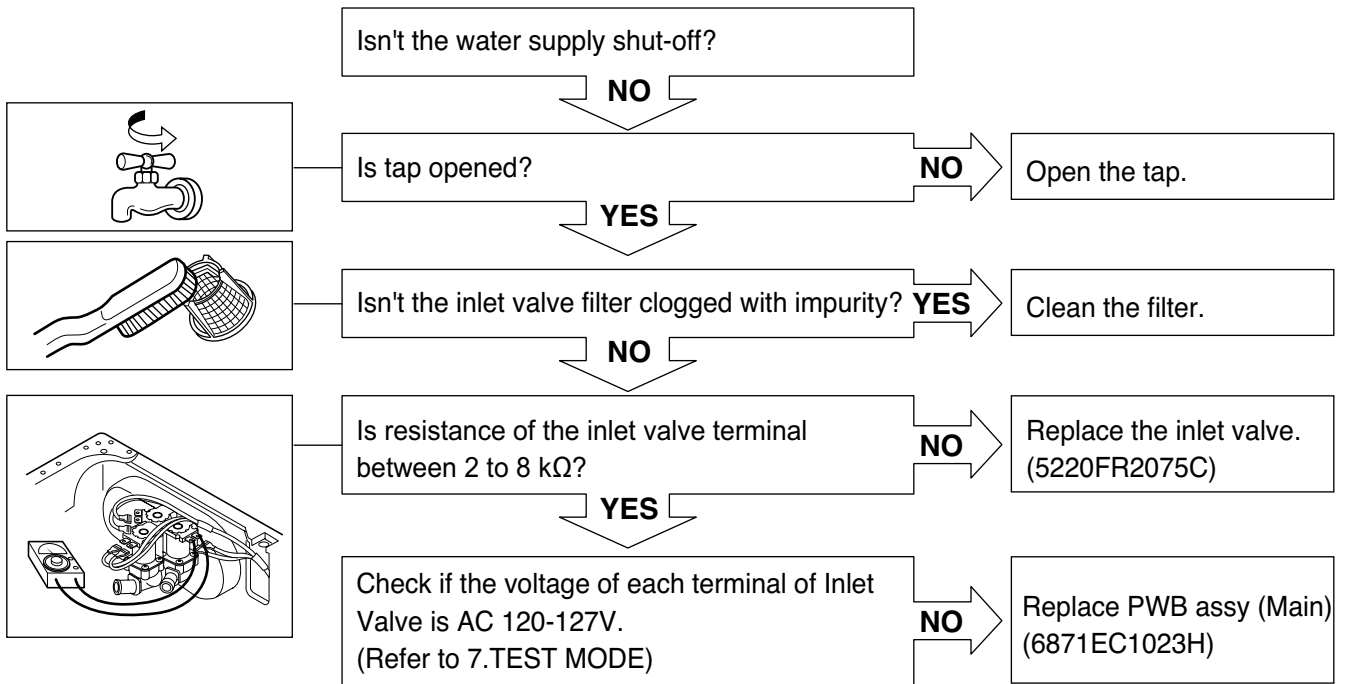


# 9. DISASSEMBLY INSTRUCTIONS

\* Disassemble and repair the parts after pulling out power cord from the outlet.


## CONTROL PANEL

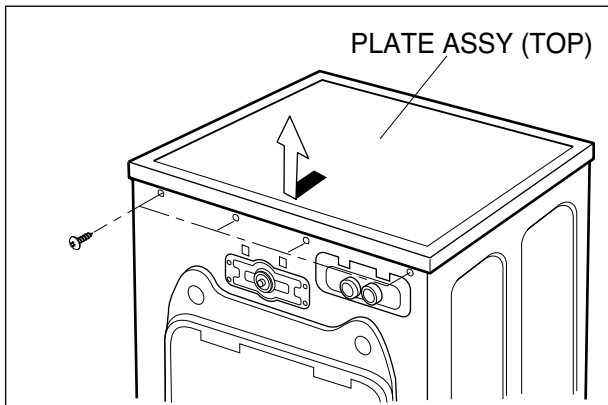

- ① Unscrew the screws on the top plate.
- ② The PLATE ASSEMBLY (Top) is pulled back and then upward to arrow direction.
- ③ The cover (Inner) is disassembled.

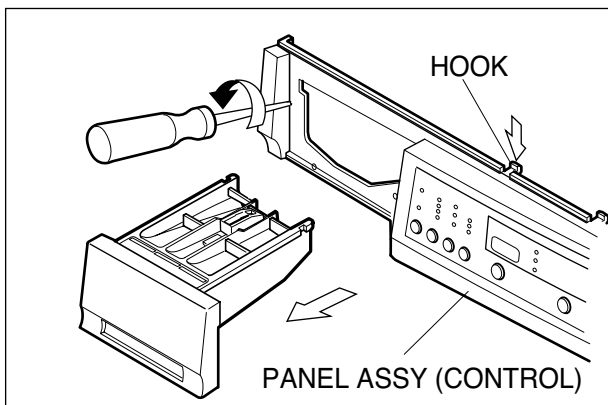


- ① The PWB ASSEMBLY (Display) connectors are disconnected.
- ② Pull out drawer, three screws are unscrewed.
- ③ Press two upper hooks and pull the control panel forward.

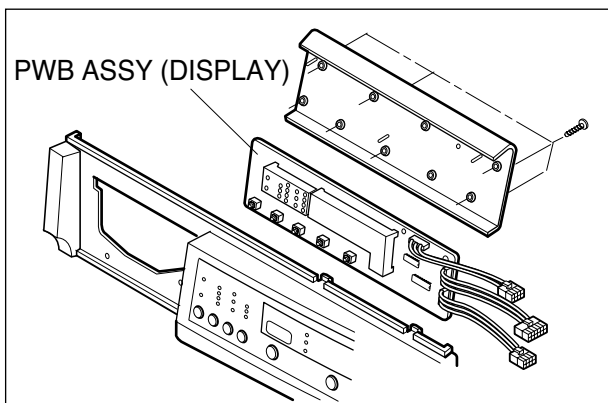


- ① The PWB assembly (Display) is disconnected.
- ② When 8 screws are unscrewed on the PWB insulator and the PWB assembly (Display) is disassembled from the PWB insulator.

## PWB ASSEMBLY (POWER)

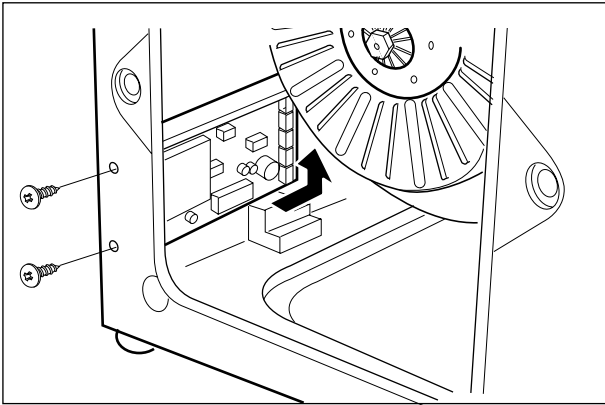


- ① The back cover is removed.
- ② Two screws are unscrewed.
- ③ Disconnect connector from the wiring.
- ④ Pull the PWB ASSEMBLY (Main) to arrow direction.

## DISPENSER ASSEMBLY

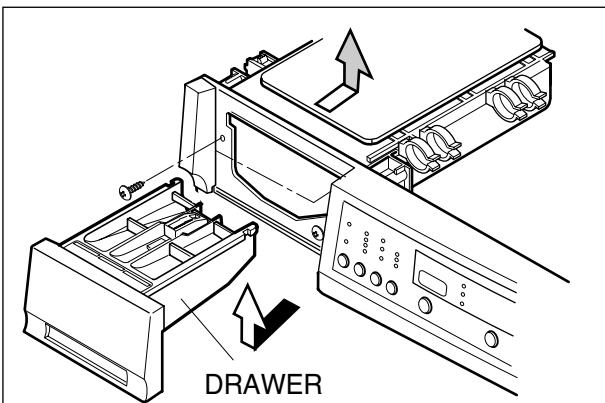


- ① The PLATE ASSEMBLY (Top) and the cover (Inner) are disassembled.
- ② Pull the drawer to arrow direction.
- ③ Two screws are unscrewed.

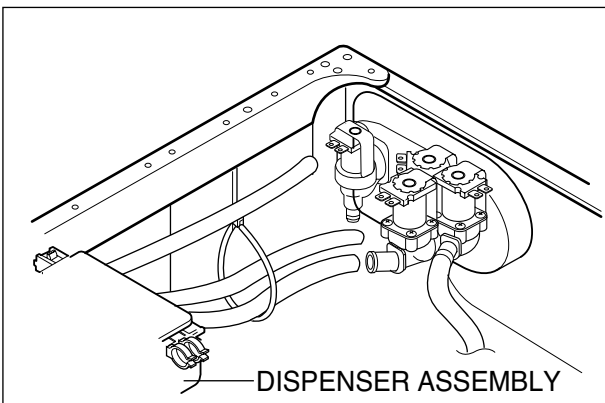

- ① The hose clamps (6EA) and the hose are disassembled.
- ② The ventilation bellows are disassembled on the tub.

## INLET VALVE

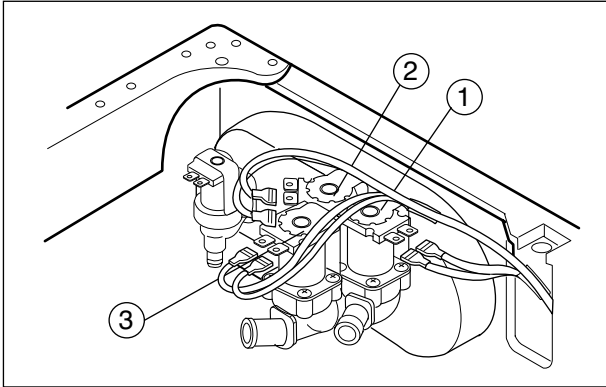


- ① Disconnect the wiring connector.
- ② Remove the valve by two screws of the valve holder.

\* When reconnecting the connector



VALVE ① (DRY)	YL/BK - BK
VALVE ② (LIQUID BLEACH)	GY/WH - BK
VALVE ③ (NORMAL-WASH)	WH/BK - BK
VALVE (HOT)	BL/RD - BK

## COVER LOWER

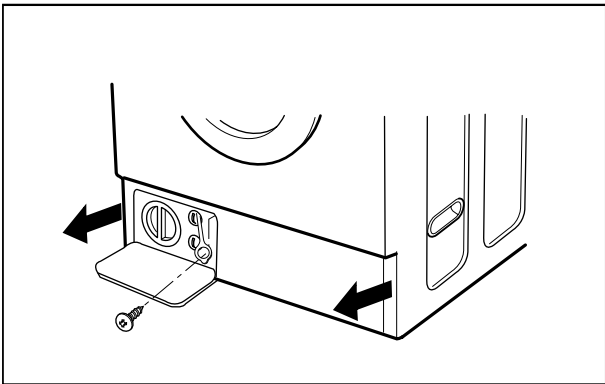

- ① Remove the lower cover to arrow direction after one screw is unscrewed.

## DOOR

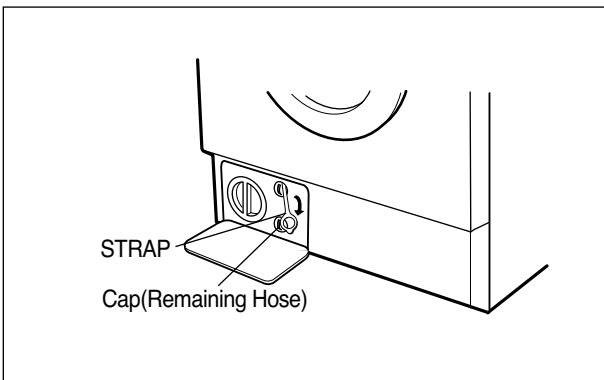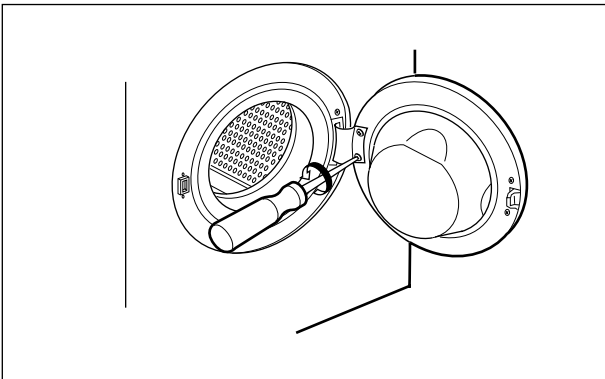

※ When the power cord is plugged, the door can be opened by pressing the **DOOR OPEN** button

- ① Open the door completely.
- ② Remove the two screws from the hinge.


### Door opening method in case of no electricity

- ① Pull the strap.



### Removing method of remained water

- ① Rotate the Cap(Remaining Hose) to arrow direction.
  - ② Pull it out from hose.
- ※ First, prepare a bucket to put in the remained water.



## GASKET ASSEMBLY

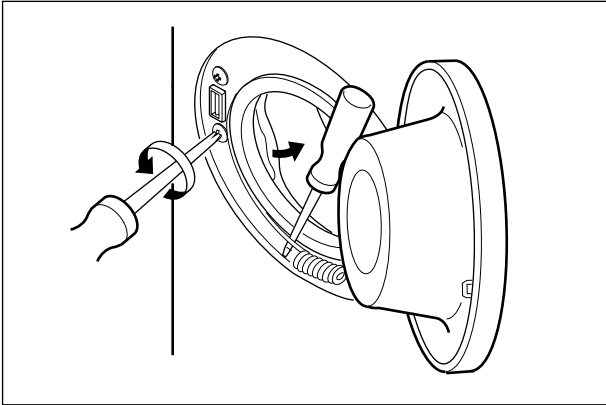


- ① The cabinet gasket clamp is released.
- ② Two screws are unscrewed from the cabinet cover.

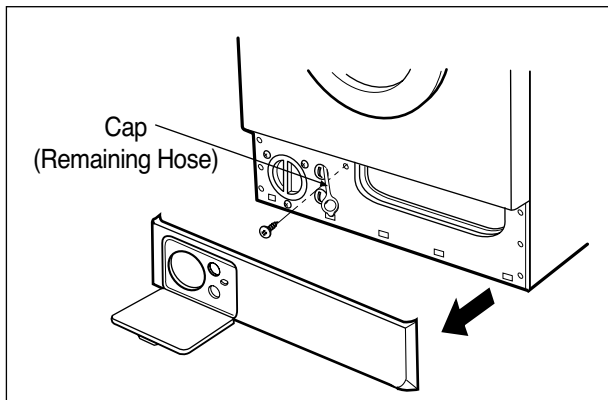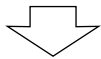


- ① One screw is unscrewed from the lower cover.
- ② The lower cover is disassembled by pulling out.
- ③ Three screws are unscrewed from the cabinet.

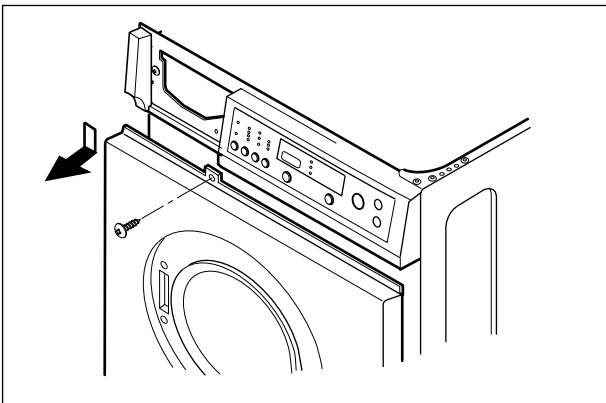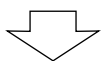


- ① The control panel is removed.
- ② Screw is unscrewed from the cabinet cover.

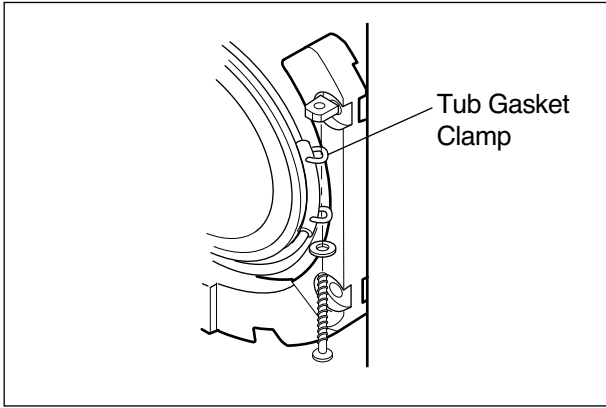

- ① Remove tub gasket clamp by loosening the screw.

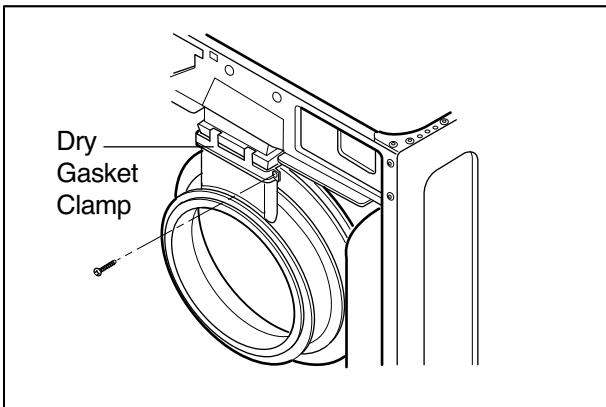


- ① Remove dry gasket clamp by loosening the screw.

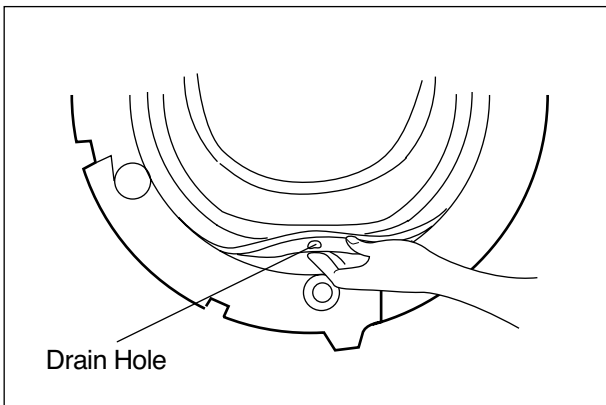


- ① When reassembling the gasket, put the drain hole of the gasket downward, then assemble.


## PULLEY, MOTOR, DAMPER

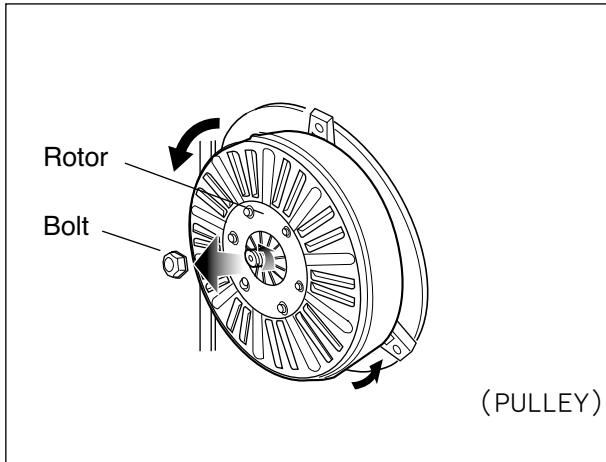

- ① Remove the back cover.
- ② After loosening the bolt, Rotor, pull out the rotor.

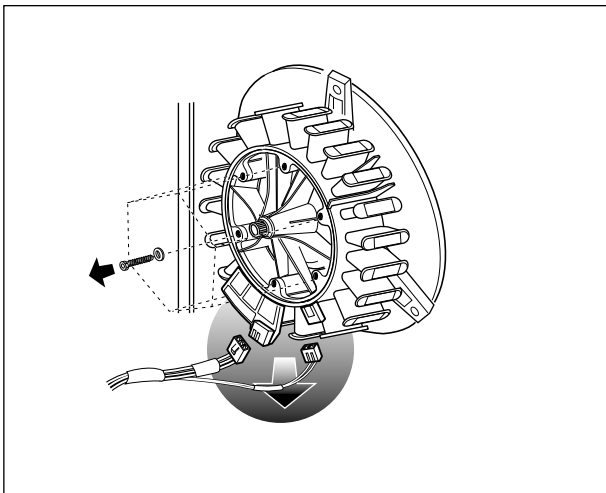


- ① Remove the 6 bolt from the stator.
- ② Disconnect the 2 connectors.

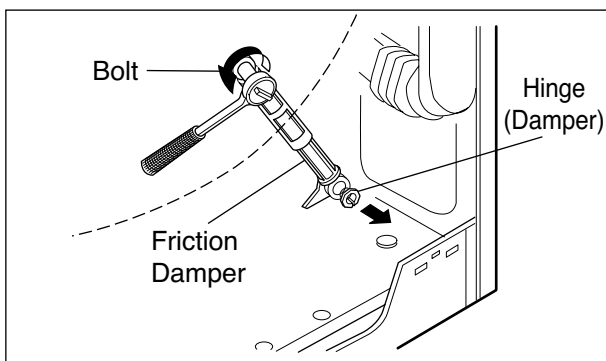


- ① Remove the bolts at the Tub.
- ② The Hinge (Damper) at the base is pulled off pressing on the snaps at the sharp end.
- ③ The hinge at the base is pulled off. (To arrow direction)

## PUMP

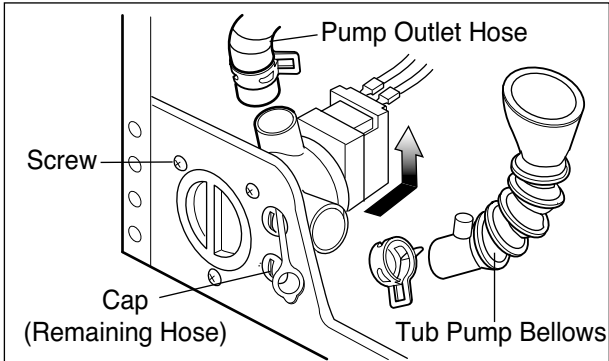

- ① Remove pump outlet hose.
- ② Remove tub pump bellows.
- ③ Remove cap (Remaining Hose).
- ④ Disconnect the wiring.
- ⑤ Three screws are unscrewed from the cabinet.
- ⑥ Remove the pump to arrow direction.

## HEATER

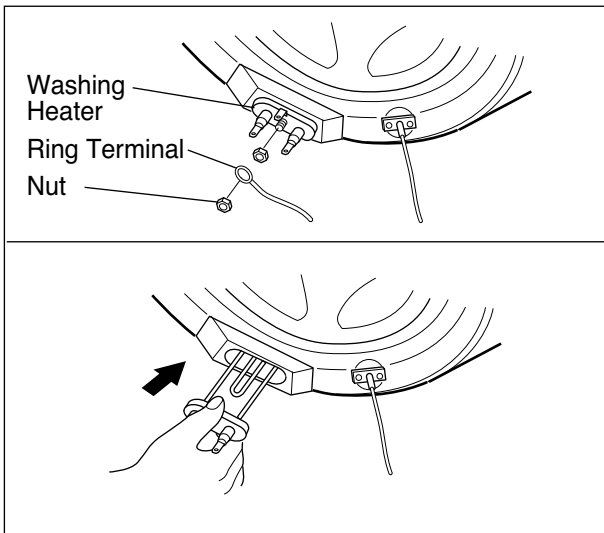


- ① Loosen the nut.
- ② Remove washing heater by pulling out.

### CAUTION


When assembling the washing heater, insert the heater to heater clip on the bottom of tub.

## THERMISTOR

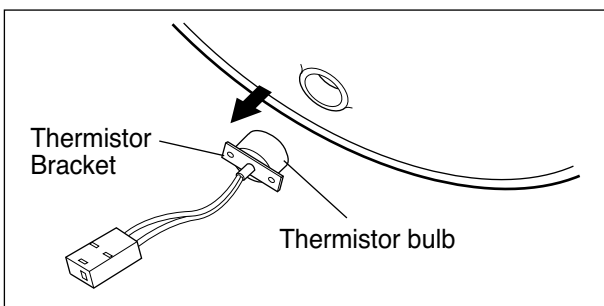


- ① Pull it out by holding the thermistor bracket.
- \* If holding the wire and pulling out it, it may be broken.

## DOOR HINGE ASSEMBLY

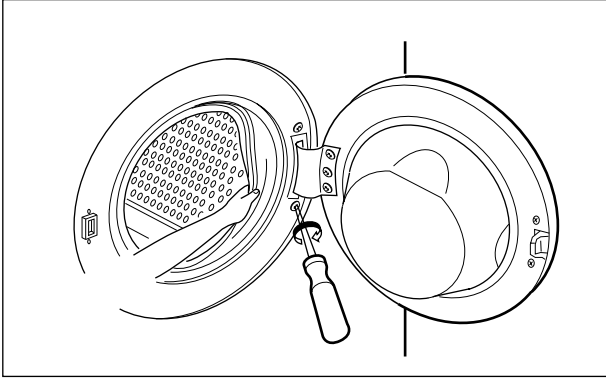


- ① Two screws are unscrewed on the door and the door is disassembled.
- ② The cabinet cover clamp is removed and the gasket is released.
- ③ Two screws are unscrewed on the door hinge.
- ④ The door hinge is disassembled by pushing the door hinge arm inside the cabinet cover.

## SWITCH ASSEMBLY, DOOR LOCK

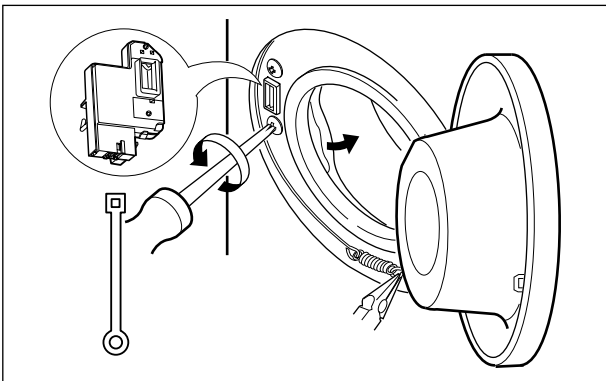


- ① The cabinet cover clamp is removed and the gasket is released.
- ② Two screws are unscrewed.
- ③ The door lock S/W is disconnected from the wiring connector and the strap.

## WHEN FOREIGN OBJECT STUCK BETWEEN DRUM AND TUB

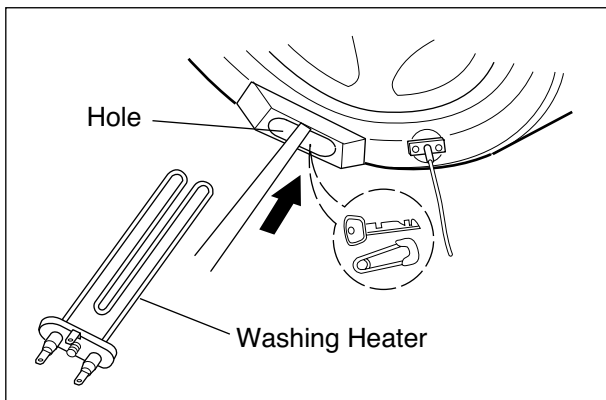


- ① Remove washing heater.
- ② Remove the foreign object(wire, coin, etc) by inserting long bar in the hole.

## DRY DUCT

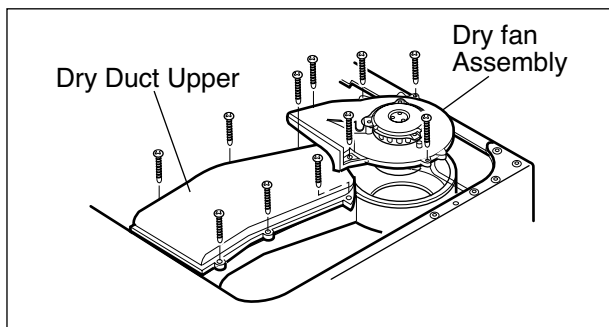


- ① Remove 5 screws and dry fan assembly.
- ② Remove 6 screws and dry duct upper.

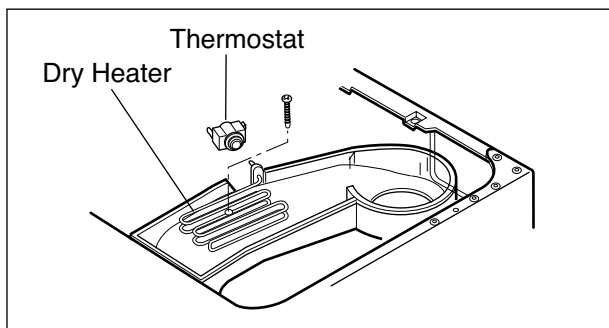


- ① Remove 1 screw and dry heater.
- ② Remove thermostat.

## CONDENSING DUCT

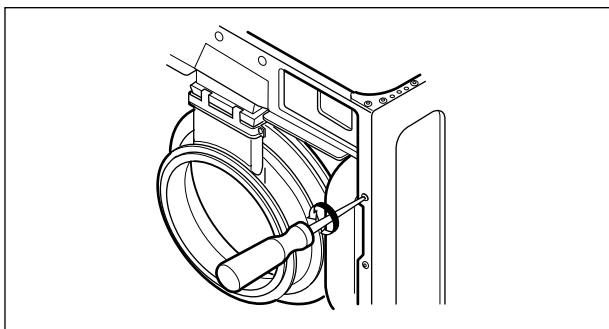


- ① Remove 2 screws from cabinet.

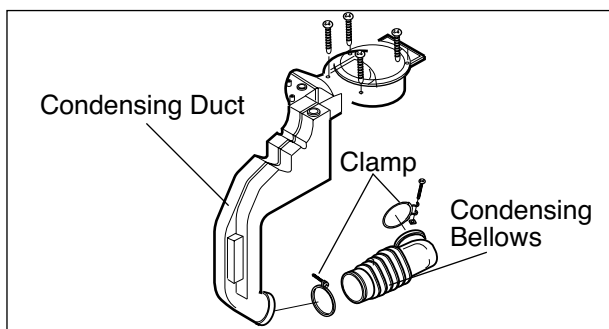


- ① Remove clamp and condensing duct.

# 10. EXPLODED VIEW AND PART LIST


## 10-1. THE EXPLODED VIEW OF CABINET ASSEMBLY

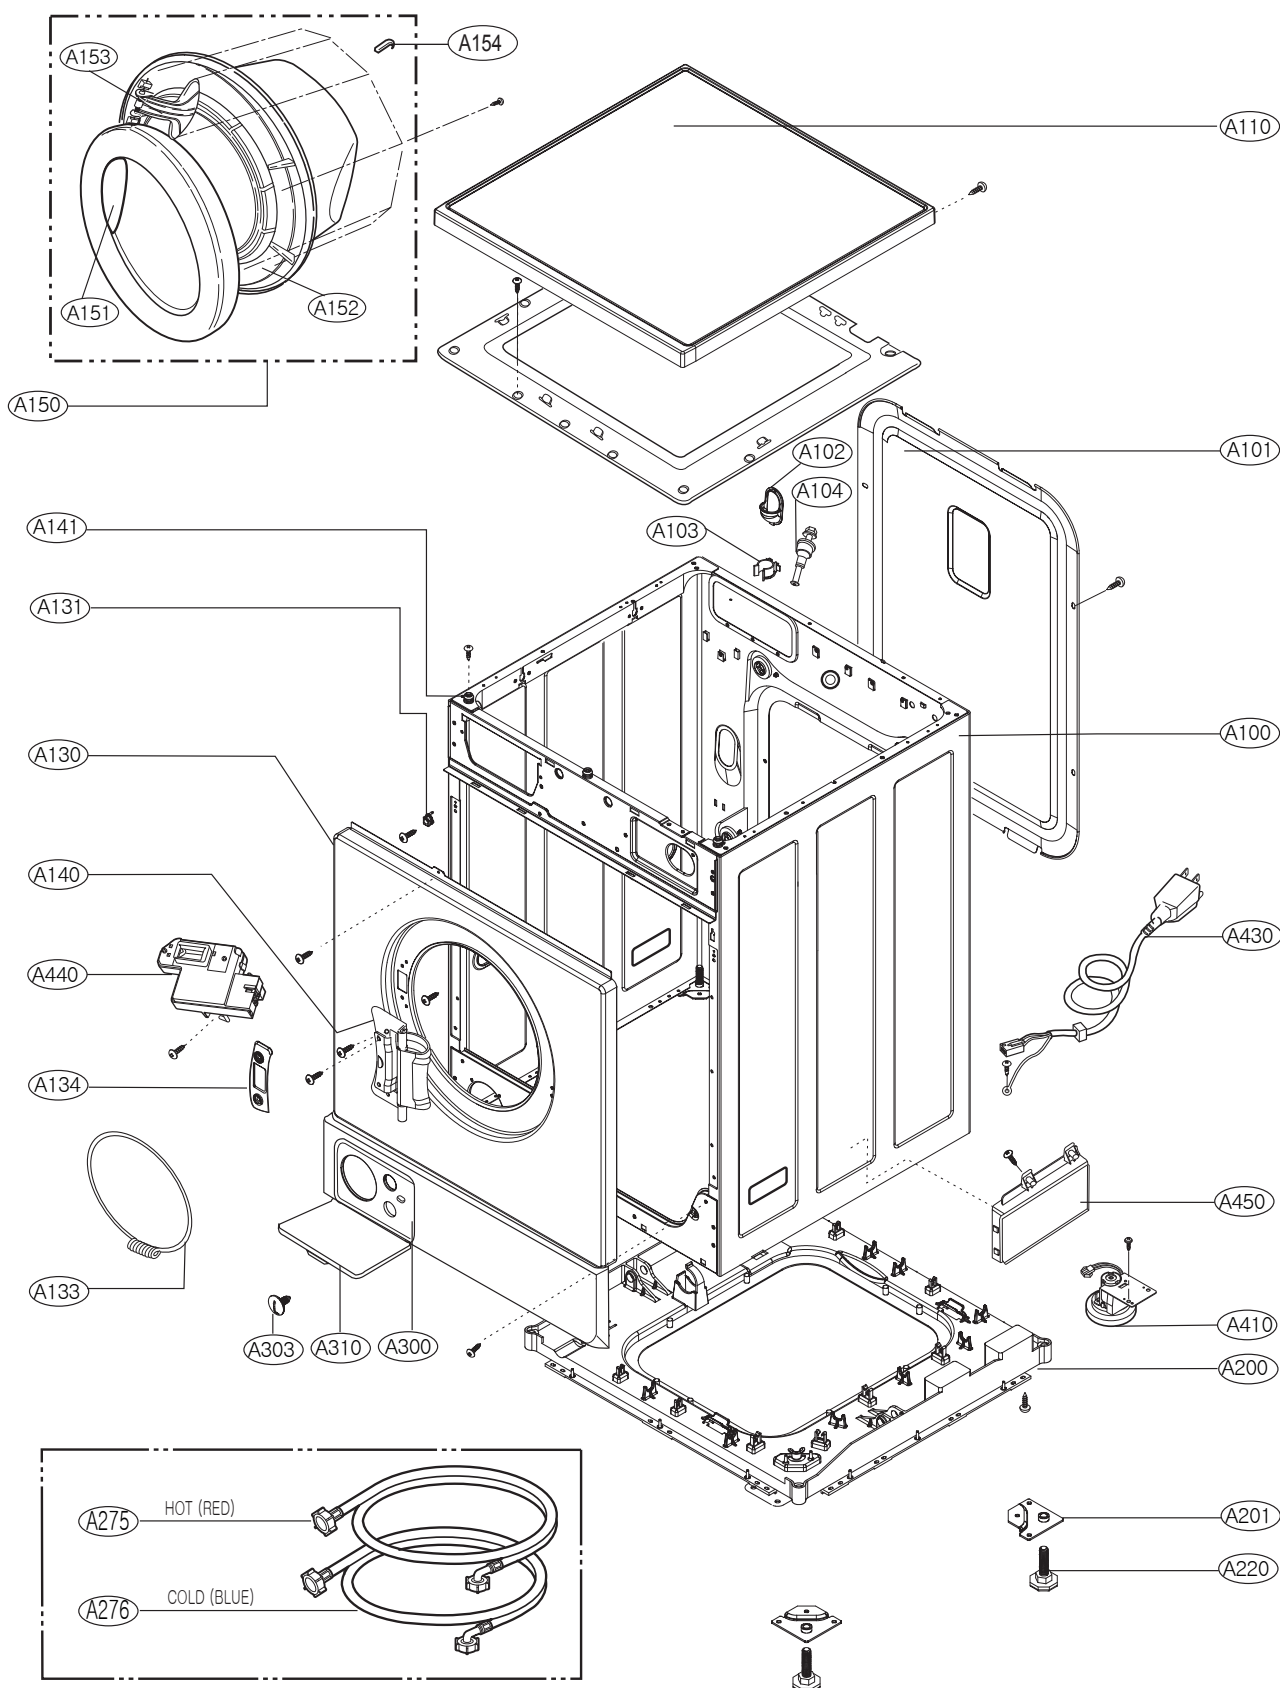

# 10-2 THE EXPLODED VIEW OF CONTROL PANEL & DISPENSER ASSEMBLY

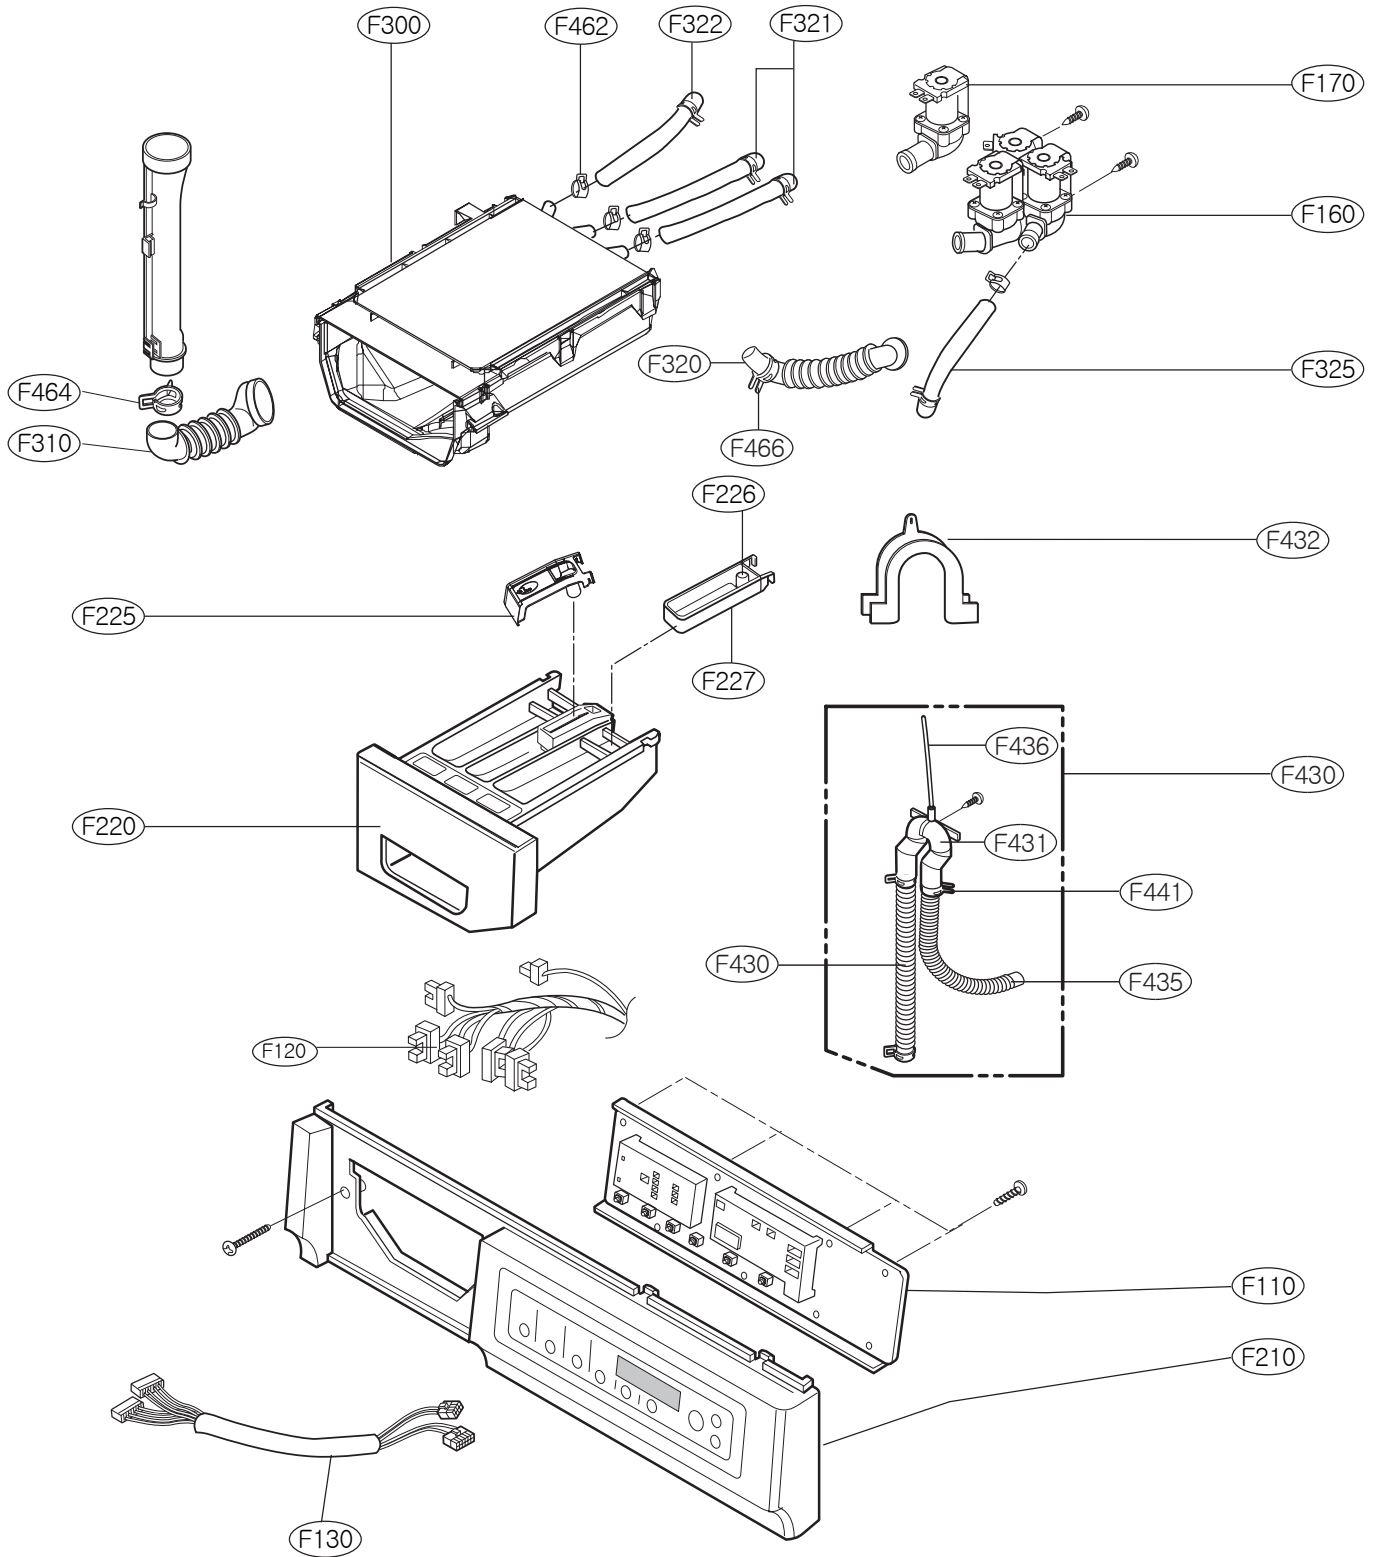

# 10-3 THE EXPLODED VIEW OF DRUM & TUB ASSEMBLY

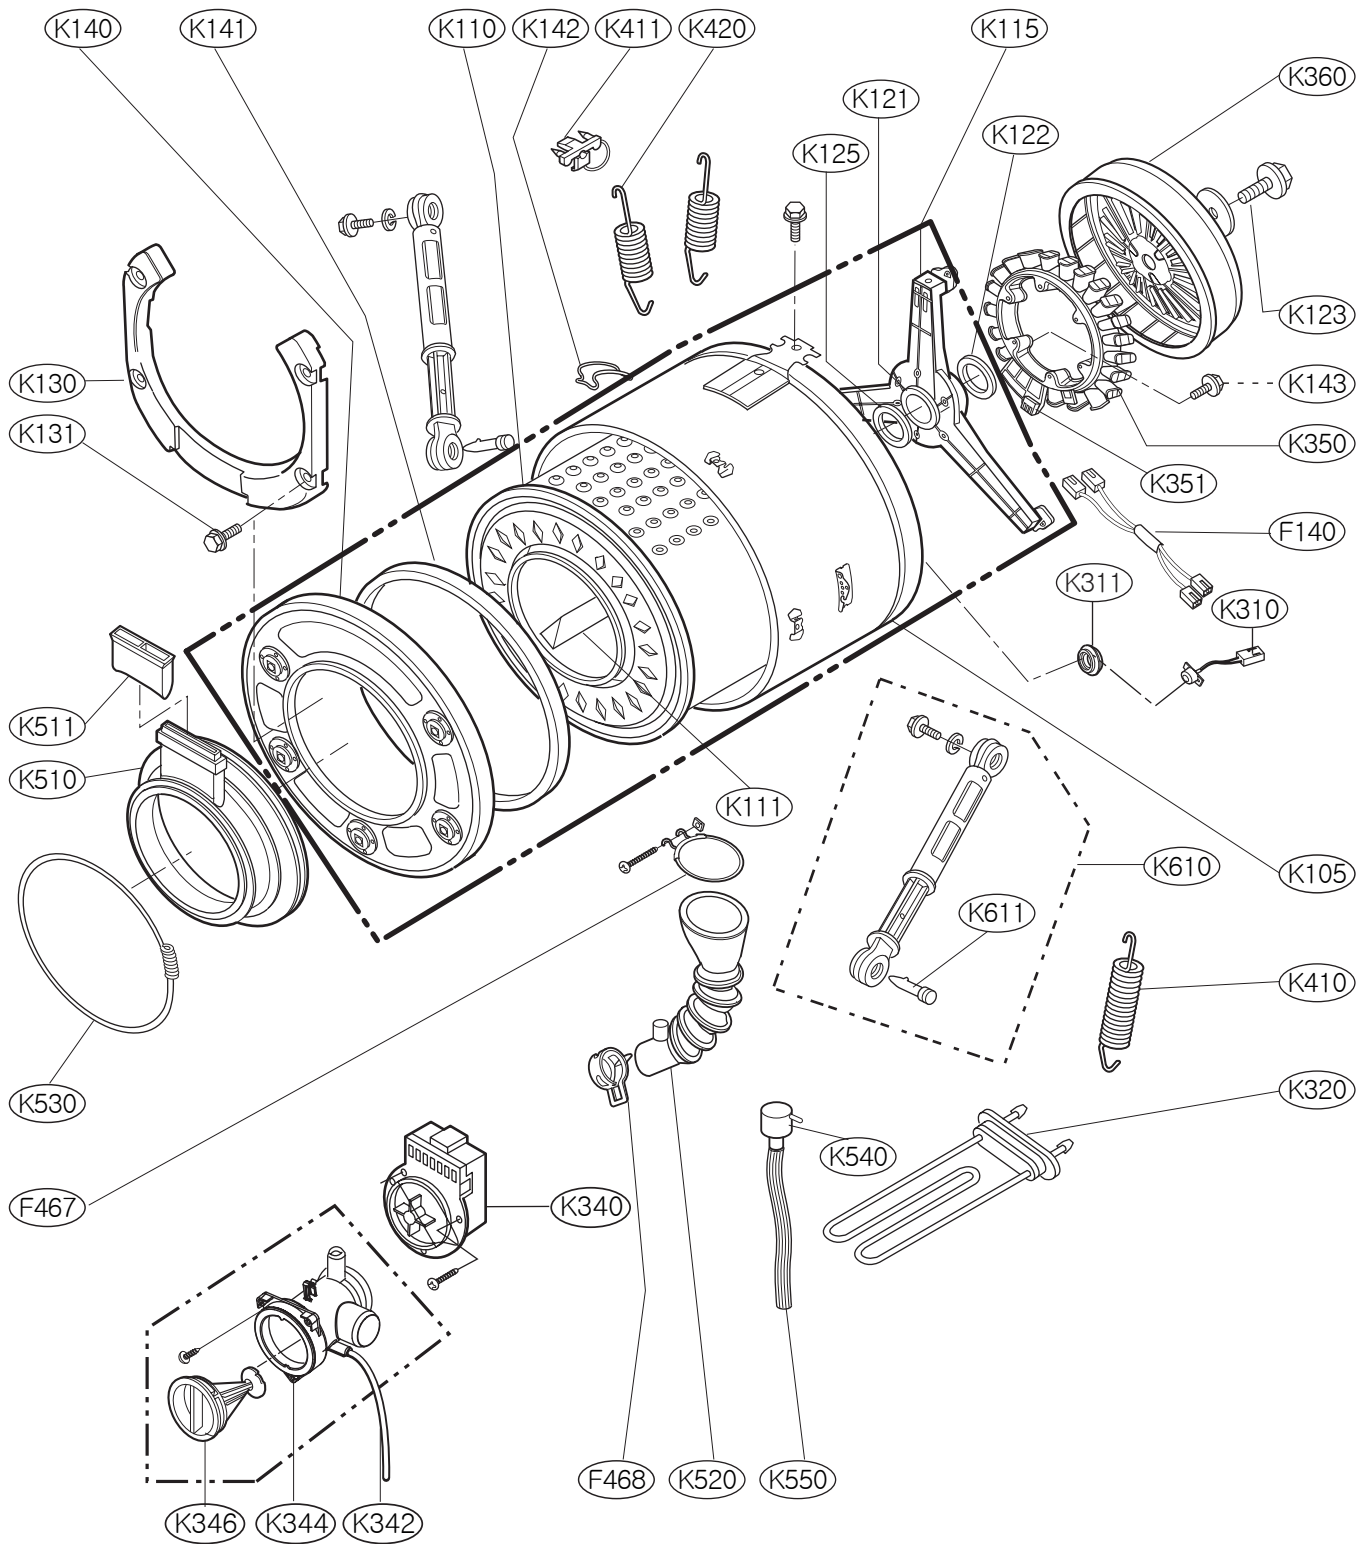

# 10-4 THE EXPLODED VIEW OF DRYER

